



Tools Needed:  
10mm deep socket  
Phillips Screw Driver

Step 1: Remove the plastic screws  
to remove rubber shroud.

Step 2: Remove the upper and  
lower 10mm bolts.



Step 3: Remove the bolt located  
underneath the headlight.

Step 4: Pull the headlight  
assembly straight out.



Step 5: Pull the headlight  
exposing the sockets.

Step 6: Pull the turn signal socket  
out of the housing.

Step 7: Unplug the socket from  
the headlight bulb.



Step 8: Place the turn signal bulb into the new Anzo housing.



Step 9: Plug the headlight socket to the bulb.



Step 10: Slide the new ANZO headlight into the housing.



Make sure all functions are working properly before driving.