



Read complete instructions before installation! Improper installation may void warranty



Tools needed: 10mm socket, flat head screwdriver





Remove the plastic shroud.



Pull off the front bottom body shroud.



Pull back the wheel well cover and locate the white locking pin and pull down to release the lock.



Locate the two 10mm screws and remove them.



Locate the two bottom pins to remove the grill from the truck.



Remove the headlight assembly from the truck.



Locate the eight push pins located at the top of the grill on remove them.



Pull back the wheel well cover to expose the single 10mm bolt and remove it.



Remove the two 10mm bolts holding in the headlight.



Twist off the parking bulb and disconnect the head light wire harness.



Unclip the parking bulb from wire harness.



Re-clip the headlight wire harness into the new headlight.



Take out the new projector halo led headlight from the box.



Test all functions before driving.



Re-clip the parking light socket into the new headlight.

