

1990-1997 Lincoln Town car

New Air Suspension Compressor/ Dryer
Installation Guide
Arnott part # TCP-D



Arnott Part # TCP-D

New Compressor/ Dryer Assembly. *Instillation manual*

1. Turn air suspension switch to the off position. (Switch is located on the passenger side of the trunk)
2. Raise left front corner of the vehicle with proper lifting equipment. **ALWAYS USE EXTREME CAUTION WHEN LIFTING VEHICLE!** (Refer to shop manual for lifting instructions)



3. Unlatch air cleaner cover. ↑



4. Remove air cleaner cover. ↑



5. Remove nuts to the lower air cleaner case. ↑



6. Remove bottom air cleaner case. ↑



7. Air cleaner removed from vehicle. ↑



8. Remove windshield washer reservoir. ↑



9. Washer reservoir removed from vehicle. ↑



10. Unsnap compressor cover. ↑



11. Remove power plug from air compressor. ↑



12. Remove air hose from compressor fitting. ↑

Note: To remove air line from the dryer, simply push down on the orange plastic release ring while pulling out on the nylon tube.



13. Unbolt compressor from under vehicle. ↑



14. Carefully remove air compressor. ↑



15. Install new compressor on vehicle. ↑
(Reverse steps 3-14)



16. Open fuse box.



17. Replace the 30 amp fuse for the air suspension motor.