

Instructions & Care:

⚠️ WARNING!

Do not operate an outdoor appliance or machine with the cover on. Fabric is NOT fire resistant. Keep away from open flames or burning logs.

⚠️ CAUTION!

When covering an outdoor appliance, let it cool before you put the cover on it.

⚠️ CAUTION!

Remove all cushions to avoid possible mildew before covering your furniture.

Belttown®

Installation

Check your patio furniture, appliance or machine to make sure there are no sharp objects or corners that could stress your cover as you pull it on.



Tie-Down Straps:


If your cover has tie-down straps, wrap them around your furniture legs and secure tightly.



Rip-and-Grip Closures:

If your cover has rip-and-grip closures, you can adjust the fit by pulling them apart and repositioning

the tabs. If your cover has rip-and-grip tabs along a bottom edge, make sure you secure together.

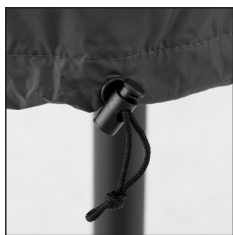


Drawstring Hem Cord:

If your cover has the drawstring hem cord, you can adjust the length of the cord. Pinch cordlock and pull the cord to draw the

hem around base of furniture.



Handles: If your cover has handles, use them to help pull the cover over your item.

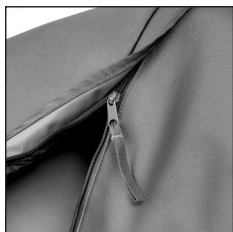

Zippers:

If your cover uses an open-end zipper to close the cover, place the slider at the end of the retainer box. Insert the pin into the

retainer box, then pull the slider to close.

To avoid any possibility of mildew, be sure your cover is completely dry before you store it in an enclosed area for long periods of time.

Cleaning and Care

Clean your cover with a soft brush and lukewarm water. **DO NOT USE SOAP OR DETERGENT** as it may remove the protective coatings added by the factory. Air dry.



DO NOT
USE SOAP OR
DETERGENT



LINE DRY



DO NOT
IRON



NO BLEACH



DO NOT
PACK WET



WATER
RESISTANT