



FEATURING  
**SUPER-GRIP®**  
 THE SLIP RESISTANT FASTENING SYSTEM  
 INSTALLATION INSTRUCTIONS  
 FOR  
 SL68-7

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

**INSTRUCTIONS:**

- A) BACKREST COVER – BUCKETS / “40” PORTION X 2:**
- 1) Remove head rest (see note)
  - 2) Open zipper
  - 3) Slip cover over backrest under seat belt
  - 4) Close zipper (see note)
  - 5) Tuck flaps under backrest and attach to hook and loop fastener at back
  - 6) Adjust hook and loop fastener to equalize tension
  - 7) Replace headrests (see note)

- B) CUSHION COVER - BUCKETS / “40” PORTION X 2:**
- 1) Center cover on the seat
  - 2) Pass the front strap under seat and buckle to back flap
  - 3) Pass side straps around back of seat and buckle
  - 4) Adjust straps and buckles to equalize tension

- C) CUSHION COVER – CENTER “20” PORTION X 1:**
- 1) Repeat “B)”

- D) BACKREST COVER – CENTER “20” PORTION X 1**  
**For models TR48-8, Oe38-8, SP88-8**
- 1) Open console
  - 2) Center cover under armrest
  - 3) Position adhesive back hook and loop fastener (supplied) to align with the hook and loop fastener on side of cover
  - 4) Snug cover at back of console so the hook and loop fastener on the cover meets the hinge
  - 5) Secure the adhesive back hook and loop fastener inside the console


- For models TR47-81, Oe37-81, SP87-81**
- 1) Follow steps 1-3 in “D)”
  - 2) Snug cover at back of console so the hook and loop fastener on the cover is positioned through the crevice where the lid and console are hinged
  - 3) secure adhesive hook and loop fastener on the inside back of console

- For models TR48-9, Oe38-9, SP88-9**
- 1) Slip cover over backrest and attach hook and loop fastener

- E) ARMREST/STORAGE COMPARTMENT LID COVER**  
**For models TR48-8, Oe38-8, SP88-8**
- 1) Open armrest/storage compartment
  - 2) Slip cover over the lid
  - 3) Snug cover at back where lid and armrest/console are hinged
  - 4) Position adhesive back hook and loop fastener (supplied) to align with hook and loop fastener attached to back flap of the cover

**NOTES:**

**1) SELF-LOCKING SUPER-GRIP® BUCKLE:**

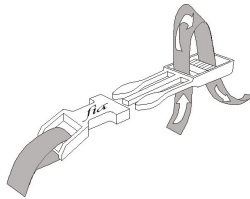


**2) HEAD REST REMOVAL:**

- A) - Insert paper clip into holes at base to release
- Lift off

**OR**

- B) - Push in side release buttons
- Lift off

(If unable to remove consult dealership)

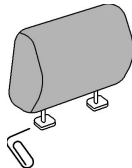

**3) SEATS WITH SIDE ARMRESTS:**

- Locate opening in stretch fabric
- Slip armrest through opening

**4) ZIPPERS:**

- For ease in installation the zipper is longer than the cover.
- Tuck excess zipper under cover

**5) RE-INSTALLATION OF HEADRESTS**

- Locate headrest base and put a small slit in the stretch fabric to accommodate each of the posts
- Stretch fabric will not run
- Replace headrests

**WARNING: NEVER INSTALL SEAT COVERS ON SEATS WITH BUILT-IN AIRBAGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS WHICH COULD RESULT IN SERIOUS INJURY.**