



FEATURING

SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM INSTALLATION INSTRUCTIONS FOR TR48-9

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

A) BACKREST COVER – BUCKETS / “40” PORTION X 2:

- | | |
|---|---|
| 1) Remove head rest (see note) | 5) Tuck flaps under backrest and attach to hook and loop fastener at back |
| 2) Open zipper | 6) Adjust hook and loop fastener to equalize tension |
| 3) Slip cover over backrest under seat belt | 7) Replace headrests (see note) |
| 4) Close zipper (see note) | |

B) CUSHION COVER - BUCKETS / “40” PORTION X 2:

- | | |
|--|--|
| 1) Center cover on the seat | 3) Pass side straps around back of seat and buckle |
| 2) Pass the front strap under seat and buckle to back flap | 4) Adjust straps and buckles to equalize tension |

- 1) Repeat “B)”

C) CUSHION COVER – CENTER “20” PORTION X 1:

D) BACKREST COVER – CENTER “20” PORTION X 1

For models TR48-8, Oe38-8, SP88-8

- | | |
|---|---|
| 1) Open console | 4) Snug cover at back of console so the hook and loop fastener on the cover meets the hinge |
| 2) Center cover under armrest | 5) Secure the adhesive back hook and loop fastener inside the console |
| 3) Position adhesive back hook and loop fastener (supplied) to align with the hook and loop fastener on side of cover | |

For models TR47-81, Oe37-81, SP87-81

- | | |
|--|---|
| 1) Follow steps 1-3 in “D)” | 3) secure adhesive hook and loop fastener on the inside back of console |
| 2) Snug cover at back of console so the hook and loop fastener on the cover is positioned through the crevice where the lid and console are hinged | |

For models TR48-9, Oe38-9, SP88-9

- 1) Slip cover over backrest and attach hook and loop fastener

 
E) ARMREST/STORAGE COMPARTMENT LID COVER

For models TR48-8, Oe38-8, SP88-8

- | | |
|--|---|
| 1) Open armrest/storage compartment | 4) Position adhesive back hook and loop fastener (supplied) to align with hook and loop fastener attached to back flap of the cover |
| 2) Slip cover over the lid | |
| 3) Snug cover at back where lid and armrest/console are hinged | |

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:

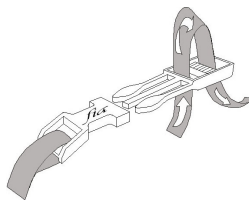


2) HEAD REST REMOVAL:

- A) - Insert paper clip into holes at base to release
- Lift off

OR

- B) - Push in side release buttons
- Lift off

 (If unable to remove consult dealership)

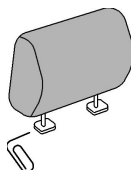

3) SEATS WITH SIDE ARMRESTS:

- Locate opening in stretch fabric
- Slip armrest through opening

4) ZIPPERS:

- For ease in installation the zipper is longer than the cover.
- Tuck excess zipper under cover

5) RE-INSTALLATION OF HEADRESTS

- Locate headrest base and put a small slit in the stretch fabric to accommodate each of the posts
- Stretch fabric will not run
- Replace headrests

WARNING: NEVER INSTALL SEAT COVERS ON SEATS WITH BUILT-IN AIRBAGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS WHICH COULD RESULT IN SERIOUS INJURY.