

Instructions & Care:

⚠ WARNING!

Do not operate an outdoor appliance or machine with the cover on. Fabric is NOT fire resistant. Keep away from open flames or burning logs.

⚠ CAUTION!


When covering an outdoor appliance, let it cool before you put the cover on it.

Drain water from water fountains before installing the cover.

Installation


Check your patio furniture, appliance or machine to make sure there are no sharp objects or corners that could stress your cover as you pull it on.

Click-Close Straps: If your cover has click-close straps, wrap them around your furniture legs and snap shut.

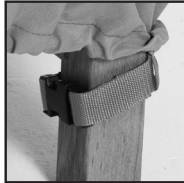

Toggle with Stretch

Cord: If your cover has the toggle with stretch cord hem, you can adjust the length of the cord. Cinch the heavy-duty fabric closed by holding the cord in one hand and smooth the hem of your cover back away from you to expose more cord to pull out. Repeat as necessary to adjust the cover.

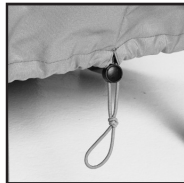

Plastic Hook with Stretch Cord: If your cover has a hem with this system, you can adjust the fit. Pull the cover down on all sides. Pull the



underskirt around the bottom of the lowest section of your item and attach hooks to each other. Pull the cords in 4 places located at the base of the cover to cinch the cover tight around the base.

Handles: If your cover has handles, use them to help pull the cover over your item.



Cleaning and Care

Clean your cover with a soft brush and lukewarm water. DO NOT USE SOAP as it may remove the protective coatings added by the factory. Air dry.



DO NOT USE SOAP



LINE DRY



DO NOT IRON



NO BLEACH



DO NOT PACK WET