

KU70045 ATV WINCH ISOLATOR

Bill of Materials

KU70045 Winch isolator x 1



- 1. Switch winch to Free Spool and remove cable from winch
- 2. Slide cable through slot on winch isolator, ensuring isolator is facing direction indicated in picture.
- 3. Attach the winch cable to the drum and load cable as explained by the manufacturer's owners manual. DO NOT allow cable to pull through the isolator.
- 4. Using the winch safety strap snug the winch hook into the isolator.
- 5. Isolator is designed to rest between the rollers. It does not attach to them.