

# ***ADDICTIVE DESERT DESIGNS***

## **2011 – CURRENT MODELS FORD SUPERDUTY HONEYBADGER FRONT BUMPER INSTALLATION INSTRUCTIONS**

### **PREPARATION STEPS**

1. Set emergency brake.
2. You will need the following tools:
  - a. ¾" socket
  - b. 18mm socket
  - c. 13mm socket
  - d. ¾" wrench
  - e. ratchet or air gun

*Note: This installation requires 2 people for best results*

3. Included in Kit:
  - a. Honeybadger Front Bumper
  - b. Hardware Kit




## INSTALLATION INSTRUCTIONS

1. Remove stock bumper.
2. Install new frame mount brackets, using stock hardware. This will also need the use of 2 of the ½" bolts supplied in the hardware kit.



3. Passenger side has radius index, and driver side has triangular index.

4. Install any accessories for the Honeybadger at this point. **\*\*These must be added before you place your front bumper on the truck\*\***
5. Bolt on new Honeybadger bumper, to the new frame mount brackets.
6. Adjust the bumper to make sure it is lined up evenly. Then tighten your bolts.

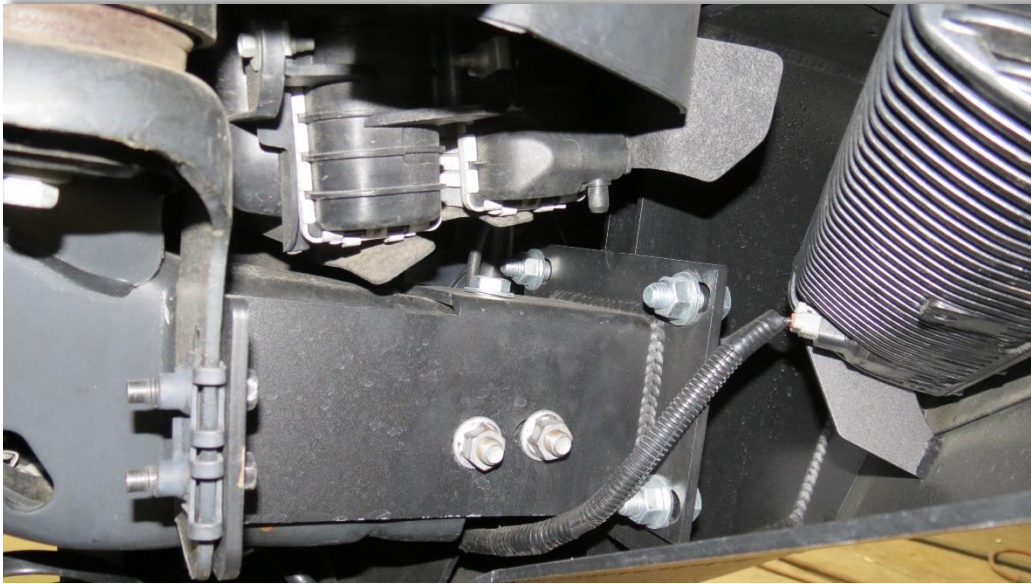

7. Use access hole to install and tighten the two inner bolts, per side.
8. Stand back and enjoy your A.D.D. Honeybadger front bumper!



Looking for dependable off-road bumpers? Rely on Addictive Desert Designs for quality and long-lasting products.