

Addictive Desert Designs

2009 – Current Dodge 1500 Stealth Rear Bumper Installation instructions

PREPARATION STEPS

1. Set emergency brake.
2. You will need the following tools:
 - a. 3/4" wrench
 - b. 3/4" socket


Note: This installation requires 2 people for best results

3. Included in Kit:
 - a. Stealth Rear Bumper
 - b. Hardware Kit
 - i. Four ½ x 1 bolts



INSTALLATION INSTRUCTIONS

1. Remove stock bumper.
2. Now you will line up the bolt holes of your new A.D.D rear Stealth bumper with the same bolt location as your stock bumper.
3. Next you will use the four ½ x 1 bolts provided to tighten you're A.D.D bumper to your truck.

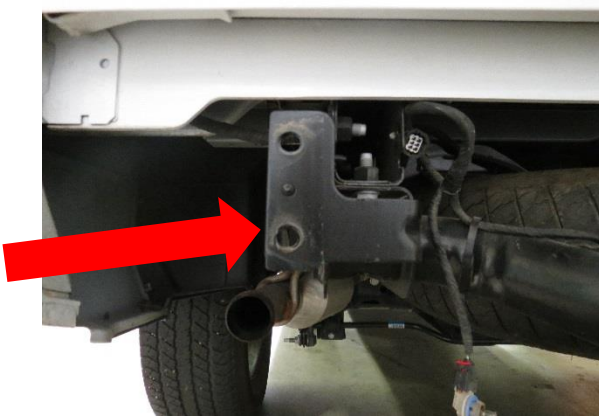

4. Now you will want to clip your sensors onto your new bumper. (if sensors placement necessary)
5. Stand back and enjoy your A.D.D. Stealth Rear Bumper.