



Tools Needed:
10mm socket
Phillips screw driver

Step 1: Remove the plastic clip
located at the top of the headlight.
Save clip for new headlight
assembly.



Step 2: Pull the shroud out of the
way exposing the two 10 mm
bolts.



Step 3: Remove the bolts



Step 4: Remove the 10 mm bolt
located at the top of the headlight.



Step 5: Pull the clip up and
pull the taillight assembly straight
out.





Step 6: Twist and pull the inner turn signal bulb out of the housing



Step 7: Twist and pull the headlight bulb out of the housing.



Step 8: Twist and pull the side maker light out of the headlight housing.




Step 9: Disconnect the headlight bulb from the wire harness.



Step 10: Disconnect the inner signal bulb socket from the wire harness.




Step 11: Disconnect the side marker socket from the wire harness.

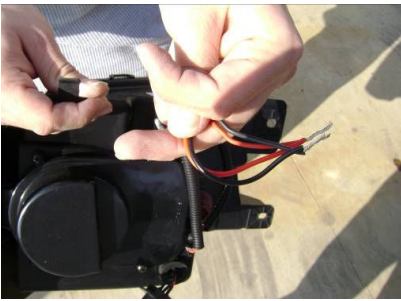


Step 12: Twist the two red wires together and the two black wire together from the Anzo headlight assembly.



Step 13: locate the side maker light, pull back the electric tape exposing the black and brown wire on the stock harness.

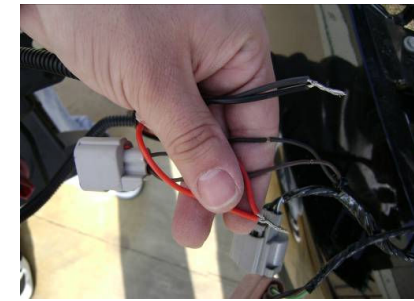

Step 14: Splice the red wire from the housing to the brown wire from the harness.

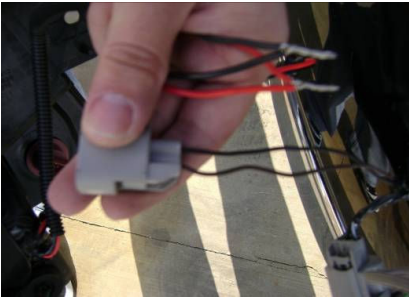


Step 15: Splice the black wire from the housing to the black wire from the harness.



Step 16: Plug the side maker harness to the socket.



Step 17: plug the inner marker harness to the socket .

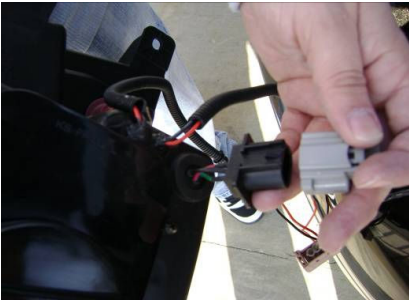

Step 18: Plug the headlight bulb harness to the socket.



Step 19: Place the headlight assembly into the headlight housing.



Step 20: Tighten up the three 10 mm bolts that hold the headlight to the housing.



Step 21: Place the plastic clip back in place.



Make sure all functions are working properly before driving.

