

## START HERE

The goods: (6) riv nuts, (6) 5/16" x 2" bolts, (1) riv nut tool  
(6) 5/16 split lock washers, (6) 3/8 flat washers, (4) 5/16 x 3/8  
button head socket, (4) 5/16-18 serrated flange nuts,  
(4) Cargo Cleats.

The tools: Drill, 1/2" drill bit, pen, tape measure, 1/2" and 7/8" wrench

Follow steps closely and watch for cautions 


**BEDSLIDE**  
GET TO IT.



**BEDSLIDE**  
2000 PRO HD  
INSTALLATION  
INSTRUCTIONS


1.

### Install side rails

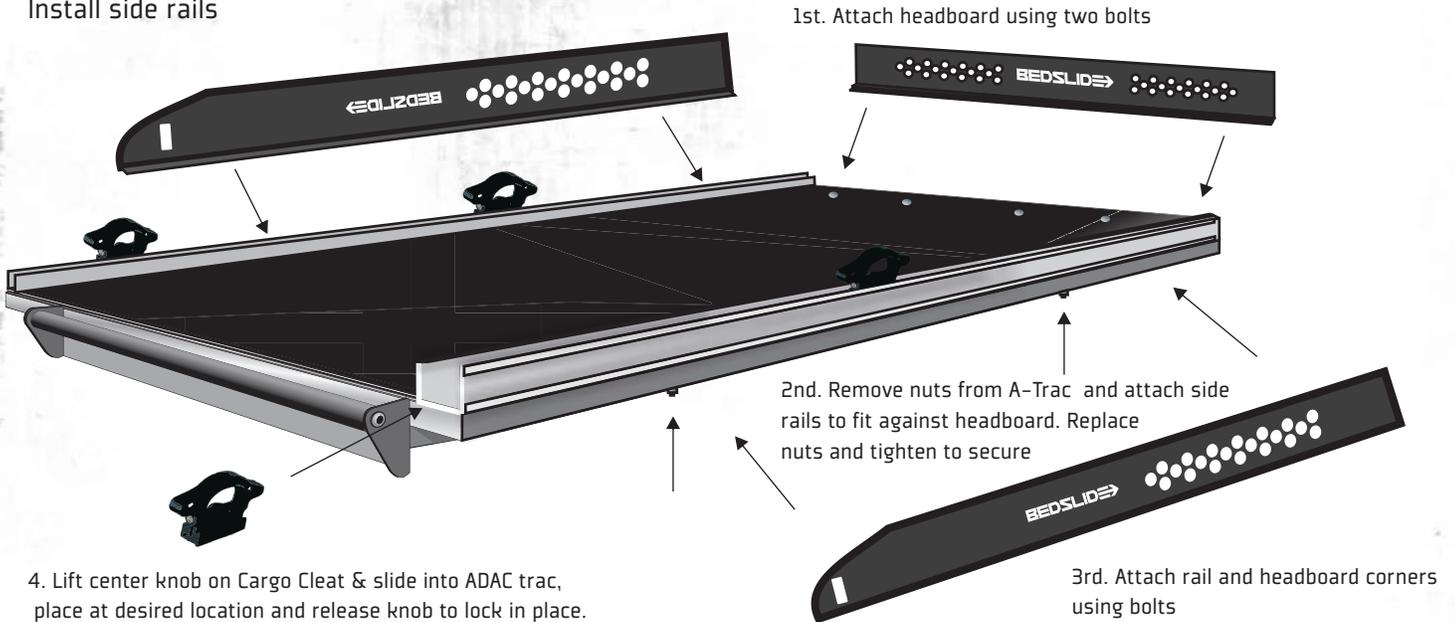

2.


### Test fit & center BEDSLIDE

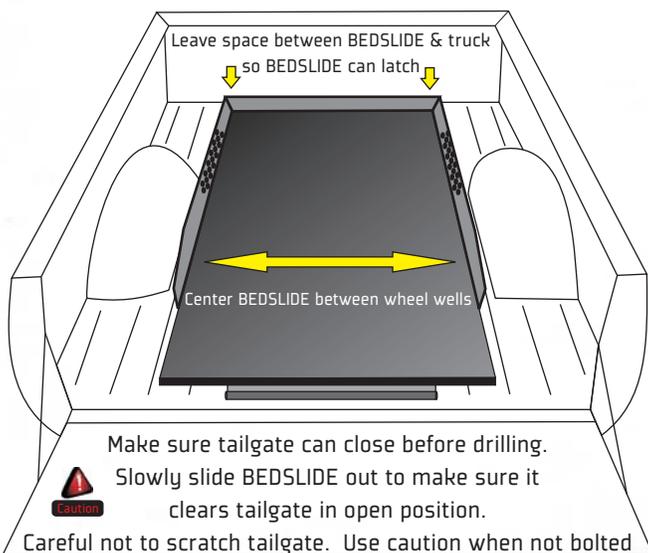

\*If BEDSLIDE clears tailgate skip step 2.5

2.5.


If needed, use raiser pad to clear tailgate  
No joke. It's the 2 polypropylene pads.  
Using attach spacers to center cross member and cross member closest to the tail gate.

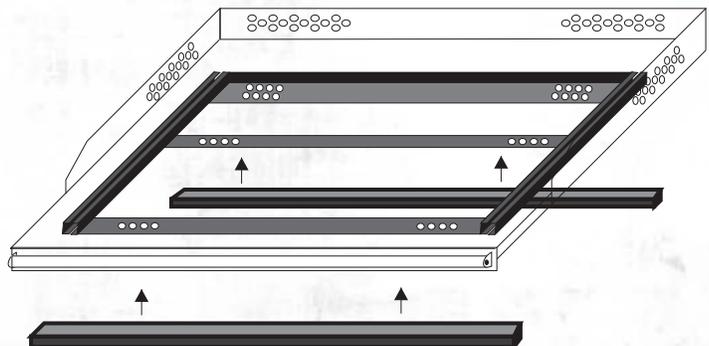

Use 1/2" spacer with center cross member and 3/4" spacer at cross member closest to tailgate .

3.


### Mark and drill mounting holes

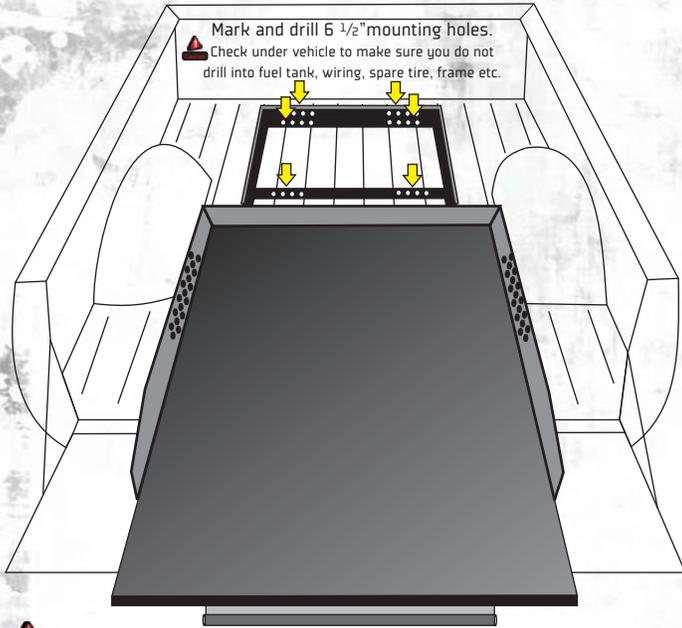

**Caution** Slowly move upper tray out from closed position and avoid shifting hole placement. Use caution with non-mounted BEDSLIDE.


5.

### Bolt top cross member in place

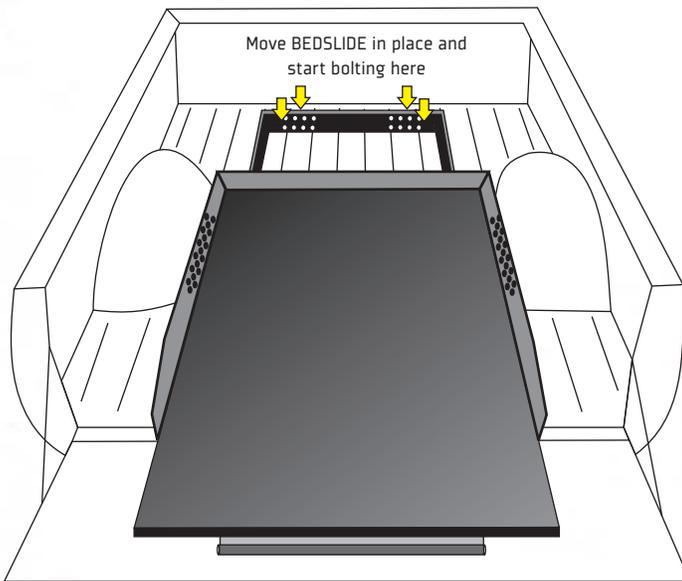

4.


### Bolt in riv nut anchors into holes

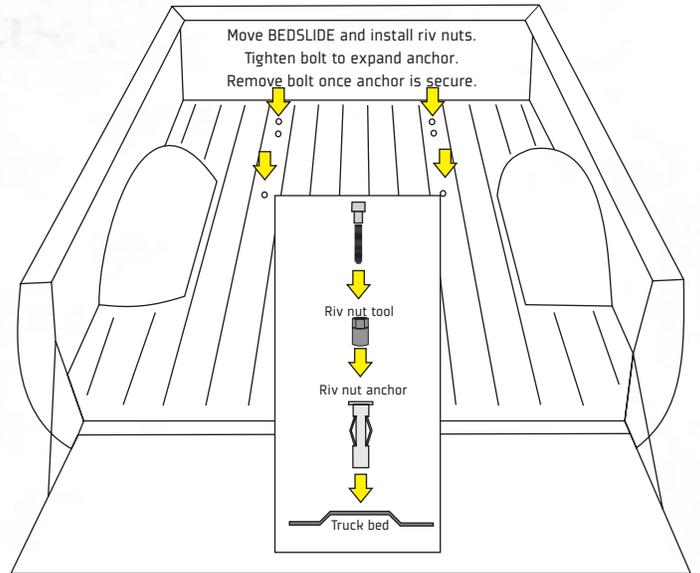

**Caution** Do not over tighten. Do not use air impact tools with riv nuts. If using spacer kit be sure to use longer bolts provided in spacer kit in center cross member.

6.

### Bolt center cross member in place

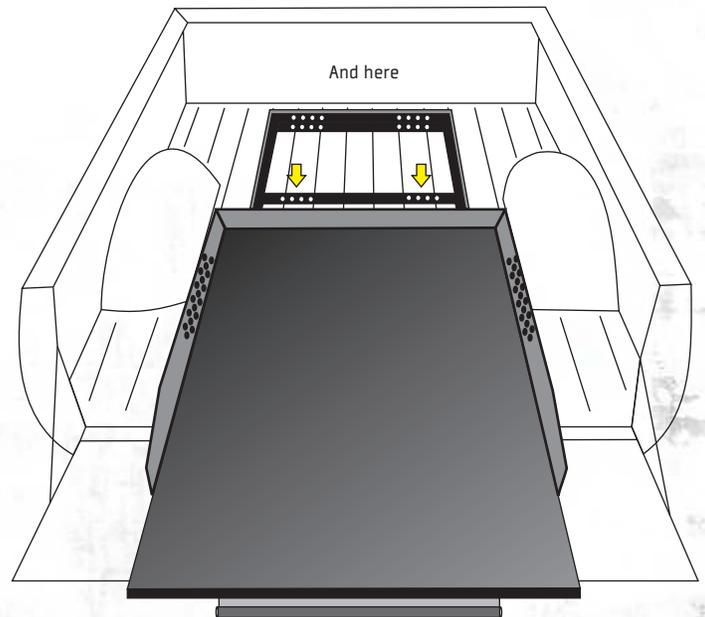

**Caution** Use cross member closer to tailgate on long box BEDSLIDES that have 2 center cross members.

That's it! Your BEDSLIDE is installed. Now you can access your gear safely and securely. Thank you.

