



Sport Bar Cover Installation Instructions

Model: CJ 5 (1976 - 1983), CJ7 (1976 - 1986)

Part Number: 80007

Note: Please read these instructions thoroughly before beginning the installation. After completing the installation, keep this manual for future reference.

Parts List

Fabric Assembly	1 ea.
Foam, 60" x 1/2" x 9" (long)	1 ea.
Foam, 36" x 1/2" x 9" (med.)	2 ea.
Foam, 23 1/2" x 1/2" x 9" (short)	2 ea.

Warning:

This product is designed to enhance the appearance of the vehicle and to shield the occupants from ordinary weather conditions. Do not rely in any way on the components of this product to contain occupants within the vehicle, or to protect against injury or death in the event of an accident. This product will not protect the occupants from falling objects. Never operate vehicle in excess of manufacturer's specifications.

Wear seat belts at all times.

Read and follow, precisely, all installation instructions provided when installing this product. Failure to do so may result in a poor fit and could place occupants of the vehicle in a potentially dangerous situation.

Installation


Step One

If a top is on the vehicle, it must be removed before starting this installation.

Step Two

On a flat, clean surface, spread out the fabric assembly. The long part will go along the top of the sport bar, the four legs will go on the angled rear legs and the short front legs (see Figure 1).

Figure 1

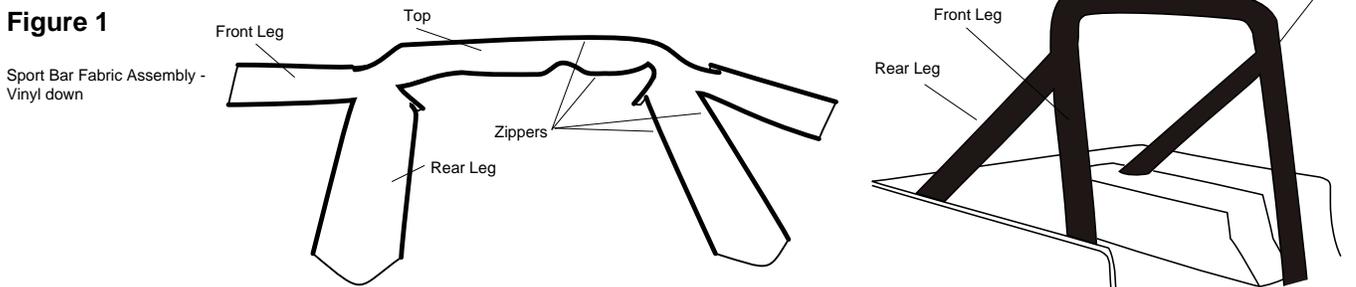

Step Three

Open up the sport bar cover so that the inside (white) of the cover is facing up. Lay the long (60") piece of foam, with the tape side down, on the top part of the fabric assembly. Make sure that the foam is centered on the fabric. Lift the foam up enough to remove the protective strip from the adhesive and press the foam firmly into place on the fabric. The adhesive is intended to assist in the installation of the pad and may not form a permanent bond.


Step Four

Lay the medium (36") pieces of foam, with the tape side down, on each of the longer rear legs of the fabric assembly. Make sure that the foam is centered on the fabric. Lift the foam up enough to remove the protective strip from the adhesive and press the foam firmly into place on the fabric.

Step Five

Lay the short (23 1/2") pieces of foam, with the tape side down, on each of the short front legs of the fabric assembly. Make sure that the foam is centered on the fabric. Align the slit in the foam with the bolt cut out in the fabric. Make sure that the right and left pieces are on the proper sides (see Figure 2). Lift the foam up enough to remove the protective strip from the adhesive and press the foam firmly into place on the fabric.


Figure 2

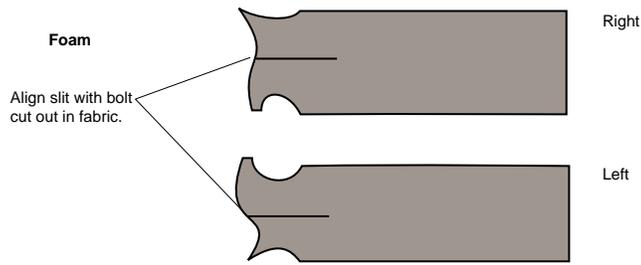

Step Six

Place the sport bar fabric and foam assembly over the sport bars. The zippers should all be on the underside of the bars. Place the rear legs of the fabric assembly loosely over the bar (see Figure 3).

Figure 3

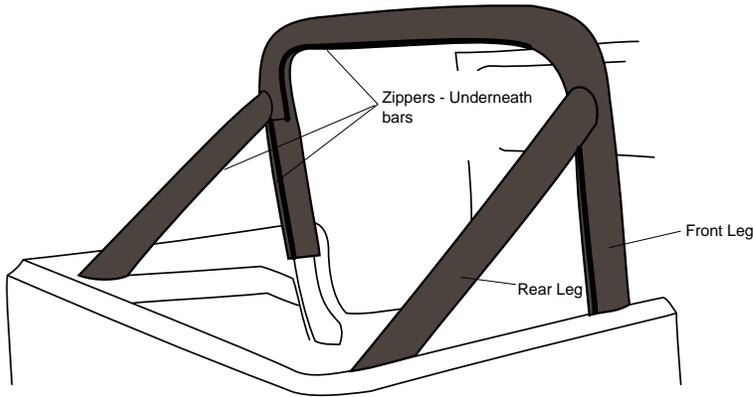

Step Seven

From the driver's side of the vehicle, close the long zipper across the sport bar. Make sure that the fabric is centered on the bar. The fabric and foam should fit snugly against the top of the rear bar.

Step Eight

Again, start on the driver's side and check that the top of the rear legs of the fabric assembly fit snugly against the top of the rear bar. Close the zipper on the rear legs, from top to bottom.

Step Nine

Close the zipper on the front legs, from bottom to top. Make sure that the fabric tab lays flat under the zipper.