




Vehicle Application

 Jeep Wrangler 1986 - 2006

Part Number: 51247



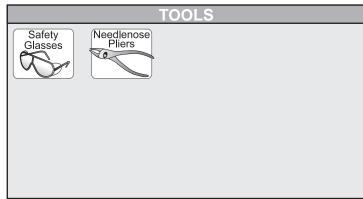

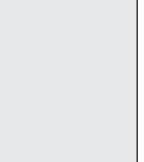



Safety glasses should be worn at all times while installing this product.



Installation Tips

Before you begin installing this assembly, read all instructions thoroughly.

For a smooth fit:

For ease in installation, the product should be installed at temperatures above 72° F. Below this temperature, the fabric may contract an inch or more, making it difficult to fit to the vehicle. It is normal for fabric to contract and wrinkle when stored in the shipping carton. Within a few days after the installation, the fabric will relax and the wrinkles will disappear.

WARNING This product is designed primarily to enhance the appearance of the vehicle and to shield the occupants from ordinary weather conditions. Do not rely in any way on the components of this product to contain occupants within the vehicle, or to protect against injury or death in the event of an accident. This product will not protect the occupants from falling objects. Never operate the vehicle in excess of manufacturer's specifications.

WEAR SEAT BELTS AT ALL TIMES


Read and follow, precisely, all installation instructions provided when installing product. Failure to do so may result in a poor fit and could place occupants of the vehicle in a potentially dangerous situation.

Parts List


Half Door Pin Inserts, Qty - 3


Step One Remove Old Pin Inserts Lift up on the flange part of the old pin inserts and pull them out of the door. Lower Door


Installation



Repeat this with the other two inserts.

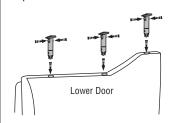



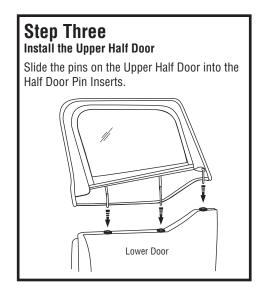

BESTOP DOORS CAR DOORS