

CARR



Made in the U.S.A.



 2019

ACCESSORIES CATALOG

TRUCKS | SUVs | OFF-ROAD | INDUSTRIAL | COMMERCIAL



TABLE OF CONTENTS



TABLE OF CONTENTS

“All CARR accessories are manufactured for a precise fit for today’s vehicles. Our manufacturing process allows us to design products that give your vehicle that unique personal style and appeal. Our cast aluminum construction has proven, over time, its durability and strength. All of the CARR’s steps are designed to easily attach to your vehicle for a strong and stable installation. All CARR products carry a limited lifetime warranty.”

– Jeff Carr

- NEW PRODUCTS.....2
- LD STEP3-4
- SUPER HOOP 5-6
- HOOP II 7-8
- WORK TRUCK STEPS..... 9
- CARGO VAN STEPS 9
- FACTORY STEP 10
- GRAB HANDLES 10
- MEGA STEPS.....11
- HD MEGA STEPS.....11
- UTILITY/MUNICIPALITY 12
- FIRE/EMERGENCY12
- HEAVY DUTY UNIVERSAL HITCH STEP..... 13
- JL 180° LIGHT MOUNT.....14
- LIGHT WINGS14
- XRS JEEP ROTA LIGHT BAR15
- LIGHT BARS15-20
- PROMOTIONAL ITEMS21
- TERMS AND CONDITIONS22





NEW JL 180 LIGHT MOUNT

The JL 180 allows a driver to easily adjust additional vehicle lighting without having to use a tool. Lights on each side together provide 360 coverage for off-road, camping, and recreational use.

FEATURES

- Durable powder coat for corrosion protection and rugged use
- On the fly 180° rotating feature
- Precise fit using factory holes
- Antenna cut out
- Super easy install
- Solid mount with virtually no vibration
- Accommodates 3" lights

Details on Page 14



NEW Steps and Grab Handles Available in Safety Yellow

**MADE
IN THE
USA**



10" GRAB HANDLE



Details on Page 12



LD STEP



LD STEP

The LD step was actually inspired by Jeff Carr’s wife, Lynn. Hence the name “LD Step” (Lynn’s Design). This step gives the user easier access to the vehicle due to the wider and deeper stepping surface that extends further than our other steps. The LD step is available in our three durable finishes, and installation is a cinch with our mounting system.



FEATURES

- Easier entry and exit from your vehicle
- 14” wide functional step area
- Extends further than our current steps
- Made of corrosion-resistant, durable cast aluminum alloy for extreme longevity
- NEW aggressive and appealing tread design for a non-slip surface
- Rocker panel installation provides for the strongest and easiest installation of any step products
- Unique design that enhances the looks of current vehicle body styles
- Limited lifetime warranty on materials and craftsmanship



XM3

POLISHED

CARR’s Xtreme Mechanical Polished finish won’t rust, crack or peel and requires very little maintenance.



XP4

TITANIUM SILVER

CARR’s Xtreme Titanium Silver Powder Coat finish features a lightly textured matte finish that resists scratches, peeling and fading.



XP3

BLACK

CARR’s Xtreme Black Powder Coat finish features a lightly textured matte finish that resists scratches, peeling and fading.

DIMENSION: 14” width

STEP PAD: Aggressive and appealing tread design for a non-slip surface

STEP: Flat step area for increased safety





LD STEP APPLICATIONS

CHEVY/GMC	XM3 POLISH	XP4 SILVER	XP3 BLACK	XP7 YELLOW
'15 - '19 Colorado/Canyon	113332	113334	113331	113337
'02 - '09 Trail Blazer/Envoy	114032	114034	114031	114037
'02 - '13 Avalanche	114032	114034	114031	114037
'02 - '19 Denali Truck	114032	114034	114031	114037
'19 Sierra/Silverado 1500 C&K P/U/Fullsize/All Doors/All Cabs	113332	113334	113331	113337
'88 - '18 Sierra/Silverado 1500 C&K P/U / Fullsize	114032	114034	114031	114037
'88 - '19 Sierra/Silverado 2500/3500 HD all doors	114032	114034	114031	114037
'11 - '19 *Sierra/Silverado 2500/3500 HD all cabs (DIESEL ONLY)	116332	116334	116331	116337
'73 - '87 **Fullsize Pick-ups/Blazer/Suburban	114032	114034	114031	114037
'76 - '91 Suburban	114032	114034	114031	114037
'76 - '93 S10/Sonoma pickups, Blazer/Jimmy	114032	114034	114031	114037
'67 - '96 Fullsize Van	114032	114034	114031	114037
DODGE				
'19 Ram GAS 1500	119112	119114	119111	119117
'09 - '18 Ram GAS 1500-5500	119772	119774	119771	119777
'09 - '19 Ram DIESEL 2500-5500 P/U beds only	119772	119774	119771	119777
'11 - '19 * Ram DIESEL 3500-5500 Chassis beds only	117442	117444	117441	117447
'09 - '10 Ram DIESEL 3500-5500 Chassis beds only	119772	119774	119771	119777
'94 - '08 Ram 1500-5500	114032	114034	114031	114037
'74 - '93 Fullsize P/U	114032	114034	114031	114037
'97 - '09 Dakota 2-Door Only	114032	114034	114031	114037
'02 - '06 Sprinter Van	114502	114504	114501	114507
'07 - '09 Sprinter Van	115772	115774	115771	115777
'74 - '92 Ram Charger	114032	114034	114031	114037
'83 - '91 Raider	114032	114034	114031	114037
FORD/MERCURY				
'17 - '19 Super Duty Aluminum body All Doors/All Cabs	118222	118224	118221	118227
'99 - '16 Super Duty All Cabs (All Doors)	114872	114874	114871	114877
'15 - '19 F-150 Aluminum body All door/All cabs	118222	118224	118221	118227
'04 - '14 F-150 All Cabs (All Doors)	114032	114034	114031	114037
'01 - '03 F150 SuperCrew (All Doors)	114032	114034	114031	114037
'97 - '04 F-150/F-250 LD/F-150 Heritage P/U (All Doors)	114032	114034	114031	114037
'97 - '03 F-150 Quad Cab (All Doors)	114032	114034	114031	114037
'19 Ranger Super Crew - 4 door	114502	114504	114501	114507
'19 Ranger Super Cab - 4 Door	TBA	TBA	TBA	TBA
'98 - '11 Ranger 2-Door Only	114992	114994	114991	114997
'00 - '05 Excursion (All Doors)	114872	114874	114871	114877
'18 - '19 Expedition (All Doors)	118222	118224	118221	118227
'97 - '17 Expedition (All Doors)	114032	114034	114031	114037
'91 - '01 Explorer (not Eddie Bauer)	114032	114034	114031	114037
'96 - '01 Mercury Mountaineer	114032	114034	114031	114037
'75½ - '02 Fullsize E-Series Van	114032	114034	114031	114037
'05 - '14 Fullsize E-Series Van	114032	114034	114031	114037
'15 - '19 E-Series Cutaway Cab	114032	114034	114031	114037

ISUZU	XM3 POLISH	XP4 SILVER	XP3 BLACK	XP7 YELLOW
'84 - '02 Trooper	114032	114034	114031	114037
'91 - '02 Rodeo	114032	114034	114031	114037
'91 - '02 Amigo	114032	114034	114031	114037
'89 - '93 P/U	114032	114034	114031	114037
JEEP				
'06 - '10 Commander	114502	114504	114501	114507
'18 - '19 JL Wrangler (Sport, Sport S, Sahara, Rubicon) Front doors only	111252	111254	111251	111257
'07 - '18 JK Wrangler (Front doors only, all styles)	111142	111144	111141	111147
'97 - '06 TJ Wrangler	110552	110554	110551	110557
'02 - '12 KJ Liberty (Caution: Ground clearance problem on stock vehicle)	114502	114504	114501	114507
'93 - '98 Grand Cherokee	114032	114034	114031	114037
MAZDA				
'91 - '94 Navajo	114032	114034	114031	114037
'98 - '11 B-Series P/U 2-Door Only	114992	114994	114991	114997
'83 - '93 B-Series P/U	114032	114034	114031	114037
MERCEDES				
'10 - '19 Sprinter Van	115772	115774	115771	115777
MITSUBISHI				
'78 - '94 P/U	114032	114034	114031	114037
'83 - '99 Montero	114032	114034	114031	114037
'97 - '02 Montero Sport	114032	114034	114031	114037
NISSAN				
'98 - '01 Frontier Reg cab	114032	114034	114031	114037
'02 - '19 Frontier (All Cabs)	114032	114034	114031	114037
'00 - '16 Xterra (Front doors)	114032	114034	114031	114037
'86 - '01 Pathfinder	114032	114034	114031	114037
'86 - '97 Hardbody P/U	114032	114034	114031	114037
'72 - '86 P/U	114032	114034	114031	114037
TOYOTA				
'05 - '19 Tacoma Crew Cab (All Doors)	114502	114504	114501	114507
'01 - '04 Tacoma Crew Cab (All Doors)	114032	114034	114031	114037
'05 - '19 Tacoma / Prerunner	114502	114504	114501	114507
'96 - '04 Tacoma / Prerunner	114032	114034	114031	114037
'00 - '19 Tundra	114502	114504	114501	114507
'01 - '07 Sequoia	114502	114504	114501	114507
'74 - '95 P/U	114032	114034	114031	114037
'05 - '09 4 Runner	114502	114504	114501	114507
'84 - '04 4 Runner	114032	114034	114031	114037
'91 - '98 FJ80 Land Crsr	114032	114034	114031	114037
'80 - '91½ FJ60/FJ62 L/C	114032	114034	114031	114037
'07 - '14 FJ Cruiser	114502	114504	114501	114507

NOTE: Vehicles not listed have no applications

* Will fit gas engine pickups to allow the steps to extend an additional 1 inch.

** Does not fit vehicles with saddle tanks.



SUPER HOOP



**MADE
IN THE
USA**

THE SUPER HOOP

The stylish and innovative design of these steps adds to a vehicle's rugged off-road look. Available in three low-maintenance, extremely durable finishes. This step is made to compliment your vehicle's appearance and is easily installed with our multi-mount system for superior strength and rigidity.

FEATURES

- Made of corrosion-resistant, durable cast aluminum alloy
- Rugged tread pattern provides a safe and attractive non-slip surface
- Rocker panel installation provides for the strongest and easiest installation of any step products
- Unique design gives the vehicle a rugged off-road look, while also maintaining a stylish accent for today's vehicles
- Limited lifetime warranty on materials and craftsmanship



XM3

POLISHED

CARR's Xtreme Mechanical Polished finish won't rust, crack or peel and requires very little maintenance.



XP4

TITANIUM SILVER

CARR's Xtreme Titanium Silver Powder Coat finish features a lightly textured matte finish that resists scratches, peeling and fading.



XP3

BLACK

CARR's Xtreme Black Powder Coat finish features a lightly textured matte finish that resists scratches, peeling and fading.

DIMENSION: Large 20" width

STEP PAD: Exclusive diamond, nonslip tread pattern

STEP: Flat step area for increased safety



SUPER HOOP



SUPER HOOP APPLICATIONS

CHEVY/GMC	XM3 POLISH	XP4 SILVER	XP3 BLACK	XP7 YELLOW
'15 - '19 Colorado/Canyon	123332	123334	123331	123337
'02 - '09 Trail Blazer/Envoy	124032	124034	124031	124037
'02 - '13 Avalanche	124032	124034	124031	124037
'02 - '19 Denali Truck	124032	124034	124031	124037
'19 Sierra/Silverado 1500 C&K P/U/Fullsize/All Cabs (All doors)	123332	123334	123331	123337
'88 - '18 Sierra/Silverado 1500 C&K P/U / Fullsize	124032	124034	124031	124037
'88 - '19 Sierra/Silverado 2500/3500 HD all doors	124032	124034	124031	124037
'11 - '19 *Sierra/Silverado 2500/3500 HD all cabs (DIESEL ONLY)	126332	126334	126331	126337
'73 - '87 **Fullsize Pick-ups/Blazer/Suburban	124032	124034	124031	124037
'76 - '91 Suburban	124032	124034	124031	124037
'76 - '93 S10/Sonoma pickups, Blazer/Jimmy	124032	124034	124031	124037
'67 - '96 Fullsize Van	124032	124034	124031	124037
DODGE				
'19 Ram GAS 1500	129112	129114	129111	129117
'09 - '18 Ram GAS 1500-5500	129772	129774	129771	129777
'09 - '19 Ram DIESEL 2500-5500 P/U beds only	129772	129774	129771	129777
'11 - '19 * Ram DIESEL 3500-5500 Chassis beds only	127442	127444	127441	127447
'09 - '10 Ram DIESEL 3500-5500 Chassis beds only	129772	129774	129771	129777
'94 - '08 Ram 1500-5500	124032	124034	124031	124037
'74 - '93 Fullsize P/U	124032	124034	124031	124037
'97 - '09 Dakota 2-Door Only	124032	124034	124031	124037
'02 - '06 Sprinter Van	124502	124504	124501	124507
'07 - '09 Sprinter Van	125772	125774	125771	125777
'74 - '92 Ram Charger	124032	124034	124031	124037
'83 - '91 Raider	124032	124034	124031	124037
FORD/MERCURY				
'17 - '19 Super Duty Aluminum body All Doors/All Cabs	128222	128224	128221	128227
'99 - '16 Super Duty All Cabs (All Doors)	124872	124874	124871	124877
'15 - '19 F-150 Aluminum body All door/All cabs	128222	128224	128221	128227
'04 - '14 F-150 All Cabs (All Doors)	124032	124034	124031	124037
'01 - '03 F150 SuperCrew (All Doors)	124032	124034	124031	124037
'97 - '04 F-150/F-250 LD/F-150 Heritage P/U (All Doors)	124032	124034	124031	124037
'97 - '03 F-150 Quad Cab (All Doors)	124032	124034	124031	124037
'81 - '96 F150 & 250 Light Duty/P/U/Bronco All Doors/All Cabs	120252	120254	120251	120257
'81 - '98 F250-550 Heavy Duty P/U All Doors/All Cabs	120252	120254	120251	120257
'19 Ranger Super Crew - 4 door	124502	124504	124501	124507
'19 Ranger Super Cab - 4 Door	TBA	TBA	TBA	TBA
'98 - '11 Ranger 2-Door Only	124992	124994	124991	124997
'00 - '05 Excursion (All Doors)	124872	124874	124871	124877
'18 - '19 Expedition (All Doors)	128222	128224	128221	128227
'97 - '17 Expedition (All Doors)	124032	124034	124031	124037
'91 - '01 Explorer (not Eddie Bauer)	124032	124034	124031	124037
'96 - '01 Mercury Mountaineer	124032	124034	124031	124037
'95 - '96 F150 Lightning	120252	120254	120251	120257
'75½ - '02 Fullsize E-Series Van	124032	124034	124031	124037
'05 - '14 Fullsize E-Series Van	124032	124034	124031	124037
'15 - '19 E-Series Cutaway Cab	124032	124034	124031	124037
NO-DRILL APPLICATION '99 - '16 Super Duty (All Cabs/All Doors)	125002	125004	125001	125007

ISUZU	XM3 POLISH	XP4 SILVER	XP3 BLACK	XP7 YELLOW
'84 - '02 Trooper	124032	124034	124031	124037
'91 - '02 Rodeo	124032	124034	124031	124037
'91 - '02 Amigo	124032	124034	124031	124037
'89 - '93 P/U	124032	124034	124031	124037
JEEP				
'06 - '10 Commander	124502	124504	124501	124507
'07 - '18 JK Wrangler (Front doors only, all styles)	121242	121244	121241	121247
'97 - '06 TJ Wrangler	120552	120554	120551	120557
'02 - '12 KJ Liberty (Caution: Ground clearance problem on stock vehicle)	124502	124504	124501	124507
'93 - '98 Grand Cherokee	124032	124034	124031	124037
MAZDA				
'91 - '94 Navajo	124032	124034	124031	124037
'98 - '11 B-Series P/U 2-Door Only	124992	124994	124991	124997
'83 - '93 B-Series P/U	124032	124034	124031	124037
MERCEDES				
'10 - '19 Sprinter Van	125772	125774	125771	125777
MITSUBISHI				
'78 - '94 P/U	124032	124034	124031	124037
'83 - '99 Montero	124032	124034	124031	124037
'97 - '02 Montero Sport	124032	124034	124031	124037
NISSAN				
'98 - '01 Frontier Reg cab	124032	124034	124031	124037
'02 - '19 Frontier (All Cabs)	124032	124034	124031	124037
'00 - '16 Xterra (Front doors)	124032	124034	124031	124037
'86 - '01 Pathfinder	124032	124034	124031	124037
'86 - '97 Hardbody P/U	124032	124034	124031	124037
'72 - '86 P/U	124032	124034	124031	124037
TOYOTA				
'05 - '19 Tacoma Crew Cab (All Doors)	124502	124504	124501	124507
'01 - '04 Tacoma Crew Cab (All Doors)	124032	124034	124031	124037
'05 - '19 Tacoma / Prerunner	124502	124504	124501	124507
'96 - '04 Tacoma / Prerunner	124032	124034	124031	124037
'00 - '19 Tundra	124502	124504	124501	124507
'01 - '07 Sequoia	124502	124504	124501	124507
'74 - '95 P/U	124032	124034	124031	124037
'05 - '09 4 Runner	124502	124504	124501	124507
'84 - '04 4 Runner	124032	124034	124031	124037
'91 - '98 FJ80 Land Crsr	124032	124034	124031	124037
'80 - '91½ FJ60/FJ62 L/C	124032	124034	124031	124037
'07 - '14 FJ Cruiser	124502	124504	124501	124507

NOTE: Vehicles not listed have no applications

* Will fit gas engine pickups to allow the steps to extend an additional 1 inch.

** Does not fit vehicles with saddle tanks.



HOOP II



THE HOOP II

This uniquely designed diamond tread pattern provides a safe, non-slip surface on the flat step area. Our exclusive multi-mount system is designed for a precision fit and easier installation. The Hoop II step is constructed from extremely strong die-cast aluminum alloy for maximum quality and durability.

FEATURES

- Made of corrosion-resistant, durable cast aluminum alloy
- Rugged tread pattern provides a safe and attractive non-slip surface
- Rocker panel installation provides one of the strongest and easiest installations on the market
- Unique design gives the vehicle a rugged off-road look, while also maintaining a stylish accent for today's vehicles
- Limited lifetime warranty on materials and craftsmanship



POLISHED

CARR's Xtreme Mechanical Polished finish won't rust, crack or peel and requires very little maintenance.



TITANIUM SILVER

CARR's Xtreme Titanium Silver Powder Coat finish features a lightly textured matte finish that resists scratches, peeling and fading.



BLACK

CARR's Xtreme Black Powder Coat finish features a lightly textured matte finish that resists scratches, peeling and fading.

DIMENSION: Compact 10" width

STEP PAD: Exclusive diamond, non-slip tread pattern

STEP: Flat step area for increased safety

MADE
IN THE
USA



HOOP II APPLICATIONS



HOOP II APPLICATIONS

CHEVY/GMC	XM3 POLISH	XP4 SILVER	XP3 BLACK	XP7 YELLOW
'15 - '19 Colorado/Canyon	103332	103334	103331	103337
'02 - '09 Trail Blazer/Envoy	103992	103994	103991	103997
'02 - '13 Avalanche	103992	103994	103991	103997
'02 - '19 Denali Truck	103992	103994	103991	103997
'19 Sierra/Silverado 1500 C&K P/U/Fullsize all cabs (All doors)	103332	103334	103331	103337
'88 - '18 Sierra/Silverado 1500 C&K P/U / Fullsize	103992	103994	103991	103997
'88 - '19 Sierra/Silverado 2500/3500 HD all doors	103992	103994	103991	103997
'11 - '19 *Sierra/Silverado 2500/3500 HD all cabs (DIESEL ONLY)	106332	106334	106331	106337
'73 - '87 **Fullsize Pick-ups/Blazer/Suburban	103992	103994	103991	103997
'76 - '91 Suburban	103992	103994	103991	103997
'76 - '93 S10/Sonoma pickups, Blazer/Jimmy	103992	103994	103991	103997
'67 - '96 Fullsize Van	103992	103994	103991	103997
DODGE				
'19 Ram GAS 1500	109112	109114	109111	109117
'09 - '18 Ram GAS 1500-5500	109772	109774	109771	109777
'09 - '19 Ram DIESEL 2500-5500 P/U beds only	109772	109774	109771	109777
'11 - '19 * Ram DIESEL 3500-5500 Chassis beds only	107442	107444	107441	107447
'09 - '10 Ram DIESEL 3500-5500 Chassis beds only	109772	109774	109771	109777
'94 - '08 Ram 1500-5500	103992	103994	103991	103997
'74 - '93 Fullsize P/U	103992	103994	103991	103997
'97 - '09 Dakota 2-Door Only	103992	103994	103991	103997
'14 - '19 ProMaster Van - Front doors only	105772	105774	105771	105777
'02 - '06 Sprinter Van	104502	104504	104501	104507
'07 - '09 Sprinter Van	105772	105774	105771	105777
'74 - '92 Ram Charger	103992	103994	103991	103997
'83 - '91 Raider	103992	103994	103991	103997
FORD/MERCURY				
'17 - '19 Super Duty Aluminum body All Doors/All Cabs	108222	108224	108221	108227
'99 - '16 Super Duty All Cabs (All Doors)	104812	104814	104811	104817
'15 - '19 F-150 Aluminum body All door/All cabs	108222	108224	108221	108227
'04 - '14 F-150 All Cabs (All Doors)	103992	103994	103991	103997
'01 - '03 F150 SuperCrew (All Doors)	103992	103994	103991	103997
'97 - '04 F-150/F-250 LD/F-150 Heritage P/U (All Doors)	103992	103994	103991	103997
'97 - '03 F-150 Quad Cab (All Doors)	103992	103994	103991	103997
'81 - '96 F150 & 250 Light Duty/P/U/Bronco All Doors/All Cabs	102522	102524	102521	102527
'81 - '98 F250-550 Heavy Duty P/U All Doors/All Cabs	102522	102524	102521	102527
'19 Ranger Super Crew - 4 door	104502	104504	104501	104507
'19 Ranger Super Cab - 4 Door	TBA	TBA	TBA	TBA
'98 - '11 Ranger 2-Door Only	104992	104994	104991	104997
'00 - '05 Excursion (All Doors)	104812	104814	104811	104817
'18 - '19 Expedition (All Doors)	108222	108224	108221	108227
'97 - '17 Expedition (All Doors)	103992	103994	103991	103997
'91 - '01 Explorer (not Eddie Bauer)	103992	103994	103991	103997
'96 - '01 Mercury Mountaineer	103992	103994	103991	103997
'95 - '96 F150 Lightning	102522	102524	102521	102527
'75½ - '02 Fullsize E-Series Van	103992	103994	103991	103997
'05 - '14 Fullsize E-Series Van	103992	103994	103991	103997
'15 - '19 E-Series Cutaway Cab	103992	103994	103991	103997

ISUZU	XM3 POLISH	XP4 SILVER	XP3 BLACK	XP7 YELLOW
'84 - '02 Trooper	103992	103994	103991	103997
'91 - '02 Rodeo	103992	103994	103991	103997
'91 - '02 Amigo	103992	103994	103991	103997
'89 - '93 P/U	103992	103994	103991	103997
JEEP				
'06 - '10 Commander	104502	104504	104501	104507
'18 - '19 JL Wrangler (Sport, Sport S, Sahara, Rubicon) Front doors only	101252	101254	101251	101257
'07 - '18 JK Wrangler (All doors, all styles)	101242	101244	101241	101247
'97 - '06 TJ Wrangler	102552	102554	102551	102557
'02 - '12 KJ Liberty (Caution: Ground clearance problem on stock vehicle)	104502	104504	104501	104507
'93 - '98 Grand Cherokee	103992	103994	103991	103997
MAZDA				
'91 - '94 Navajo	103992	103994	103991	103997
'98 - '11 B-Series P/U 2-Door Only	104992	104994	104991	104997
'83 - '93 B-Series P/U	103992	103994	103991	103997
MERCEDES				
'10 - '19 Sprinter Van	105772	105774	105771	105777
MITSUBISHI				
'78 - '94 P/U	103992	103994	103991	103997
'83 - '99 Montero	103992	103994	103991	103997
'97 - '02 Montero Sport	103992	103994	103991	103997
NISSAN				
'98 - '01 Frontier Reg cab	103992	103994	103991	103997
'02 - '19 Frontier (All Cabs)	103992	103994	103991	103997
'00 - '16 Xterra (Front doors)	103992	103994	103991	103997
'00 - '16 Xterra (Rear doors)	103992	103994	103991	103997
'86 - '01 Pathfinder	103992	103994	103991	103997
'86 - '97 Hardbody P/U	103992	103994	103991	103997
'72 - '86 P/U	103992	103994	103991	103997
TOYOTA				
'05 - '19 Tacoma Crew Cab (All Doors)	104502	104504	104501	104507
'01 - '04 Tacoma Crew Cab (All Doors)	103992	103994	103991	103997
'05 - '19 Tacoma / Prerunner	104502	104504	104501	104507
'96 - '04 Tacoma / Prerunner	103992	103994	103991	103997
'00 - '19 Tundra	104502	104504	104501	104507
'01 - '07 Sequoia	104502	104504	104501	104507
'74 - '95 P/U	103992	103994	103991	103997
'05 - '09 4 Runner	104502	104504	104501	104507
'84 - '04 4 Runner	103992	103994	103991	103997
'91 - '98 FJ80 Land Crsr	103992	103994	103991	103997
'80 - '91½ FJ60/FJ62 L/C	103992	103994	103991	103997
'07 - '14 FJ Cruiser	104502	104504	104501	104507

NOTE: Vehicles not listed have no applications

* Will fit gas engine pickups to allow the steps to extend an additional 1 inch.

** Does not fit vehicles with saddle tanks.



WORK TRUCK STEP

CARGO VAN STEP (REAR AND SIDE DOORS)

WORK TRUCK STEP

Gives safe and easy access to the side and top rack of any service truck where exterior tool boxes are used.



FEATURES

- Hands-free
- Fully assembled
- 500 lb. weight capacity
- Easy to install and easy to use
- Conveniently tucked away when not in use
- When in the "out" position, both feet fit on the step
- Large 31", 24" or 12" non-skid step surface for increased safety
- Limited lifetime warranty on all materials and craftsmanship
- Push the step in to deploy it to its "out" position and push it in again to lock it when not in use!

MADE IN THE USA



Load Capacity
500 lb.

HEAVY DUTY AND HANDS-FREE

DEPLOY AND CLOSE WITH YOUR FEET



WORK TRUCK STEP APPLICATIONS

XP3 BLACK XM4 MATTE XP7 YLW

	XP3 BLACK	XM4 MATTE	XP7 YLW
WTS 12" CS (Cast Step)	*501010	N/A	N/A
WTS 24" GSS (Grip Strut Step)	N/A	*501020	*501027
WTS 12" GSS (Grip Strut Step)	N/A	*501030	*501037
WTS 31" Deployable Platform Step (Grip Strut)	N/A	*501060	*501067

*NOTE: These steps fit any flat surface with access to the other side.

CARGO VAN STEP

This hands-free deployable step gives you maximum safety and accessibility when entering and exiting the side door of your van. You will also reduce the step height for better accessibility by a minimum of 7".

HEAVY-DUTY AND HANDS-FREE

FEATURES

- Hands-free
- Fully assembled
- 500 lb. weight capacity
- Easy to install and easy to use
- Conveniently tucked away when not in use
- When in the "out" position, both feet fit on step
- Large 24" non-skid step surface for increased safety
- Limited lifetime warranty on all materials and craftsmanship
- Push the step in to deploy it to its "out" position and push it in again to lock it when not in use!



Load Capacity
500 lb.

MADE IN THE USA



CARGO VAN / Transit Vehicles WORK TRUCK STEP APPLICATIONS

XM4 MATTE XP7 YLW

	XM4 MATTE	XP7 YLW
'03 - '19 24" WTS - Chevy Cargo Van (Grip Strut) (Side door)	501050	501057
'13 - '19 24" WTS - Ford Transit Van (Grip Strut) (Side door)	501070	501077
'13 - '19 24" WTS - Ford Transit Van (Grip Strut) (Rear door)	501079	501977
'12 - '19 24" WTS - Mercedes Sprinter (Grip Strut) (Side door)	501080	501087
'14 - '19 24" WTS - Dodge Promaster Van (Grip Strut) (Side door)	501090	501097

FACTORY STEP GRAB HANDLES



NEW FACTORY STEP

FEATURES

- Safer entry and exit from your van
- 20" wide fully functional step area
- Made from heavy gauge steel, plated and powder coated for superior protection
- Exclusive perforated step area for solid footing
- Rated at 500 lb. weight capacity
- Super easy installation
- Limited lifetime warranty on materials and craftsmanship



Load Capacity
500 lb.

MADE
in the USA



FACTORY STEP APPLICATIONS

XP3 BLACK XP7 YLW

	XP3 BLACK	XP7 YLW
'15 - '19 Ford Transit Factory Step XP3 Black Powder Coat - Pair	*451001	*451007
'15 - '19 Ford Transit Factory Step XP3 Black Powder Coat - Single	*451001-1	*451007-1
'10 - '19 Mercedes Sprinter Factory Step XP3 Black Powder Coat - Pair	451011	451017
'10 - '19 Mercedes Sprinter Factory Step XP3 Black Powder Coat - Single	451011-1	451017-1

*NOTE: Excluding the Connect for fitment



MADE
in the USA



GRAB HANDLES

FEATURES

- Easy bolt-on installation
- Cast from alloyed aluminum
- Powder coated and polished finishes
- Secure grip for added safety

XM3 POLISHED 200032

XP3 BLACK 200031

XP7 YELLOW 200037





MEGA STEP HD MEGA STEP

MADE
IN THE
USA

MEGA STEP

FEATURES

- Heavy-duty foldable steps are large—14” by 6”
- Specifically developed for all 2” and 2-1/2” hitch receivers
- Flat-mount version also available with hardware
- Safe and easy access to any vehicle with a trailer hitch
- Back plate and the deck are made out of heavy-duty aluminum alloy
- Fold down for use and then fold back up when not in use
- Has a 500 lb. weight capacity
- Simple to install and use
- Limited lifetime warranty




MEGA STEP APPLICATIONS (SOLD AS SINGLES)

	XP3 BLACK	XM4 MATTE	XP7 YLW
Mega Step Flat Mount	190001	190005	190007
Mega Hitch Step 2 and 2 1/2 inch receivers	190011	190015	190017

HD MEGA STEP

FEATURES

- Heavy-duty foldable steps are large—14” by 8”
- Illuminated with grab handle slots
- Flat-mount version also available with hardware
- Safe and easy access to any vehicle with a 2” or 2-1/2” hitch receivers
- Back plate and the deck are made out of heavy-duty aluminum alloy
- Fold down for use and then fold back up when not in use
- Has a 500 lb. weight capacity
- Simple to install and use
- Limited lifetime warranty
- NFPA Compliant

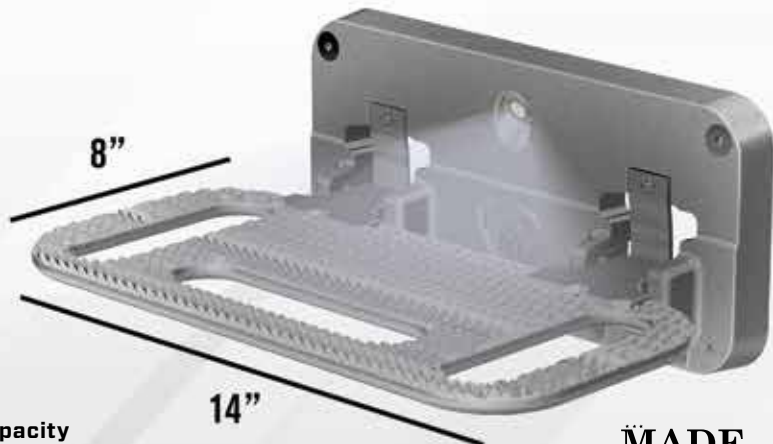

HEAVY DUTY Load Capacity
500 lb.

MADE
IN THE
USA

HD MEGA STEP APPLICATIONS (SOLD AS SINGLES)

	XP3 BLACK	XM3 POLISHED	XP7 YLW
HD Mega Step Flat Mount	193001	193002	193007
HD Mega Hitch Step 2 and 2 1/2 inch receivers	193011	193012	193017
HD Mega Step Retro Fit (Fire Trucks only)	-	193022	-
HD Mega Step Flat Mount - no light	194001	194002	194007
HD Mega Hitch Step 2 and 2 1/2 inch receivers - no light	194011	194012	194017



UTILITY/MUNICIPALITY
FIRE/ EMERGENCY



MADE
IN THE
USA



NEW Steps and Grab Handles Available in Safety Yellow



LD STEP
Additional 1" Depth Step Area
14" Width



HOOP II
10" Width



SUPER HOOP
20" Width



10" GRAB HANDLE



MEGA STEP
14X6 Folding Step
(Flat Mount and Hitch Step)



HD MEGA STEP
14X8 Folding Step with Built-in
Grab Handle/Optional Lighting
(Flat Mount and Hitch Step)



FACTORY VAN STEP
20" Width



**24" DEPLOYABLE
WORK TRUCK STEP**



**12" DEPLOYABLE
WORK TRUCK STEP**




**EMERGENCY
VEHICLES**



HD MEGA STEP
NFPA Compliant

MADE
IN THE
USA

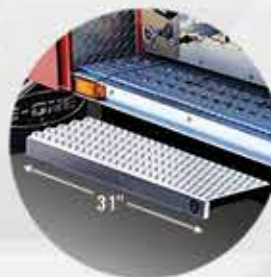

31" WORK TRUCK STEP
NFPA Compliant





HD HITCH STEP



**MADE
IN THE
USA**



**HOLDS UP TO
650 lb.**

HD UNIVERSAL HITCH STEP

FEATURES

- Non-slip surface
- Requires standard pin and clip
- Folds up when not in use
- Provides easy access to back of vehicle
- Fits all 2" hitch receivers



GRAPHICS FOR HD UNIVERSAL HITCH STEPS



HD UNIVERSAL HITCH STEPS APPLICATIONS (SOLD AS SINGLES)

XP3 BLACK

Universal Hitch Step - Blank	183012
Universal Hitch Step - USA	183022
Universal Hitch Step - American Flag	183032
Universal Hitch Step - Horse	183042
Universal Hitch Step - MY TOY	183052
Universal Hitch Step - CARR logo	183062
Universal Hitch Step - Checkered Flags	183082
Universal Hitch Step - U.S. Marines	183142
Universal Hitch Step - Dirt Bike	183152
Universal Hitch Step - Quad	183162
Universal Hitch Step - Pick-up	183172
Universal Hitch Step - Jeep	183182
Universal Hitch Step - SUV	183192
Universal Hitch Step - U.S. Coast Guard	183202
Universal Hitch Step - Fire & Rescue	183212
Universal Hitch Step - Law Enforcement	183222
Universal Hitch Step - U.S. National Guard	183232
Universal Hitch Step - Reflector	183242
Universal Hitch Step - Black Out (All Black)	183252

JL 180° LIGHT MOUNT LIGHT WINGS



The JL 180 allows a driver to easily adjust additional vehicle lighting without having to use a tool. Lights on each side together provide 360 coverage for off-road, camping, and recreational use.

JL 180° LIGHT MOUNT

The JL 180° Light Mount is designed for effortless 180° light rotation on the driver and passenger side of a JL Wrangler. It securely mounts to the A-Pillar factory holes and can accommodate 3" lights. With a pull pin design, it can be rotated to 7 different positions without using any tools, making it perfect for on the fly adjustments.

FEATURES

- Durable powder coat for corrosion protection and rugged use
- On the fly 180° rotating feature
- Precise fit using factory holes
- Antenna cut out
- Super easy install
- Solid mount with virtually no vibration
- Accommodates 3" lights

JEEP JL 180 LIGHT MOUNT APPLICATIONS XP3 BLACK

18 - '19 JL Wrangler All Styles	210291
---------------------------------	--------

LIGHT WING MOUNTING SYSTEM

The CARR Light Wing mounts to virtually any bumper that has a solid mounting area for the vehicle license plate. The Light Wing is extremely universal, and most vehicles do not require a mounting kit. Its unique style accents your vehicle's appearance. The durable cast aluminum alloy is available in three corrosion-resistant finishes.



FEATURES

LIGHTS NOT INCLUDED

- 36" wing span
- Universal design that can easily mount to virtually any bumper that has a solid mounting area for the vehicle license plate
- Wing swept design contours to today's trucks and SUVs
- Will fit urethane bumpers as long as there is a metal sub-structure behind the urethane cover
- Strong die-cast construction
- Solid mount with virtually no vibration
- Special keyed security bolt to protect your investment
- Affordable alternative to expensive grille guards

BLACK

CARR's Xtreme Black Powder Coat finish features a lightly textured matte finish that resists scratches, peeling and fading.



XP3

TITANIUM SILVER

CARR's Xtreme Titanium Silver Powder Coat finish features a lightly textured matte finish that resists scratches, peeling and fading.



XP4

CHROME

CARR's Xtreme Chrome Plated Aluminum features the luster of chrome that will not rust.



XC3

LIGHT WING APPLICATIONS

XP4 SILVER XP3 BLACK XC3 CHROME

LIGHT WING	167304	167301	167303
------------	--------	--------	--------



XRS JEEP ROTA LIGHT BAR LIGHT BARS

XRS JEEP ROTA LIGHT BARS

FEATURES

- Absolutely no drilling or cutting
- Bar rotates down for additional clearance
- Mounts to existing factory holes



WILL ACCOMMODATE LED LIGHTS

LIGHTS NOT INCLUDED



**MADE
IN THE
USA**

JK Jeep Wrangler All Styles

2007-2018 PART # 210221

TJ Jeep Wrangler

1997-2006 PART # 210661

CJ7/YJ Jeep Wrangler

1976-1995 PART # 210881

DELUXE, DELUXE ROTA & M-PROFILE LIGHT BARS

Available in three finishes. The XM3 bars feature a stainless steel crossbar. The XP3 and XP4 bars feature a powder coated crossbar. All light bars are designed to securely mount to the roof gutter of many vehicles with internal gutters, and can be installed with our stainless steel gutter mount kit. All CARR light bars come with special bolts that are keyed to protect your investment.



LIGHTS NOT INCLUDED

ALL OF OUR LIGHT BARS WILL ACCOMMODATE LED AND RALLY LIGHTS



DELUXE LIGHT BAR

FEATURES

- Wide cast aluminum mounting base
- Universal fit



DELUXE ROTA LIGHT BAR

FEATURES

- A CARR exclusive feature that allows the light bar to rotate down for extra clearance or to protect your lighting investment
- Universal fit



M-PROFILE LIGHT BAR

FEATURES

- Medium profile design looks great on any vehicle
- Universal fit

RAIN GUTTER KITS FOR LIGHT BARS PAGES 15 - 20

Our Rain Gutter brackets are now available in stainless steel and black powder coated stainless steel. All of these brackets are uniquely designed to fit your vehicle. All of our roof-mounted light bars simply clamp on to these brackets to make installation easy and secure.

LIGHT BARS



DELUXE, DELUXE ROTA & M-PROFILE LIGHT BARS

CHEVY/GMC	DELUXE LIGHT BAR			DELUXE ROTA BAR			M-PROFILE BAR			RAIN GUTTERS	
	XM3 POL	XP4 SLV	XP3 BLK	XM3 POL	XP4 SLV	XP3 BLK	XM3 POL	XP4 SLV	XP3 BLK	KIT Stainless	KIT XP3 Black
'15 - '19 Colorado/Canyon	210342	210344	210341	210872	210874	210871	210702	210704	210701	220062	220061
'04 - '14 Colorado/Canyon	210342	210344	210341	210872	210874	210871	210702	210704	210701	220052	220051
'02 - '09 Trail Blazer/Envoy	210342	210344	210341	210872	210874	210871	210702	210704	210701	220542	220541
'02 - '13 Avalanche	210342	210344	210341	210872	210874	210871	210702	210704	210701	220542	220541
'02 - '19 Denali Truck	210342	210344	210341	210872	210874	210871	210702	210704	210701	220542	220541
'19 Sierra/Silverado C&K PU / Fullsize & HD	210342	210344	210341	210872	210874	210871	210702	210704	210701	220062	220061
'14 - '18 Sierra/Silverado C&K PU / Fullsize & HD	210342	210344	210341	210872	210874	210871	210702	210704	210701	220062	220061
'00 - '13 Sierra/Silverado C&K PU / Fullsize & HD	210342	210344	210341	210872	210874	210871	210702	210704	210701	220542	220541
'88 - '99 Sierra/Silverado C&K PU / Fullsize	210342	210344	210341	210872	210874	210871	210702	210704	210701	223412	223411
'00 - '13 Fullsize Crew Cab	210342	210344	210341	210872	210874	210871	210702	210704	210701	220542	220541
'92 - '99 Fullsize Crew Cab	210342	210344	210341	210872	210874	210871	210702	210704	210701	223412	223411
'73 - '91 Fullsize Crew Cab	210342	210344	210341	210872	210874	210871	210702	210704	210701	NR	NR
'73 - '87 Fullsize Pick-up	210342	210344	210341	210872	210874	210871	210702	210704	210701	NR	NR
'00 - '18 Suburban/Yukon XL Tahoe/Yukon	210342	210344	210341	210872	210874	210871	210702	210704	210701	220542	220541
'92 - '99 Suburban	210342	210344	210341	210872	210874	210871	210702	210704	210701	223412	223411
'76 - '91 Suburban	210342	210344	210341	210872	210874	210871	210702	210704	210701	NR	NR
'92 - '99 Yukon/Tahoe	210342	210344	210341	210872	210874	210871	210702	210704	210701	223412	223411
'76 - '93 S10/Sonoma pickup, Blazer/Jimmy	210342	210344	210341	210872	210874	210871	210702	210704	210701	220042	220041
'67 - '96 Fullsize Van	210342	210344	210341	210872	210874	210871	N/A	N/A	N/A	NR	NR
DODGE											
'19 Ram 1500 All Cabs/All Doors	210342	210344	210341	210872	210874	210871	210702	210704	210701	220062	220061
'19 Ram 2500-5500 All Cabs/All Doors	210342	210344	210341	210872	210874	210871	210702	210704	210701	220082	220081
'14 - '18 Ram 1500-5500 All Cabs/All Doors	210342	210344	210341	210872	210874	210871	210702	210704	210701	220082	220081
'09 - '13 Ram 1500 All Cabs/All Doors	210342	210344	210341	210872	210874	210871	210702	210704	210701	220062	220061
'02 - '08 Ram 1500 All Cabs/All Doors	210342	210344	210341	210872	210874	210871	210702	210704	210701	220542	220541
'94 - '01 Ram 1500 Pickups All Cabs/All Doors	210342	210344	210341	210872	210874	210871	210702	210704	210701	221502	221501
'03 - '13 Ram 2500-5500 All Cabs/All Doors	210342	210344	210341	210872	210874	210871	210702	210704	210701	220062	220061
'94 - '02 Ram 2500-5500 All Cabs/All Doors	210342	210344	210341	210872	210874	210871	210702	210704	210701	221502	221501
'74 - '93 Fullsize Pickup	210342	210344	210341	210872	210874	210871	N/A	N/A	N/A	NR	NR
'05 - '09 Durango	210342	210344	210341	210872	210874	210871	210702	210704	210701	220542	220541
'05 - '11 Dakota	210342	210344	210341	210872	210874	210871	210702	210704	210701	220542	220541
'97 - '04 Dakota	210342	210344	210341	210872	210874	210871	210702	210704	210701	220052	220051
'74 - '92 Ram Charger	210342	210344	210341	210872	210874	210871	210702	210704	210701	NR	NR
'83 - '91 Raider	210342	210344	210341	210872	210874	210871	210702	210704	210701	NR	NR
FORD/MERCURY											
'99 - '16 Super Duty All Cabs	210342	210344	210341	210872	210874	210871	210702	210704	210701	220052	220051
'19 Ranger - All Styles	210342	210344	210341	210872	210874	210871	210702	210704	210701	220062	220061
'04 - '14 F-150	210342	210344	210341	210872	210874	210871	N/A	N/A	N/A	220062	220061
'81 - '96 F150 & 250 Light Duty/Pickup/Bronco	210342	210344	210341	210872	210874	210871	210702	210704	210701	NR	NR
'81 - '98 F250-550 Heavy Duty Pickup	210342	210344	210341	210872	210874	210871	210702	210704	210701	NR	NR
'67 - '80 Fullsize Pick-up/Bronco	210342	210344	210341	210872	210874	210871	210702	210704	210701	NR	NR
'00 - '05 Excursion	210342	210344	210341	210872	210874	210871	210702	210704	210701	220052	220051
'91 - '01 Explorer (not Eddie Bauer)	210342	210344	210341	210872	210874	210871	210702	210704	210701	222742	222741
'96 - '01 Mercury Mountaineer (Same as Explorer)	210342	210344	210341	210872	210874	210871	210702	210704	210701	222742	222741
'95 - '96 F 150 Lightning	210342	210344	210341	210872	210874	210871	210702	210704	210701	NR	NR
'75½-'02 Fullsize E-Series Van	210342	210344	210341	210872	210874	210871	210702	210704	210701	NR	NR
'05 - '14 Fullsize E-Series Van	210342	210344	210341	210872	210874	210871	210702	210704	210701	NR	NR

NOTE: Vehicles not listed have no applications



LIGHT BARS

DELUXE, DELUXE ROTA & M-PROFILE LIGHT BARS

	DELUXE LIGHT BAR			DELUXE ROTA BAR			M-PROFILE BAR			RAIN GUTTERS	
	XM3 POL	XP4 SLV	XP3 BLK	XM3 POL	XP4 SLV	XP3 BLK	XM3 POL	XP4 SLV	XP3 BLK	KIT Stainless	KIT XP3 Black
ISUZU											
'84 - '02 Trooper	210342	210344	210341	210872	210874	210871	210702	210704	210701	220042	220041
'91 - '02 Rodeo	210342	210344	210341	210872	210874	210871	210702	210704	210701	220052	220051
'91 - '02 Amigo	210342	210344	210341	210872	210874	210871	210702	210704	210701	220052	220051
'89 - '93 Pick-up	210342	210344	210341	210872	210874	210871	210702	210704	210701	NR	NR
JEEP											
'05 - '19 Grand Cherokee	210342	210344	210341	210872	210874	210871	210702	210704	210701	220052	220051
'93 - '98 Grand Cherokee	210342	210344	210341	210872	210874	210871	210702	210704	210701	223412	223411
'06 - '10 Commander	210342	210344	210341	210872	210874	210871	210702	210704	210701	220052	220051
'84 - '00 Cherokee	210342	210344	210341	210872	210874	210871	210702	210704	210701	NR	NR
MAZDA											
'91 - '94 Navajo	210342	210344	210341	210872	210874	210871	210702	210704	210701	222742	222741
'83 - '93 B-Series Pick-up	210342	210344	210341	210872	210874	210871	210702	210704	210701	220052	220051
MITSUBISHI											
'78 - '94 Pick-up	210342	210344	210341	210872	210874	210871	210702	210704	210701	NR	NR
'83 - '99 Montero	210342	210344	210341	210872	210874	210871	210702	210704	210701	NR	NR
'97 - '02 Montero Sport	210342	210344	210341	210872	210874	210871	210702	210704	210701	220042	220041
NISSAN											
'98 - '01 Frontier Reg cab	210342	210344	210341	210872	210874	210871	210702	210704	210701	220052	220051
'02 - '19 Frontier Crew Cab	210342	210344	210341	210872	210874	210871	210702	210704	210701	220062	220061
'00 - '16 Xterra - Without option roof rack	210342	210344	210341	210872	210874	210871	210702	210704	210701	220062	220061
'04 - '11 Pathfinder	210342	210344	210341	210872	210874	210871	210702	210704	210701	220062	220061
'86 - '97 Hardbody P/U	210342	210344	210341	210872	210874	210871	210702	210704	210701	220052	220051
'72 - '86 Pick-up	210342	210344	210341	210872	210874	210871	210702	210704	210701	NR	NR
TOYOTA											
'05 - '19 Tacoma/Prerunner/Crew Cab	210342	210344	210341	210872	210874	210871	210702	210704	210701	220042	220041
'96 - '04 Tacoma/Prerunner/Crew Cab	210342	210344	210341	210872	210874	210871	210702	210704	210701	220052	220051
'07 - '19 Tundra	210342	210344	210341	210872	210874	210871	210702	210704	210701	220042	220041
'00 - '06 Tundra	210342	210344	210341	210872	210874	210871	210702	210704	210701	220052	220051
'01 - '07 Sequoia	210342	210344	210341	210872	210874	210871	210702	210704	210701	220052	220051
'89 - '95 Pick-up	210342	210344	210341	210872	210874	210871	210702	210704	210701	220052	220051
'74 - '88 Pick-up	210342	210344	210341	210872	210874	210871	210702	210704	210701	NR	NR
'05 - '07 4 Runner	210342	210344	210341	210872	210874	210871	210702	210704	210701	220042	220041
'96 - '04 4 Runner	210342	210344	210341	210872	210874	210871	210702	210704	210701	220052	220051
'84 - '95 4 Runner	210342	210344	210341	210872	210874	210871	210702	210704	210701	220052	220051
'93 - '99 T-100	210342	210344	210341	210872	210874	210871	210702	210704	210701	220052	220051
'80 - '91½ FJ60/FJ62 L/C	210342	210344	210341	210872	210874	210871	210702	210704	210701	NR	NR
'07 - '14 FJ Cruiser	210342	210344	210341	210872	210874	210871	210702	210704	210701	220042	220041

NOTE: Vehicles not listed have no applications



LOW PROFILE & C-PROFILE ROTA LIGHT BARS

**MADE
IN THE
USA**

LIGHTS NOT INCLUDED

Available in three finishes, the XM3 bars feature a stainless steel crossbar. The XP3 and XP4 bars feature a powder coated crossbar. All light bars are designed to securely mount to the roof gutter of many vehicles with internal gutters, and can be installed with our stainless steel gutter mount kit. All CARR light bars come with special bolts that are keyed to protect your investment.

ALL OF OUR LIGHT BARS WILL ACCOMMODATE LED AND RALLY LIGHTS



LOW PROFILE LIGHT BAR

FEATURES

- Low profile design gives your truck a subtle appearance



C-PROFILE ROTA LIGHT BAR

FEATURES

- Universal fit
- Cast end brackets made of heavy gauge steel
- Easy installation
- Crossbar rotates 180 degrees
- Stylish with rugged durability



LIGHT BARS

LOW PROFILE, C-PROFILE ROTA LIGHT BARS

CHEVY/GMC	LOW PROFILE		C-PROFILE ROTA BAR			RAIN GUTTERS	
	XP4 SILVER	XP3 BLACK	XM3 POL	XP4 SILVER	XP3 BLACK	STAINLESS	XP3 BLACK
'15 - '19 Colorado/Canyon	210504	210501	210112	210114	210111	220062	220061
'04 - '14 Colorado/Canyon	210504	210501	210112	210114	210111	220052	220051
'02 - '09 Trail Blazer/Envoy	210504	210501	210112	210114	210111	220542	220541
'02 - '13 Avalanche	210504	210501	210112	210114	210111	220542	220541
'02 - '19 Denali Truck	210504	210501	210112	210114	210111	220542	220541
'19 Sierra/Silverado C&K PU / Fullsize & HD	210504	210501	210112	210114	210111	220062	220061
'14 - '18 Sierra/Silverado C&K PU / Fullsize & HD	210504	210501	210112	210114	210111	220062	220061
'00 - '13 Sierra/Silverado C&K PU / Fullsize & HD	210504	210501	210112	210114	210111	220542	220541
'88 - '99 Sierra/Silverado C&K PU / Fullsize	210504	210501	210112	210114	210111	223412	223411
'00 - '13 Fullsize Crew Cab	210504	210501	210112	210114	210111	220542	220541
'92 - '99 Fullsize Crew Cab	N/A	N/A	210112	210114	210111	223412	223411
'73 - '91 Fullsize Crew Cab	N/A	N/A	210112	210114	210111	NR	NR
'73 - '87 Fullsize Pick-up	N/A	N/A	210112	210114	210111	NR	NR
'00 - '18 Suburban/Yukon XL Tahoe/Yukon	N/A	N/A	210112	210114	210111	220542	220541
'92 - '99 Suburban	N/A	N/A	210112	210114	210111	223412	223411
'76 - '91 Suburban	N/A	N/A	210112	210114	210111	NR	NR
'92 - '99 Yukon/Tahoe	N/A	N/A	210112	210114	210111	223412	223411
'76 - '93 S10/Sonoma pickup, Blazer/Jimmy	N/A	N/A	210112	210114	210111	220042	220041
'67 - '96 Fullsize Van	N/A	N/A	210112	210114	210111	NR	NR
DODGE							
'19 Ram 1500 All Cabs/All Doors	210504	210501	210112	210114	210111	220062	220061
'19 Ram 2500-5500 All Cabs/All Doors	N/A	N/A	210112	210114	210111	220082	220081
'14 - '18 Ram 1500-5500 All Cabs/All Doors	N/A	N/A	210112	210114	210111	220082	220081
'09 - '13 Ram 1500 All Cabs/All Doors	N/A	N/A	210112	210114	210111	220062	220061
'02 - '08 Ram 1500 All Cabs/All Doors	210504	210501	210112	210114	210111	220542	220541
'94 - '01 Ram 1500 Pickups All Cabs/All Doors	210504	210501	210112	210114	210111	221502	221501
'03 - '13 Ram 2500-5500 All Cabs/All Doors	N/A	N/A	210112	210114	210111	220062	220061
'94 - '02 Ram 2500-5500 All Cabs/All Doors	N/A	N/A	210112	210114	210111	221502	221501
'74 - '93 Fullsize Pickup	N/A	N/A	210112	210114	210111	NR	NR
'05 - '09 Durango	N/A	N/A	210112	210114	210111	220542	220541
'05 - '11 Dakota	N/A	N/A	210112	210114	210111	220542	220541
'97 - '04 Dakota	210504	210501	210112	210114	210111	220052	220051
'74 - '92 Ram Charger	N/A	N/A	210112	210114	210111	NR	NR
'83 - '91 Raider	N/A	N/A	210112	210114	210111	NR	NR
FORD/MERCURY							
'99 - '16 Super Duty All Cabs	N/A	N/A	210112	210114	210111	220052	220051
'19 Ranger - All Styles	210504	210501	210112	210114	210111	220062	220061
'04 - '14 F-150	N/A	N/A	210112	210114	210111	220062	220061
'81 - '96 F150 & 250 Light Duty/Pickup/Bronco	N/A	N/A	210112	210114	210111	NR	NR
'81 - '98 F250-550 Heavy Duty Pickup	N/A	N/A	210112	210114	210111	NR	NR
'67 - '80 Fullsize Pick-up/Bronco	N/A	N/A	210112	210114	210111	NR	NR
'00 - '05 Excursion	N/A	N/A	210112	210114	210111	220052	220051
'91 - '01 Explorer (not Eddie Bauer)	N/A	N/A	210112	210114	210111	222742	222741
'96 - '01 Mercury Mountaineer (Same as Explorer)	N/A	N/A	210112	210114	210111	222742	222741
'95 - '96 F 150 Lightning	N/A	N/A	210112	210114	210111	NR	NR
'75½ - '02 Fullsize E-Series Van	N/A	N/A	210112	210114	210111	NR	NR
'05 - '14 Fullsize E-Series Van	N/A	N/A	210112	210114	210111	NR	NR

NOTE: Vehicles not listed have no applications

LIGHT BARS



LOW PROFILE, C-PROFILE ROTA LIGHT BARS

	LOW PROFILE		C-PROFILE ROTA BAR			RAIN GUTTER KIT	
	XP4 SILVER	XP3 BLACK	XM3 POL	XP4 SILVER	XP3 BLACK	STAINLESS	XP3 BLACK
ISUZU							
'84 - '02 Trooper	N/A	N/A	210112	210114	210111	220042	220041
'91 - '02 Rodeo	N/A	N/A	210112	210114	210111	220052	220051
'91 - '02 Amigo	N/A	N/A	210112	210114	210111	220052	220051
'89 - '93 Pick-up	N/A	N/A	210112	210114	210111	NR	NR
JEEP							
'05 - '19 Grand Cherokee	210504	210501	210112	210114	210111	220052	220051
'93 - '98 Grand Cherokee	N/A	N/A	210112	210114	210111	223412	223411
'06 - '10 Commander	210504	210501	210112	210114	210111	220052	220051
'84 - '00 Cherokee	N/A	N/A	210112	210114	210111	NR	NR
MAZDA							
'91 - '94 Navajo	N/A	N/A	210112	210114	210111	222742	222741
'83 - '93 B-Series Pick-up	210504	210501	210112	210114	210111	220052	220051
MITSUBISHI							
'78 - '94 Pick-up	N/A	N/A	210112	210114	210111	NR	NR
'83 - '99 Montero	N/A	N/A	210112	210114	210111	NR	NR
'97 - '02 Montero Sport	N/A	N/A	210112	210114	210111	220042	220041
NISSAN							
'98 - '01 Frontier Reg cab	210504	210501	210112	210114	210111	220052	220051
'02 - '19 Frontier Crew Cab	210504	210501	210112	210114	210111	220062	220061
'00 - '16 Xterra - Without option roof rack	210504	210501	210112	210114	210111	220062	220061
'04 - '11 Pathfinder	N/A	N/A	210112	210114	210111	220062	220061
'86 - '97 Hardbody P/U	N/A	N/A	210112	210114	210111	220052	220051
'72 - '86 Pick-up	N/A	N/A	210112	210114	210111	NR	NR
TOYOTA							
'05 - '19 Tacoma/Prerunner/Crew Cab	N/A	N/A	210112	210114	210111	220042	220041
'96 - '04 Tacoma/Prerunner/Crew Cab	210504	210501	210112	210114	210111	220052	220051
'07 - '19 Tundra	N/A	N/A	210112	210114	210111	220042	220041
'00 - '06 Tundra	210504	210501	210112	210114	210111	220052	220051
'01 - '07 Sequoia	210504	210501	210112	210114	210111	220052	220051
'89 - '95 Pick-up	N/A	N/A	210112	210114	210111	220052	220051
'74 - '88 Pick-up	N/A	N/A	210112	210114	210111	NR	NR
'05 - '07 4 Runner	210504	210501	210112	210114	210111	220042	220041
'96 - '04 4 Runner	210504	210501	210112	210114	210111	220052	220051
'84 - '95 4 Runner	N/A	N/A	210112	210114	210111	220052	220051
'93 - '99 T-100	N/A	N/A	210112	210114	210111	220052	220051
'80 - '91½ FJ60/FJ62 L/C	N/A	N/A	210112	210114	210111	NR	NR
'07 - '14 FJ Cruiser	N/A	N/A	210112	210114	210111	220042	220041

NOTE: Vehicles not listed have no applications



PROMO ITEMS

PROMOTIONAL ITEMS

T-SHIRT (BLACK SHIRT) PART

SMALL	994411
MEDIUM	994412
LARGE	994413
X-LARGE	994414
XX-LARGE	994415



PART # 993334



ICE CREAM SCOOP

PART # 996661



POP DISPLAY

FEATURES

- Increase sales and awareness with these 'point of purchase' displays
- Includes actual step samples for customers to see and touch
- Pockets with tri-fold brochures to show complete product line
- P/N 993334 and P/N 993337 mount to slatwall or pegboard while P/N 993336 sets on the floor against a wall
- Full color with graphics, descriptions and features

ADDED FEATURES

- Factory direct
- Free freight
- Proven to increase sales
- 24" x 30" wall mount color poster
- Actual CARR steps
- Twenty-five mini-catalogs
- Get preferred dealer status

PART # 993337



TRI-FOLD BROCHURES

FEATURES

PART # 993334F

- 8 1/2" x 3 3/4" tri-fold brochures fit into accessible display pocket
- Shows product lines, descriptions, styles and features



CARR WORK TRUCK DISPLAY

FEATURES

- Work Truck Step
- Mega Step
- Grab Handle
- 25 Tri-Fold Brochures

PART # 993336

INTERACTIVE DISPLAY THAT YOU CAN DEPLOY, STAND ON AND RETRACT



CARR



Made in the U.S.A



Discover other truck bed accessories on our website.