



INSTALLATION INSTRUCTIONS

PART NUMBER: COBRA10

FOR: 2010 + Ford Mustang

INSTALLATION PACKAGE INCLUDES:


- A) 4 – Paper Hole Locators (*to be centered on 4 mounting holes on bottom of DAWN . See Diagram C on back of page*)
- B) 4 – M-6 x $\frac{3}{4}$ " Mounting Screws
- C) 4 – Flat Washers
- D) 4 – Lock Washers
- E) Instruction Sheet

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION WEAR PROPER EYE PROTECTION

1. Open deck lid. Remove trunk liner. Remove the black factory plugs, **as shown in Diagram A on back of sheet**, on drivers' and passenger side.
2. Close the deck lid. **See Diagram B on back of sheet.** Along the drivers side measure down 10-7/8" from the tip of the deck lid where it meets the rear window glass, back towards the rear of the car. Repeat on passenger side.
3. Leaving the plastic liner on the bottom of the mounting area of the DAWN . Place the DAWN on the deck lid so that the front tips of the DAWN will rest on these marks. Center the DAWN exactly from left to right. **See Diagram B on back of sheet.** Using a grease pencil, outline both outside mounting areas so that you will have a guide to place the DAWN on later in the installation to the desired position.
4. Next, place the DAWN upside-down on a soft cloth so you do not scratch the painted top surface. Using four (4) paper hole locators, provided, remove the liner from the hole locator to expose the adhesive, place the cut out hole in the hole locator centered exactly over the four (4) mounting holes of the fastening area of the DAWN . **See Diagram C on back of sheet.** Making sure that the hole locators do not move (**NOTE: a small piece of masking tape is helpful in holding hole locators in place**) carefully place the DAWN back onto the outline marks on deck lid that you made in Step #3.
5. When DAWN is centered on the outline marks made in Step #3, and making sure that the four (4) paper hole locators did not move, tape all four (4) hole locators to the deck lid using masking tape. Next, carefully lift the DAWN off the deck lid, leaving the hole locators taped to the deck lid.
6. Using a 1/8" or similar drill bit, drill a 1/8" pilot hole in the exact center of all four (4) hole locators, through the top panel only of the deck lid.
7. Remove hole locators from deck lid and using a uni-bit (**NOTE: we suggest using a uni-bit for a cleaner cut**) open the four (4) 1/8" pilot holes to 3/8".
8. Apply Zinc Chromate Primer or touch-up paint on the edges of the four (4) 3/8" holes that you drilled in the deck lid.
9. Remove the liner from the tape and perimeter tape on the bottom of mounting area of DAWN and lightly tack the DAWN back onto the outline marks that you made in Step #3. The four (4) mounting holes on bottom of DAWN should align with the four (4) 3/8" mounting holes that you made in top panel of the deck lid. If 3/8" holes do not align with mounting holes of DAWN , lift DAWN off of car and re-align. If holes do not align, you may need to lift DAWN off car and open 3/8" holes to next size, 7/16".
10. Using mounting screws with flat washers and lock washers, provided, install mounting screws into mounting holes and partially tighten all four (4) mounting screws. After all four (4) have been started, tighten evenly until all screws are tight. **DO NOT OVER TIGHTEN.**

SEE DIAGRAMS ON BACK OF SHEET

DIAGRAM A

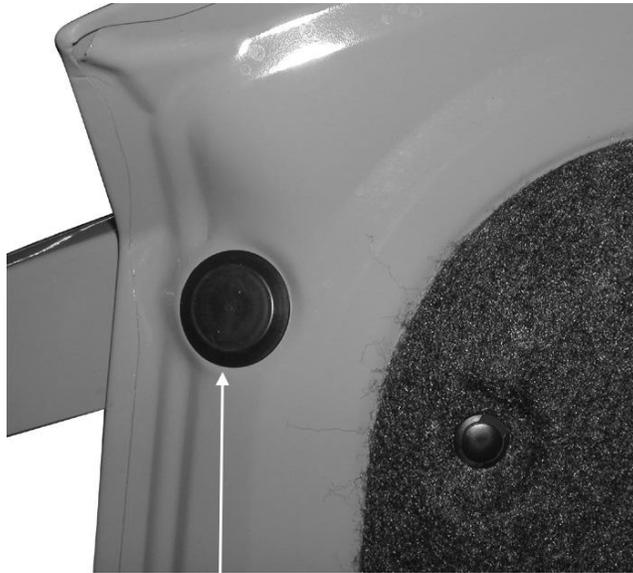

Remove factory plug on drivers' and passenger sides.

DIAGRAM B

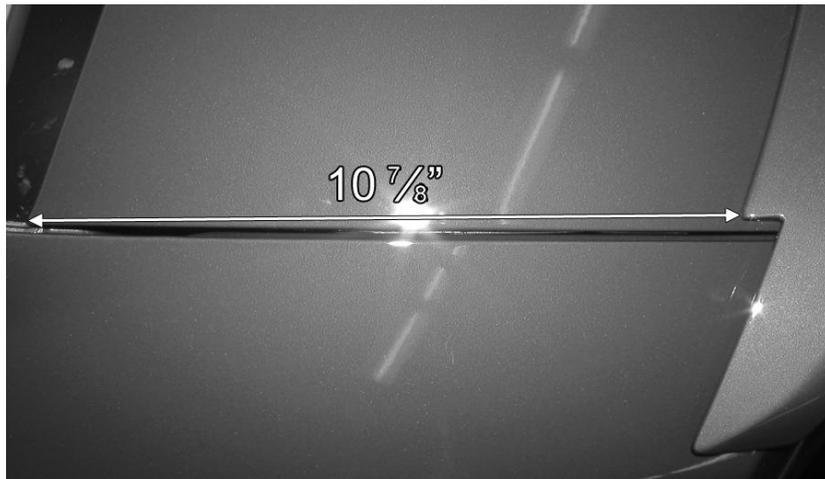


DIAGRAM C



Hole locator locations