

IMPORTANT: PLEASE KEEP THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE !



Upper Twin Bar Part #1353-0104-10A


Quantity	Description	Part No.
1	Upper CNC Ultimate Grille (includes):	*****
	Upper Twin Bar Mesh Grille CNC Surround.	1353-0034-10A
	Chrome Plated "Heavy" Mesh Insert	1353-0040-10
	"E&G Classics" Emblem	1999-0268-00
(2)	Lower Mesh Retainers w/Pins	1353-0042-10
(1 Set)	Upper Mounting Brackets	Right 1353-0209-10
	Center	1353-0210-10
	Left	1353-0211-10
(13)	#8-32 ESNA Half Nuts	1999-0065-00
(2)	Black Rectangular Mesh Retainers	1099-0167-05B
1	Hardware Kit (components listed below):	1353-1902-10
	Upper Grille Hole Location Template	1353-0039-10
(3)	#8-32 ESNA Half Nuts	1999-0065-00
(1)	Hood Ornament Filler	1353-0045-10
(1)	Hood Ornament Filler Retainer	1099-0167-05
(1)	Replacement Emblem	1353-0157-10
(6")	.045" x .250" Double Faced Tape	3004-9250-92
(2)	Black Rectangular Mesh Retainers	1099-0167-05B

Upper "Black Ice" Part #1353-B104-10A


Quantity	Description	Part No.
1	Upper CNC Ultimate Grille (includes):	*****
	Upper Twin Bar Mesh Grille CNC Surround.	1353-0034-10A
	Black Ice "Heavy" Mesh Insert	1353-0040-10BI
	"E&G Classics" Emblem	1999-0268-00
(2)	Lower Mesh Retainers w/Pins	1353-0042-10
(1 Set)	Upper Mounting Brackets	Right 1353-0209-10
	Center	1353-0210-10
	Left	1353-0211-10
(13)	#8-32 ESNA Half Nuts	1999-0065-00
(2)	Black Rectangular Mesh Retainers	1099-0167-05B
1	Hardware Kit (components listed below):	1353-1902-10
	Upper Grille Hole Location Template	1353-0039-10
(1)	Hood Ornament Filler	1353-0045-10
(1)	Hood Ornament Filler Retainer	1099-0167-05
(3)	#8-32 ESNA Half Nuts	1999-0065-00
(1)	Replacement Emblem	1353-0157-10
(6")	.045" x .250" double Faced Tape	3004-9250-92
(2)	Black Rectangular Mesh Retainers	1099-0167-05B




1. Open the hood and remove the factory air intake tubes from the radiator support panel and engine covers.

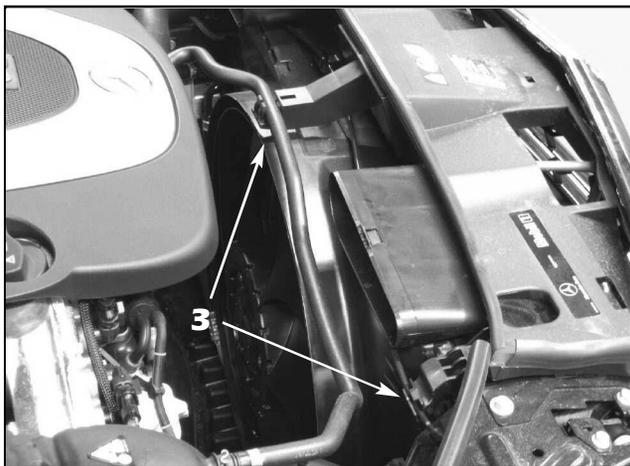


2. Unclip the small hose and hood pull cables from the radiator support panel cover.

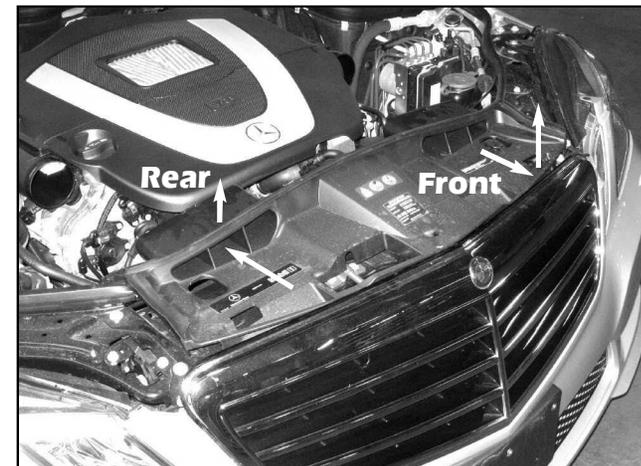

3. Unclip the radiator support panel by pushing back and lifting up on the rear edge to unclip the back, then pull the panel forward and up to unclip the front.

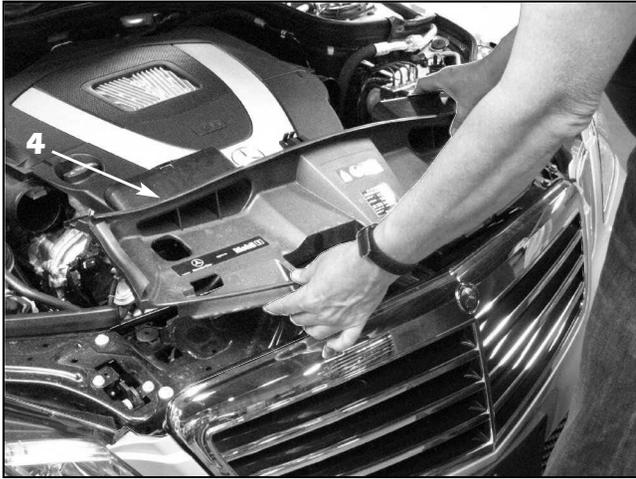


4. Once the panel is unclipped, remove the radiator support panel to expose the factory grille mounting hardware.

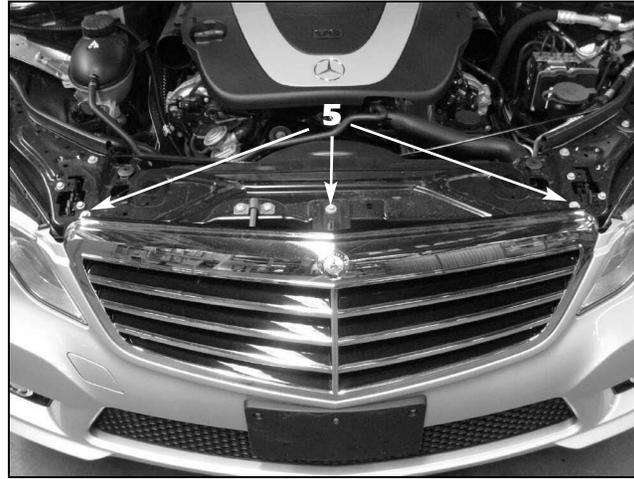

5. Remove the three (3) 10mm hex bolts securing the top of the grille.



6. Apply masking tape around the factory chrome grille to protect the painted bumper cover while removing the factory grille.

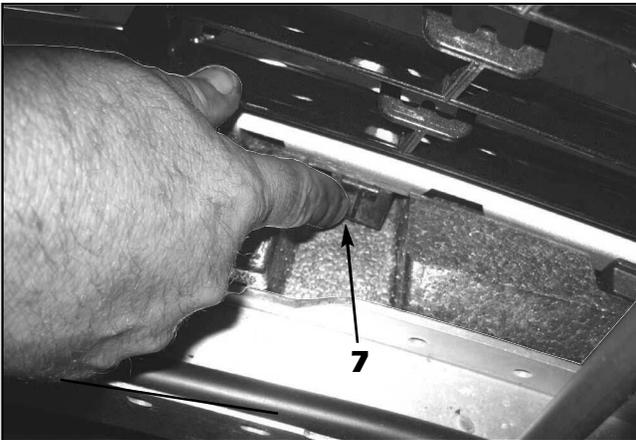


7. Disconnect the grille retaining tabs across the bottom of the grille by pushing down on them.




8. Pull the factory grille straight out to remove it from the bumper cover.


For Sport models: Unclip the factory emblem for use on the mesh grille (not shown).

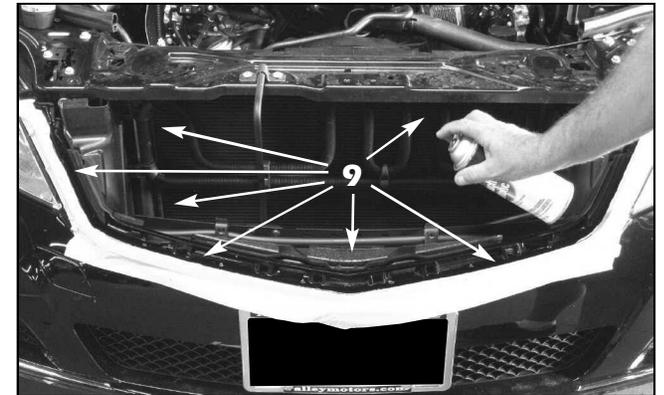

9. For vehicles painted colors other than black or dark blue: Tape 1/2" in from the edge of the grille opening and use a scotch brite pad to scuff the paint. Use flat or semi-gloss black paint to black out the return edge of the bumper cover. For all vehicles: Paint everything inside the grille opening with flat or semi-gloss black paint that would be visible through the mesh grille.

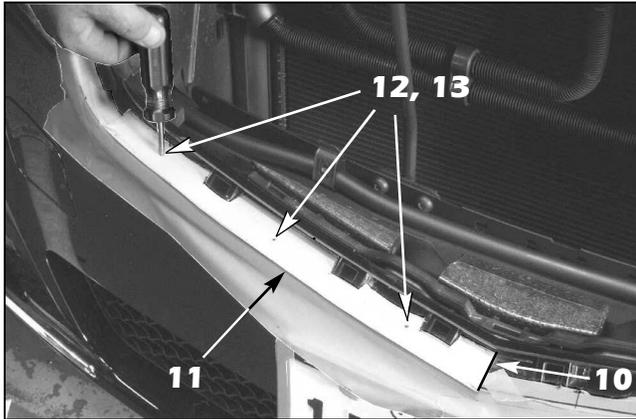


10. Measure and mark the exact center of the bumper cover at the grille opening.
11. Cut out the supplied upper grille hole location template and use masking tape to hold it in place.
12. Use an awl or pointed tool to mark the hole locations onto the bumper cover. Untape the template, flip it over and mark the holes on the opposite side.
13. Use a 1/8" drill bit to drill through the marks made. Use the drill to connect the holes making small mounting slots for slight left to right grille adjustments.

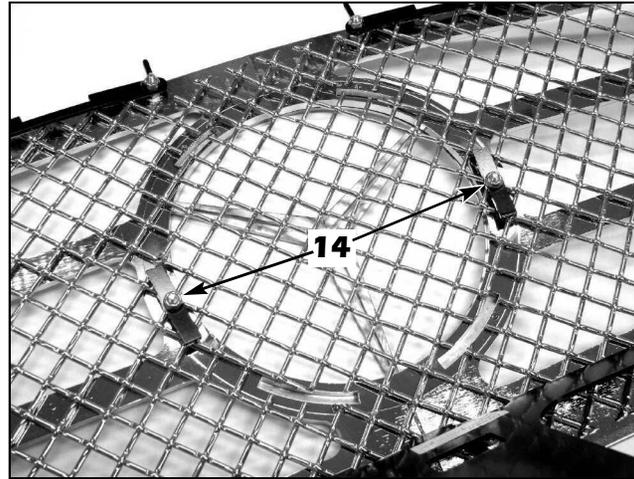

14. Install the replacement emblem onto the mesh grille using the supplied black rectangular retainers and the supplied #8-32 ESNA half nuts.

****WARNING!****
PLEASE HANDLE WITH CARE! THE EDGES OF THE STAINLESS STEEL MESH MAY BE SHARP!

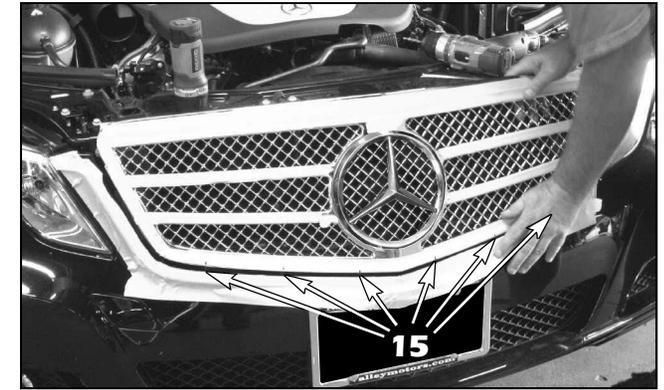


15. Install the upper mesh grille by aligning the lower mounting pins with the slots and pressing firmly down to seat the mesh grille.




16. Reinstall the factory upper bolts removed in Step 6.




17. Reinstall the factory radiator support panel cover and the engine air intake tubes. Reinstall the hood release cables and the hose previously disconnected.

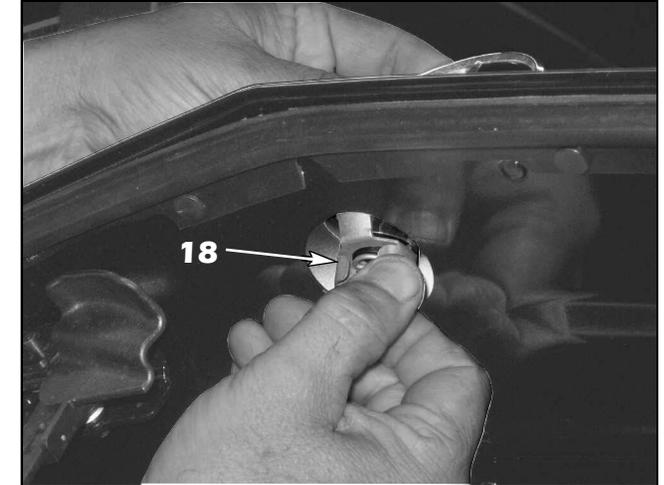


18. Access the factory hood ornament attaching bracket and turn it 1/4 turn to release the hood ornament.

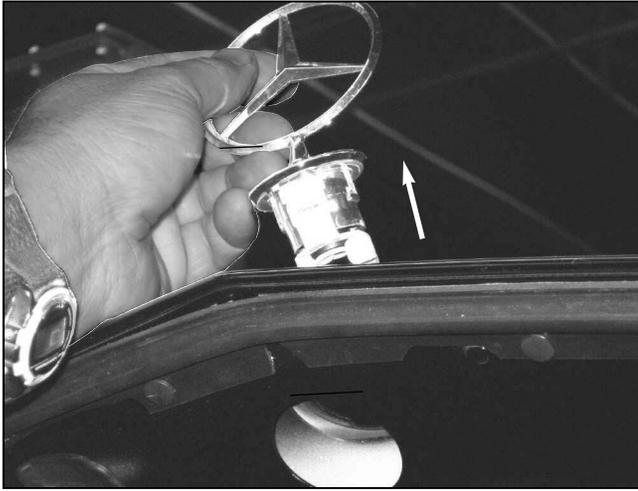

19. Pull the hood ornament straight up to remove it from the hood.

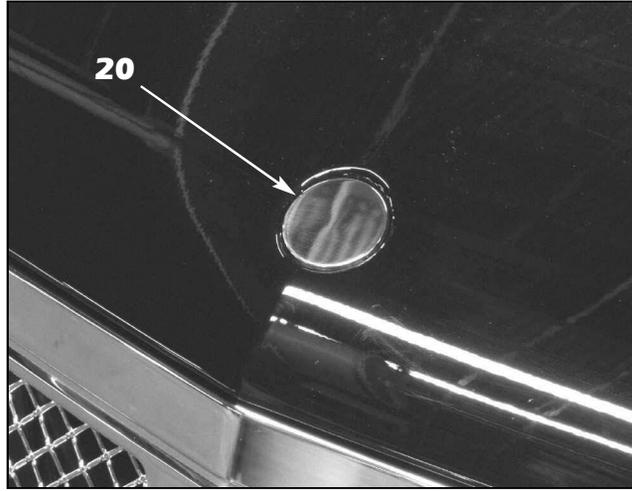

20. Align the hood ornament filler into the factory hole in the hood.

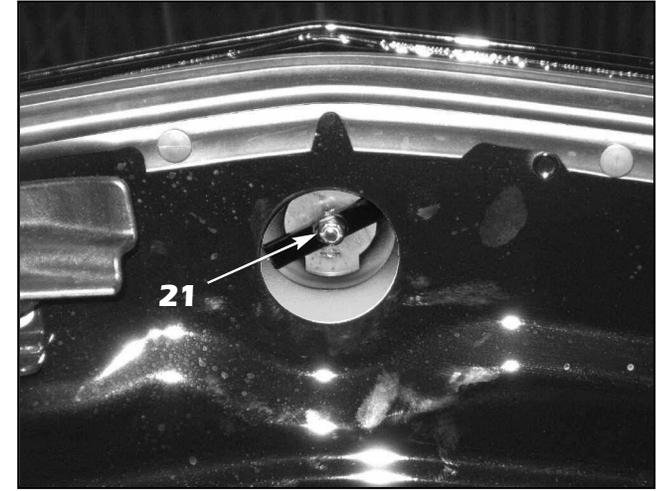


21. Install the supplied retainer and a #8-32 ESNA half nut to secure the hood ornament filler to the hood.



22. Thoroughly clean all surfaces of the grille and hood ornament filler.



23. Finished installation.

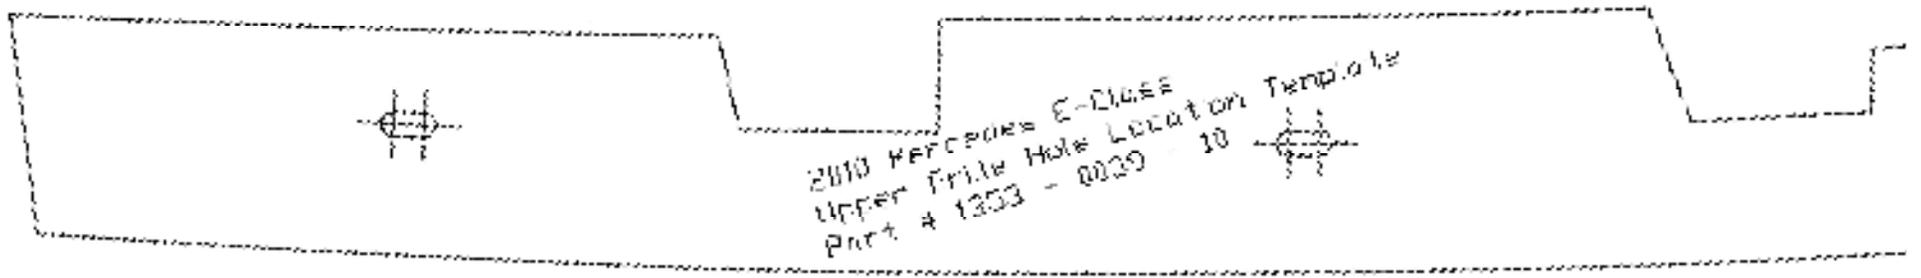

Cut out, overlap and tape templates together.

