

# IMPORTANT: PLEASE RETAIN THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE




## 2008-11 Cadillac CTS CNC Chrome Plated Fender Vent Installation Instructions

A 23 G9R




### Part # 1007-01XW-08A

Quantity	Description	Part No.
1 Set	CNC Fenders Vents (includes):	*****
(1 Set)	Chrome Plated Frames _ Right	1007-0083-08A
	Left	1007-0084-08A
(1 Set)	Chrome Plated Center Bars _ Right	1007-0085-08A
	Left	1007-0086-08A
(2)	S.S. Mesh Inserts	1007-0081-08A
(2)	SSD43SSBS Rivets	1999-3915-00
(4)	AK45H Closed Head Rivets	1999-9066-00
(4)	Small Black Plastic Washers	1999-0256-00
(2)	CTS Fender Vent Die Cut Tape	1007-0087-08

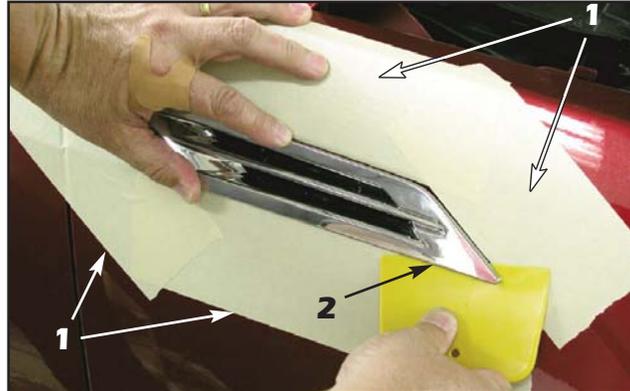


1. Use masking tape to protect the paint surrounding the fender vents.
2. Insert a plastic body filler spreader or other non-metal tool between the taped paint and the chrome frame of the fender vent. The corners are the easiest places to start separating the fender vent from the double faced tape adhering it to the fender. **Do not use a screwdriver or you will damage the paint!**

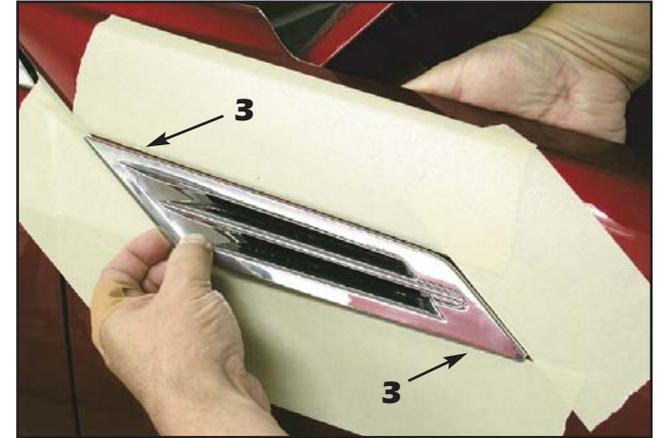


3. Open the hood to access the back of the factory fender vent. Squeeze the factory clips (lower front corner and upper rear corner) and push the factory vent out of the fender.

**IMPORTANT!**  
The exposed edges of the stainless steel cut mesh can be extremely sharp.  
Please handle with care.

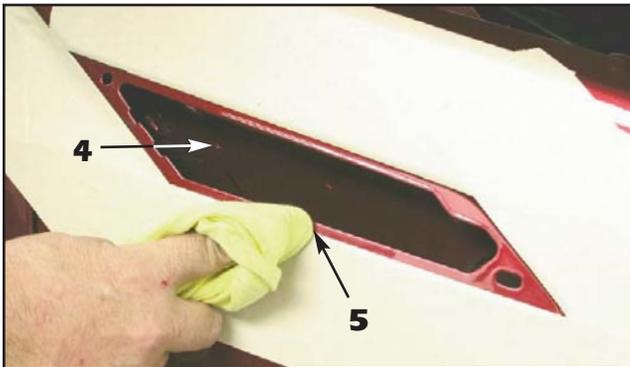

4. Paint the inside of the fender openings with black paint.
5. E&G recommends the careful application of an adhesive promoter such as "Probond" or equivalent before installing the CNC chrome plated vents.

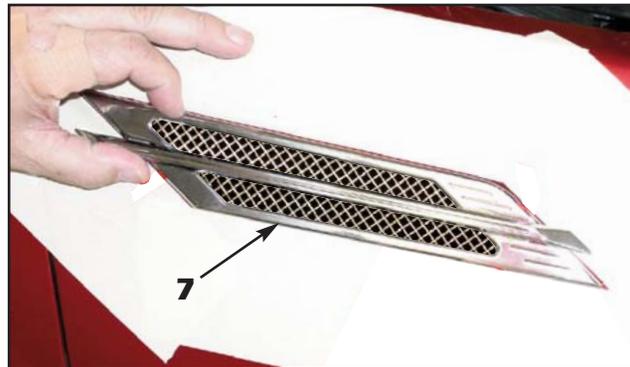

6. Peel off the backing from the double faced tape (not shown).
7. Carefully align the CNC fender vent into the opening in the fenders. Once properly aligned, press the vents firmly into place to set the tape.



8. Remove the masking tape applied in Step 1 to finish the installation.



On our website you'll find a wide variety of [high-quality car & truck custom grilles](#) from [E8G Classics](#).