

IMPORTANT: PLEASE RETAIN THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE



2008 Cadillac CTS Chrome Plated CNC Brake Duct Cover Installation Instructions

A 30 G8R




Part # 1007-010W-08A


Quantity	Description	Part No.
1 Set	CNC Brake Duct Covers (Includes):	*****
(1 Set)	Brake Duct Cover Frames	Right 1007-0062-08A Left 1007-0063-08A
(2)	Chrome Plate Fine Mesh Inserts	1007-0061-08A
(2)	Mesh Retaining Plates	1007-0090-08A
(8)	#4 - 40 x 1/4" Countersunk Screws	3999-9114-00
(22")	.045" x .250" Double Faced Tape	3004-9250-92
(1 Set)	Hole Drilling Template	Chrome 1007-0068-08A (last page of this instruction manual) Gray 1007-0067-08A

Tools needed


3/32" drill bit, sissors, awl or pointed tool, electric drill, masking tape & glass cleaner.

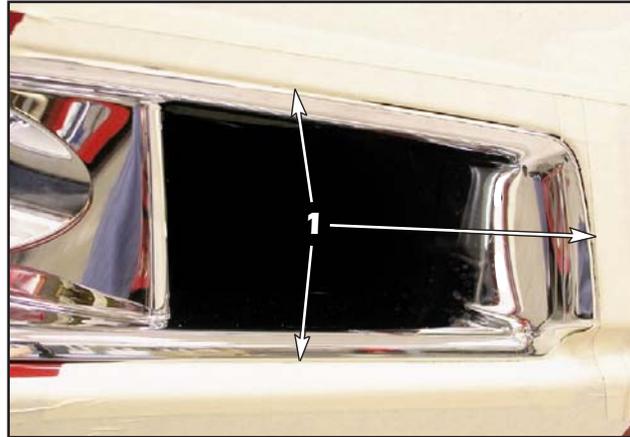


1. Use masking tape to protect the paint surrounding the brake duct openings.

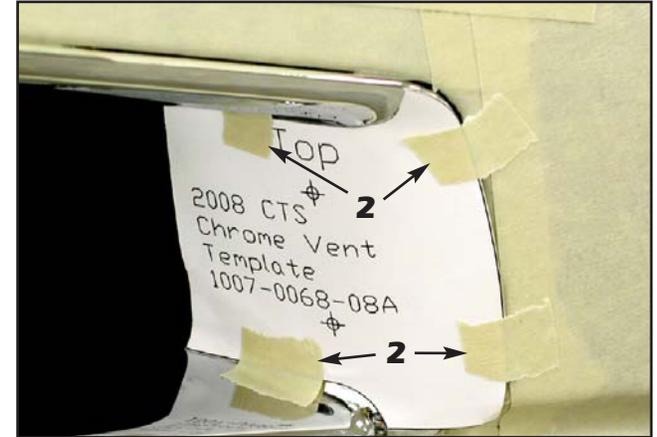

2. Cut out and align the supplied corresponding template onto the brake duct opening (passenger side shown). Once properly aligned with the edges of the opening, tape it into place.

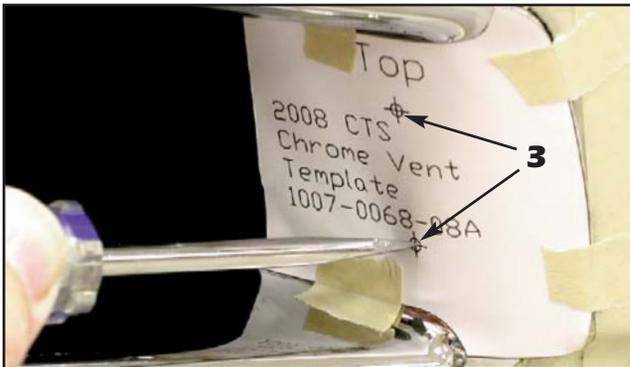

3. Use an awl or similar pointed tool to mark the hole locations onto the factory brake duct opening. Once the marks are made, remove the template, flip the template over and mark the driver's side brake duct opening (not shown).

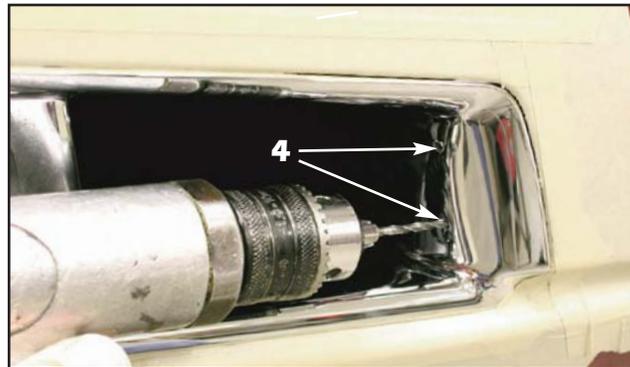

4. Use a 3/32" drill bit to drill through the marks made in the previous step. Remove the plastic shavings and thoroughly clean the factory brake duct openings.



5. Peel off the backing from the double faced tape preinstalled on the brake duct covers, align the mounting pins into the holes drilled in Step 3 and firmly push the part up against the inside edge. Rotate the brake duct cover back into position to set the double faced tape.



6. Rotate the brake duct cover back into position to set the double faced tape. Finished installation.