

# IMPORTANT: PLEASE RETAIN THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE



## 2008 Nissan Altima Coupe Mesh & "Q" Grille Installation Instructions

G 01 G7



### Mesh Grille Part # 1084-0102-08

Quantity	Description	Part No.
1	Upper Mesh Surround	1084-0038-08
	Upper Mesh Inserts	Right 1084-002A-08 Left 1084-002B-08
1	Lower Mesh Grille (includes):	*****
	Lower Mesh Surround	1084-0039-08
	Lower Mesh Insert	1084-0021-08
	(2) Black Plastic Washers	1999-0256-00
	(2) 8-32 ESNA Half Nuts	1999-0065-00
1	Hardware Kit (components listed below)	1084-1902-08
10	1.006" x .187" x .062" Plastic Washers	1999-0264-00
12	#8-32 ESNA Half Nuts	1999-0065-00
8	.156" x 1" Vinyl Caps	1999-0241-00
2	Lower Mounting Brackets	1084-0155-08

### "Q" Grille Part # 1084-0185-08Q

Quantity	Description	Part No.
1	Upper "Q" Grille	1084-0184-08Q
1	Lower "Q" Grille	1084-0183-08Q
1	Hardware Kit (components listed below)	1084-1902-08
10	1.006" x .187" x .062" Plastic Washers	1999-0264-00
12	#8-32 ESNA Half Nuts	1999-0065-00
8	.156" x 1" Vinyl Caps	1999-0241-00
2	Lower Mounting Brackets	1084-0155-08



1. Open the hood and remove push pins retaining the top of the grille/bumper cover (save pins for reinstallation).
2. Apply protective tape around the upper grille openings to protect the paint and chrome.




3. Remove the factory emblem from the grille by pushing out on the mounting tabs.
4. The mounting holes for the upper grille are to be drilled with a 1/2" bit where shown (3 per side in the lower corners).

**IMPORTANT! The exposed edges of the stainless steel grille and mesh can be extremely sharp. Please handle with care.**



5. Scuff the factory grille with a scotch brite pad ( apply additional masking tape to protect the paint from overspray) and paint the grille semi-gloss black. This will help conceal the factory grille behind the "Q" or Mesh grille.

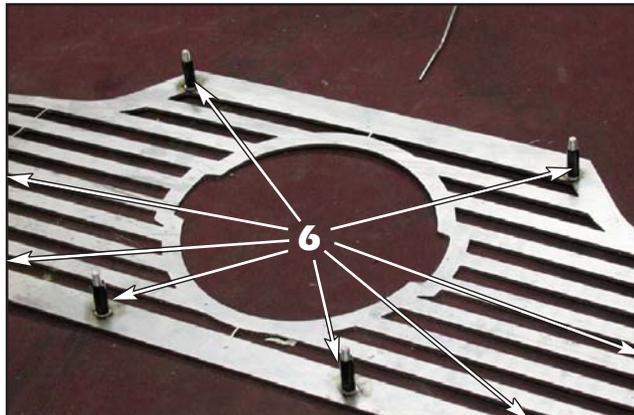

6. Trim the ends from the supplied vinyl caps and install them onto the studs mounted on the back of the "Q" grille or Mesh frame (all eight studs).



7. Align the upper grille into place, making sure that the studs pass through the holes drilled in Step 4. Once the grille is in place and the plastic flat washers and ESNA nuts are started, remove the masking tape to prevent it from getting caught behind the grille. Tighten the hardware but do not overtighten or you could indent the grille at the stud locations..



8. Remove the plastic push fasteners from across the bottom of bumper cover for lower grille mounting access.



9. Apply masking tape to the top and bottom of the lower grille opening.
10. Carefully align the lower grille into place, making sure that the edges of the frame and mesh do not damage the painted bumper cover.
11. Install the lower mounting brackets vertically onto the lower mounting studs (hook around the side of the bumper cover lower opening) and a black plastic washer onto the upper mounting studs. Install an ESNA lock nut onto each stud and tighten.



12. Remove the masking tape from the grille opening.
13. Peel off the protective film from the grilles, use a mild solvent to remove any glue residue from the protective film, then wash the grille with glass cleaner to remove any solvent residue.
14. Finished installation.