

# IMPORTANT: PLEASE RETAIN THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE



**2007-08 GMC Yukon  
"Denali" Style  
2 Piece  
"Z" Grilles**  
E 09 G6R




## Part Number 1094-0185-07

Quantity	Description	Part No.
1	Upper "Denali" Style "Z" Grille Insert	1094-0184-07
1	Lower "Denali" Style "Z" Grille Insert	1094-0183-07
1	Hardware Kit (components listed below)	1094-0182-07
5	Mounting Brackets	1108-0158-97
2	Upper Center Mounting Brackets	1094-0158-07
7	8-32 ESNA Half Nuts S.S.	1999-0065-00
11	.156 x 1" Vinyl Caps	1999-0241-00
11'	Black Edge Guard	1999-0095-00
8	#6 x 3/4" T-10 Torx Pin Head Screws	1999-0108-00
1	T-10 Torx Pin Head Tool	1999-0107-00

**WARNING! PLEASE HANDLE WITH CARE. THE EDGES OF THE STAINLESS STEEL TRIM ARE EXTREMELY SHARP!**

Once the protective liner is peeled off the stainless steel grille sections, E&G recommends wiping the excess glue residue with adhesive remover on a soft cloth to loosen the remaining glue. Once the glue is removed, use glass cleaner or alcohol and a soft cloth to remove the solvent residue.


**DO NOT USE ABRASIVE CLEANERS OF ANY TYPE ON THE GRILLE.**

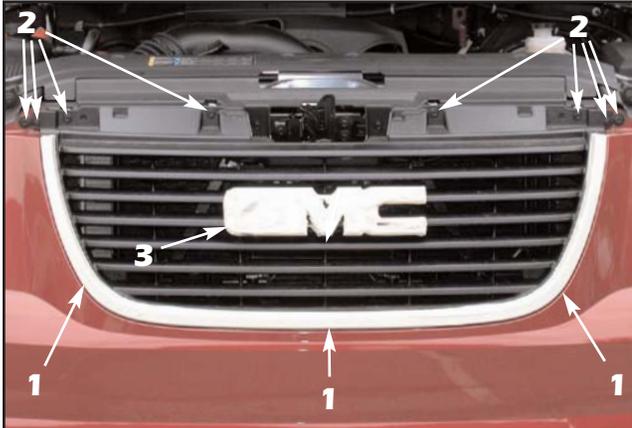

1. Apply masking tape to the factory chrome grille surround to protect the chrome finish from possible scratches.
2. Open the hood and remove the (6) factory 10mm hex bolts and the (2) factory 7mm hex screws securing the factory grille and remove the grille.




3. Carefully tape around the GMC emblem and apply several layers of masking tape underneath the hood release lever to protect the finish during the following grille installation.

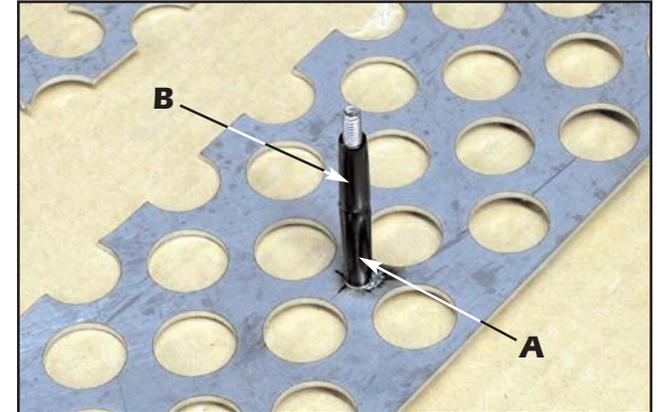

4. Trim the closed end from each black silicone sleeve and install one onto each mounting stud (A). Trim a black silicone sleeve in half and install half the sleeve (B) on top of the sleeve installed previously. This will allow enough studs to protrude and allow the installation of the brackets and ESNA nuts.




5. **Shop Tip:** E&G recommends using a small ratcheting tool and a short 9mm socket to install the "Z" grille into the factory grille as access behind the grille is very tight.

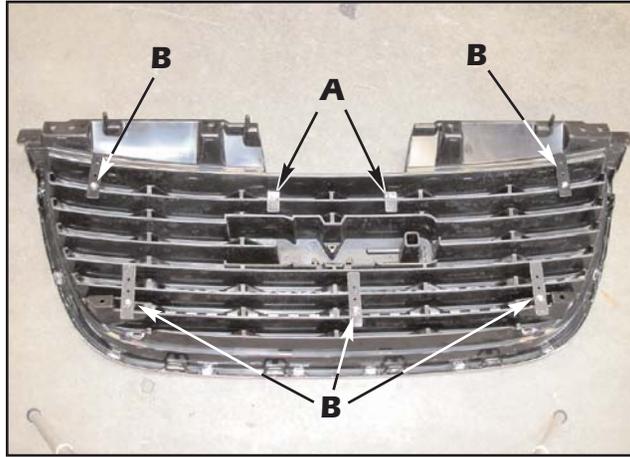

6. This photo shows the proper locations for the supplied mounting brackets only, **you do not need to completely remove the factory grille from the bumper cover.**



7. Carefully align the E&G "Denali" style grille over the factory grille (making sure you do not scratch the plastic grille around the GMC emblem).  
 8. Pull the grille out far enough to install the bent mounting brackets (A) onto the studs and install the supplied 8-32 ESNA half nuts. **IMPORTANT: Do not overtighten the 8-32 ESNA lock nuts or you will indent the grille where the studs are welded.**  
 9. Install the flat mounting brackets (B) onto the studs and install the supplied 8-32 ESNA half nuts.

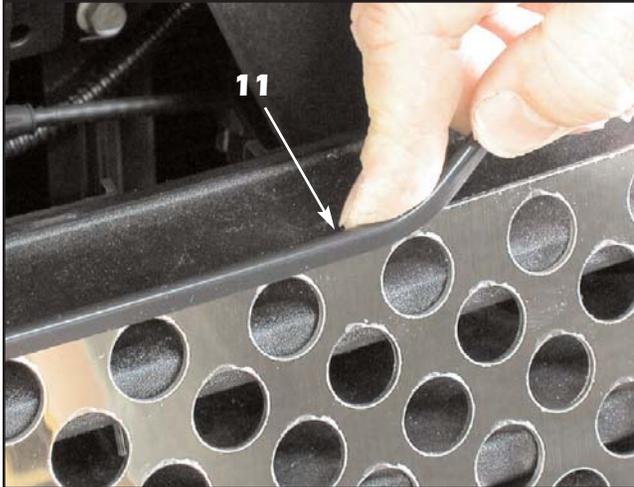

10. Reinstall the factory 10mm and 7mm hex head screws to secure the top of the grille assembly to the radiator support panel (not shown).  
 11. Install the protective edge guard to the exposed top edge of the "Z" grille (as shown).



12. Before aligning the lower grille, remove the upper white license plate mounting plastic inserts. These inserts will prevent the lower grille from fitting flush against the factory lower panel if they are remain in place.  
 13. Once the protective covering is removed from the lower grille and the glue residue removed, install the black edge guard.



14. Carefully align the lower grille into place.  
 15. Install the lower grille using the supplied torx pin head screws (8 locations). Use the supplied torx tool and a slow speed drill and allow the torx pin head screws to self tap into the lower factory plastic panel. **DO NOT OVERTIGHTEN** or you will strip out the plastic. The license plate will be retained by the lower screws only.  
 16. Finished installation.