

INSTALLATION INSTRUCTIONS

52116 (1 - 4) / (1BB - 4BB) DAKAR & DAKAR SPORT

CHEVY TAHOE SUBURBAN 1500 / AVALANCHE 1500 / GMC YUKON - YUKON XL 1500 (07 - 08)

Parts List:

Tools required not including:


ITEM	QUANTITY	DESCRIPTION	TORQUE	DESCRIPTION	QUANTITY
1	1	Dakar / Dakar Sport	-	9/16" Socket	1
2	1	Main bracket (passenger & driver)	-	18mm Socket	1
Hardware kit including (KTE-52276):				8mm Socket	1
3	4	3/8 x 1" Carriage head bolt	30 Lb/Ft	18mm Wrench	1
4	4	3/8" Flat washer	-	Ratchet	1
5	4	3/8" Lock nut	30 Lb/Ft	Extension ratchet	1

Instructions:

Approximated installation time: 30 min.

1. Before beginning the installation read all instructions thoroughly and verify that all hardware is accounted for. If there are any listed parts missing, please notify your distributor immediately.

ILLUSTRATION 1

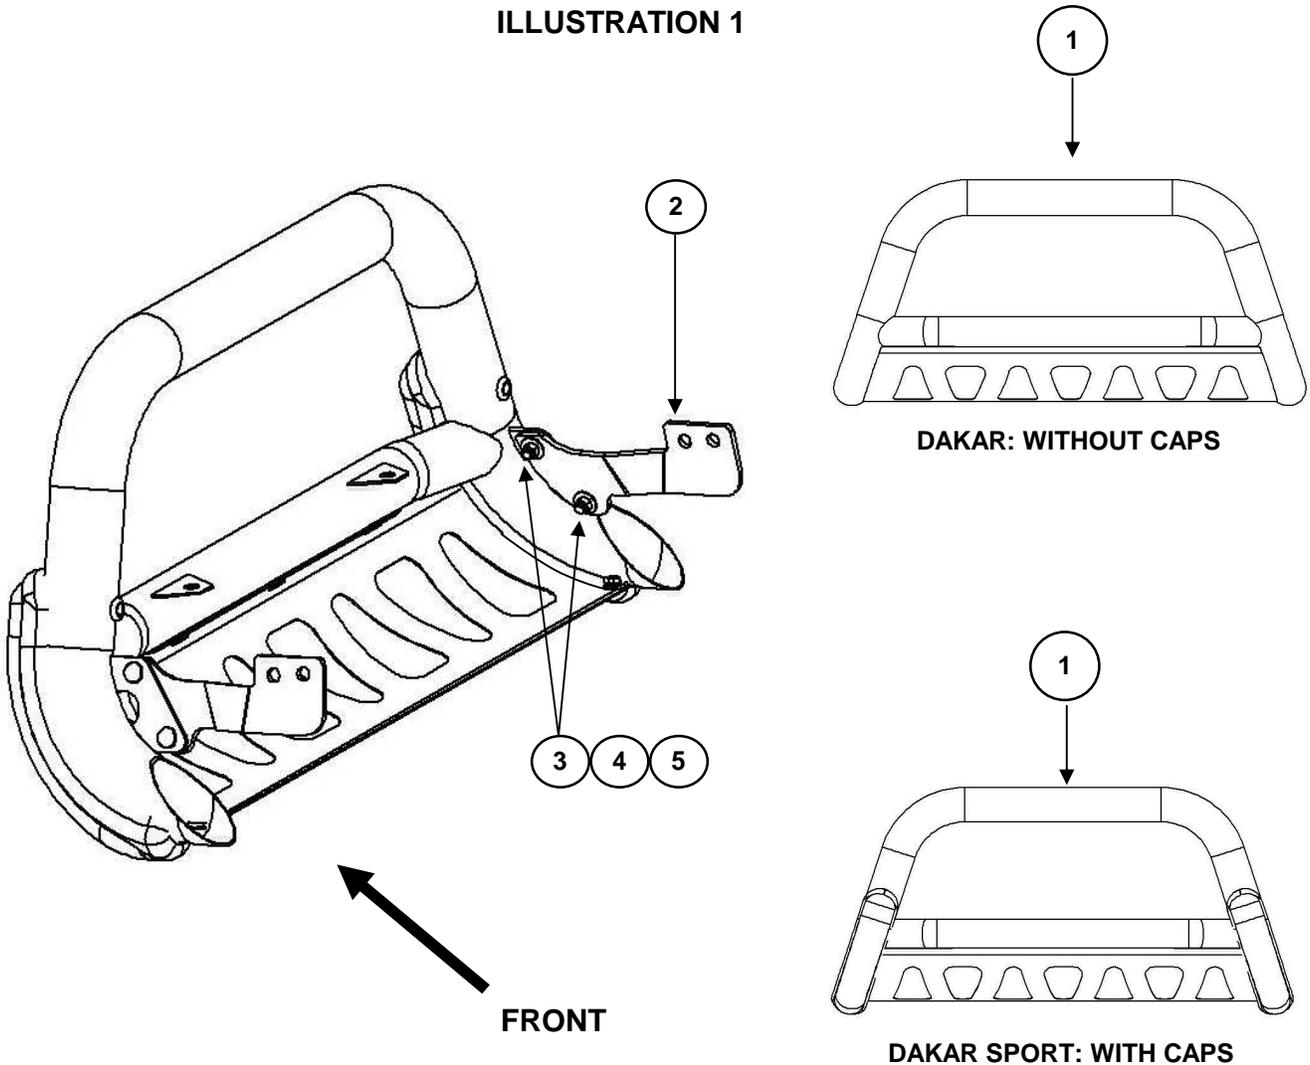

Cleaning and care instructions:

Protect the finish with a non-abrasive automotive wax, (e.g. Pure Carnauba) on a regular basis. The use of any soap, polish, or wax that contains an abrasive is detrimental to the finish, as the compounds scratch the finish and cause corrosion.

INSTALLATION INSTRUCTIONS

52116 (1 - 4) / (1BB - 4BB) DAKAR & DAKAR SPORT

CHEVY TAHOE SUBURBAN 1500 / AVALANCHE 1500 / GMC YUKON - YUKON XL 1500 (07 - 08)

2. Remove the plastic bumper's support, placed inside the bumper. See picture 1.

3. Remove from the frame with it's bolts the tow hooks in each side of the vehicle. See illustration 2.

4. Insert the main bracket thru the tow hook exit and place it at side of the frame. Reinstall the tow hook and attach the bracket on frame with the same bolts removed from the tow hook. Repeat for passenger side. Leave loose.


NOTE: The passenger side bracket fit with two bolts. The driver side bracket fit with only one bolt. See pictures 2 and 3.

PICTURE 1



Removed plastic bumper's support

ILLUSTRATION 2

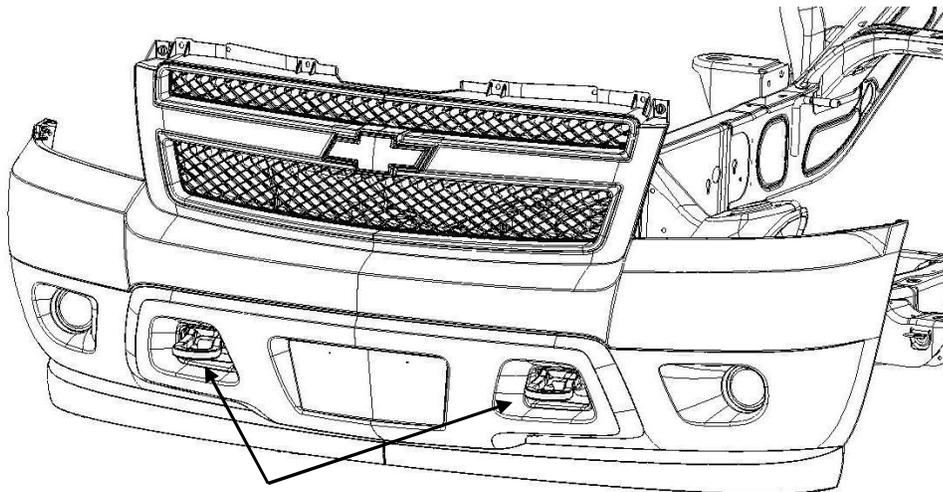

Tow hook

PICTURE 2



Picture driver side internal part.

NOTE: Brackets settles in the opposite face of the frame, of where the bolts are indicated.

Bolts to remove, to release the tow hook. Once inserted brackets reinstalled the tow hook and attach with these same bolts.

PICTURE 3



Picture passenger side internal part.

Cleaning and care instructions:

Protect the finish with a non-abrasive automotive wax, (e.g. Pure Carnauba) on a regular basis. The use of any soap, polish, or wax that contains an abrasive is detrimental to the finish, as the compounds scratch the finish and cause corrosion.


INSTALLATION INSTRUCTIONS

52116 (1 - 4) / (1BB - 4BB) DAKAR & DAKAR SPORT


CHEVY TAHOE SUBURBAN 1500 / AVALANCHE 1500 / GMC YUKON - YUKON XL 1500 (07 - 08)

5. Install the Dakar/Dakar Sport to the main brackets and attach using: (2) 3/8 x 1" carriage head bolt, (2) 3/8" flat washers, (2) 3/8" lock nut. By each side. Leave loose. See picture 3.
6. Align Dakar / Dakar Sport, and then get tighten all bolts.
7. Do not use abrasive substances to clean your product.
8. Periodically check your product because it may need a re-tighten of bolts.
9. Fill the warranty card and place it inside your vehicle's glove box.

ILLUSTRATION 3

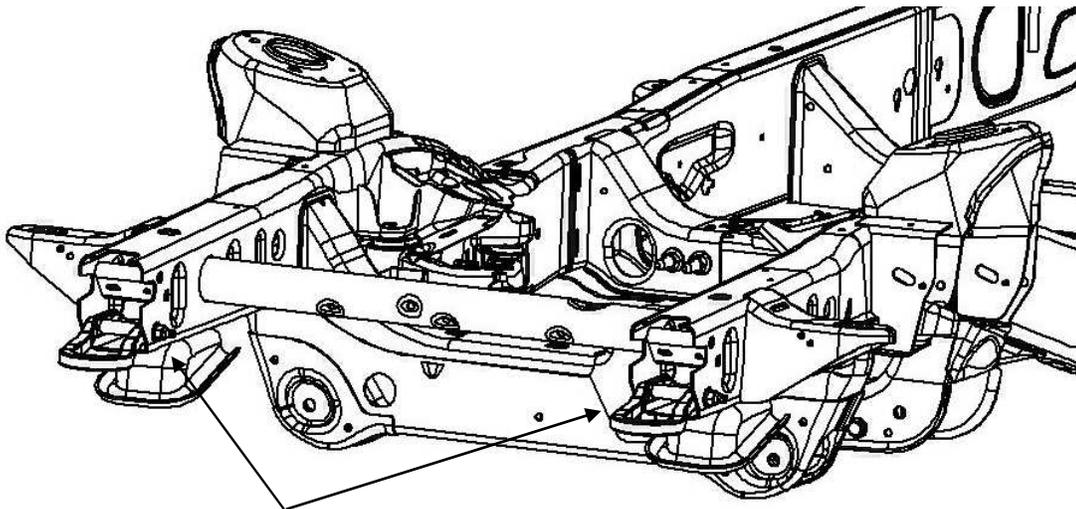

Bolts to remove the tow hook.

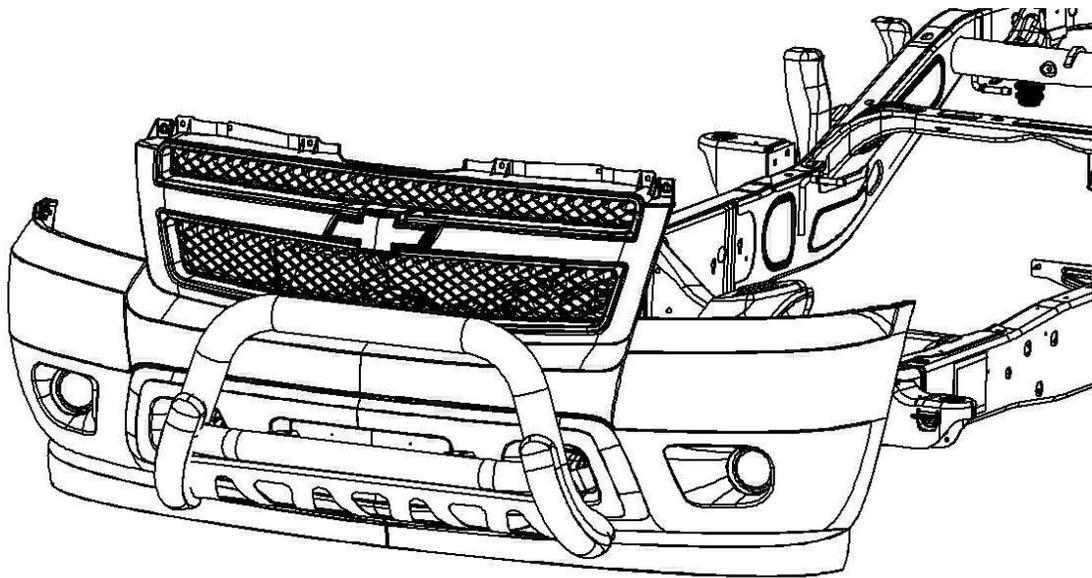

DAKAR / DAKAR SPORT INSTALLED

Cleaning and care instructions:

Protect the finish with a non-abrasive automotive wax, (e.g. Pure Carnuba) on a regular basis. The use of any soap, polish, or wax that contains an abrasive is detrimental to the finish, as the compounds scratch the finish and cause corrosion.