


THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS

CARE AND USE INSTRUCTIONS

Your new floor liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR TRAILBLAZER/ TRAILBLAZER EXT/ ENVOY/ ENVOY XL/ENVOY XUV/BRAVADA SECOND SEAT FLOOR LINERS

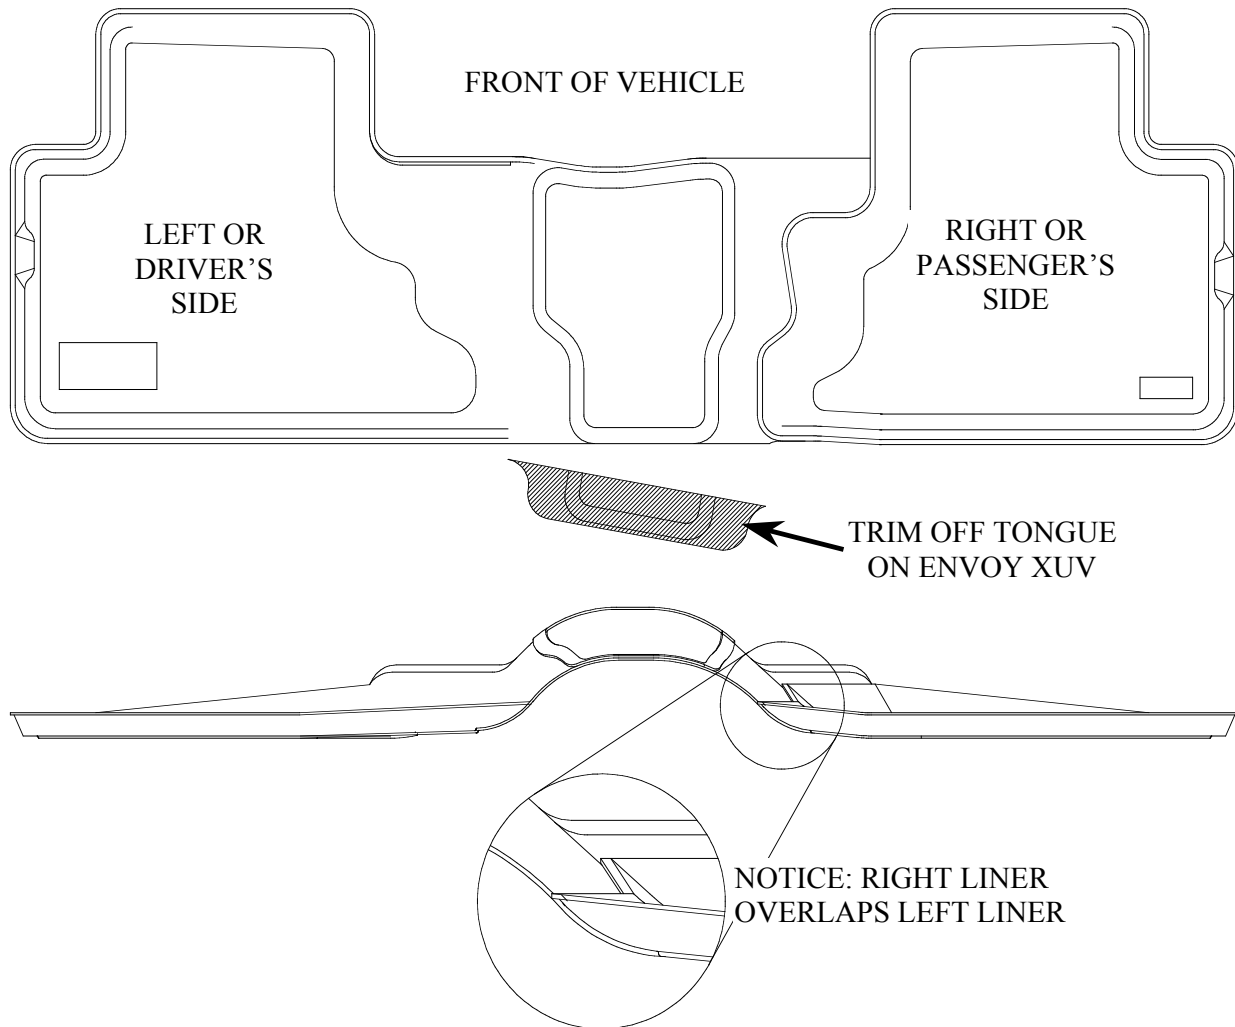

ENVOY XUV OWNERS WILL NEED TO TRIM THEIR HUSKY LINER TO ACHIEVE THE PROPER FIT. TRIM LINER AS SHOWN ABOVE USING A UTILITY KNIFE OR HEAVY SHEARS (SEE CROSSHATCHED AREA). A RECESSED TRIM GUIDE IS MOLDED IN TO AID IN TRIMMING. TRIM ALONG THE RECESS AND AGAINST THE EDGE OF THE RAISED BAND. TRIMMING PHOTOS ARE INCLUDED ON THE BACK OF THIS SHEET.