

INSTRUCTIONS

07-09 CHEVY TAHOE 07-09 YUKON / SUBURBAN / ESCALADE

LEDT-313C, CB, CR, CS LED UPPER QUARTER PANEL LIGHT



Your new IPCW LED Upper Quarter Panel Lights are quality-made products that will work beautifully on your vehicle. Please refer to the pictures below for installation instructions.

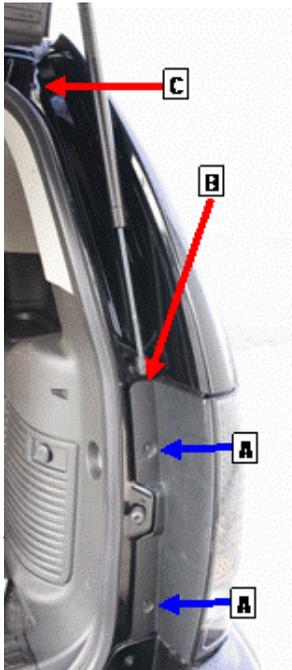


Figure A: are Phillips screws to remove the tail light.
Figure B: is the (bottom) Phillips screw underneath the tail light to remove the Upper Quarter Panel.
Figure C: is the (top) Phillips screw to remove the Upper Quarter Panel.



1. Remove the screws in **Figure A** with a Phillips screwdriver. Untwist the sockets, then gently slide out the tail light.



2. After the tail light is removed, remove the screw in **Figure B**.



3. Remove the screw in **Figure C** to remove the Upper Quarter panel.




4. Gently slide out the stock Upper Quarter Panel.



5. Take the new IPCW LED Upper Quarter Panel Light out of the box.



6. Install the LED Upper Quarter Panel Light following Steps 2 to 4 in reverse order.

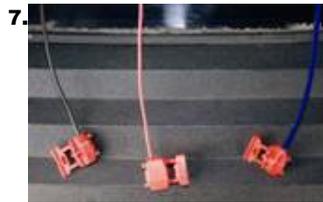

7. There will be 3 wires hanging from the back: (1) **Black**, (1) **Red** & (1) **Blue** with wire clamps.



8. Locate the factory socket on the vehicle that has the **black**, **yellow**, & **light blue** wires together.




9. Take the (1) **Black** wire of the LED light and clamp it to the **black** wire of this factory socket.



10. Next, take the (1) **Red** wire of the LED light and clamp it to the **yellow** wire of this socket.



11. Then, take the (1) **Blue** wire of the LED light and clamp it to the **light blue** wire of this socket.

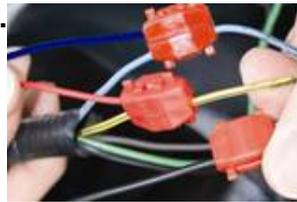

12. Make sure all clamps are securely locked in.



13. Now, re-install the tail light as in Step 1.



Done! **Thank you** for your purchase. We hope you enjoy your new IPCW LED products!
(Shown with IPCW LED Tail Light P/N: LEDT-311CB)

