




# INSTALLATION INSTRUCTIONS

**57-1529**  
**DODGE**  
**2002-07 Ram**  
**V8-4.7L**

**NOTE:** This kit was not designed to fit vehicles with a body lift.

**TOOLS NEEDED:**

- 6" extension
- 7/8" drill bit
- 7/16" socket
- 7/16" wrench
- 8mm deep socket
- 10mm socket
- 13mm socket
- drill
- flat blade screwdriver
- ratchet

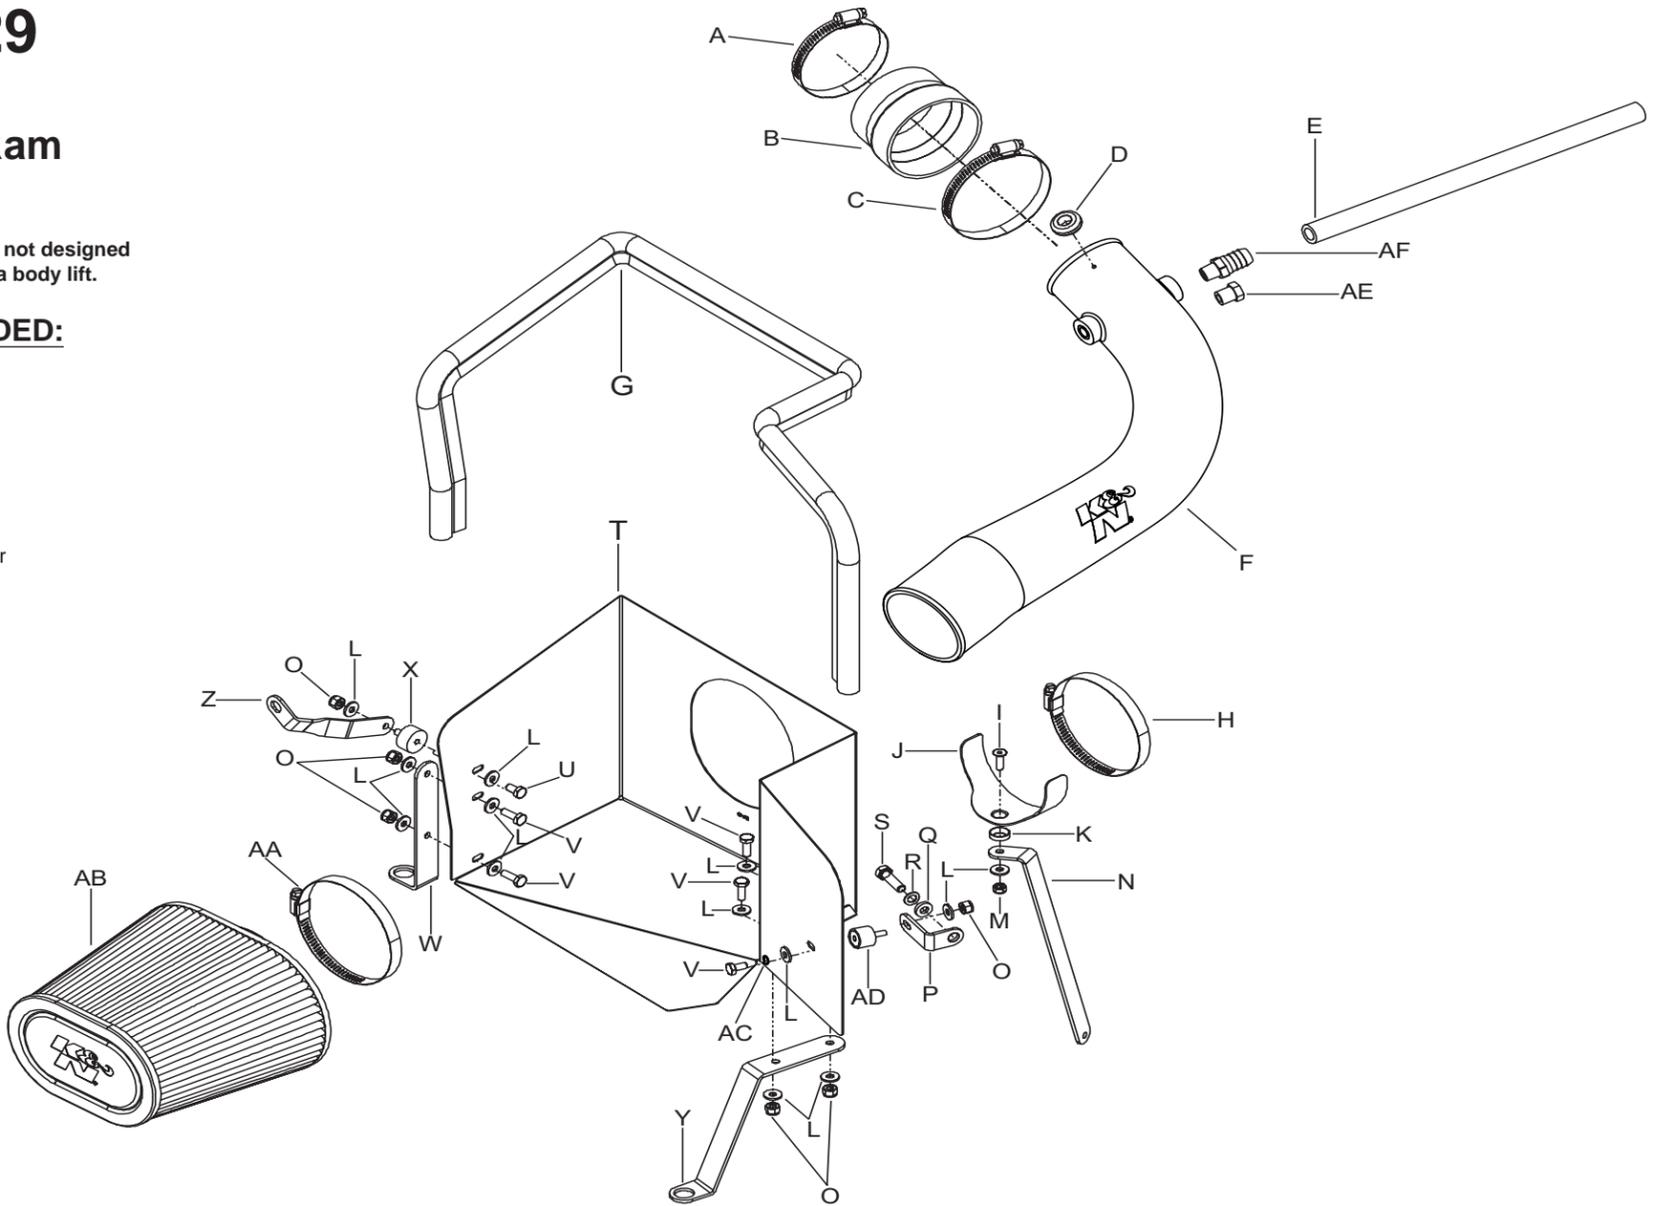

**PARTS LIST:**

Description	Qty.	Part #	Description	Qty.	Part #	Description	Qty.	Part #
A Hose Clamp #52	1	08610	L Washer 1/4"idx5/8"od sae	13	08275	W Bracket; Lg. "L", Mild STL	1	07148
B Step Hose	1	08051	M Nut 6mm Nylock	1	07553	X Stud; 1/4-20 M/F Mntd.	1	08011
C Hose Clamp #56	1	08620	N Bracket; Long "L", Mild STL	1	070122	Y Bracket; "Z", Mild STL	1	07149
D Grommet; 1 1/16odx1/2idx5/8thk	1	080544	O Nut 1/4-20 Nylock ZN	6	07517	Z Bracket; Twist, Mild STL	1	07150
E Silicone Hose	1	08402	P Bracket; Small "L"	1	26607	AA Hose Clamp #64	1	08648
F Intake Tube	1	087120-1	Q Washer 5/16IDx5/8OD Flat	1	08276	AB Air Filter	1	RF-1040
G Edge Trim 46"	1	102487	R Washer Wave	1	08239	AC Washer; 1/4" Lock, ZN	1	08198
H Hose Clamp #60	1	08624	S Bolt; 8mm-1.25x30mm, Hex	1	07821	AD Stud; 1/4-20 M/F, 3/4 Thk., Mntd.	1	070226
I Bolt 6mm-1.00x20mm f/h/a ss	1	08376	T Heat Shield	1	07478	AE Plug; 1/4 NPT, Plastic,	1	08032
J Saddle Bracket	1	078855	U Bolt 1/4-20 x 1/2 Hex	1	08317	AF Vent; Strt., 5/8 Barbed 1/4npt	1	08911
K Washer, Conical, Nylon	1	08180	V Bolt 1/4-20 x 3/4 Hex	5	08386			


**NOTE: FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS AND NOT USING THE PROVIDED HARDWARE MAY DAMAGE THE INTAKE TUBE, THROTTLE BODY AND ENGINE.**

**TO START:**

1. Turn off the ignition and disconnect the negative battery cable.



2. Loosen the hose clamp that connects the intake tube to the resonator box then remove the intake tube.

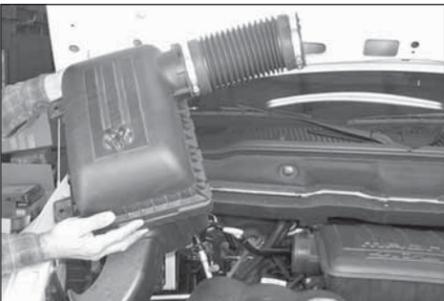


3. Lift up firmly to release the airbox from mounting studs, then remove completely.




4. On models that come equipped with air temp sensors, unplug the air temp. sensor electrical connection as shown.


**NOTE: On some models the air temperature sensor may be in the front of the resonator chamber.**

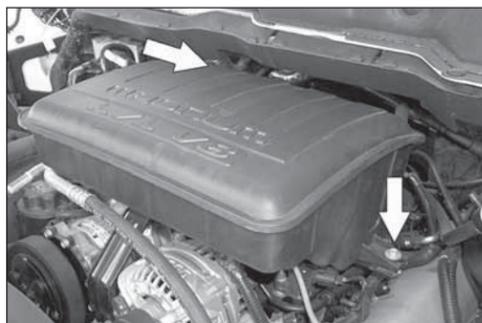


5. Remove the two 10mm bolts that retain the resonator box onto the engine.

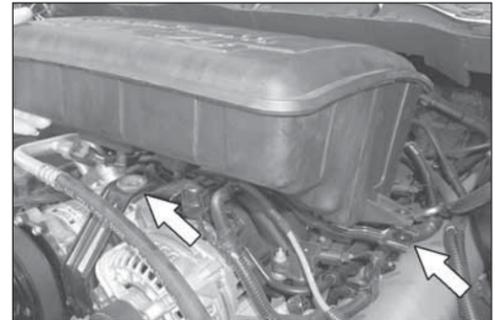

6. Pull up firmly to release the resonator from engine.

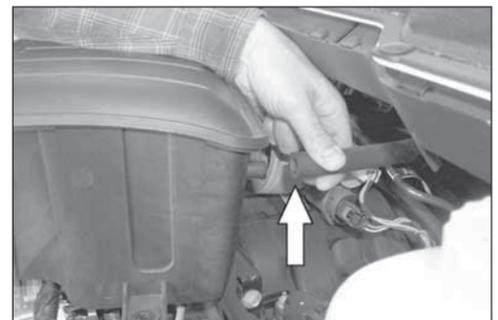


7. On 2002-2007 model year vehicles, disconnect the crankcase vent hose from resonator box as shown. Then remove resonator box from vehicle. **NOTE: K&N Engineering, Inc., recommends that customers do not discard factory air intake.**

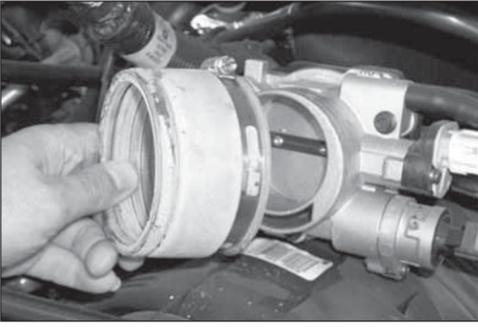


8. On 2002-2007 model year vehicles, loosen hose clamp that retains the rubber hose to the throttle body then remove as shown.




8a. Install the provided silicone hose (08051) onto the throttle body and secure with the provided hose clamp.

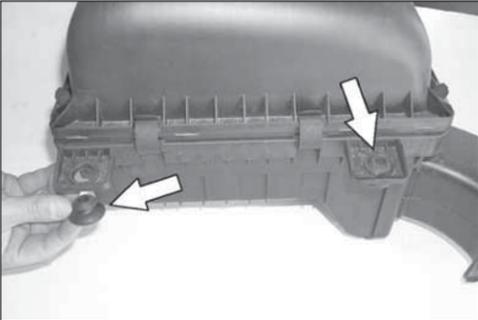

9. Remove the two rubber bushings from the factory airbox as shown.

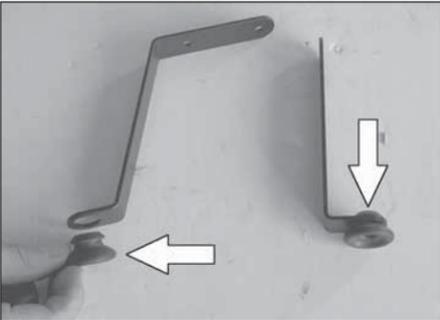


10. Install the two rubber bushings that were removed in the previous step into the provided brackets as shown.

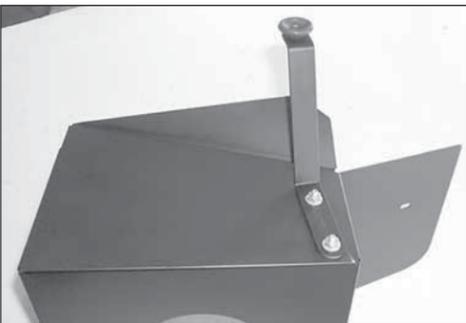


11. Install the large "Z" bracket onto the heat shield with the provided hardware. Do not tighten completely at this time.




12. Install the "L" bracket onto the heat shield with the provided hardware. Do not tighten completely at this time.

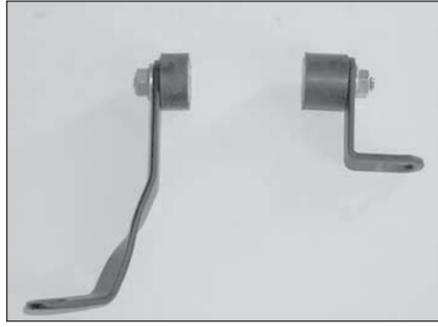

13. Install the rubber mounted studs into the provided brackets as shown

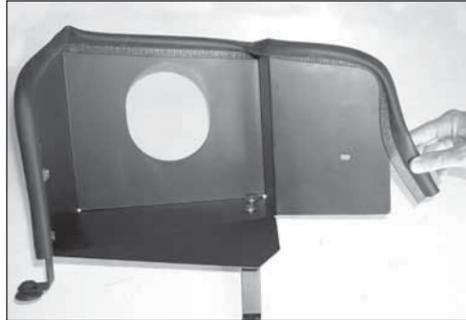


14. Install the provided edge trim onto the heat shield. Trim if necessary.

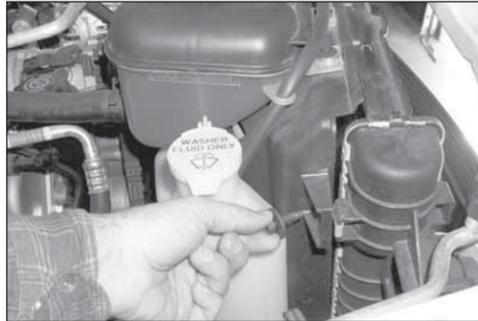


15. Remove the 13mm bolt from the upper fan shroud as shown.




16. Install the "L" bracket (26607) onto the fan shroud with the provided 8mm bolt and washers.

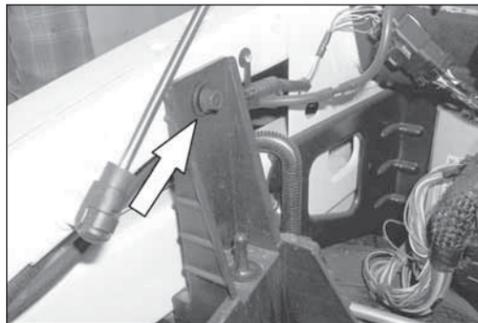


17. Remove the 8mm bolt that retains the airbox mount.

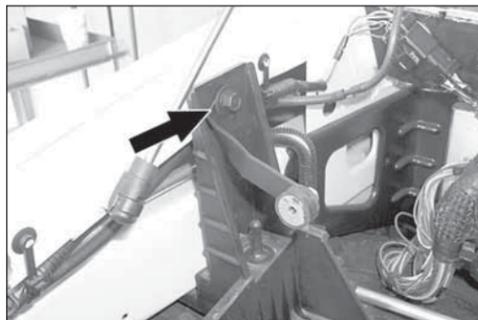


18. Install the twisted "L" bracket with the bolt that was removed in step 17. Do not tighten bolt completely.

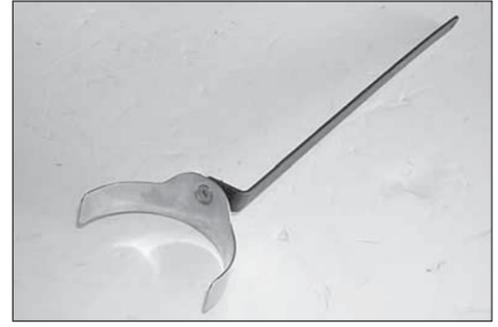

19. Assemble the saddle bracket assembly as shown.

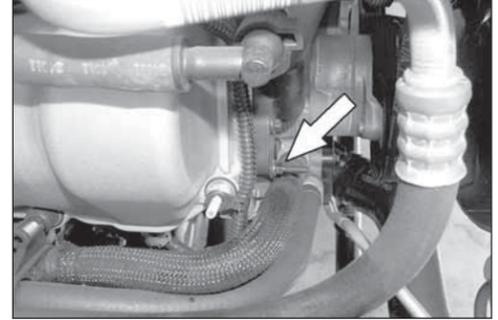

20. On 2002-2007 model year vehicles, use a 8mm socket, remove the stud that retains the oil fill bracket.

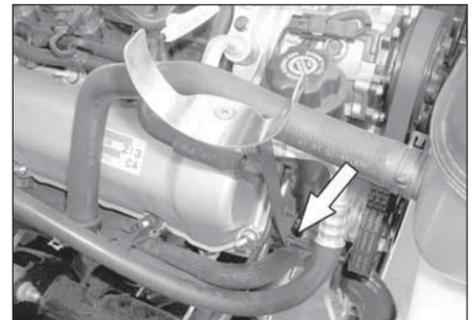

21. On 2002-2007 model year vehicles, install the saddle bracket assembly with the stud that was removed in step 20.



22. Install the heat shield onto the factory airbox studs then mount to the previously installed brackets.




23. On models that come equipped with temp sensors, remove the air temp sensor from the resonator box as shown.

**NOTE: Take care removing the temp sensor as it is very fragile.**



24. On models that come equipped with temp sensors, drill a 7/8" hole in the K&N® intake tube at the drill point.

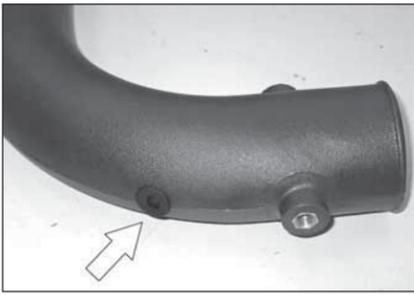


25. Install the provided grommet into the K&N® intake tube as shown.




26. Remove the O-ring from the air temp. sensor as shown.

**NOTE: Take care when handling the temp sensor as it is very fragile.**

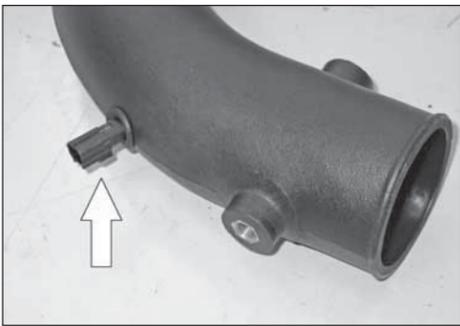

27. Install the air temp sensor into the K&N® intake tube as shown.

**NOTE: Take care when handling the temp sensor as it is very fragile.**

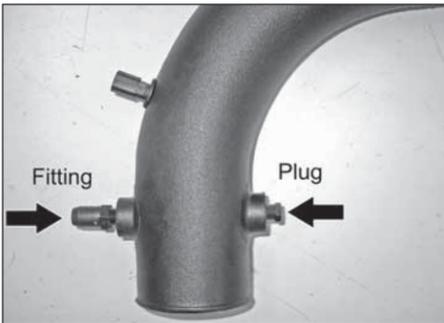


27a. On 2002-2007 model year vehicles, install the NPT fitting and NPT plug as shown.



28. Install the K&N® intake tube into the silicone hose at the throttle body and align to the mounting bracket, secure the intake tube with the hose clamps provided.



29. On models equipped with an air temperature sensor, reconnect the air temperature electrical connection as shown.

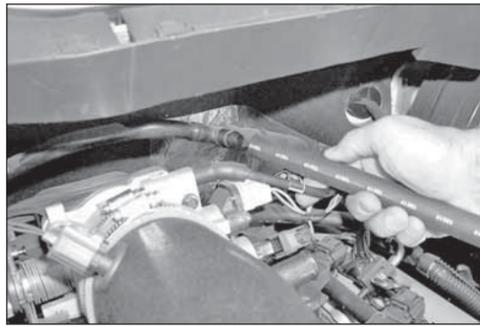


30. On models that the crank case vent hose is connected to the "T" on the drivers side of the engine, remove the factory vent hose from the "T" fitting as shown.



30a. On models that the crank case vent hose is connected to the "T" on the passengers side of the engine, remove the complete vent tube assembly from the rubber fittings in each valve cover as shown.



30b. On models that the crank case vent hose is connected to the passenger side valve cover, remove the factory 90° coupling hose from the plastic vent tube.

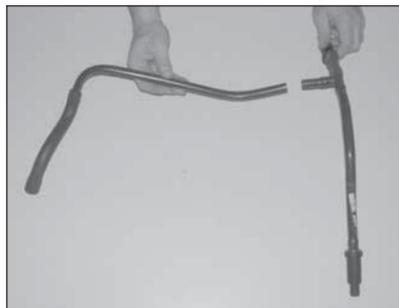


30c. Cut the crank case vent tube 1" from the "T" fitting as shown.


**NOTE: Cut the tube that was originally fastened to the air box.**




30d. Rotate the long side of the vent tube assembly 180° as shown.

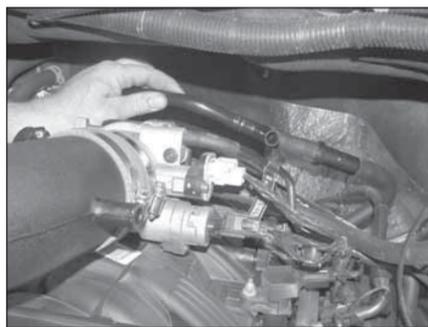


30e. Reinstall the vent tube assembly into the rubber fittings in each valve cover so that the "T" fitting is now on the drivers side of the engine facing forward.

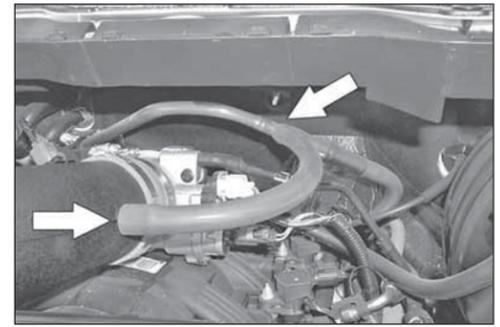

31. Connect the provided vent hose onto the "T" fitting then connect the other end onto the intake tube.

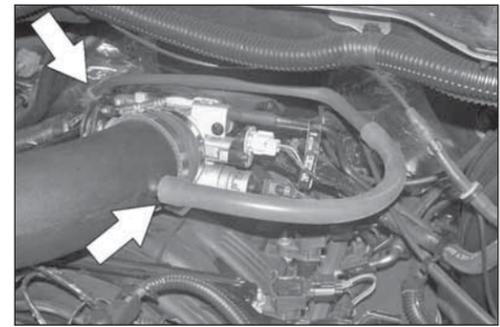


32. On models with the crank case vent tube connected to the passenger side valve cover, connect the provided silicone hose onto the factory vent tube and then route the crank case tube assembly behind the throttle body as shown and connect the open end onto the K&N® intake tube.

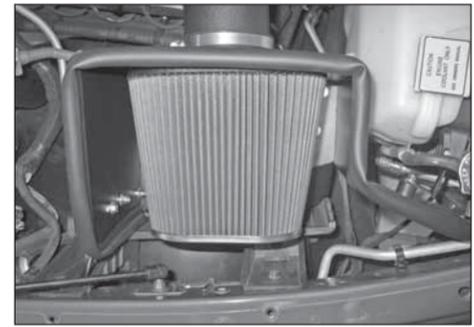

33. Install the K&N® air filter onto the intake tube as shown.



34. Align the heat shield for best clearance then tighten all the brackets.

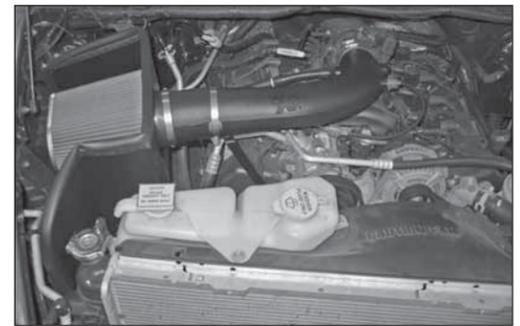

35. Reconnect the vehicle's negative battery cable. Double check to make sure everything is tight and properly positioned before starting the vehicle.

36. The C.A.R.B. exemption sticker, (attached), must be visible under the hood, so the emissions inspector can see it when the vehicle is required to be tested for emissions. California requires testing every two years, other states may vary.

37. It will be necessary for all K&N® high flow intake systems to be checked periodically for realignment, clearance and tightening of all connections. Failure to follow the above instructions or proper maintenance may void warranty.

**ROAD TESTING:**

1. Start the engine with the transmission in neutral or park, and the parking brake engaged. Listen for air leaks or odd noises. For air leaks secure hoses and connections. For odd noises, find cause and repair before proceeding. This kit will function identically to the factory system except for being louder and much more responsive.
2. Test drive the vehicle. Listen for odd noises or rattles and fix as necessary.
3. If road test is fine, you can now enjoy the added power and performance from your kit.
4. K&N Engineering, Inc., suggests checking the air filter element periodically for excessive dirt build-up. When the element becomes covered in dirt (or once a year), service it according to the instructions on the Recharger® service kit, part number 99-5050 or 99-5000.

**50-STATE STREET LEGAL**  
**K&N CARB EXEMPT K&N**

\* FREE K&N® decal To register your warranty, please see us online at [knfilters.com/register](http://knfilters.com/register). FREE K&N® decal \*

• 1455 CITRUS ST., P.O. BOX 1329, RIVERSIDE, CA., U.S.A. 92502 • TECH SERVICE 800-858-3333 • FAX 951-826-4001  
• e-mail: [tech@knfilters.com](mailto:tech@knfilters.com) • WWW: <http://www.knfilters.com>