



Sun Cap Installation Instructions

For: Wrangler 1992 - 1995

Part Number: 41514

Note: If your vehicle has not been fitted with a factory soft top, it will be necessary to purchase a Windshield Channel Kit Number 45809-01 from your local distributor.

WARNING

This product is designed to enhance the appearance of the vehicle and to shield the occupants from ordinary weather conditions. Do not rely in any way on the components of this product to contain occupants within the vehicle, or to protect against injury or death in the event of an accident. This top will not protect the occupants from falling objects. Never operate vehicle in excess of manufacturer's specifications.

WEAR SEAT BELTS AT ALL TIMES

Read and follow, precisely, all installation instructions provided when installing top. Failure to do so may result in a poor fitting top and could place occupants of the vehicle in a potentially dangerous situation. After installing or reinstalling the top, check to make sure it has been properly installed.

Installation Tips

After completing the installation, keep these instructions for future reference. Before you begin installing this top assembly, read all instructions thoroughly. Below are a few tips to make this installation easier.


For a smooth fit:

For ease in installation, the top should be installed at temperatures above 72¼ F. Below this temperature, the fabric may contract an inch or more, making it difficult to fit to the vehicle.

It is normal for the fabric to contract and wrinkle when stored in the shipping carton. Within a few days after the installation, the fabric will relax and the wrinkles will disappear.


Step One

Locate the Sun Cap and orient it on the vehicle. Drape it over the sport bar and insert front edge into windshield channel.

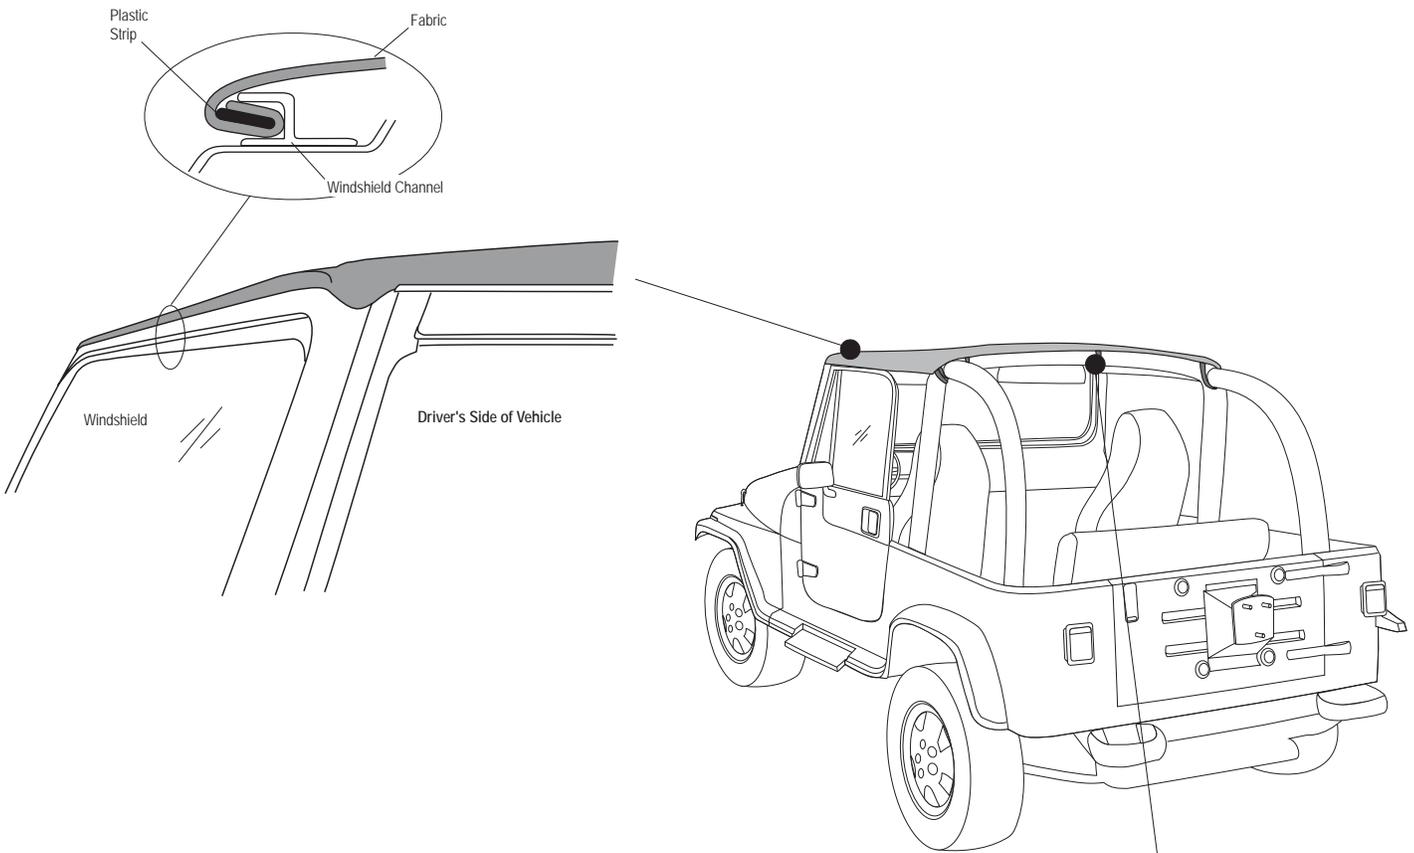


Step Two

Locate the long web strap sewn to the center, rear of the top. Wrap the strap around the horizontal tube of the sport bar and pull it toward the front of the vehicle. Thread it through the footman loop located above the windshield. Pull the end of the strap back and thread it through the buckle on the strap. Pull the strap tight.

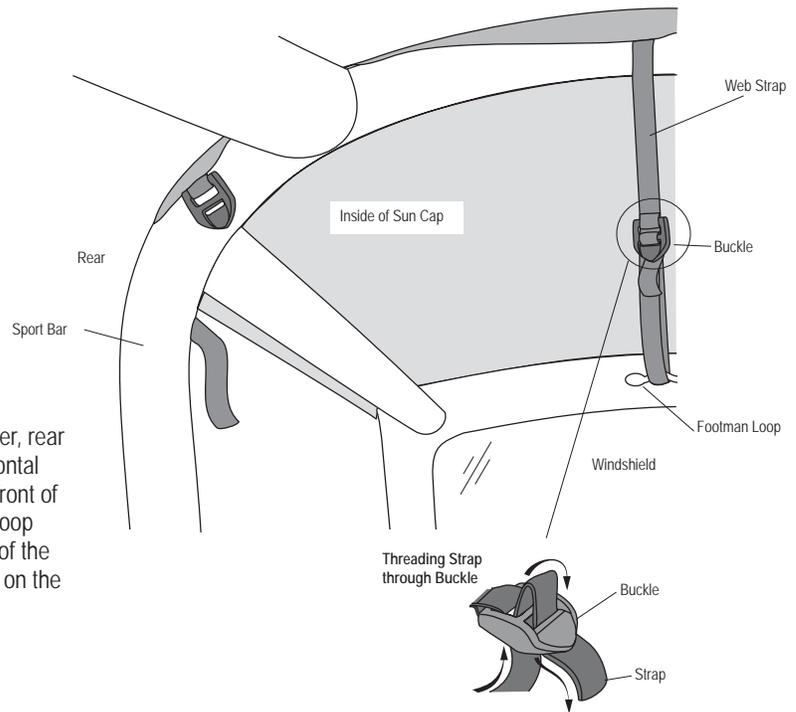

Step Three

Locate the straps sewn near the rear corners of the Sun Cap. Wrap them under the sport bar, through the loop, under the rear sport bar and thread the end of each strap through the buckle. Do this on both sides of the vehicle. Then pull the straps tight through the loops as well as the buckles.

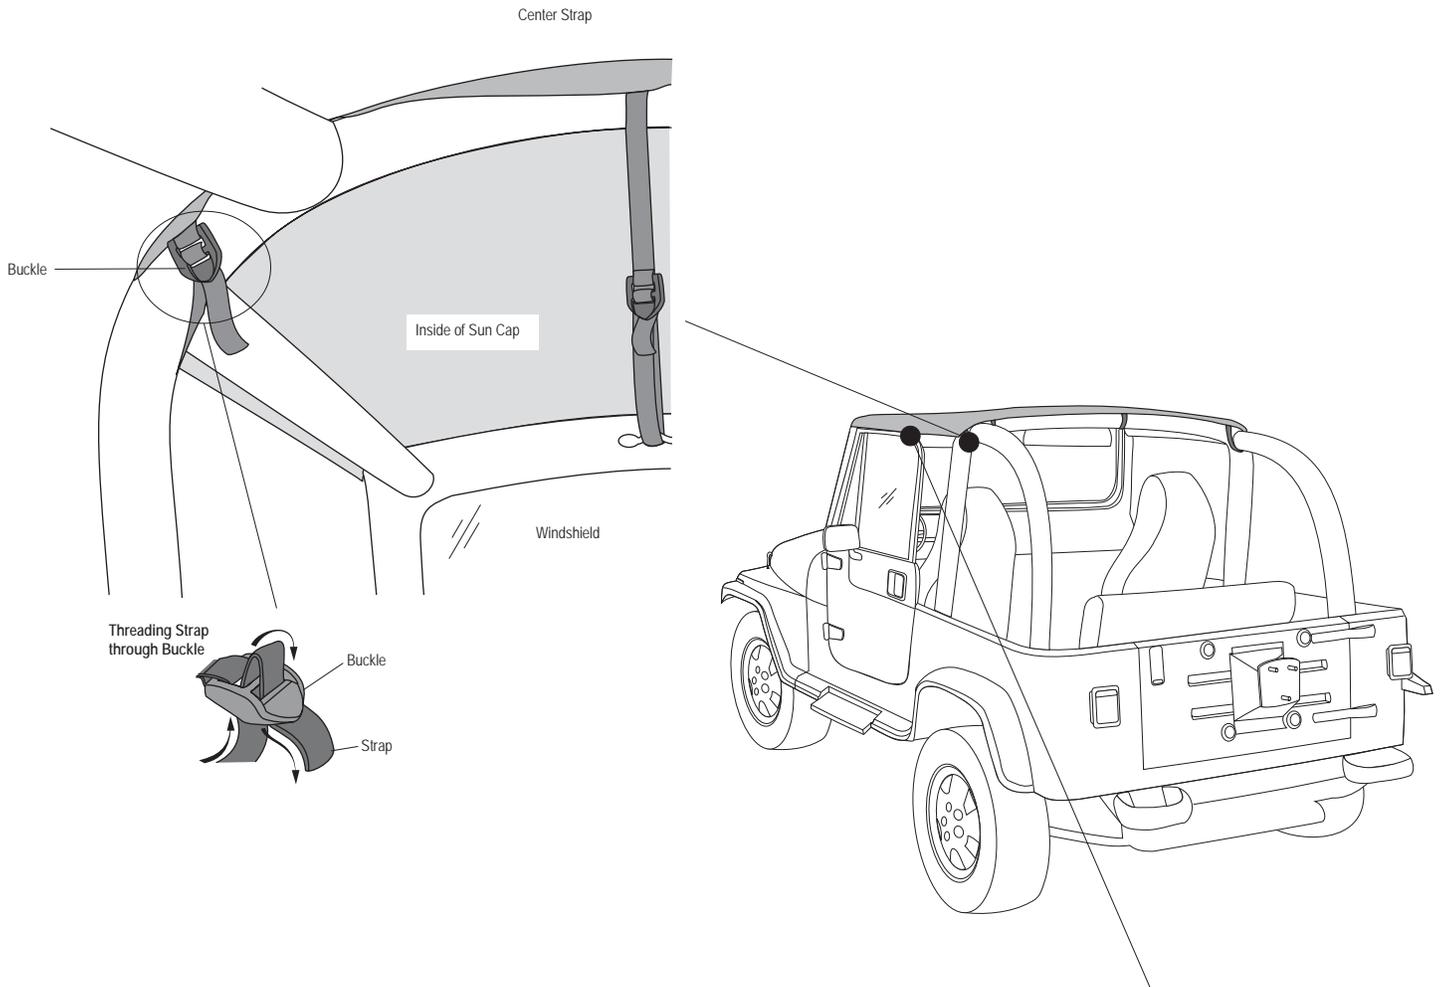

Step Four

Locate the two pairs of hook and loop strips sewn to each side of the top. Wrap them around the bar above the door openings as tight as possible and fasten them.

Make sure that the center strap is as tight as possible.

