



Installation Instructions

Vaulted Security Glove Box
97-06 Wranglers (Part # 812201)

NOTE: Carefully read entire instructions thoroughly before attempting to install this part. Drilling is required. (Optional)

Parts Included	Qty
Vaulted Glove Box	1
Neoprene Strip	1
Door Drop Stop Bracket	1
Wing Nut	2
Nylon Locking Nut	4
Nylon Locking Nut	4
Washer	4

Tools Needed
Phillips Screwdriver
Drill
Drill Bit Set

Step 1: Carefully remove the factory glove box from vehicle by gently pulling forward on the plastic tab on the right side until the tab clears the dash and the box rotates out all the way or by releasing the holding strap. (Fig 1)

Step 2: Remove the eight Phillips screws that attach the dash to the steel framework. Now remove the factory lock catch at the top of the glove box opening by removing the two screws. (Save all screws use later) **Note:** Remember the factory screw mounting pattern, you will use the same pattern later.



(Figure 1)



(Figure 2)




Installation Instructions


Vaulted Security Glove Box
97-06 Wranglers (Part # 812201)

Step 3: Measure, cut and mount the Neoprene strip across the top and down the sides of the Vaulted Glove Box frame. Stick the Neoprene strips where the door when closed would meet up against the frame. (Figure 3) This is to help reduce rattling and form a better seal.

Step 4: Position the Vaulted Glove Box into the dash. Bolt it in place using the ten factory screws that you removed earlier. (Fig 4) Be sure to use the factory mounting pattern. (Two holes will not be used)
Note: Loosely start all the screws and before tightening them all the way.

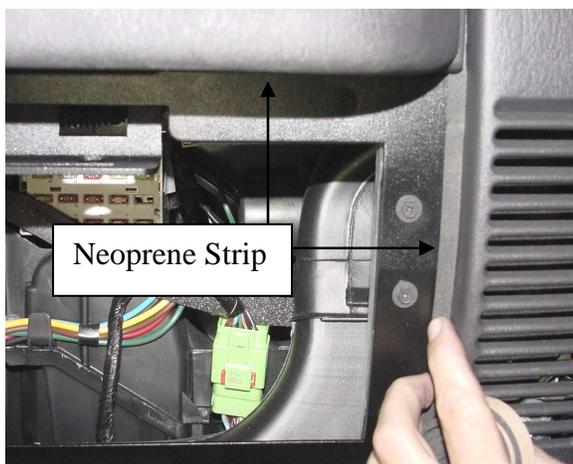

(Figure 3)

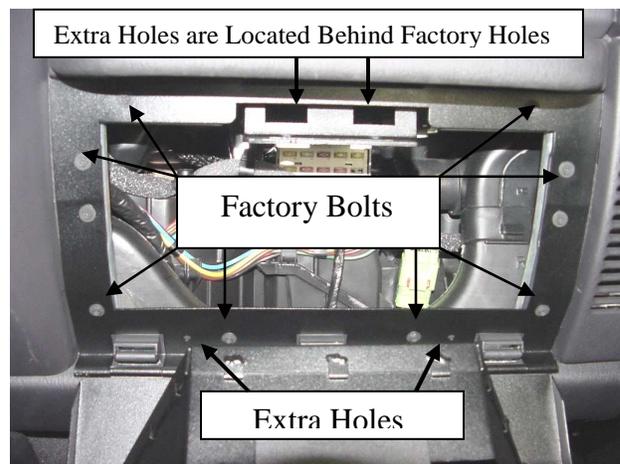

(Figure 4)

Step 5: For full and total security it is recommended to drill the two extra holes located at the bottom of the frame and the two extra holes on the lock catch. (Fig 4) You can use the holes on the frame as a template to mark and drill the holes in the dash. **CAUTION:** make sure to check the backside for any obstructions. Use the included hardware to secure these holes.

Step 6: Loosely attach the door stop bracket on the backside of the glove box by inserting the threaded tabs into the slots, using the supplied wing nuts. Make sure the bracket is pushed down and that the curved section of the bracket is facing up. (Fig 5)

Step 7: Close the Vaulted Glove Box partially and adjust the height of the door stop bracket so that it will hit the lock catch bracket, keeping it from falling all the way open. (Fig 6) Tighten wing nuts now.



Installation Instructions
Vaulted Security Glove Box
97-06 Wranglers (Part # 812201)



(Figure 5)



(Figure 6)

Step 8: You may need to push hard when you first close and lock the Vaulted Glove Box. Once the Neoprene strips have been broken in, this will no longer be necessary.

NOTE: To lock and unlock the Vaulted Glove Box; insert key, push down and turn. If you are unable to get the door to close properly you may need to adjust the lock catch on top. You may do this by carefully pushing or pulling the lock catch.