

SPEC-D *Tuning*

1998-2002 HONDA ACCORD 4DR PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS



If you experience any difficulties that the instruction did not cover, Please seek local auto shop for advise.
Please wear protection before you work on your vehicle.
An assistant is helpful when removing the front bumper.
Please be careful while working with the bumper or body part to avoid scratching.
Do not make direct contact with the halogen bulb or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED

Trim Pad Remover 10mm Socket
Phillips Screwdriver
¼" Drive Ratchet
¼" Drive Extensions (6 to 12 inches)

If your Headlight is Halo type, you also need:
4 Blue Male Quick Wire Connectors
4 Blue Female Quick Wire Connectors
2 Red Wires (8 inch)
2 Black Wires (8 inch)

Product Part Numbers:

2LHP-ACD98-TM
2LHP-ACD98B-TM
2LHP-ACD98JM-TM
2LHP-ACD98JMB-TM




1998-2002 HONDA ACCORD 4DR PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS



If you experience any difficulties that the instruction did not cover, Please seek local auto shop for advise.
Please wear protection before you work on your vehicle.
An assistant is helpful when removing the front bumper.
Please be careful while working with the bumper or body part to avoid scratching.
Do not make direct contact with the halogen bulb or the wire assembly until the unit has cooled down after use.



1. Remove two clips

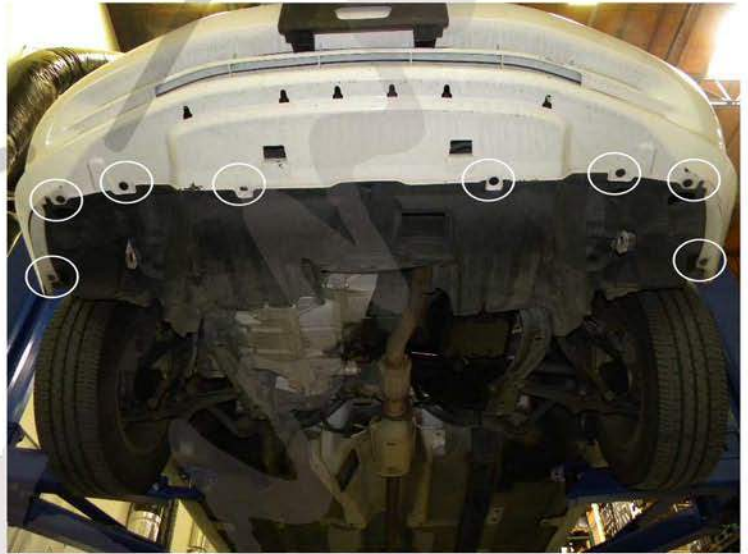

2. Remove six clips and two 10mm bolts



3. Remove one 10mm bolt



4. Pull out the front bumper from the side



5. Remove the front bumper



6. Remove three 10mm bolts, then remove the bracket



7. Remove one 10mm headlight bolt



8. Disconnect all harness from the OEM headlight



9. Remove driving light light bulb from the car



10. Install the light bulb to the NEW projector headlight




11. Once plugged in, place back into the same location




12. Plug back socket, install the new projector headlight



13. Install one 10mm headlight bolt

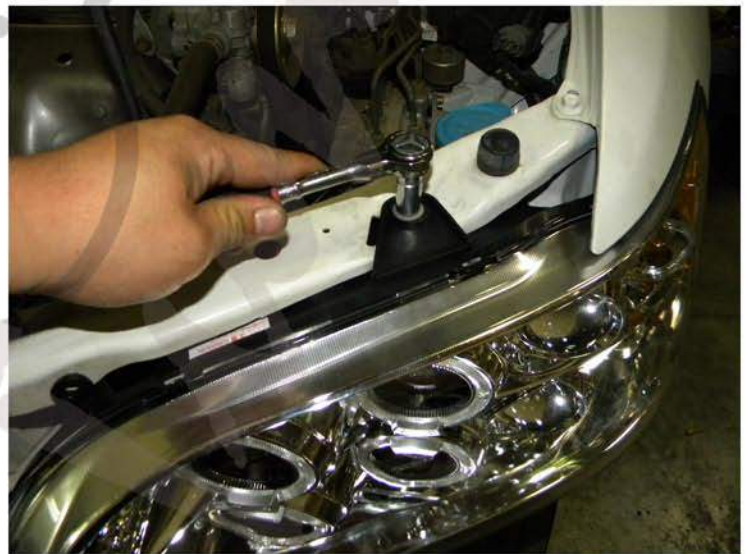

14. Install three 10mm bolts for the bracket

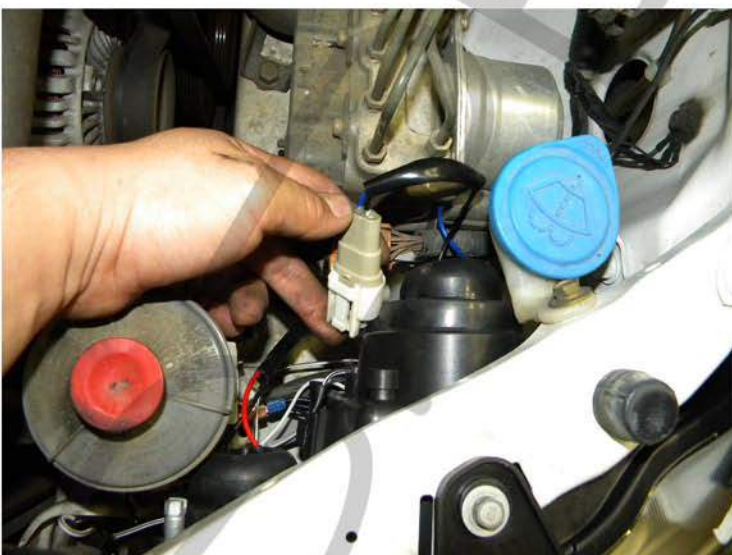


15. Connect the headlight harness



16. Install the front bumper

Please see the Halo and L.E.D installation instruction
If your headlights don't have HALO or L.E.D. You can skip it

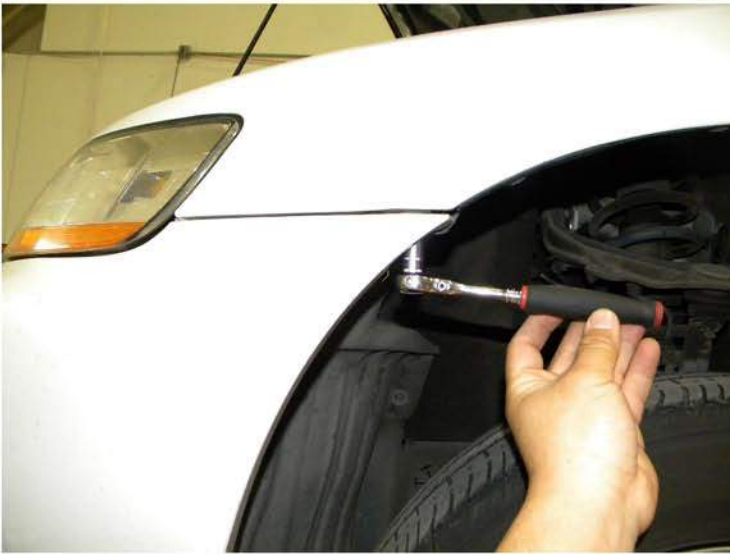

17. Install one 10mm bolt



18. Install six clips and two 10mm bolts



19. Install two clips



20. Please repeat the step from 1 to 19 for the opposite side



21. The installation is now complete