



2012-2013 FORD FOCUS HALO R8 PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.

An assistant is useful when removing the front bumper from your vehicle.

Please be cautions when working with the bumper or any parts belonging to the vehicles's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.



1. (2) 10mm bolts and 9 8mm bolts location



2. (2) T30 bolts location



3. Remove the (2) T30 bolts




4. Remove the (2) T30 bolts



5. Disconnect the headlight harness and remove the headlight



6. Connect the headligh tharness to the projector headlight

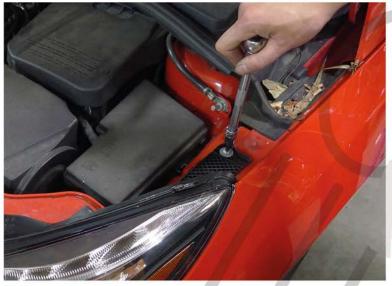

7. Tighten the (2) T30 bolts



8. Tighten the (2) T30 bolts Please repeat the steps from 1 to 8 for the opposite side



9. The installation now is complete