

SPEC-D *Tuning*

2011-2013 VOLKSWAGEN JETTA **PROJECTOR HEADLIGHTS** INSTALLATION INSTRUCTIONS



- *If you experience any difficulties that the instruction did not cover, Please seek local auto shop for advise.
- *Please wear protection before you work on your vehicle.
- *An assistant is helpful when removing the front bumper.
- *Please be careful while working with the bumper or body part to avoid scratching.
- *Do not make direct contact with the halogen bulb or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED

3/8" Drive Ratchet	Flat Tipped Screwdriver
6" Extension	Crescent Wrench
T30 Socket	
T25 socket	

If your Headlight is Halo type, you also need:	4 Blue Male Quick Wire Connectors
Wire Stripper	4 Blue Female Quick Wire Connectors
Wire Crimper	2 Red Wires (8 inch)
4 Blue Quick Splice Wire Connectors	2 Black Wires (8 inch)

Product Part Numbers:

2LHP-JET11JM-TM
2LHP-JET11G-TM
2LHP-JET11-TM



2011-UP VW JETTA PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.



An assistant is useful when removing the front bumper from your vehicle.

Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.



1. (4) T25 screws location




2. Remove the (4) T25 screws



3. Remove the front grill



4. Moved the rubber flap aside

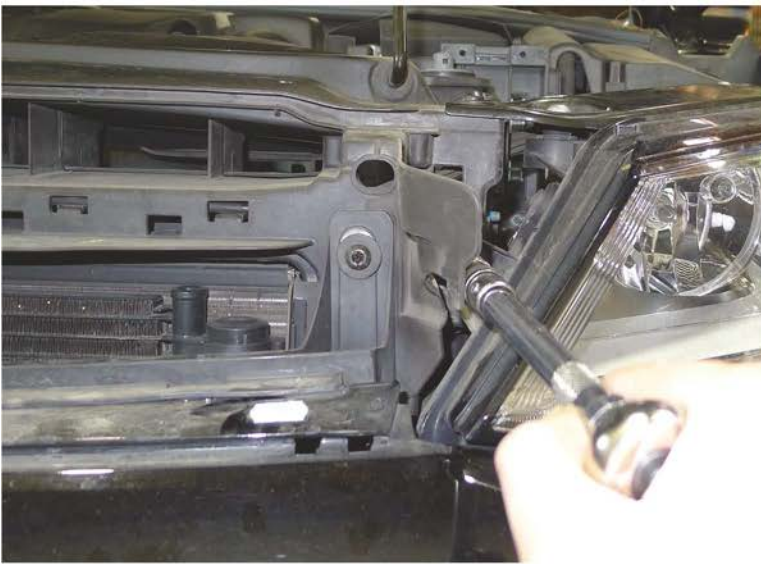

5. Remove the T30 screws



6. Remove the T30 bolt



7. Remove the (5) T30 bolts




8. Remove the (5) T30 bolts




9. Detach the hood release cable from the metal bracket



10. Remove the metal bracket

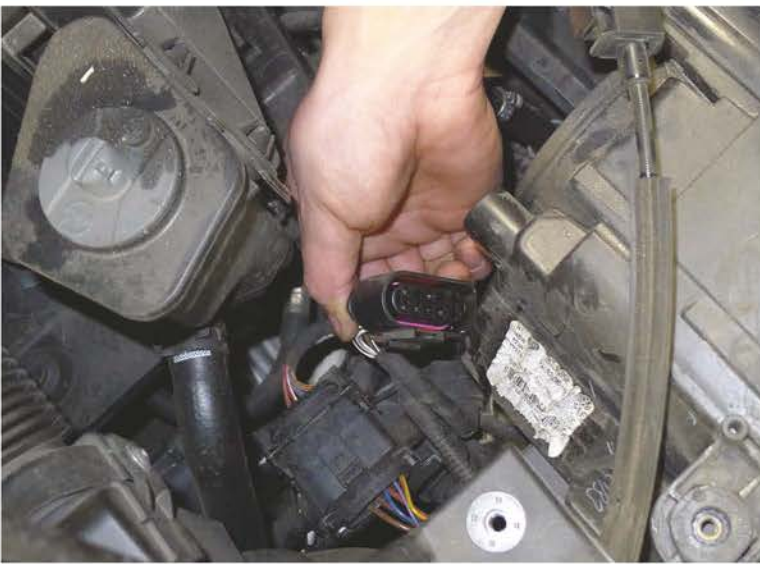

11. Disconnect the fog light harness

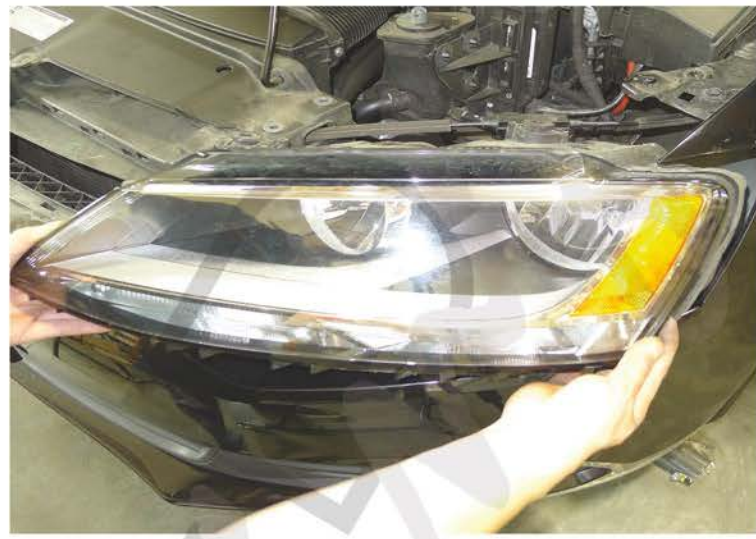

12. Remove the factory headlight



13. Remove the 24mm plastic mounting bolt



14. Remove the 19mm mounting bolt



15. Remove the 19mm mounting bolt



16. Remove the 19mm mounting bolt



17. Install the 24mm mounting bolts on the new headlight



18. Install the 24mm mounting bolts on the new headlight



19. Install the 19mm mounting bolts on the new headlight



20. Install the 19mm mounting bolts on the new headlight



21. Place the new headlight in the stock location
Please see the "Halo and L.E.D installation instructions"



34. Connect the headlight harness
If your headlights don't have HALO or L.E.D. you can skip it



23. Tighten the T30 bolt



24. Replace the metal bracket



25. Tighten the (5) T30 bolts



26. Replace the front grill



27. Tighten the (4) T25 screws
Please repeat the steps in order from 1 to 27 for the opposite side.



28. The installation now is complete