

SPEC-D *Turning*

2005-2007 DODGE MAGNUM PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS



If you experience any difficulties that the instruction did not cover, Please seek local auto shop for advise. Please wear protection before you work on your vehicle.

An assistant is helpful when removing the front bumper.

Please be careful while working with the bumper or body part to avoid scratching.

Do not make direct contact with the halogen bulb or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED

Trim Pad Remover	3/4" Drive Extensions (6 to 12 inches)
10mm Socket	3/4" Drive Ratchet
8mm Socket	
7mm Socket	

If your Headlight is Halo type, you also need:	4 Blue Male Quick Wire Connectors
Wire Stripper	4 Blue Female Quick Wire Connectors
Wire Cimper	2 Red Wires (8 inch)
4 Blue Quick Splice Wire Connectors	2 Black Wires (8 inch)

Product Part Numbers:

2LHP-MAG05-TM

2LHP-MAG05B-TM

2LHP-MAG05JM-TM

2LHP-MAG05JMB-TM



**DODGE MAGNUM PROJECTOR HEADLIGHTS
 INSTALLATION INSTRUCTIONS**




If you experience any difficulties that the instruction did not cover, Please seek local auto shop for advise.
 Please wear protection before you work on your vehicle.
 An assistant is helpful when removing the front bumper.
 Please be careful while working with the bumper or body part to avoid scratching.
 Do not make direct contact with the halogen bulb or the wire assembly until the unit has cooled down after use.



1. Remove ten 7mm bolts



2. Remove three clips

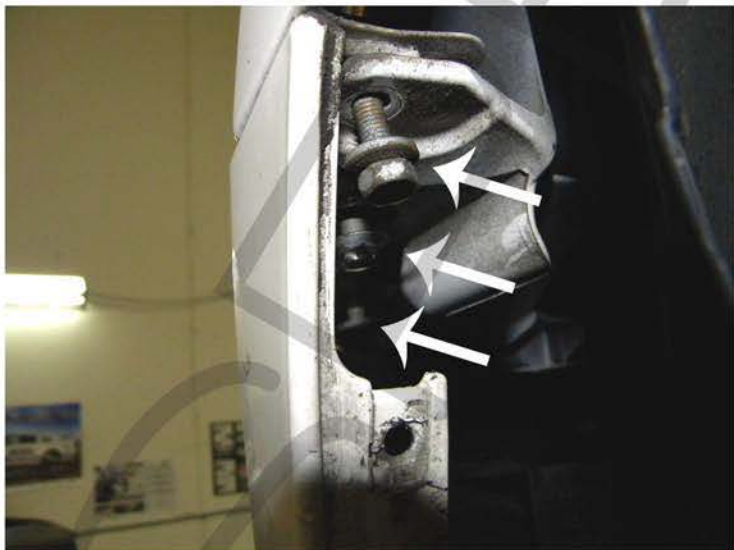

3. Remove two 10mm bolts and one clip



4. Remove six clips



5. Remove the front bumper



6. Remove two 8mm headlight bolts



7. Disconnect all the connectors from the headlight



8. Install the new projector headlight



9. Install two 8mm headlight bolts



10. Connect all connectors from the headlight
Please see the Halo and L.E.D installation instruction
If your headlights don't have HALO or L.E.D. You can skip it



11. Install the front bumper



12. Please repeat the picture order from 1 to 11 for the opposite side



13. The installation is now complete