

SPEC-D

Turning

1999 AUDI TT PROJECTOR HEADLIGHTS

INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.



An assistant is useful when removing the front bumper from your vehicle.

Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED



3/8" Drive Ratchet



6" Extension



10mm Socket



Small Flat Tipped Screwdriver



T25 Socket



T30 Socket



Flathead Screwdriver

If your Headlight is Halo type, you also need:



Wire Stripper



Wire Crimper



4 Blue Quick Splice Wire Connectors



4 Blue Male Quick Wire Connectors



4 Blue Female Quick Wire Connectors



2 Red Wires (8 inch)



2 Black Wires (8 inch)

Product Part Numbers:

2LHP-TT99JM-RS

2LHP-TT99-RS



AUDI TT PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.



An assistant is useful when removing the front bumper from your vehicle.

Please be cautions when working with the bumper or any parts belonging to the vehicles's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.



1. Before



2. (4) T25 screws location



3. Remove (4) T25 screws



4. (5) T25 screws and (2) plastic clips location



5. Remove (5) T25 screws




6. Release (2) plastic clips



7. T25 screw location



8. Remove the T25 screw

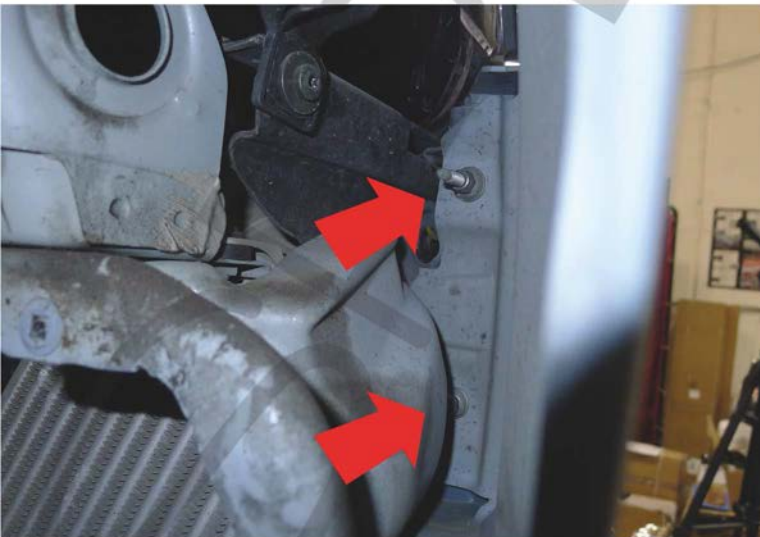

9. (2) 10mm nuts location



10. Remove (2) 10mm nuts



11. (6) Plastic clips location



12. Press down the center button of the plastic clips



13. Remove (6) plastic clips



14. Remove the plastic cover



15. (6) T30 bolts location



16. Remove (6) plastic bolts



17. Remove the metal bracket



18. Remove and set aside front bumper



19. Remove the plastic clip



20. Remove (2) T30 bolt



21. Remove (2) T30 bolt



22. Remove the headlight and disconnect the headlight harness



23. Disconnect the turn signal socket



24. Remove the turn signal bulb



25. Place the turn signal bulb into the new headlight



26. Connect the headlight harness to the new headlight

Please see the " L. E. D. head lights installation instructions"
If your head lights don't have L.E.D. You can skip the installation instruction.



27. Place the headlight in the stock location



28. Tighten the T30 bolt



29. Replace the front bumper



30. Tighten (6) T30 bolts



31. Replace the plastic cover



32. Replace (6) plastic clips



33. Tighten (2) 10mm nuts



34. Tighten the T25 screw



35. Lock (2) plastic clips



36. Tighten (5) T25 screws



37. Tighten (4) T25 screws
Please repeat the steps from 1 to 37 for the opposite side



38. The installation is now complete