

# SPEC-D *Turning*

## 2007-2013 TOYOTA TUNDRA PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.



An assistant is useful when removing the front bumper from your vehicle.

Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

### TOOLS AND SUPPLIES REQUIRED

 3/8" Drive Ratchet

 6" Extension

 10mm Socket

 Flat Tipped Screwdriver

 Flat Tipped Screwdriver


If your Headlight is Halo type, you also need:

 Wire Stripper

Wire Stripper

 Wire Crimper

Wire Crimper

 4 Blue Quick Splice Wire Connectors

4 Blue Male Quick Wire Connectors

 4 Blue Female Quick Wire Connectors

 2 Red Wires (8 inch)

 2 Black Wires (8 inch)

### Product Part Numbers:

2LHP-TUN07JM-TM

2LHP-TUN07-TM

2LHP-TUN07G-TM



**TOYOTA TUNDRA PROJECTOR HEADLIGHTS  
INSTALLATION INSTRUCTIONS**

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.




An assistant is useful when removing the front bumper from your vehicle.

Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.



1. Before

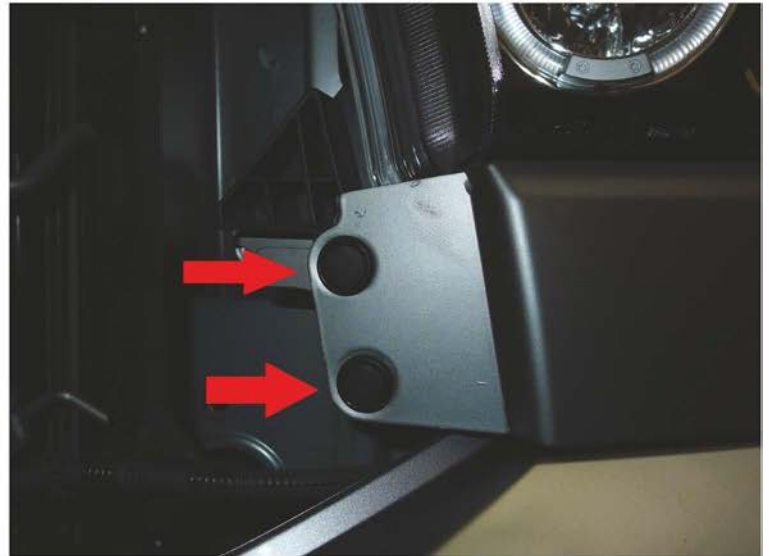

2. (2) plastic clips location



3. Remove the (2) plastic clips



4. Remove the filler trim






5. Remove the 10mm bolt



6. Remove the (2) 10mm bolts



7. Remove the headlight

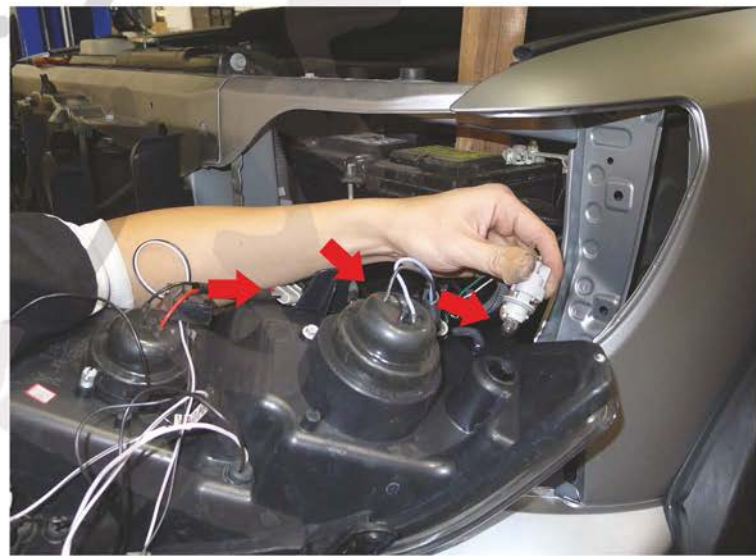

8. Disconnect the headlight harness



9. Connect the headlight harness to the new headlight  
Please see the " Halo and L. E. D. headlights installation instructions"  
If your headlights don't have Halo and L. E. D. You can skip the installation instruction.



10. Place the new headlight in the stock location





11. Tighten the (3) 10mm bolts



12. Tighten the (3) 10mm bolts



13. Replace the filler trim



14. Replace the (2) plastic clips  
Please repeat the steps from 1 to 14 for the opposite side



15. The installation now is complete