

2013 AND UP SCION FR-S LED TAIL LIGHTS INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop



Please wear protection before you work on any vehicle.

An assistant is useful when removing the front bumper from your vehicle.

Please be cautions when working with the bumper or any parts belonging to the vehicles's body to prevent scratching.


Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED

1/4" Ratchet

8mm Socket

Trim Pad Remover

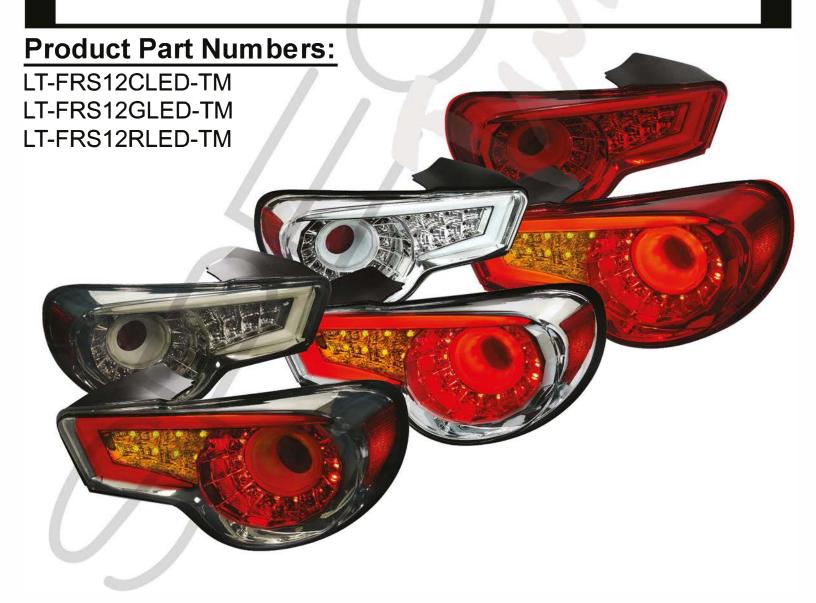



2012 AND UP SCION FR-S LED TAIL LIGHTS INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.

An assistant is useful when removing the front bumper from your vehicle.

Please be cautions when working with the bumper or any parts belonging to the vehicles's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.



1. (3) plastic clips location



2. Remove the (3) plastic clips



3. Remove the plastic moulding



4. Remove the plastic clip



5. Pull the fender liner aside



6. (4) 8mm nuts location



7. Remove the harness retaining clip



8. Remove the (4) 8mm nuts



9. Remove the factory tail light



10. Remove the tail light socket



11. Disconnect the tai llight harness



12. Remove the tail light harness from the tail light



13. Remove the tail light bolb fromt the socket



please see the "L.E.D. tail lights installation instructions"
If your tail lights don't have L.E.D. you can skip the installation instructions.



15. Install the light socket into the LED tail light



16. Connect the LED tail light harness to the tail light socket



17. Install the tail light socket into the LED tail light



18. Place the LED tail light in the stock location



19. Place and attach the risistor on inside roof on the rear pannel



20. Connect the risistor lead to the LED taillight



21. Tighten the (4) 8mm nuts



22. Replace the harness retaining clips



23. Replace the plastic clip



24. Replace the plastic trunk moulding



25. Replace the (3) plastic clips



26. Replace the (3) plastic clips



27. Replace the (3) plastic clips
Please repeat the steps in order from 1 to 37 for the opposite side



28. The installation is now complete