




Installation Instructions

T-Connector



READ THIS FIRST:

Read and follow all instructions carefully before beginning installation.

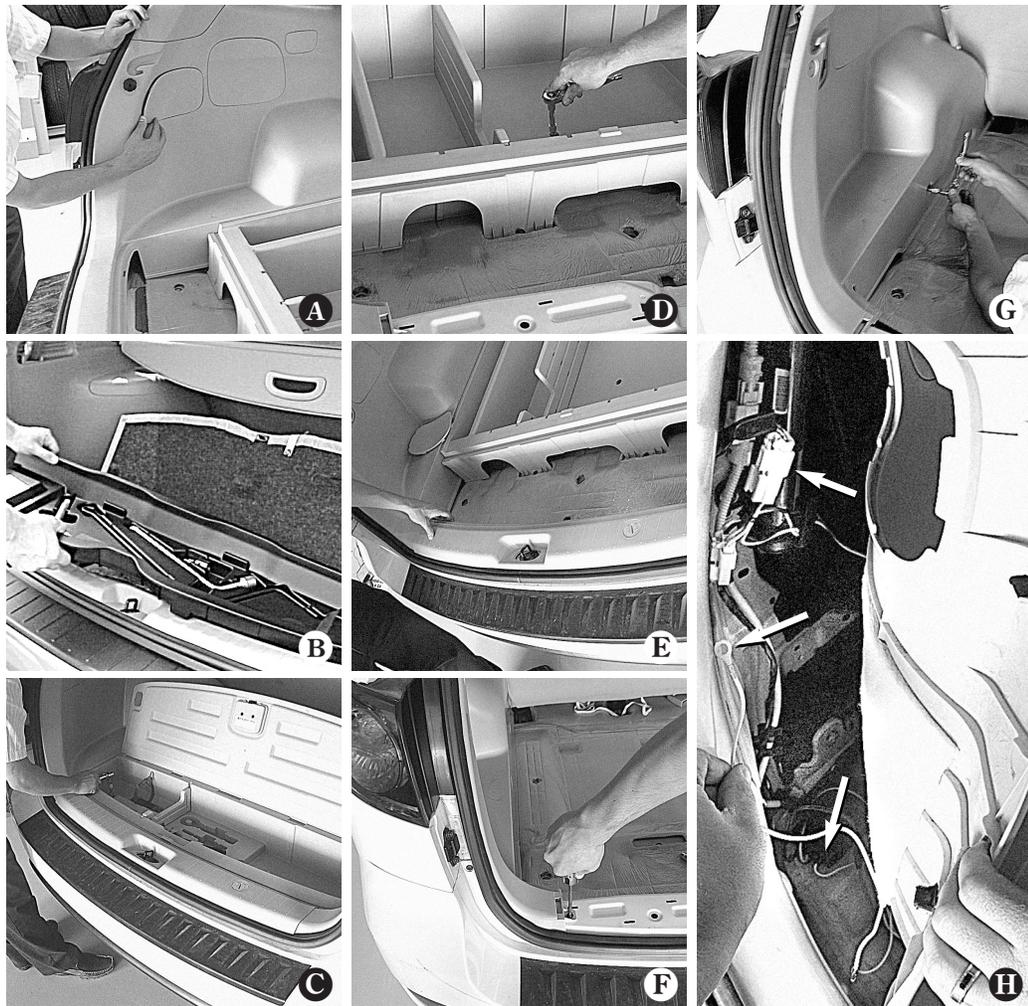

ENGLISH

TOOLS NEEDED

10mm Socket & Ratchet or 10 mm Wrench, Drill, Phillips Head Screwdriver, Test Probe

1. Open the vehicle's rear tailgate. On the driver's side remove access panel to locate rear of taillight **A**. Repeat on the passenger side. Remove threshold, trunk floor panels and trays **B C D E**. Set aside all items removed being careful not to damage parts.
2. Remove two screws in the threshold plate area **F**, to gain access behind trim panels. Being careful not to damage clips, partially remove the lower interior trim panels on each side of the vehicle **G**. Set aside all items removed being careful not to damage parts.
3. On the driver and passenger sides of the vehicle, locate the vehicle's taillight wiring harness **H**. The taillight wiring harness will have a connection point, on both sides, matching the ends of the T-Connector. Separate these connectors, being careful not to break the locking tabs. All connector surfaces should be clean and free of dirt.
4. On the driver's side insert the T-Connector end, with the **yellow** wire, between the vehicle wiring connectors and lock into place. Be sure that connectors are fully inserted with locking tabs in place.
5. Route the T-Connector end with **green** wire to the passenger's side. Repeat step 4 on the passenger's side with T-connector end containing the **green** wire.

6. Locate a suitable grounding point near the connector such as the vehicle's frame or cross member **I**. (Do not drill into vehicle floor or bed.) Clean dirt and rustproofing from area. Drill a 3/32" hole and secure **white** wire using eyelet and screw provided.

⚠ CAUTION

Verify what is behind any surface prior to drilling to avoid damage to the vehicle and/or personal injury. Do not drill into any exposed surfaces.

⚠ WARNING

All connections must be complete for the T-Connector to function properly. Test and verify installation with a test light or trailer once installed.

7. Mount the T-connector **black** box using double-sided tape provided **I**. Secure the remainder of the T-connector harness with the cable ties provided. To prevent damage or rattling, be careful to avoid any areas that would cut or pinch the wire.
8. Reposition the access panels, trays and trunk floor panels and reattach the threshold.

NOTE

Store 4-Flat in trunk or rear cargo area when not in use.



⚠ WARNING

Overloading circuit can cause fires. DO NOT exceed lower of towing manufacturer rating or:

- Max. stop/turn light: 1 per side (2.1 amps)
- Max. tail lights: (5.0 amps)

Read vehicle's owners manual & instruction sheet for additional information.