

EXPERIENCE


ULTIMATE[®]

2014/2015



WIPER BLADE CATALOG
Passenger Car &
Heavy Duty

CATALOGUE

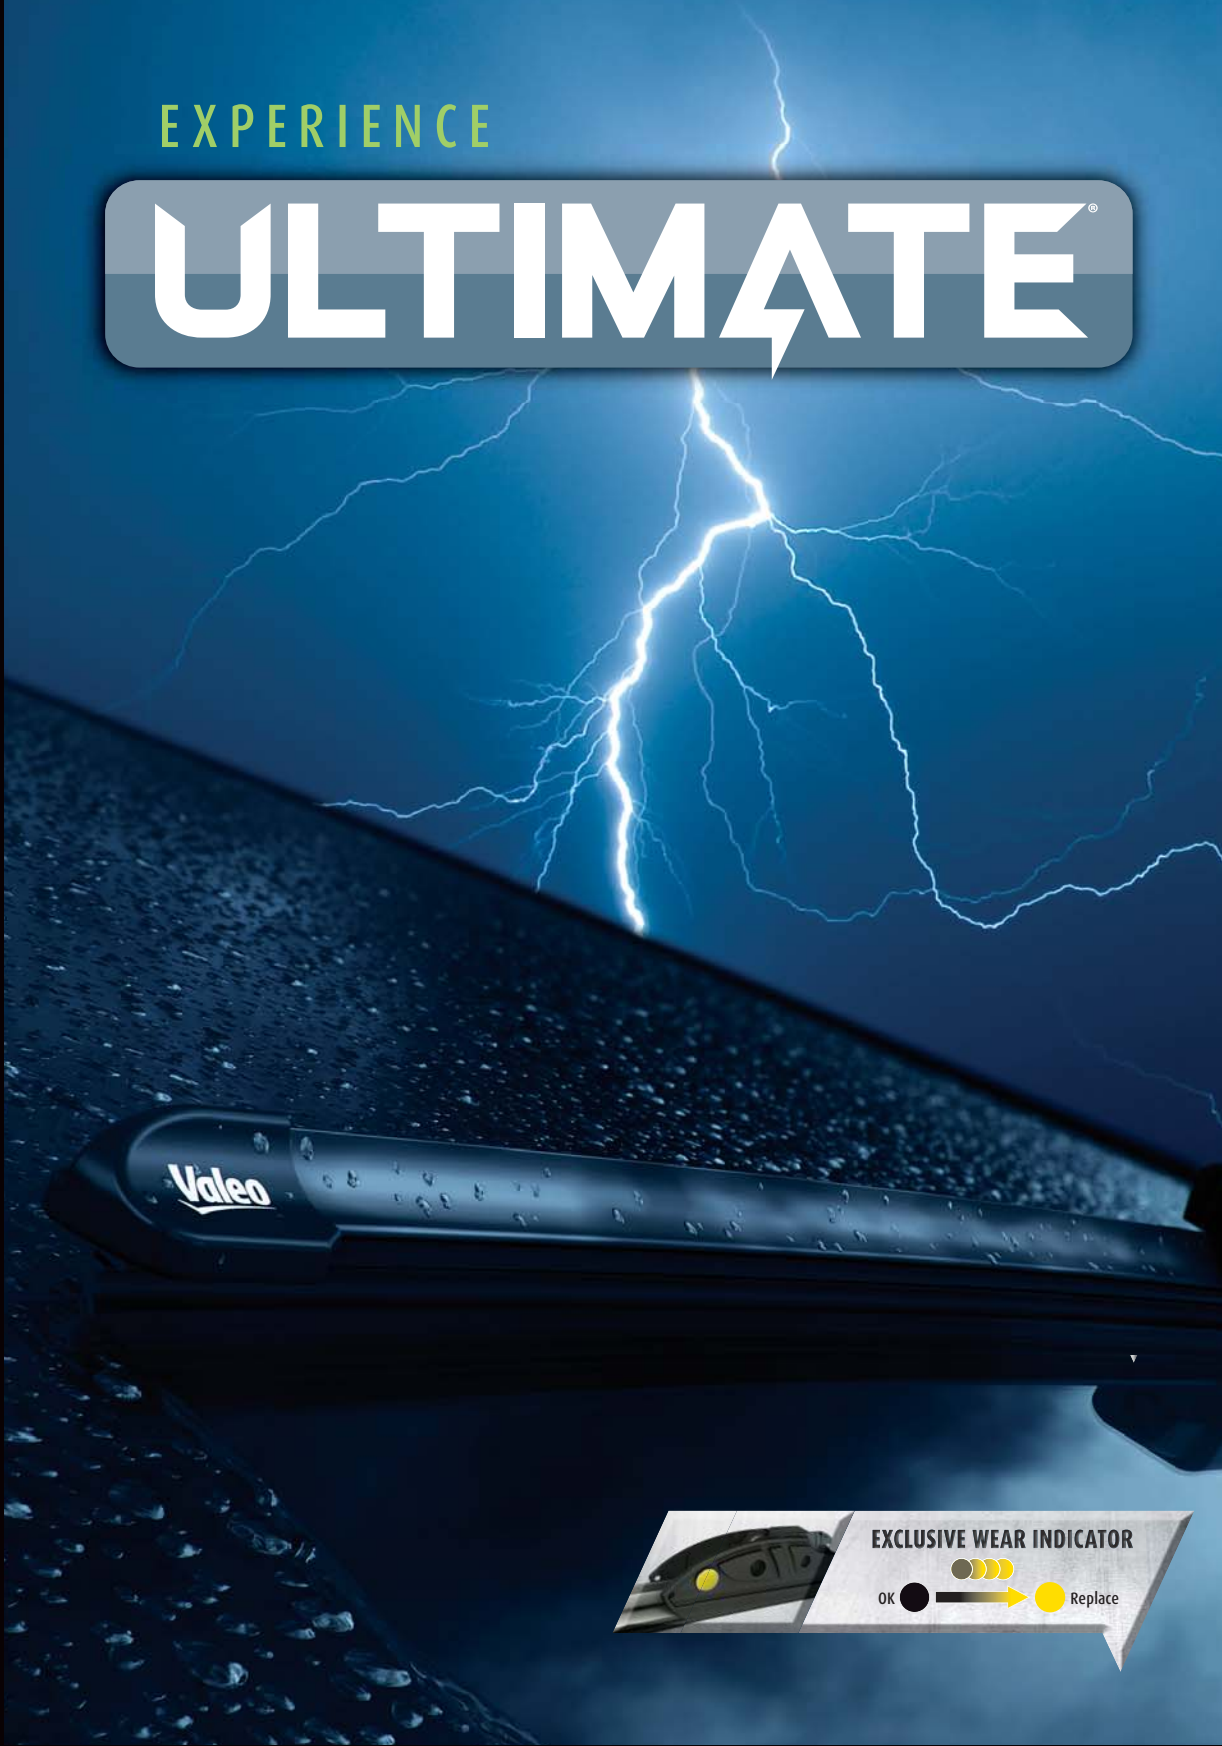

EXCLUSIVE WEAR INDICATOR

OK    Replace

valeo added 

Automotive technology, naturally



ULTIMATE[®]

Traditional	2
Beam Original.....	3
Beam Hook.....	4
Rear Blade	5
Hybrid	6
Winter	7
Heavy Duty.....	8

QUICK REFERENCE GUIDE

Part Number Explanation	10
Wiper Blade Line-up Summary	11
Wiper Blade Specifications	14

APPLICATION GUIDE

Passenger Cars and Light Trucks	17
Heavy Duty Vehicles	143

PRODUCT INFORMATION GUIDE

Buyer's Guide	147
Interchange Guide.....	157
Installation Instructions	166

TRADITIONAL

LASTING PERFORMANCE

- Conventional Blade Replacement
- Exclusive Wear Indicator

14 SKUs

**PRE-INSTALLED
HOOK ADAPTER**
QUICK AND
EASY INSTALLATION

ALL-METAL STRUCTURE
INCREASED QUALITY
AND DURABILITY


SYNTHETIC RUBBER
LONG LASTING,
ALL WEATHER DURABILITY

**EXCLUSIVE
WEAR INDICATOR**
BUILT-IN REMINDER TO
REPLACE WORN BLADES



Part No.	Length	Pack Qty.
11	11" (275 mm)	10
13	13" (325 mm)	10
14	14" (350 mm)	10
15	15" (375 mm)	10
16	16" (400 mm)	10
17	17" (425 mm)	10
18	18" (450 mm)	10
19	19" (475 mm)	10
20	20" (500 mm)	10
21	21" (525 mm)	10
22	22" (550 mm)	10
24	24" (600 mm)	10
26	26" (650 mm)	10
28	28" (700 mm)	10

ARM TYPES

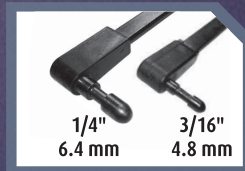

BEAM ORIGINAL

OE QUALITY

- For Vehicles Factory-Equipped with Beam Blades
 - Exclusive Wear Indicator
- 29 SKUs***

OE-STYLE ADAPTER
QUICK AND EASY
INSTALLATION

INTEGRATED SPOILER DESIGN
MAXIMUM HIGH-SPEED
PERFORMANCE

EXCLUSIVE WEAR INDICATOR
BUILT-IN REMINDER TO
REPLACE WORN BLADES

TEC3™ ADVANCED RUBBER TECHNOLOGY
LONG LASTING, EXTREME
WEATHER DURABILITY



Part No.	Length	Pack Qty.
150E	15" (380 mm)	5
160E	16" (400 mm)	5
170E	17" (430 mm)	5
180E	18" (450 mm)	5
190E	19" (475 mm)	5
200E	20" (500 mm)	5
210E	21" (530 mm)	5
220E	22" (550 mm)	5
230E	23" (580 mm)	5
240E	24" (600 mm)	5
250E	25" (630 mm)	5
260E	26" (650 mm)	5
280E	28" (700 mm)	5

ARM TYPES



* 13 SKUs FOR POPULAR ARM TYPES + 16 SKUs FOR SPECIFIC ARM TYPES

BEAM HOOK

PREMIUM UPGRADE

- Upgrade from Conventional Blades
- Exclusive Wear Indicator

12 SKUs

**PRE-INSTALLED
HOOK ADAPTER**
QUICK AND EASY
INSTALLATION

**PATENTED 3-D
SPOILER DESIGN**
ENHANCED HIGH-SPEED
PERFORMANCE

**TEC2™ SYNTHETIC
RUBBER + COATING**
LONG LASTING, ALL WEATHER
DURABILITY

**EXCLUSIVE
WEAR INDICATOR**
BUILT-IN REMINDER TO
REPLACE WORN BLADES



Part No.	Length	Pack Qty.
14HK	14" (350 mm)	5
15HK	15" (380 mm)	5
16HK	16" (400 mm)	5
17HK	17" (430 mm)	5
18HK	18" (450 mm)	5
19HK	19" (475 mm)	5
20HK	20" (500 mm)	5
21HK	21" (530 mm)	5
22HK	22" (550 mm)	5
24HK	24" (600 mm)	5
26HK	26" (650 mm)	5
28HK	28" (700 mm)	5

ARM TYPES



REAR BLADE

OE FIT

- Exact Match, All-Season Blade
- Composite and Beam Blade Technology

19 SKUs



Part No.	Length	Pack Qty.
10D	10" (254 mm)	5
11A	11" (285 mm)	5
11V	11" (285 mm)	5
12A	12" (304 mm)	5
12B	12" (304 mm)	5
12E	12" (304 mm)	5
12T	12" (304 mm)	5
12X	12" (295 mm)	5
13V	13" (342 mm)	5
14A	14" (356 mm)	5
14B	14" (356 mm)	5
14C	14" (356 mm)	5
14E	14" (356 mm)	5
14T	14" (356 mm)	5
16A	16" (415 mm)	5
16B	14" (415 mm)	5
16E	16" (404 mm)	5
16T	16" (385 mm)	5
17X	17" (430 mm)	5

HYBRID

INNOVATIVE DESIGN

- Latest Technology in OE
 - Exclusive Wear Indicator
- 11 SKUs**

AERODYNAMIC SPOILER COVER
MAXIMUM HIGH-SPEED PERFORMANCE

PRE-INSTALLED HOOK ADAPTER
QUICK AND EASY INSTALLATION

ADVANCED SYNTHETIC RUBBER
LONG LASTING,
ALL WEATHER DURABILITY

EXCLUSIVE WEAR INDICATOR
BUILT-IN REMINDER TO REPLACE WORN BLADES



Part No.	Length	Pack Qty.
14HB	14" (350 mm)	5
16HB	16" (400 mm)	5
17HB	17" (430 mm)	5
18HB	18" (450 mm)	5
19HB	19" (480 mm)	5
20HB	20" (500 mm)	5
21HB	21" (530 mm)	5
22HB	22" (550 mm)	5
24HB	24" (600 mm)	5
26HB	26" (650 mm)	5
28HB	28" (700 mm)	5

ARM TYPE



WINTER

WEATHER DEFENDER

- For Enhanced Driver Visibility
- Exclusive Winter Profile

11 SKUs

**PRE-INSTALLED
HOOK ADAPTER**
QUICK AND
EASY INSTALLATION

**OPTIMIZED SPOILER
DESIGN**
PREVENTS ICE AND
SNOW BUILD-UP

**EXCLUSIVE WINTER
RUBBER PROFILE**
OPTIMIZED PERFORMANCE
IN EXTREME SNOW AND
COLD CONDITIONS

**NATURAL RUBBER +
WINTER COATING**
LONGER LASTING,
EXTREME WINTER DURABILITY



Part No.	Length	Pack Qty.
W15	15" (380 mm)	5
W16	16" (400 mm)	5
W17	17" (425 mm)	5
W18	18" (450 mm)	5
W19	19" (475 mm)	5
W20	20" (500 mm)	5
W21	21" (530 mm)	5
W22	22" (550 mm)	5
W24	24" (600 mm)	5
W26	26" (650 mm)	5
W28	28" (700 mm)	5

ARM TYPE



9x3 mm & 9x4 mm

HEAVY DUTY

TOUGHNESS AND DURABILITY

- All-Metal, Conventional Blade
- Exclusive Wear Indicator

7 SKUs

PRE-INSTALLED
HOOK ADAPTER
QUICK AND
EASY INSTALLATION

ALL-METAL STRUCTURE
CORROSION RESISTANT +
EXTENDED DURABILITY

TEC3™ ADVANCED
RUBBER TECHNOLOGY
LONG LASTING, EXTREME
WEATHER DURABILITY

EXCLUSIVE
WEAR INDICATOR
BUILT-IN REMINDER TO
REPLACE WORN BLADES



Part No.	Length	Pack Qty.
18HD	18" (450 mm)	5
19HD	19" (475 mm)	5
20HD	20" (500 mm)	5
21HD	21" (530 mm)	5
22HD	22" (550 mm)	5
24HD	24" (600 mm)	5
26HD	26" (650 mm)	5

ARM TYPE



PART NUMBER EXPLANATION










TECHNOLOGY	EXPLANATION	EXAMPLE PN
TRADITIONAL	Length only	22
BEAM ORIGINAL	Length + OE	220E
BEAM ORIGINAL <i>Specific</i>	Length + Connector Code	19SL
BEAM HOOK	Length + HK	22HK
REAR	Length + Connector Code	14A
HYBRID	Length + HB	22HB
WINTER	W + Length	W22
HEAVY DUTY	Length + HD	22HD

BEAM ORIGINAL - Specifics



















CODE	CONNECTOR TYPE
SN	Side Lock Narrow
SL	Side Lock Specific
TB	Top Lock Push Button Narrow
G1	Top Lock Specific
G2	Top Lock Specific
G3	Top Lock Specific

REAR
























CODE	CONNECTOR TYPE
A	Roc Lock 2 
B	Roc Lock 3 
C	Slide Pinch 
D/E	Snap Claw 
T	Cross Pin 
V	V-Notch 
X	Top Lock Pinch 

WIPER BLADE LINE-UP SUMMARY









PART NUMBER		LENGTH		BLADE TECHNOLOGY	ARM TYPES	MAIN APPLICATIONS
SHORT CODE	SKU	INCHES	MM			
ULTIMATE Traditional						14 SKUs
11	604300	11"	275	Conventional	9x3 HOOK  9x4 HOOK  SIDE PIN 	Universal
13	604301	13"	325			Universal
14	604302	14"	350			Universal
15	604303	15"	375			Universal
16	604304	16"	400			Universal
17	604305	17"	425			Universal
18	604306	18"	450			Universal
19	604307	19"	475			Universal
20	604308	20"	500			Universal
21	604309	21"	525			Universal
22	604310	22"	550			Universal
24	604311	24"	600			Universal
26	604312	26"	650			Universal
28	604313	28"	700			Universal
ULTIMATE Beam Original						13 SKUs
150E	604400	15"	380	Beam	TL PINCH TAB  SIDE LOCK  TL PUSH BUTTON 	Chevrolet SS, Sonic, Pontiac G8 (PS)
160E	604401	16"	400			Chevrolet Spark, Ford Fiesta, Lincoln MKC (PS)
170E	604402	17"	430			Cadillac SRX, Chevrolet Equinox, GMC Terrain (PS)
180E	604403	18"	450			BMW 2-Series, 3-Series, 4-Series, VW Golf, GTI (PS)
190E	604404	19"	475			BMW 3-Series, VW CC, EOS, Jetta, Passat (PS)
200E	604405	20"	500			BMW 1-Series, Ford Escape (DS), Ford Mustang (PS)
210E	604406	21"	530			Audi TT (DS/PS), VS Passat (DS), Buick Enclave (PS)
220E	604407	22"	550			BMW 2-Series (DS), Chevrolet Silverado (DS/PS)
230E	604408	23"	580			BMW 5-Series, MB GL-Class, Toyota Tundra (PS)
240E	604409	24"	600			BMW 3-Series, 4-Series, 5-Series, X1, X5, X6 (DS)
250E	604410	25"	630			Buick Enclave, Ford Fiesta (DS), Honda Civic (PS)
260E	604411	26"	650			BMW X3, Chevrolet Sonic (DS), MB E-Class (DS/PS)
280E	604412	28"	700			Ford Escape, Focus, Fusion (DS/PS), MB GL-Class (DS)
ULTIMATE Beam Original - Specifics						16 SKUs
18SN	604413	18"	450	Beam	SIDE LOCK NARROW 	BMW 5-Series (F07/10) (PS)
18SL	604414	18"	450		SIDE LOCK SPECIFIC 	BMW 3-Series Coupe/Conv. (E92/93) (PS)
19TB	604415	19"	475		TL PUSH NARROW 	VW Jetta, Passat (PS)
19SL	604416	19"	475		SIDE LOCK SPECIFIC 	BMW 3-Series Sedan (E90/91) (PS)
20TB	604417	20"	500		TL PUSH NARROW 	Audi A4, A5, Q5 (PS)
21TB	604418	21"	530		TL PUSH NARROW 	Audi A6, A7, A8 (PS)
22G1	604419	22"	550		TOP LOCK SPECIFIC 	Audi A4, A6
22G2	604420	22"	550		TOP LOCK SPECIFIC 	MB C-Class (W203) (DS/PS)
22G3	604421	22"	550		TOP LOCK SPECIFIC 	Audi A6 (DS/PS)
23G1	604422	23"	575		TOP LOCK SPECIFIC 	Audi A4 Cabriolet (PS)
24SL	604423	24"	600		SIDE LOCK SPECIFIC 	BMW 3-Series (E90/91/92/93) - DS
24TB	604424	24"	600		TL PUSH 	Audi A4 Sedan/Avant, A5, Q5 - DS

WIPER BLADE LINE-UP SUMMARY

PART NUMBER		LENGTH		BLADE TECHNOLOGY	ARM TYPES	MAIN APPLICATIONS
SHORT CODE	SKU	INCHES	MM			
ULTIMATE Beam Original - Specifics (cont.)						
24G2	604425	24"	600	Beam	 TOP LOCK SPECIFIC	Audi A8 (2003-10) - DS/PS
26SN	604426	26"	650		 SIDE LOCK NARROW	BMW 5-Series (F07/F10) (DS)
26TB	604427	26"	650		 TL PUSH NARROW	Audi A6, A7 - DS
27TB	604428	27"	685		 TL PUSH NARROW	Audi A8 - DS
ULTIMATE Beam Hook						12 SKUs
14HK	604350	14"	350	Beam	9x3 HOOK 	Universal
15HK	604351	15"	380			Universal
16HK	604352	16"	400			Universal
17HK	604353	17"	430			Universal
18HK	604354	18"	450		9x4 HOOK 	Universal
19HK	604355	19"	475			Universal
20HK	604356	20"	500			Universal
21HK	604357	21"	530			Universal
22HK	604358	22"	550		SIDE PIN 	Universal
24HK	604359	24"	600			Universal
26HK	604360	26"	650			Universal
28HK	604361	28"	700			Universal
ULTIMATE Rear - Composite						12 SKUs
10D	604500	10"	254	Composite	 SNAP CLAW	Mini Cooper, Cooper Countryman
11A	604503	11"	292		 ROC LOCK 2	Hyundai Accent, Toyota Matrix, Prius V
12A	604507	12"	304		 ROC LOCK 2	Jeep Grand Cherokee, Toyota Highlander, Yaris
12B	604506	12"	304		 ROC LOCK 3	Acura MDX, Nissan Armada, Pathfinder, Xterra
12E	604504	12"	304		 SNAP CLAW	Cadillac Escalade, Chevrolet Tahoe, Nissan Rogue
14A	604514	14"	356		 ROC LOCK 2	Hyundai Accent, Sante Fe, Kia Rio, Lexus RX
14B	604513	14"	356		 ROC LOCK 3	Honda CR-V, Pilot, Infiniti EX, FX, Subaru Forester
14C	604510	14"	356		 SLIDE PINCH	Dodge Durango, Jeep Commander, Grand Cherokee
14E	604511	14"	356		 SNAP CLAW	BMW X3, Ford Edge, Nissan Quest, Volvo XC60, XC90
16A	604517	16"	415		 ROC LOCK 2	Lexus RX, Toyota Prius, Sienna
16B	604515	16"	415		 ROC LOCK 3	Honda Insight, Odyssey, Subaru Forester, Impreza
16E	604518	16"	404		 SNAP CLAW	Chrysler Town & Country, Dodge Grand Caravan
ULTIMATE Rear - Beam						7 SKUs
11V	604501	11"	285	Beam	 V-NOTCH	VW Passat
12T	604508	12"	289		 CROSS PIN	Ford Escape, Explorer, Mini Cooper Paceman
12X	604505	12"	295		 TOP LOCK PINCH	BMW X1, Mini Cooper
13V	604509	13"	342		 V-NOTCH	BMW X3, VW GTI, Tiguan, Touareg

WIPER BLADE LINE-UP SUMMARY



PART NUMBER		LENGTH		BLADE TECHNOLOGY	ARM TYPES	MAIN APPLICATIONS
SHORT CODE	SKU	INCHES	MM			
ULTIMATE Rear - Beam (cont.)						
14T	604512	14"	356	Beam	 CROSS PIN	BMW X5, VW Touareg, Volvo V70, XC70
16T	604516	16"	385		 CROSS PIN	Audi A4 Allroad, Volvo C30, XC60, XC90
17X	604519	17"	430		 TOP LOCK PINCH	Dodge Sprinter, Mercedes-Benz Sprinter
ULTIMATE Hybrid						11 SKUs
14HB	604450	14"	350	Hybrid	 9x3 HOOK	Honda Fit, Nissan Versa, Scion XD, Toyota Prius (PS)
16HB	604452	16"	400			Honda CR-V, Fit, Subaru Impreza, Toyota Corolla (PS)
17HB	604453	17"	430			Infiniti EX, Lexus LS, Nissan Altima, Maxima (PS)
18HB	604454	18"	450			Buick LaCrosse, Kia Optima, Lexus GS, Mini Cooper (PS)
19HB	604455	19"	480			Cadillac CTS, Honda Accord, Infiniti FX, Toyota Prius (PS)
20HB	604456	20"	500			Lexus GX, IS, Toyota 4Runner, Camry, Highlander (PS)
21HB	604457	21"	530			Chevrolet Camaro, Impala, Chrysler 300, Jaguar XK (PS)
22HB	604458	22"	550			Buick LaCrosse, Cadillac CTS, DTS (DS), Honda Civic (PS)
24HB	604459	24"	600			Chevrolet Camaro, Toyota 4Runner, Camry (DS)
26HB	604460	26"	650			Honda Accord, Honda Civic, CR-V, Lexus GS (DS)
28HB	604461	28"	700	Nissan Altima, Maxima, Toyota Prius (DS)		
ULTIMATE Winter						11 SKUs
W15	604550	15"	380	Beam	 9x3 HOOK	Universal
W16	604551	16"	400			Universal
W17	604552	17"	430			Universal
W18	604553	18"	450			Universal
W19	604554	19"	475			Universal
W20	604555	20"	500			Universal
W21	604556	21"	530			Universal
W22	604557	22"	550			Universal
W24	604558	24"	600			Universal
W26	604559	26"	650			Universal
W28	604560	28"	700	Universal		
ULTIMATE Heavy Duty						7 SKUs
18HD	604600	18	450	Conventional	 9x3 HOOK	Universal
19HD	604601	19	475			Universal
20HD	604602	20	500			Universal
21HD	604603	21	530			Universal
22HD	604604	22	550			Universal
24HD	604605	24	600			Universal
26HD	604606	26	650			Universal

WIPER BLADE SPECIFICATIONS

PART NUMBER		LENGTH		MIN ORDER QTY	SINGLE UNIT				PACK QTY				
SHORT CODE	SKU	IN	MM		EAN	H (in)	W (in)	L (in)	UCC	QTY	H (in)	W (in)	L (in)
ULTIMATE Traditional													14 SKUs
11	604300	11"	275	10	3276426043007	22.83	2.48	0.79	10804163156478	10	23.23	8.07	2.76
13	604301	13"	325	10	3276426043014	22.83	2.48	0.79	10804163156485	10	23.23	8.07	2.76
14	604302	14"	350	10	3276426043021	22.83	2.48	0.79	10804163156492	10	23.23	8.07	2.76
15	604303	15"	375	10	3276426043038	22.83	2.48	0.79	10804163156508	10	23.23	8.07	2.76
16	604304	16"	400	10	3276426043045	22.83	2.48	0.79	10804163156515	10	23.23	8.07	2.76
17	604305	17"	425	10	3276426043052	22.83	2.48	0.79	10804163156522	10	23.23	8.07	2.76
18	604306	18"	450	10	3276426043069	22.83	2.48	0.79	10804163156539	10	23.23	8.07	2.76
19	604307	19"	475	10	3276426043076	22.83	2.48	0.79	10804163156546	10	23.23	8.07	2.76
20	604308	20"	500	10	3276426043083	22.83	2.48	0.79	10804163156553	10	23.23	8.07	2.76
21	604309	21"	525	10	3276426043090	26.77	2.48	0.79	10804163156560	10	27.17	8.07	2.76
22	604310	22"	550	10	3276426043106	26.77	2.48	0.79	10804163156577	10	27.17	8.07	2.76
24	604311	24"	600	10	3276426043113	26.77	2.48	0.79	10804163156584	10	27.17	8.07	2.76
26	604312	26"	650	10	3276426043120	30.71	2.48	0.79	10804163156591	10	31.10	8.07	2.76
28	604313	28"	700	10	3276426043137	30.71	2.48	0.79	10804163156607	10	31.10	8.07	2.76
ULTIMATE Beam Original													13 SKUs
150E	604400	15"	380	5	3276426044004	20.00	2.56	0.79	50804163156841	5	22.52	4.76	2.64
160E	604401	16"	400	5	3276426044011	20.00	2.56	0.79	50804163156858	5	22.52	4.76	2.64
170E	604402	17"	430	5	3276426044028	20.00	2.56	0.79	50804163156865	5	22.52	4.76	2.64
180E	604403	18"	450	5	3276426044035	20.00	2.56	0.79	50804163156872	5	22.52	4.76	2.64
190E	604404	19"	475	5	3276426044042	20.00	2.56	0.79	50804163156889	5	22.52	4.76	2.64
200E	604405	20"	500	5	3276426044059	20.00	2.56	0.79	50804163156896	5	22.52	4.76	2.64
210E	604406	21"	530	5	3276426044066	24.00	2.56	0.79	50804163156902	5	26.38	4.76	2.64
220E	604407	22"	550	5	3276426044073	24.00	2.56	0.79	50804163156919	5	26.38	4.76	2.64
230E	604408	23"	580	5	3276426044080	24.00	2.56	0.79	50804163156926	5	26.38	4.76	2.64
240E	604409	24"	600	5	3276426044097	24.00	2.56	0.79	50804163156933	5	26.38	4.76	2.64
250E	604410	25"	630	5	3276426044103	28.00	2.56	0.79	50804163156940	5	30.35	4.76	2.64
260E	604411	26"	650	5	3276426044110	28.00	2.56	0.79	50804163156957	5	30.35	4.76	2.64
280E	604412	28"	700	5	3276426044127	28.00	2.56	0.79	50804163156964	5	30.35	4.76	2.64
ULTIMATE Beam Original - Specifics													16 SKUs
18SN	604413	18"	450	5	3276426044134	20.00	2.56	0.79	50804163157343	5	22.52	4.76	2.64
18SL	604414	18"	450	5	3276426044141	20.00	2.56	0.79	50804163157350	5	22.52	4.76	2.64
19TB	604415	19"	475	5	3276426044158	20.00	2.56	0.79	50804163157367	5	22.52	4.76	2.64
19SL	604416	19"	475	5	3276426044165	20.00	2.56	0.79	50804163157374	5	22.52	4.76	2.64
20TB	604417	20"	500	5	3276426044172	20.00	2.56	0.79	50804163157381	5	22.52	4.76	2.64
21TB	604418	21"	530	5	3276426044189	24.00	2.56	0.79	50804163157398	5	26.38	4.76	2.64
22G1	604419	22"	550	5	3276426044196	24.00	2.56	0.79	50804163157404	5	26.38	4.76	2.64
22G2	604420	22"	550	5	3276426044202	24.00	2.56	0.79	50804163157411	5	26.38	4.76	2.64
22G3	604421	22"	550	5	3276426044219	24.00	2.56	0.79	50804163157428	5	26.38	4.76	2.64
23G1	604422	23"	575	5	3276426044226	24.00	2.56	0.79	50804163157435	5	26.38	4.76	2.64
24SL	604423	24"	600	5	3276426044233	24.00	2.56	0.79	50804163157442	5	26.38	4.76	2.64
24TB	604424	24"	600	5	3276426044240	24.00	2.56	0.79	50804163157459	5	26.38	4.76	2.64
24G2	604425	24"	600	5	3276426044257	24.00	2.56	0.79	50804163157466	5	26.38	4.76	2.64
26SN	604426	26"	650	5	3276426044264	28.00	2.56	0.79	50804163157473	5	30.35	4.76	2.64
26TB	604427	26"	650	5	3276426044271	28.00	2.56	0.79	50804163157480	5	30.35	4.76	2.64
27TB	604428	27"	685	5	3276426044288	28.00	2.56	0.79	50804163157497	5	30.35	4.76	2.64
ULTIMATE Beam Hook													12 SKUs
14HK	604350	14"	350	5	3276426043502	20.00	2.56	0.79	10804163156614	5	22.24	4.76	4.37
15HK	604351	15"	380	5	3276426043519	20.00	2.56	0.79	10804163156621	5	22.24	4.76	4.37
16HK	604352	16"	400	5	3276426043526	20.00	2.56	0.79	10804163156638	5	22.24	4.76	4.37
17HK	604353	17"	430	5	3276426043533	20.00	2.56	0.79	10804163156645	5	22.24	4.76	4.37
18HK	604354	18"	450	5	3276426043540	20.00	2.56	0.79	10804163156652	5	22.24	4.76	4.37
19HK	604355	19"	475	5	3276426043557	20.00	2.56	0.79	10804163156669	5	22.24	4.76	4.37
20HK	604356	20"	500	5	3276426043564	20.00	2.56	0.79	10804163156676	5	22.24	4.76	4.37
21HK	604357	21"	530	5	3276426043571	24.00	2.56	0.79	10804163156683	5	26.18	4.76	4.37
22HK	604358	22"	550	5	3276426043588	24.00	2.56	0.79	10804163156690	5	26.18	4.76	4.37
24HK	604359	24"	600	5	3276426043595	24.00	2.56	0.79	10804163156706	5	26.18	4.76	4.37
26HK	604360	26"	650	5	3276426043601	28.00	2.56	0.79	10804163156713	5	30.12	4.76	4.37
28HK	604361	28"	700	5	3276426043618	28.00	2.56	0.79	10804163156720	5	30.12	4.76	4.37

WIPER BLADE SPECIFICATIONS



PART NUMBER		LENGTH		MIN	SINGLE UNIT				PACK QTY				
SHORT CODE	SKU	IN	MM	ORDER QTY	EAN	H (in)	W (in)	L (in)	UCC	QTY	H (in)	W (in)	L (in)
ULTIMATE Rear - Composite													12 SKUs
10D	604500	10"	254	5	3276426045001	17.00	2.56	0.79	50804163156971	5	19.76	4.53	2.64
11A	604503	11"	292	5	3276426045032	17.00	2.56	0.79	50804163156995	5	19.76	4.53	2.64
12A	604507	12"	304	5	3276426045070	17.00	2.56	0.79	50804163157039	5	19.76	4.53	2.64
12B	604506	12"	304	5	3276426045063	17.00	2.56	0.79	50804163157022	5	19.76	4.53	2.64
12E	604504	12"	304	5	3276426045049	17.00	2.56	0.79	50804163157008	5	19.76	4.53	2.64
14A	604514	14"	356	5	3276426045148	17.00	2.56	0.79	50804163157107	5	19.76	4.53	2.64
14B	604513	14"	356	5	3276426045131	17.00	2.56	0.79	50804163157091	5	19.76	4.53	2.64
14C	604510	14"	356	5	3276426045100	17.00	2.56	0.79	50804163157060	5	19.76	4.53	2.64
14E	604511	14"	356	5	3276426045117	17.00	2.56	0.79	50804163157077	5	19.76	4.53	2.64
16A	604517	16"	415	5	3276426045179	17.00	2.56	0.79	50804163157138	5	19.76	4.53	2.64
16B	604515	16"	415	5	3276426045155	17.00	2.56	0.79	50804163157114	5	19.76	4.53	2.64
16E	604518	16"	404	5	3276426045186	17.00	2.56	0.79	50804163157145	5	19.76	4.53	2.64
ULTIMATE Rear - Beam													7 SKUs
11V	604501	11"	285	5	3276426045018	17.00	2.56	0.79	50804163156988	5	19.76	4.53	2.64
12T	604508	12"	289	5	3276426045087	17.00	2.56	0.79	50804163157046	5	19.76	4.53	2.64
12X	604505	12"	295	5	3276426045056	17.00	2.56	0.79	50804163157015	5	19.76	4.53	2.64
13V	604509	13"	342	5	3276426045094	17.00	2.56	0.79	50804163157053	5	19.76	4.53	2.64
14T	604512	14"	356	5	3276426045124	17.00	2.56	0.79	50804163157084	5	19.76	4.53	2.64
16T	604516	16"	385	5	3276426045162	17.00	2.56	0.79	50804163157121	5	19.76	4.53	2.64
17X	604519	17"	430	5	3276426045193	17.00	2.56	0.79	50804163157152	5	19.76	4.53	2.64
ULTIMATE Hybrid													11 SKUs
14HB	604450	14"	350	5	3276426044509	20.00	2.56	0.79	10804163156737	5	22.24	4.76	4.37
16HB	604452	16"	400	5	3276426044523	20.00	2.56	0.79	10804163156744	5	22.24	4.76	4.37
17HB	604453	17"	430	5	3276426044530	20.00	2.56	0.79	10804163156751	5	22.24	4.76	4.37
18HB	604454	18"	450	5	3276426044547	20.00	2.56	0.79	10804163156768	5	22.24	4.76	4.37
19HB	604455	19"	480	5	3276426044554	20.00	2.56	0.79	10804163156775	5	22.24	4.76	4.37
20HB	604456	20"	500	5	3276426044561	20.00	2.56	0.79	10804163156782	5	22.24	4.76	4.37
21HB	604457	21"	530	5	3276426044578	24.00	2.56	0.79	10804163156799	5	26.18	4.76	4.37
22HB	604458	22"	550	5	3276426044585	24.00	2.56	0.79	10804163156805	5	26.18	4.76	4.37
24HB	604459	24"	600	5	3276426044592	24.00	2.56	0.79	10804163156812	5	26.18	4.76	4.37
26HB	604460	26"	650	5	3276426044608	28.00	2.56	0.79	10804163156829	5	30.12	4.76	4.37
28HB	604461	28"	700	5	3276426044615	28.00	2.56	0.79	10804163156836	5	30.12	4.76	4.37

WIPER BLADE SPECIFICATIONS

PART NUMBER		LENGTH		MIN ORDER QTY	SINGLE UNIT				PACK QTY					
SHORT CODE	SKU	IN	MM		EAN	H (in)	W (in)	L (in)	UCC	QTY	H (in)	W (in)	L (in)	
ULTIMATE Winter												11 SKUs		
W15	604550	15"	380	5	3276426045506	24.00	2.56	0.79	50804163157169	5	26.38	4.76	2.64	
W16	604551	16"	400	5	3276426045513	24.00	2.56	0.79	50804163157176	5	26.38	4.76	2.64	
W17	604552	17"	430	5	3276426045520	24.00	2.56	0.79	50804163157183	5	26.38	4.76	2.64	
W18	604553	18"	450	5	3276426045537	24.00	2.56	0.79	50804163157190	5	26.38	4.76	2.64	
W19	604554	19"	475	5	3276426045544	24.00	2.56	0.79	50804163157206	5	26.38	4.76	2.64	
W20	604555	20"	500	5	3276426045551	24.00	2.56	0.79	50804163157213	5	26.38	4.76	2.64	
W21	604556	21"	530	5	3276426045568	24.00	2.56	0.79	50804163157220	5	26.38	4.76	2.64	
W22	604557	22"	550	5	3276426045575	24.00	2.56	0.79	50804163157237	5	26.38	4.76	2.64	
W24	604558	24"	600	5	3276426045582	24.00	2.56	0.79	50804163157244	5	26.38	4.76	2.64	
W26	604559	26"	650	5	3276426045599	28.00	2.56	0.79	50804163157251	5	30.35	4.76	2.64	
W28	604560	28"	700	5	3276426045605	28.00	2.56	0.79	50804163157268	5	30.35	4.76	2.64	
ULTIMATE Heavy Duty												7 SKUs		
18HD	604600	18	450	5	3276426046008	28.00	2.56	0.79	50804163157275	5	30.31	5.71	2.80	
19HD	604601	19	475	5	3276426046015	28.00	2.56	0.79	50804163157282	5	30.31	5.71	2.80	
20HD	604602	20	500	5	3276426046022	28.00	2.56	0.79	50804163157299	5	30.31	5.71	2.80	
21HD	604603	21	530	5	3276426046039	28.00	2.56	0.79	50804163157305	5	30.31	5.71	2.80	
22HD	604604	22	550	5	3276426046046	28.00	2.56	0.79	50804163157312	5	30.31	5.71	2.80	
24HD	604605	24	600	5	3276426046053	28.00	2.56	0.79	50804163157329	5	30.31	5.71	2.80	
26HD	604606	26	650	5	3276426046060	28.00	2.56	0.79	50804163157336	5	30.31	5.71	2.80	



ULTIMATE®

APPLICATION GUIDE PASSENGER CAR & LIGHT TRUCKS



IMPORTANT NOTICE: In preparation for this catalog, every effort has been made to obtain accurate and complete information at the time of printing. Valeo Service assumes no responsibility or liability for any errors or omissions contained in this catalog. All references to the original manufacturer trade names and part numbers are for identification purposes only.

APPLICATION GUIDE PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Conventional	Beam	Rear	Specialty		
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER
AM GENERAL							
Hummer							
2001-1992	Driver	11					
	Passenger	11					
ACURA							
CL							
2003-2001, 1999-1997	Driver	24		24HK			W24
	Passenger	19		19HK			W19
CSX							
2011-2008	Driver	26		26HK		26HB	W26
	Passenger	22		22HK		22HB	W22
EL							
2005-2001	Driver	21		21HK			W21
	Passenger	19		19HK			W19
2000-1999	Driver	20		20HK			W20
	Passenger	18		18HK			W18
1998-1997	Driver	20		20HK			W20
	Passenger	18		18HK			W18
	Rear	15		15HK			W15
ILX							
2015-2013	Driver	26		26HK		26HB	W26
	Passenger	19		19HK		19HB	W19
Integra							
2001-1994	Driver	22		22HK			W22
	Passenger	18		18HK			W18
	Rear	19		19HK			W19
1993-1990	Driver	20		20HK			W20
	Passenger	19		19HK			W19
	Rear	19		19HK			W19
1989-1986	Driver	19		19HK			W19
	Passenger	19		19HK			W19
	Rear	18		18HK			W18
Legend							
1995-1991	Driver	22		22HK			W22
	Passenger	19		19HK			W19
1990-1986	Driver	20		20HK			W20
	Passenger	19		19HK			W19
MDX							
2015-2014	Driver	26		26HK		26HB	W26
	Passenger	21		21HK		21HB	W21
	Rear				14B		
2013-2007	Driver	26		26HK			W26
	Passenger	21		21HK			W21
	Rear				12B		
2006-2001	Driver	24		24HK			W24
	Passenger	21		21HK			W21
NSX							
2005-1991	Driver	22		22HK			W22
	Passenger	21		21HK			W21
RDX							
2015-2007	Driver	26		26HK		26HB	W26
	Passenger	16		16HK		16HB	W16
	Rear				14B		
RL							
2004-1996	Driver	22		22HK			W22
	Passenger	19		19HK			W19

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Conventional						Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER		
ACURA (cont.)									
RLX									
2015-2014	Driver	26		26HK				W26	
	Passenger	20		20HK				W20	
RSX									
2006-2002	Driver	24		24HK				W24	
	Passenger	20		20HK				W20	
	Rear	20		20HK				W20	
SLX									
1999-1996	Driver	20		20HK				W20	
	Passenger	20		20HK				W20	
	Rear	15		15HK				W15	
TL									
2014-2004	Driver	26		26HK				W26	
	Passenger	19		19HK				W19	
2003-1995	Driver	24		24HK				W24	
	Passenger	19		19HK				W19	
TSX									
2014-2011	Driver	24		24HK		24HB		W24	
	Passenger	22		22HK		22HB		W22	
	Rear				12B				
2010-2009	Driver	24		24HK		24HB		W24	
	Passenger	22		22HK		22HB		W22	
2008-2004	Driver	26		26HK				W26	
	Passenger	16		16HK				W16	
Vigor									
1994-1992	Driver	24		24HK				W24	
	Passenger	19		19HK				W19	
ZDX									
2013-2010	Driver	26		26HK		26HB		W26	
	Passenger	19		19HK		19HB		W19	
ALFA ROMEO									
164									
1995-1991	Driver	21		21HK				W21	
	Passenger	21		21HK				W21	
Alfetta									
1977-1975	Driver	13							
	Passenger	13							
GTV-6									
1986-1981	Driver	18		18HK				W18	
	Passenger	18		18HK				W18	
Milano									
1989-1987	Driver	18		18HK				W18	
	Passenger	18		18HK				W18	
Spider									
1994-1971	Driver	16		16HK				W16	
	Passenger	16		16HK				W16	
1970	Driver	13							
	Passenger	13							
AMERICAN MOTORS									
Eagle									
1988-1980	Rear	16		16HK					
Pacer									
1980-1975	Driver	18		18HK					
	Passenger	18		18HK					
	Rear	16		16HK					

APPLICATION GUIDE PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Conventional	Beam	Rear	Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID
ASTON MARTIN						
DB7						
2004-2000, 1998-1997	Driver	21				
	Passenger	13				
DB9						
2014-2012	Driver		260E			
	Passenger		200E			
2011-2005	Driver	24		24HK		W24
	Passenger	20		20HK		W20
DBS						
2012	Driver		260E			
	Passenger		200E			
2011-2008	Driver	24		24HK		W24
	Passenger	20		20HK		W20
Rapide						
2014-2012	Driver		260E			
	Passenger		200E			
2011	Driver	24		24HK		W24
	Passenger	20		20HK		W20
V12 Vantage						
2014-2012	Driver		260E			
	Passenger		200E			
2011-2010	Driver	24		24HK		W24
	Passenger	20		20HK		W20
V8 Vantage						
2014-2012	Driver		260E			
	Passenger		200E			
2011-2006	Driver	24		24HK		W24
	Passenger	20		20HK		W20
Vanquish						
2006	Driver	21		21HK		W21
	Passenger	21		21HK		W21
ASUNA						
GT						
1993	Driver	18		18HK		W18
	Passenger	18		18HK		W18
Sunfire						
1993	Driver	22		22HK		W22
	Passenger	20		20HK		W20
Sunrunner						
1993-1992	Driver	17		17HK		W17
	Passenger	17		17HK		W17
AUDI						
100						
1994-1992	Driver	22		22HK		W22
	Passenger	22		22HK		W22
	Rear	18		18HK		W18
1991-1989	Driver	21		21HK		W21
	Passenger	21		21HK		W21
	Rear	21		21HK		W21
100 Quattro						
1994-1992	Driver	22		22HK		W22
	Passenger	22		22HK		W22
	Rear	18		18HK		W18

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Conventional	Beam		Rear	Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER
AUDI (cont.)							
100 Quattro (cont.)							
1991-1989	Driver	21		21HK			W21
	Passenger	21		21HK			W21
	Rear	21		21HK			W21
100 Series							
1977-1969	Driver	16		16HK			W16
	Passenger	16		16HK			W16
200							
1991-1989	Driver	21		21HK			W21
	Passenger	21		21HK			W21
	Rear	21		21HK			W21
200 Quattro							
1991-1989	Driver	21		21HK			W21
	Passenger	21		21HK			W21
	Rear	21		21HK			W21
4000							
1987-1985	Driver	21		21HK			W21
	Passenger	21		21HK			W21
	Rear	18		18HK			W18
1984-1980	Driver	18		18HK			W18
	Passenger	18		18HK			W18
	Rear	18		18HK			W18
4000 Quattro							
1987-1985	Driver	21		21HK			W21
	Passenger	21		21HK			W21
	Rear	18		18HK			W18
1984	Driver	18		18HK			W18
	Passenger	18		18HK			W18
	Rear	18		18HK			W18
5000							
1988-1984	Driver	21		21HK			W21
	Passenger	21		21HK			W21
	Rear	21		21HK			W21
1983-1978	Driver	18		18HK			W18
	Passenger	18		18HK			W18
5000 Quattro							
1988-1986	Driver	21		21HK			W21
	Passenger	21		21HK			W21
	Rear	21		21HK			W21
80							
1992-1988	Driver	21		21HK			W21
	Passenger	21		21HK			W21
80 Quattro							
1992-1988	Driver	21		21HK			W21
	Passenger	21		21HK			W21
90							
1995-1993, 1991-1988	Driver	21		21HK			W21
	Passenger	21		21HK			W21
90 Quattro							
1995-1988	Driver	21		21HK			W21
	Passenger	21		21HK			W21
A3							
2015-2014	Driver		26TB				
	Passenger		19TB				

APPLICATION GUIDE PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Conventional					
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER
AUDI (cont.)							
A3 (cont.)							
2013-2005	Driver		240E				
	Passenger		190E				
2002-1998	Driver	21		21HK			W21
	Passenger	19		19HK			W19
	Rear	15		15HK			W15
A3 Quattro							
2015	Driver		26TB				
	Passenger		19TB				
2013-2006	Driver		240E				
	Passenger		190E				
A4							
2014-2009	Driver		24TB				
	Passenger		20TB				
2008-2005	Driver		22G1				
	Passenger		22G1				
2004	Driver		22G1				
	Passenger		22G1				
	Rear	15		15HK			W15
2003-2002	Rear	15		15HK			W15
2001-1996	Driver	21		21HK			W21
	Passenger	20		20HK			W20
	Rear	15		15HK			W15
A4 Cabrio							
2005-2003	Driver		22G1				
	Passenger		23G1				
A4 Cabrio Elite							
2008-2007	Driver		22G1				
	Passenger		23G1				
A4 Cabrio S Line							
2008-2007	Driver		22G1				
	Passenger		23G1				
A4 Cabriolet							
2009	Driver		22G1				
	Passenger		20TB				
2008-2003	Driver		22G1				
	Passenger		23G1				
A4 Quattro							
2014-2009	Driver		24TB				
	Passenger		20TB				
2008-2005	Driver		22G1				
	Passenger		22G1				
2004	Driver		22G1				
	Passenger		22G1				
	Rear	15		15HK			W15
2003-2002	Rear	15		15HK			W15
2001-1996	Driver	21		21HK			W21
	Passenger	20		20HK			W20
	Rear	15		15HK			W15
A4 allroad							
2014-2013	Driver		24TB				
	Passenger		20TB				
	Rear				16T		

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Specialty					
		Conventional	Beam		Rear	HYBRID	WINTER
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC		
AUDI (cont.)							
A5							
2014-2008	Driver		24TB				
	Passenger		20TB				
A5 Quattro							
2014-2008	Driver		24TB				
	Passenger		20TB				
A6							
2014-2011	Driver		26TB				
	Passenger		21TB				
2010-2006	Driver		22G3				
	Passenger		22G3				
	Rear	15		15HK			W15
2005-2002	Driver		22G1				
	Passenger		22G1				
	Rear	15		15HK			W15
2001-1999	Driver	22		22HK			W22
	Passenger	22		22HK			W22
	Rear	15		15HK			W15
1998-1995	Driver	22		22HK			W22
	Passenger	22		22HK			W22
	Rear	18		18HK			W18
A6 Quattro							
2014-2011	Driver		26TB				
	Passenger		21TB				
2010-2006	Driver		22G3				
	Passenger		22G3				
	Rear	15		15HK			W15
2005-2002	Driver		22G1				
	Passenger		22G1				
	Rear	15		15HK			W15
2001-1999	Driver	22		22HK			W22
	Passenger	22		22HK			W22
	Rear	15		15HK			W15
1998-1995	Driver	22		22HK			W22
	Passenger	22		22HK			W22
	Rear	18		18HK			W18
A7 Quattro							
2015-2012	Driver		26TB				
	Passenger		21TB				
A8							
2015	Driver		27TB				
	Passenger		21TB				
2000-1997	Driver	22		22HK			W22
	Passenger	22		22HK			W22
A8 Quattro							
2015-2011	Driver		27TB				
	Passenger		21TB				
2010-2003	Driver		24G2				
	Passenger		24G2				
2002-1997	Driver	22		22HK			W22
	Passenger	22		22HK			W22
Allroad Quattro							
2005-2004	Driver		22G1				
	Passenger		22G1				
	Rear	15		15HK			W15

APPLICATION GUIDE PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Conventional	Beam		Rear	Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER
AUDI (cont.)							
Allroad Quattro (cont.)							
2003-2001	Driver	22		22HK			W22
	Passenger	21		21HK			W21
	Rear	15		15HK			W15
Cabriolet							
1998-1994	Driver	22		22HK			W22
	Passenger	22		22HK			W22
Coupe							
1987-1985	Driver	21		21HK			W21
	Passenger	21		21HK			W21
1984-1981	Driver	18		18HK			W18
	Passenger	18		18HK			W18
	Rear	18		18HK			W18
Coupe Quattro							
1991	Driver	21		21HK			W21
	Passenger	21		21HK			W21
1990	Driver	21		21HK			W21
	Passenger	22		22HK			W21
Fox							
1979-1973	Driver	16		16HK			W16
	Passenger	16		16HK			W16
	Rear	16		16HK			W16
Q5							
2015-2009	Driver		24TB				
	Passenger		20TB				
Q7							
2014-2007	Driver		260E				
	Passenger		260E				
Quattro							
1986-1984	Driver	21		21HK			W21
	Passenger	21		21HK			W21
	Rear	18		18HK			W18
1983	Driver	18		18HK			W18
	Passenger	18		18HK			W18
	Rear	18		18HK			W18
RS4							
2008-2007	Driver		22G1				
	Passenger		22G1				
RS4 Cabriolet							
2008	Driver		22G1				
	Passenger		23G1				
RS5							
2014-2013, 2011	Driver		24TB				
	Passenger		20TB				
RS7							
2015-2014	Driver		26TB				
	Passenger		21TB				
S3							
2015	Driver		26TB				
	Passenger		19TB				
S4							
2014-2009	Driver		24TB				
	Passenger		20TB				
2008-2004	Driver		22G1				
	Passenger		22G1				

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Specialty					
		Conventional	Beam		Rear	HYBRID	WINTER
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC		
AUDI (cont.)							
S4 (cont.)							
2002-2001	Driver	21		21HK			W21
	Passenger	20		20HK			W20
	Rear	15		15HK			W15
2000	Driver	21		21HK			W21
	Passenger	20		20HK			W20
1994-1992	Driver	22		22HK			W22
	Passenger	22		22HK			W22
S4 Cabriolet							
2008-2004	Driver		22G1				
	Passenger		23G1				
S5							
2014-2008	Driver		24TB				
	Passenger		20TB				
S6							
2014-2013	Driver		26TB				
	Passenger		21TB				
2011-2007	Driver		22G3				
	Passenger		22G3				
2004	Driver		22G1				
	Passenger		22G1				
2003-2002	Driver		22G1				
	Passenger		22G1				
	Rear	15		15HK			W15
2001, 1997-1995	Driver	22		22HK			W22
	Passenger	22		22HK			W22
S7							
2015-2013	Driver		26TB				
	Passenger		21TB				
S8							
2015-2013	Driver		27TB				
	Passenger		21TB				
2010-2007, 2003	Driver		24G2				
	Passenger		24G2				
2002-2001	Driver	22		22HK			W22
	Passenger	22		22HK			W22
SQ5							
2015-2014	Driver		24TB				
	Passenger		20TB				
Super 90							
1972-1969	Driver	16		16HK			W16
	Passenger	16		16HK			W16
TT							
2014-2008	Driver		220E				
	Passenger		210E				
2007-2004	Driver		210E				
	Passenger		210E				
2003-1999	Driver	21		21HK			W21
	Passenger	20		20HK			W20
TT Quattro							
2015-2008	Driver		220E				
	Passenger		210E				
2007-2004	Driver		210E				
	Passenger		210E				

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Conventional	Beam	Rear	Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID
AUDI (cont.)						
TT Quattro (cont.)						
2003-2000	Driver	21		21HK		W21
	Passenger	20		20HK		W20
V8 Quattro						
1994-1993	Driver	22		22HK		W22
	Passenger	22		22HK		W22
1992-1990	Driver	21		21HK		W21
	Passenger	21		21HK		W21
allroad						
2015-2013	Driver		24TB			
	Passenger		20TB			
BMW						
1 Series M						
2011	Driver		200E			
	Passenger		200E			
118i						
2013-2012	Driver		200E			
	Passenger		200E			
120i						
2012-2008	Driver		200E			
	Passenger		200E			
125i						
2013-2012, 2010-2009	Driver		200E			
	Passenger		200E			
128i						
2013-2008	Driver		200E			
	Passenger		200E			
130i						
2010-2008	Driver		200E			
	Passenger		200E			
135i						
2013-2008	Driver		200E			
	Passenger		200E			
135is						
2013	Driver		200E			
	Passenger		200E			
220i						
2014	Driver		220E			
	Passenger		180E			
228i						
2014	Driver		220E			
	Passenger		180E			
235i						
2014	Driver		220E			
	Passenger		180E			
3.0Si						
1976-1975	Driver	16		16HK		
	Passenger	16		16HK		
318i						
1999	Driver	21		21HK		W21
	Passenger	20				W20
1991, 1985- 1984	Driver	20		20HK		W20
	Passenger	20		20HK		W20

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Conventional		Beam		Rear		Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER		
BMW (cont.)									
318i Convertible E36									
1998-1996	Driver	21		21HK					W21
	Passenger	20		20HK					W20
1995-1994, 1992	Driver	22		22HK					W22
	Passenger	20		20HK					W20
318i Sedan E36									
1999	Passenger			20HK					
1998-1992	Driver	21		21HK					W21
	Passenger	20		20HK					W20
318is									
1999	Driver	21		21HK					W21
	Passenger	20							W20
1991	Driver	20		20HK					W20
	Passenger	20		20HK					W20
318is Coupe E36									
1999	Passenger			20HK					
1998-1992	Driver	21		21HK					W21
	Passenger	20		20HK					W20
318ti Hatchback E36									
1999-1996	Driver	21		21HK					W21
	Passenger	20		20HK					W20
1995	Driver	20		20HK					W20
	Passenger	20		20HK					W20
320i									
1983-1980	Driver	18		18HK					W18
	Passenger	18		18HK					W18
320i E46									
2005-2001	Driver	22		22HK					W22
	Passenger	20		20HK					W20
320i Sedan E36									
1995-1992	Driver	21		21HK					W21
	Passenger	20		20HK					W20
320i Sedan F30									
2014-2012	Driver		240E						
	Passenger		190E						
320i xDrive Sedan F30									
2014-2013	Driver		240E						
	Passenger		190E						
323Ci E46									
2000	Driver	22		22HK					W22
	Passenger	20		20HK					W20
323i									
2009-2006	Driver		24SL						
	Passenger		19SL						
323i Convertible E36									
1998	Driver	21		21HK					W21
	Passenger	20		20HK					W20
323i E46									
2000-1999	Driver	22		22HK					W22
	Passenger	20		20HK					W20
323i Sedan E90									
2011-2010	Driver		240E						
	Passenger		190E						

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Conventional		Beam		Rear		Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER		
BMW (cont.)									
323is Coupe E36									
1998	Driver	21		21HK				W21	
	Passenger	20		20HK				W20	
325									
1988-1986	Driver	20		20HK				W20	
	Passenger	20		20HK				W20	
325Ci									
2006	Driver		24SL						
	Passenger		19SL						
325Ci E46									
2005-2001	Driver	22		22HK				W22	
	Passenger	20		20HK				W20	
325e									
1987-1984	Driver	20		20HK				W20	
	Passenger	20		20HK				W20	
325es									
1987-1986	Driver	20		20HK				W20	
	Passenger	20		20HK				W20	
325i									
2009-2006	Driver		24SL						
	Passenger		19SL						
1991-1987	Driver	20		20HK				W20	
	Passenger	20		20HK				W20	
325i Convertible E36									
1995-1992	Driver	22		22HK				W22	
	Passenger	20		20HK				W20	
325i E46									
2005-2001	Driver	22		22HK				W22	
	Passenger	20		20HK				W20	
325i Sedan E36									
1995-1992	Driver	21		21HK				W21	
	Passenger	20		20HK				W20	
325iX									
1991-1988	Driver	20		20HK				W20	
	Passenger	20		20HK				W20	
325is									
1991-1987	Driver	20		20HK				W20	
	Passenger	20		20HK				W20	
325is Coupe E36									
1995-1992	Driver	21		21HK				W21	
	Passenger	20		20HK				W20	
325xi									
2006	Driver		24SL						
	Passenger		19SL						
325xi E46									
2005-2001	Driver	22		22HK				W22	
	Passenger	20		20HK				W20	
328Ci E46									
2000	Driver	22		22HK				W22	
	Passenger	20		20HK				W20	
328d Sedan F30									
2014	Driver		240E						
	Passenger		190E						

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Conventional	Beam		Rear	Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER
BMW (cont.)							
328d xDrive Sedan F30							
2014	Driver		240E				
	Passenger		190E				
328d xDrive Sedan F31							
2014	Driver		240E				
	Passenger		190E				
328d xDrive Wagon F30							
2014	Driver		240E				
	Passenger		190E				
328d xDrive Wagon F31							
2014	Driver		240E				
	Passenger		190E				
328i							
2009-2007	Driver		24SL				
	Passenger		19SL				
328i Convertible E36							
1998-1996	Driver	21		21HK			W21
	Passenger	20		20HK			W20
328i Convertible E92							
2011-2010	Driver		240E				
	Passenger		190E				
328i Convertible E93							
2011-2010	Driver		240E				
	Passenger		190E				
328i Convertible F30							
2013-2012	Driver		240E				
	Passenger		180E				
328i Coupe E92							
2011-2010	Driver		240E				
	Passenger		190E				
328i Coupe E93							
2011-2010	Driver		240E				
	Passenger		190E				
328i Coupe F30							
2013-2012	Driver		240E				
	Passenger		180E				
328i E46							
2000-1999	Driver	22		22HK			W22
	Passenger	20		20HK			W20
328i E92							
2009-2007	Driver		24SL				
	Passenger		18SL				
328i E93							
2009-2007	Driver		24SL				
	Passenger		18SL				
328i GT xDrive Hatchback F34							
2014	Driver		240E				
	Passenger		190E				
328i Sedan E36							
1998-1996	Driver	21		21HK			W21
	Passenger	20		20HK			W20
328i Sedan E90							
2011-2010	Driver		240E				
	Passenger		190E				

APPLICATION GUIDE PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Conventional	Beam	Rear	Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID
BMW (cont.)						
328i Sedan E91						
2011-2010	Driver		240E			
	Passenger		190E			
328i Sedan F30						
2014-2012	Driver		240E			
	Passenger		190E			
328i Wagon E90						
2011-2010	Driver		240E			
	Passenger		190E			
328i Wagon E91						
2011-2010	Driver		240E			
	Passenger		190E			
328i Wagon F30						
2012	Driver		240E			
	Passenger		190E			
328i xDrive						
2009	Driver		24SL			
	Passenger		19SL			
328i xDrive Coupe E92						
2011-2010	Driver		240E			
	Passenger		190E			
328i xDrive Coupe F30						
2013	Driver		240E			
	Passenger		180E			
328i xDrive E92						
2009	Driver		24SL			
	Passenger		18SL			
328i xDrive Sedan E90						
2011-2010	Driver		240E			
	Passenger		190E			
328i xDrive Sedan E91						
2011-2010	Driver		240E			
	Passenger		190E			
328i xDrive Sedan F30						
2014-2013	Driver		240E			
	Passenger		190E			
328i xDrive Sedan F31						
2014	Driver		240E			
	Passenger		190E			
328i xDrive Wagon E90						
2011-2010	Driver		240E			
	Passenger		190E			
328i xDrive Wagon E91						
2011-2010	Driver		240E			
	Passenger		190E			
328i xDrive Wagon F30						
2014	Driver		240E			
	Passenger		190E			
328i xDrive Wagon F31						
2014	Driver		240E			
	Passenger		190E			
328is Coupe E36						
1998-1996	Driver	21		21HK		W21
	Passenger	20		20HK		W20

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Conventional	Beam		Rear	Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER
BMW (cont.)							
328xi							
2008-2007	Driver		24SL				
	Passenger		19SL				
328xi E92							
2008-2007	Driver		24SL				
	Passenger		18SL				
330Ci							
2006	Driver		24SL				
	Passenger		19SL				
330Ci E46							
2005-2001	Driver	22		22HK			W22
	Passenger	20		20HK			W20
330i							
2007-2006	Driver		24SL				
	Passenger		19SL				
330i E46							
2005-2001	Driver	22		22HK			W22
	Passenger	20		20HK			W20
330xi							
2006	Driver		24SL				
	Passenger		19SL				
330xi E46							
2005-2001	Driver	22		22HK			W22
	Passenger	20		20HK			W20
335d							
2009	Driver		24SL				
	Passenger		19SL				
335d Sedan E90							
2011-2010	Driver		240E				
	Passenger		190E				
335i							
2009-2007	Driver		24SL				
	Passenger		19SL				
335i Convertible E92							
2011-2010	Driver		240E				
	Passenger		190E				
335i Convertible E93							
2011-2010	Driver		240E				
	Passenger		190E				
335i Convertible F30							
2013-2012	Driver		240E				
	Passenger		180E				
335i Coupe E92							
2011-2010	Driver		240E				
	Passenger		190E				
335i Coupe E93							
2011-2010	Driver		240E				
	Passenger		190E				
335i Coupe F30							
2013-2012	Driver		240E				
	Passenger		180E				
335i E92							
2009-2007	Driver		24SL				
	Passenger		18SL				

APPLICATION GUIDE PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Conventional					
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	SPECIALTY
BMW (cont.)							
335i E93							
2009-2007	Driver		24SL				
	Passenger		18SL				
335i GT xDrive Hatchback F34							
2014	Driver		240E				
	Passenger		190E				
335i Sedan E90							
2011-2010	Driver		240E				
	Passenger		190E				
335i Sedan F30							
2014-2012	Driver		240E				
	Passenger		190E				
335i xDrive							
2009	Driver		24SL				
	Passenger		19SL				
335i xDrive Coupe E92							
2011-2010	Driver		240E				
	Passenger		190E				
335i xDrive Coupe F30							
2013	Driver		240E				
	Passenger		180E				
335i xDrive E92							
2009	Driver		24SL				
	Passenger		18SL				
335i xDrive Sedan E90							
2011-2010	Driver		240E				
	Passenger		190E				
335i xDrive Sedan F30							
2014-2013	Driver		240E				
	Passenger		190E				
335is							
2013-2012	Driver		240E				
	Passenger		170E				
335is Convertible E92							
2011	Driver		240E				
	Passenger		190E				
335is Convertible E93							
2011	Driver		240E				
	Passenger		190E				
335is Coupe E92							
2011	Driver		240E				
	Passenger		190E				
335is Coupe E93							
2011	Driver		240E				
	Passenger		190E				
335xi							
2008-2007	Driver		24SL				
	Passenger		19SL				
335xi E92							
2008	Driver		24SL				
	Passenger		18SL				
428i							
2015-2014	Driver		240E				
	Passenger		180E				

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Specialty					
		Conventional	Beam		Rear	HYBRID	WINTER
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC		
BMW (cont.)							
428i Gran Coupe							
2015	Driver		240E				
	Passenger		180E				
428i xDrive							
2015-2014	Driver		240E				
	Passenger		180E				
428i xDrive Gran Coupe							
2015	Driver		240E				
	Passenger		180E				
435i							
2015-2014	Driver		240E				
	Passenger		180E				
435i Gran Coupe							
2015	Driver		240E				
	Passenger		180E				
435i xDrive							
2015-2014	Driver		240E				
	Passenger		180E				
435i xDrive Gran Coupe							
2015	Driver		240E				
	Passenger		180E				
524td E28							
1986-1985	Driver	18		18HK			W18
	Passenger	18		18HK			W18
525i							
2009-2004	Driver		240E				
	Passenger		230E				
2003-2001	Driver	26		26HK			W26
	Passenger	21		21HK			W21
525i E34							
1995-1989	Driver	22		22HK			W22
	Passenger	24		24HK			W24
525iT E34							
1993	Driver	22		22HK			W22
	Passenger	24		24HK			W24
525xi							
2007-2006	Driver		240E				
	Passenger		230E				
528e E28							
1988-1982	Driver	18		18HK			W18
	Passenger	18		18HK			W18
528i							
2009-2008	Driver		240E				
	Passenger		230E				
2000-1997	Driver	26		26HK			W26
	Passenger	21		21HK			W21
528i F10							
2014-2011	Driver		26SN				
	Passenger		18SN				
528i xDrive							
2009	Driver		240E				
	Passenger		230E				
528i xDrive F10							
2014-2012	Driver		26SN				
	Passenger		18SN				

APPLICATION GUIDE PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Conventional Beam Rear Specialty					
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER
BMW (cont.)							
528xi							
2008	Driver		240E				
	Passenger		230E				
530i							
2009-2004	Driver		240E				
	Passenger		230E				
2003-2001	Driver	26		26HK			W26
	Passenger	21		21HK			W21
530i E34							
1995-1994	Driver	22		22HK			W22
	Passenger	24		24HK			W24
530xi							
2007-2006	Driver		240E				
	Passenger		230E				
533i E28							
1984-1983	Driver	18		18HK			W18
	Passenger	18		18HK			W18
535d F10							
2014	Driver		26SN				
	Passenger		18SN				
535d xDrive F10							
2014	Driver		26SN				
	Passenger		18SN				
535i							
2009-2008	Driver		240E				
	Passenger		230E				
535i E28							
1988-1985	Driver	18		18HK			W18
	Passenger	18		18HK			W18
535i E34							
1993-1989	Driver	22		22HK			W22
	Passenger	24		24HK			W24
535i F10							
2014-2011	Driver		26SN				
	Passenger		18SN				
535i xDrive							
2009	Driver		240E				
	Passenger		230E				
535i xDrive F10							
2014-2011	Driver		26SN				
	Passenger		18SN				
535is E28							
1988	Driver	18		18HK			W18
	Passenger	18		18HK			W18
535xi							
2008	Driver		240E				
	Passenger		230E				
540i E34							
1995-1994	Driver	22		22HK			W22
	Passenger	24		24HK			W24
545i							
2006-2004	Driver		240E				
	Passenger		230E				

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Conventional					
		TRADITIONAL	Beam		Rear		Specialty
			BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER
BMW (cont.)							
550i							
2009-2006	Driver		240E				
	Passenger		230E				
550i F10							
2014-2011	Driver		26SN				
	Passenger		18SN				
550i xDrive F10							
2014-2011	Driver		26SN				
	Passenger		18SN				
633CSi							
1984-1980	Driver	18		18HK			W18
	Passenger	18		18HK			W18
635CSi							
1989-1985	Driver	18		18HK			W18
	Passenger	18		18HK			W18
645Ci							
2005-2004	Driver		240E				
	Passenger		220E				
650Ci							
2010-2006	Driver		240E				
	Passenger		220E				
650i							
2010-2006	Driver		240E				
	Passenger		220E				
733i							
1984-1980	Driver	18		18HK			W18
	Passenger	18		18HK			W18
735i							
1992-1991	Driver	22		22HK			W22
	Passenger	24		24HK			W24
1990-1988	Driver	24		24HK			W24
	Passenger	24		24HK			W24
1987-1985	Driver	18		18HK			W18
	Passenger	18		18HK			W18
735iL							
1992-1991	Driver	22		22HK			W22
	Passenger	24		24HK			W24
1990-1988	Driver	24		24HK			W24
	Passenger	24		24HK			W24
740i							
2001-1997, 1995-1993	Driver	22		22HK			W22
	Passenger	24		24HK			W24
740iL							
2001-1993	Driver	22		22HK			W22
	Passenger	24		24HK			W24
750iL							
2001-1991	Driver	22		22HK			W22
	Passenger	24		24HK			W24
1990-1988	Driver	24		24HK			W24
	Passenger	24		24HK			W24
L7							
1987-1986	Driver	18		18HK			W18
	Passenger	18		18HK			W18

APPLICATION GUIDE PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Specialty					
		Conventional	Beam		Rear	HYBRID	WINTER
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC		
BMW (cont.)							
M3							
2015	Driver		240E				
	Passenger		190E				
2013-2012	Driver		240E				
	Passenger		180E				
1999-1994	Driver	21		21HK			W21
	Passenger	20		20HK			W20
1991-1988	Driver	20		20HK			W20
	Passenger	20		20HK			W20
M3 Convertible E92							
2011-2010	Driver		240E				
	Passenger		180E				
2009-2008	Driver		24SL				
	Passenger		18SL				
M3 Convertible E93							
2011-2010	Driver		240E				
	Passenger		180E				
2009-2008	Driver		24SL				
	Passenger		18SL				
M3 Coupe E92							
2011-2010	Driver		240E				
	Passenger		180E				
2009-2008	Driver		24SL				
	Passenger		18SL				
M3 Coupe E93							
2011-2010	Driver		240E				
	Passenger		180E				
2009-2008	Driver		24SL				
	Passenger		18SL				
M3 Sedan E90							
2011-2010	Driver		240E				
	Passenger		190E				
2009-2008	Driver		24SL				
	Passenger		19SL				
M4							
2015	Driver		240E				
	Passenger		180E				
M5							
2014-2013	Driver		26SN				
	Passenger		18SN				
M6							
2010-2006	Driver		240E				
	Passenger		220E				
1988-1987	Driver	18		18HK			W18
	Passenger	18		18HK			W18
X1							
2015-2012	Driver		240E				
	Passenger		180E				
	Rear				12X		
X3							
2014-2011	Driver		260E				
	Passenger		200E				
	Rear				13V		

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Specialty					
		Conventional	Beam		Rear	HYBRID	WINTER
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC		
BMW (cont.)							
X3 (cont.)							
2010-2004	Driver	22		22HK			W22
	Passenger	20		20HK			W20
	Rear				14E		
X5							
2014	Driver	24		24HK		24HB	W24
	Passenger	20		20HK		20HB	W20
2013-2012	Rear				14T		
2011-2007	Driver		240E				
	Passenger		200E				
	Rear				14T		
2006-2000	Driver	24		24HK			W24
	Passenger	22		22HK			W22
	Rear	18		18HK			W18
X6							
2014-2008	Driver		240E				
	Passenger		200E				
Z3							
2002-1996	Driver	20		20HK			W20
	Passenger	20		20HK			W20
	Rear	11					
Z4							
2014-2009	Driver	22		22HK			W22
	Passenger	20		20HK			W20
2008-2003	Driver	21		21HK			W21
	Passenger	20		20HK			W20
i3							
2015-2014	Driver		280E				
	Passenger		210E				
	Rear				12E		
BUICK							
Allure							
2010	Driver	26		26HK		26HB	W26
	Passenger	18		18HK		18HB	W18
2009-2005	Driver	22		22HK		22HB	W22
	Passenger	22		22HK		22HB	W22
Apollo							
1975-1973	Driver	16		16HK			
	Passenger	16		16HK			
Centurion							
1973-1971	Driver	18		18HK			
	Passenger	18		18HK			
Century							
2005-1997	Driver	22		22HK			W22
	Passenger	22		22HK			W22
1996-1992, 1981-1978	Driver	18		18HK			
	Passenger	18		18HK			
1991-1984	Driver	18		18HK			
	Passenger	18		18HK			
	Rear	16		16HK			
1977-1973	Driver	16		16HK			
	Passenger	16		16HK			
Electra							
1990-1985	Driver	19		19HK			
	Passenger	19		19HK			

APPLICATION GUIDE PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Conventional					
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER
BUICK (cont.)							
Electra (cont.)							
1984-1968	Driver	18		18HK			
	Passenger	18		18HK			
Enclave							
2015-2008	Driver		250E				
	Passenger		210E				
	Rear				12E		
Estate Wagon							
1983-1970	Driver	18		18HK			
	Passenger	18		18HK			
LaCrosse							
2014-2010	Driver	26		26HK		26HB	W26
	Passenger	18		18HK		18HB	W18
2009-2006	Driver	22		22HK		22HB	W22
	Passenger	22		22HK		22HB	W22
2005	Driver	22		22HK			W22
	Passenger	22		22HK			W22
LeSabre							
2005-1992	Driver	22		22HK			W22
	Passenger	22		22HK			W22
1991-1987	Driver	19		19HK			
	Passenger	19		19HK			
1986-1970	Driver	18		18HK			
	Passenger	18		18HK			
Lucerne							
2011-2006	Driver		240E				
	Passenger		210E				
Park Avenue							
2005-1991	Driver	22		22HK			W22
	Passenger	22		22HK			W22
Rainier							
2007-2006	Driver	22		22HK			W22
	Passenger	22		22HK			W22
	Rear				12E		
2005-2004	Driver	22		22HK			W22
	Passenger	22		22HK			W22
	Rear	16		16HK			W16
Reatta							
1991-1988	Driver	19		19HK			
	Passenger	19		19HK			
Regal							
2015-2011	Driver	24		24HK		24HB	W24
	Passenger	18		18HK		18HB	W18
2004-1997	Driver	22		22HK			W22
	Passenger	22		22HK			W22
1996-1988	Driver	20		20HK			
	Passenger	20		20HK			
1987-1978	Driver	18		18HK			
	Passenger	18		18HK			
1977-1973	Driver	16		16HK			
	Passenger	16		16HK			
Rendezvous							
2007-2002	Driver	24		24HK			W24
	Passenger	22		22HK			W22
	Rear	16		16HK			W16

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Conventional		Beam		Rear		Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER		
BUICK (cont.)									
Riviera									
1999-1995	Driver	22		22HK					
	Passenger	22		22HK					
1993-1986	Driver	19		19HK					
	Passenger	19		19HK					
1985-1971	Driver	18		18HK					
	Passenger	18		18HK					
Roadmaster									
1996-1991	Driver	22		22HK					
	Passenger	17		17HK					
Skyhawk									
1989-1983	Driver	16		16HK					
	Passenger	16		16HK					
	Rear	16		16HK					
Skylark									
1998-1986	Driver	19		19HK					
	Passenger	19		19HK					
1985-1980	Driver	18		18HK					
	Passenger	18		18HK					
1979-1975, 1972-1968	Driver	16		16HK					
	Passenger	16		16HK					
Somerset									
1987-1986	Driver	19		19HK					
	Passenger	19		19HK					
Somerset Regal									
1985	Driver	19		19HK					
	Passenger	19		19HK					
Special									
1969-1968	Driver	16		16HK					
	Passenger	16		16HK					
Terraza									
2007-2005	Driver	24		24HK					W24
	Passenger	22		22HK					W22
	Rear	16		16HK					W16
Verano									
2015-2012	Driver		260E						
	Passenger		250E						
Wildcat									
1970-1968	Driver	18		18HK					
	Passenger	18		18HK					
CADILLAC									
60 Special									
1993	Driver	22		22HK					
	Passenger	22		22HK					
ATS									
2014-2013	Driver	22		22HK			22HB		W22
	Passenger	18		18HK			18HB		W18
Allante									
1993-1987	Driver	20		20HK					
	Passenger	20		20HK					
Brougham									
1992-1987	Driver	18		18HK					
	Passenger	18		18HK					

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Conventional	Beam	Rear	Specialty		
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER
CADILLAC (cont.)							
CTS							
2014	Driver		240E				
	Passenger		180E				
2013-2008	Driver	22		22HK		22HB	W22
	Passenger	19		19HK		19HB	W19
2007-2003	Driver	22		22HK			W22
	Passenger	21		21HK			W21
CTS V							
2014-2009	Driver	22		22HK			W22
	Passenger	19		19HK			W19
Calais							
1976-1970	Driver	18		18HK			
	Passenger	18		18HK			
Catera							
2001-1997	Driver	24		24HK			W24
	Passenger	19		19HK			W19
Cimarron							
1988-1982	Driver	16		16HK			
	Passenger	16		16HK			
DTS							
2011-2006	Driver	22		22HK		22HB	W22
	Passenger	22		22HK		22HB	W22
DeVille							
2005-2000	Driver	22		22HK			W22
	Passenger	22		22HK			W22
1999-1991	Driver	22		22HK			
	Passenger	22		22HK			
1990-1985	Driver	19		19HK			
	Passenger	19		19HK			
1984-1970	Driver	18		18HK			
	Passenger	18		18HK			
Eldorado							
2002-1992	Driver	22		22HK			
	Passenger	22		22HK			
1991-1986	Driver	19		19HK			
	Passenger	19		19HK			
1985-1970	Driver	18		18HK			
	Passenger	18		18HK			
Escalade							
2015	Driver	22		22HK		22HB	W22
	Passenger	22		22HK		22HB	W22
	Rear	13					
2014-2008	Driver	22		22HK			W22
	Passenger	22		22HK			W22
	Rear				12E		
2007	Driver		220E				
	Passenger		220E				
	Rear				12E		
2006-2002	Driver	22		22HK			W22
	Passenger	22		22HK			W22
	Rear	16		16HK			W16
2000-1999	Driver	18		18HK			W18
	Passenger	18		18HK			W18

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Conventional		Beam		Rear		Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER		
CADILLAC (cont.)									
Escalade ESV									
2014-2008	Driver	22		22HK					W22
	Passenger	22		22HK					W22
	Rear					12E			
2007	Driver		220E						
	Passenger		220E						
	Rear					12E			
2006-2003	Driver	22		22HK					W22
	Passenger	22		22HK					W22
	Rear	16		16HK					W16
Escalade EXT									
2013-2008	Driver	22		22HK					W22
	Passenger	22		22HK					W22
	Rear					12E			
2007	Driver		220E						
	Passenger		220E						
	Rear					12E			
2006-2002	Driver	22		22HK					W22
	Passenger	22		22HK					W22
Fleetwood									
1996-1991	Driver	22		22HK					
	Passenger	22		22HK					
1990-1989	Driver	19		19HK					
	Passenger	19		19HK					
1988-1968	Driver	18		18HK					
	Passenger	18		18HK					
SRX									
2014-2010	Driver		260E						
	Passenger		170E						
2009-2004	Driver	22		22HK					W22
	Passenger	21		21HK					W21
	Rear	13							
STS									
2011-2005	Driver		220E						
	Passenger		210E						
Seville									
2004-1998	Driver	22		22HK					W22
	Passenger	22		22HK					W22
1997-1992	Driver	22		22HK					
	Passenger	22		22HK					
1991-1986	Driver	19		19HK					
	Passenger	19		19HK					
1985-1976	Driver	18		18HK					
	Passenger	18		18HK					
XLR									
2009-2004	Driver	20		20HK					W20
	Passenger	20		20HK					W20
XTS									
2014-2013	Driver	26		26HK			26HB		W26
	Passenger	18		18HK			18HB		W18
CHEVROLET									
Astro									
2005-1985	Driver	18		18HK					
	Passenger	18		18HK					

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Specialty					
		Conventional TRADITIONAL	Beam BEAM ORIGINAL	Beam BEAM HOOK	Rear REAR SPECIFIC	HYBRID	WINTER
CHEVROLET (cont.)							
Avalanche							
2013-2008	Driver	22		22HK			W22
	Passenger	22		22HK			W22
2007	Driver		220E				
	Passenger		220E				
Avalanche 1500							
2006-2002	Driver	22		22HK			W22
	Passenger	22		22HK			W22
Avalanche 2500							
2006-2002	Driver	22		22HK			W22
	Passenger	22		22HK			W22
Aveo							
2011-2009	Driver	22		22HK			W22
	Passenger	18		18HK			W18
2006-2004	Driver	22		22HK			W22
	Passenger	19		19HK			W19
	Rear	15		15HK			W15
Aveo Hatchback							
2007	Driver	22		22HK			W22
	Passenger	19		19HK			W19
	Rear	15		15HK			W15
Aveo Sedan							
2008-2007	Driver	22		22HK			W22
	Passenger	18		18HK			W18
Aveo5							
2011-2009	Driver	22		22HK			W22
	Passenger	18		18HK			W18
	Rear	15		15HK			W15
2008-2006	Driver	22		22HK			W22
	Passenger	19		19HK			W19
	Rear	15		15HK			W15
Bel Air							
1981, 1975-1971	Driver	18		18HK			
	Passenger	18		18HK			
Beretta							
1996-1987	Driver	19		19HK			
	Passenger	19		19HK			
Biscayne							
1972-1971	Driver	18		18HK			
	Passenger	18		18HK			
1970-1968	Driver	16		16HK			
	Passenger	16		16HK			
Blazer							
2005-1995	Driver	20		20HK			W20
	Passenger	20		20HK			W20
	Rear	14		14HK			
1994-1993	Driver	18		18HK			
	Passenger	18		18HK			
	Rear	14		14HK			
1992-1987	Driver	18		18HK			
	Passenger	18		18HK			
C1500							
1999-1995	Driver	18		18HK			W18
	Passenger	18		18HK			W18

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Conventional						Specialty	
		TRADITIONAL	Beam		Rear		HYBRID	WINTER	
		BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC					
CHEVROLET (cont.)									
C1500 (cont.)									
1994-1988	Driver	18		18HK					
	Passenger	18		18HK					
C1500 Suburban									
1999-1995	Driver	18		18HK				W18	
	Passenger	18		18HK				W18	
	Rear	14		14HK					
1994-1992	Driver	18		18HK					
	Passenger	18		18HK					
C2500									
2000-1995	Driver	18		18HK				W18	
	Passenger	18		18HK				W18	
1994-1988	Driver	18		18HK					
	Passenger	18		18HK					
C2500 Suburban									
1999-1995	Driver	18		18HK				W18	
	Passenger	18		18HK				W18	
	Rear	14		14HK					
1994-1992	Driver	18		18HK					
	Passenger	18		18HK					
C3500									
2002-2001	Driver	20		20HK				W20	
	Passenger	20		20HK				W20	
2000-1995	Driver	18		18HK				W18	
	Passenger	18		18HK				W18	
1994-1988	Driver	18		18HK					
	Passenger	18		18HK					
C3500HD									
2002-2001	Driver	20		20HK				W20	
	Passenger	20		20HK				W20	
2000-1995	Driver	18		18HK				W18	
	Passenger	18		18HK				W18	
C4500 Kodiak									
2008-2005	Driver	22		22HK				W22	
	Passenger	22		22HK				W22	
C5500 Kodiak									
2008-2005	Driver	22		22HK				W22	
	Passenger	22		22HK				W22	
C6500 Kodiak									
2008-2005	Driver	22		22HK				W22	
	Passenger	22		22HK				W22	
C7500 Kodiak									
2008-2005	Driver	22		22HK				W22	
	Passenger	22		22HK				W22	
Camaro									
2014-2010	Driver	24		24HK		24HB		W24	
	Passenger	21		21HK		21HB		W21	
2002-1998	Driver	24		24HK				W24	
	Passenger	24		24HK				W24	
1992-1989, 1981-1970	Driver	18		18HK					
	Passenger	18		18HK					
1988-1982	Driver	18		18HK					
	Passenger	18		18HK					
	Rear	18		18HK					

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Conventional					
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER
CHEVROLET (cont.)							
Caprice							
2014-2011	Driver		260E				
	Passenger		150E				
1996-1991	Driver	22		22HK			
	Passenger	22		22HK			
	Rear	16		16HK			
1990	Driver	18		18HK			
	Passenger	18		18HK			
	Rear	16		16HK			
1989-1971	Driver	18		18HK			
	Passenger	18		18HK			
Cavalier							
2005-1995	Driver	22		22HK			W22
	Passenger	17		17HK			W17
1994-1990	Driver	17		17HK			
	Passenger	17		17HK			
1989	Driver	16		16HK			
	Passenger	16		16HK			
1988-1982	Driver	16		16HK			
	Passenger	16		16HK			
	Rear	16		16HK			
Celebrity							
1990	Driver	18		18HK			
	Passenger	18		18HK			
1989-1984	Driver	18		18HK			
	Passenger	18		18HK			
	Rear	16		16HK			
Chevelle							
1973-1968	Driver	16		16HK			
	Passenger	16		16HK			
Chevette							
1987-1982	Driver	16		16HK			
	Passenger	16		16HK			
	Rear	16		16HK			
1981-1976	Rear	16		16HK			
Citation							
1983-1980	Driver	18		18HK			
	Passenger	18		18HK			
Citation II							
1985-1984	Driver	18		18HK			
	Passenger	18		18HK			
Classic							
2005-2004	Driver	22		22HK			W22
	Passenger	19		19HK			W19
Cobalt							
2010-2005	Driver	22		22HK			W22
	Passenger	17		17HK			W17
Colorado							
2015	Driver		220E				
	Passenger		180E				
2012-2004	Driver	22		22HK			W22
	Passenger	19		19HK			W19
Corsica							
1996-1987	Driver	19		19HK			
	Passenger	19		19HK			

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Conventional		Beam		Rear		Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER		
CHEVROLET (cont.)									
Corvette									
2014	Driver	22		22HK		22HB		W22	
	Passenger	20		20HK		20HB		W20	
2013-2005	Driver	21		21HK				W21	
	Passenger	21		21HK				W21	
2004-1997	Driver	22		22HK				W22	
	Passenger	22		22HK				W22	
1996-1984	Driver	20		20HK					
	Passenger	20		20HK					
1982-1968	Driver	16		16HK					
	Passenger	16		16HK					
Cruze									
2014-2011	Driver	24		24HK				W24	
	Passenger	18		18HK				W18	
El Camino									
1987-1978	Driver	18		18HK					
	Passenger	18		18HK					
1977-1973	Driver	16		16HK					
	Passenger	16		16HK					
1972-1968	Driver	16		16HK					
	Passenger	18		18HK					
Epica									
2006-2004	Driver	22		22HK				W22	
	Passenger	20		20HK				W20	
Equinox									
2014-2010	Driver		240E						
	Passenger		170E						
2009-2005	Driver	24		24HK				W24	
	Passenger	19		19HK				W19	
	Rear	15		15HK				W15	
Express 1500									
2014-1996	Driver	22		22HK				W22	
	Passenger	22		22HK				W22	
Express 2500									
2014-1996	Driver	22		22HK				W22	
	Passenger	22		22HK				W22	
Express 3500									
2014-1996	Driver	22		22HK				W22	
	Passenger	22		22HK				W22	
Express 4500									
2014-2009	Driver	22		22HK				W22	
	Passenger	22		22HK				W22	
Express Cargo									
2014-2010	Driver	22		22HK				W22	
	Passenger	22		22HK				W22	
Express Pasajeros									
2014-2010	Driver	22		22HK				W22	
	Passenger	22		22HK				W22	
G10									
1995-1993	Driver	18		18HK					
	Passenger	18		18HK					
1992-1983	Driver	16		16HK					
	Passenger	16		16HK					

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Chevrolet					
		Conventional	Beam		Rear	Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER
CHEVROLET (cont.)							
G20							
1995-1993	Driver	18		18HK			
	Passenger	18		18HK			
1992-1983	Driver	16		16HK			
	Passenger	16		16HK			
G30							
2002-2001, 1996	Driver	22		22HK			W22
	Passenger	22		22HK			W22
1995-1993	Driver	18		18HK			
	Passenger	18		18HK			
1992-1983	Driver	16		16HK			
	Passenger	16		16HK			
HHR							
2011-2006	Driver	18		18HK		18HB	W18
	Passenger	18		18HK		18HB	W18
	Rear				11A		
Impala							
2014	Driver	24		24HK		24HB	W24
	Passenger	19		19HK		19HB	W19
2013-2011	Driver	22		22HK		22HB	W22
	Passenger	21		21HK		21HB	W21
2010-2006	Driver	22		22HK		22HB	W22
	Passenger	22		22HK		22HB	W22
2005-2000	Driver	22		22HK			W22
	Passenger	22		22HK			W22
1996-1994	Driver	22		22HK			
	Passenger	22		22HK			
1985-1971	Driver	18		18HK			
	Passenger	18		18HK			
K1500							
1999-1995	Driver	18		18HK			W18
	Passenger	18		18HK			W18
1994-1988	Driver	18		18HK			
	Passenger	18		18HK			
K1500 Suburban							
1999-1995	Driver	18		18HK			W18
	Passenger	18		18HK			W18
	Rear	14		14HK			
1994-1992	Driver	18		18HK			
	Passenger	18		18HK			
K2500							
2000-1995	Driver	18		18HK			W18
	Passenger	18		18HK			W18
1994-1988	Driver	18		18HK			
	Passenger	18		18HK			
K2500 Suburban							
1999-1995	Driver	18		18HK			W18
	Passenger	18		18HK			W18
	Rear	14		14HK			
1994-1992	Driver	18		18HK			
	Passenger	18		18HK			
K3500							
2000-1995	Driver	18		18HK			W18
	Passenger	18		18HK			W18

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Conventional		Beam		Rear		Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER		
CHEVROLET (cont.)									
K3500 (cont.)									
1994-1988	Driver	18		18HK					
	Passenger	18		18HK					
Laguna									
1976-1973	Driver	16		16HK					
	Passenger	16		16HK					
Lumina									
2001-1995	Driver	22		22HK					W22
	Passenger	22		22HK					W22
1994-1990	Driver	20		20HK					
	Passenger	20		20HK					
Lumina APV									
1996-1990	Driver	22		22HK					
	Passenger	22		22HK					
Lumina Van									
1996-1995	Driver	22		22HK					
	Passenger	22		22HK					
Malibu									
2014-2013	Driver	24		24HK		24HB			W24
	Passenger	19		19HK		19HB			W19
2012-2008	Driver		240E						
	Passenger		210E						
2007-2004	Driver	22		22HK					W22
	Passenger	20		20HK					W20
2003-1997	Driver	22		22HK					W22
	Passenger	19		19HK					W19
1983-1978	Driver	18		18HK					
	Passenger	18		18HK					
1977-1973	Driver	16		16HK					
	Passenger	16		16HK					
Malibu Classic LS									
2008	Driver	22		22HK					W22
	Passenger	20		20HK					W20
Malibu Classic LT									
2008	Driver	22		22HK					W22
	Passenger	20		20HK					W20
Metro									
2001-1998	Driver	20		20HK					W20
	Passenger	19		19HK					W19
1992	Driver	20		20HK					W20
	Passenger	18		18HK					W18
Monte Carlo									
2007-1995	Driver	22		22HK					W22
	Passenger	22		22HK					W22
1988-1978	Driver	18		18HK					
	Passenger	18		18HK					
1977-1970	Driver	16		16HK					
	Passenger	16		16HK					
Nova									
1979-1969	Driver	16		16HK					
	Passenger	16		16HK					
Opra									
2007-2004	Driver	22		22HK					W22
	Passenger	19		19HK					W19
	Rear	18		18HK					W18

APPLICATION GUIDE PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Conventional					
		TRADITIONAL	Beam		Rear		Specialty
			BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER
CHEVROLET (cont.)							
Prizm							
2002-1998	Driver	20		20HK			W20
	Passenger	18		18HK			W18
R10							
1987	Driver	16		16HK			
	Passenger	16		16HK			
R10 Suburban							
1988-1987	Driver	16		16HK			
	Passenger	16		16HK			
R1500 Suburban							
1991-1989	Driver	16		16HK			
	Passenger	16		16HK			
R20							
1987	Driver	16		16HK			
	Passenger	16		16HK			
R20 Suburban							
1988-1987	Driver	16		16HK			
	Passenger	16		16HK			
R2500							
1989	Driver	18		18HK			
	Passenger	18		18HK			
R2500 Suburban							
1991-1989	Driver	16		16HK			
	Passenger	16		16HK			
R30							
1987	Driver	16		16HK			
	Passenger	16		16HK			
R3500							
1991-1989	Driver	18		18HK			
	Passenger	18		18HK			
S10							
2004-1994	Driver	20		20HK			W20
	Passenger	20		20HK			W20
1993-1982	Driver	16		16HK			
	Passenger	16		16HK			
S10 Blazer							
1994-1989	Driver	16		16HK			
	Passenger	16		16HK			
	Rear	14		14HK			
1988-1983	Driver	16		16HK			
	Passenger	16		16HK			
SS							
2014	Driver		260E				
	Passenger		150E				
SSR							
2006-2003	Driver	20		20HK			W20
	Passenger	19		19HK			W19
Silverado							
1999	Driver	22		22HK			W22
	Passenger	22		22HK			W22
Silverado 1500							
2015-2008	Driver		220E				
	Passenger		220E				
2007-1999	Driver	22		22HK			W22
	Passenger	22		22HK			W22

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Specialty					
		Conventional	Beam		Rear	HYBRID	WINTER
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC		
CHEVROLET (cont.)							
Silverado 1500 HD							
2007-2005, 2003-2001	Driver	22		22HK			W22
	Passenger	22		22HK			W22
Silverado 2500							
2014-2011, 2009-2008	Driver		220E				
	Passenger		220E				
2007-1999	Driver	22		22HK			W22
	Passenger	22		22HK			W22
Silverado 2500 HD							
2015-2008	Driver		220E				
	Passenger		220E				
2007-2001	Driver	22		22HK			W22
	Passenger	22		22HK			W22
Silverado 3500							
2015, 2013- 2011, 2009- 2008	Driver		220E				
	Passenger		220E				
2007-2001	Driver	22		22HK			W22
	Passenger	22		22HK			W22
Silverado 3500 HD							
2015-2008	Driver		220E				
	Passenger		220E				
2007	Driver	22		22HK			W22
	Passenger	22		22HK			W22
Sonic							
2014-2012	Driver		260E				
	Passenger		150E				
Spark							
2014-2012	Driver		240E				
	Passenger		160E				
	Rear				12A		
Spark EV							
2014	Driver		240E				
	Passenger		160E				
	Rear				12A		
Spectrum							
1988	Driver	18		18HK			W18
	Passenger	18		18HK			W18
Sprint							
1992-1989	Driver	19		19HK			
	Passenger	18		18HK			
Suburban							
2015	Driver	22		22HK		22HB	W22
	Passenger	22		22HK		22HB	W22
	Rear	13					
2014	Driver	22		22HK			W22
	Passenger	22		22HK			W22
	Rear				12E		
Suburban 1500							
2014-2009	Driver	22		22HK			W22
	Passenger	22		22HK			W22
	Rear				12E		
2008	Driver	22	220E	22HK			W22
	Passenger	22	220E	22HK			W22
	Rear				12E		

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Specialty					
		Conventional	Beam		Rear	Hybrid	Winter
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER
CHEVROLET (cont.)							
Suburban 1500 (cont.)							
2007	Driver		220E				
	Passenger		220E				
	Rear				12E		
2006-2000	Driver	22		22HK			W22
	Passenger	22		22HK			W22
	Rear	16		16HK			W16
1999-1995	Driver	18		18HK			W18
	Passenger	18		18HK			W18
	Rear	14		14HK			
Suburban 2500							
2013-2009	Driver	22		22HK			W22
	Passenger	22		22HK			W22
	Rear				12E		
2008	Driver	22	220E	22HK			W22
	Passenger	22	220E	22HK			W22
	Rear				12E		
2007	Driver		220E				
	Passenger		220E				
	Rear				12E		
2006-2000	Driver	22		22HK			W22
	Passenger	22		22HK			W22
	Rear	16		16HK			W16
Tahoe							
2015	Driver	22		22HK		22HB	W22
	Passenger	22		22HK		22HB	W22
	Rear	13					
2014-2009	Driver	22		22HK			W22
	Passenger	22		22HK			W22
	Rear				12E		
2008	Driver	22	220E	22HK			W22
	Passenger	22	220E	22HK			W22
	Rear				12E		
2007	Driver		220E				
	Passenger		220E				
	Rear				12E		
2006-2000	Driver	22		22HK			W22
	Passenger	22		22HK			W22
	Rear	16		16HK			W16
1999-1995	Driver	18		18HK			W18
	Passenger	18		18HK			W18
	Rear	14		14HK			
Tracker							
2004-1999	Driver	19		19HK			W19
	Passenger	19		19HK			W19
	Rear	15		15HK			W15
1998	Driver	17		17HK			W17
	Passenger	17		17HK			W17
	Rear	15		15HK			W15
Trailblazer							
2009-2007	Driver	22		22HK			W22
	Passenger	22		22HK			W22
	Rear				12E		

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Conventional		Beam		Rear		Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER		
CHEVROLET (cont.)									
Trailblazer (cont.)									
2006-2002	Driver	22		22HK					W22
	Passenger	22		22HK					W22
	Rear	16		16HK					W16
Trailblazer EXT									
2006-2002	Driver	22		22HK					W22
	Passenger	22		22HK					W22
	Rear	16		16HK					W16
Traverse									
2014-2013	Driver		250E						
	Passenger		210E						
	Rear	13							
2012-2009	Driver		250E						
	Passenger		210E						
Uplander									
2009-2005	Driver	24		24HK					W24
	Passenger	22		22HK					W22
	Rear	16		16HK					W16
V10									
1987	Driver	16		16HK					
	Passenger	16		16HK					
V10 Suburban									
1988-1987	Driver	16		16HK					
	Passenger	16		16HK					
V1500 Suburban									
1991-1989	Driver	16		16HK					
	Passenger	16		16HK					
V20									
1987	Driver	16		16HK					
	Passenger	16		16HK					
V20 Suburban									
1988-1987	Driver	16		16HK					
	Passenger	16		16HK					
V2500 Suburban									
1991-1989	Driver	16		16HK					
	Passenger	16		16HK					
V30									
1987	Driver	16		16HK					
	Passenger	16		16HK					
V3500									
1991-1989	Driver	18		18HK					
	Passenger	18		18HK					
Venture									
2005-1997	Driver	24		24HK					W24
	Passenger	24		24HK					W24
	Rear	16		16HK					W16
Volt									
2014-2011	Driver		260E						
	Passenger		260E						
W3500 Tiltmaster									
2008-2005	Driver	20		20HK					W20
	Passenger	20		20HK					W20
W4500 Tiltmaster									
2008-2005	Driver	20		20HK					W20
	Passenger	20		20HK					W20

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Conventional	Beam		Rear	Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER
CHEVROLET (cont.)							
W5500 Tiltmaster							
2008-2005	Driver	20		20HK			W20
	Passenger	20		20HK			W20
W5500HD Tiltmaster							
2008-2005	Driver	20		20HK			W20
	Passenger	20		20HK			W20
CHRYSLER							
200							
2015	Driver	26		26HK			W26
	Passenger	19		19HK			W19
2014-2011	Driver	24		24HK			W24
	Passenger	22		22HK			W22
300							
2014-2011	Driver	24		24HK		24HB	W24
	Passenger	21		21HK		21HB	W21
2010-2005	Driver	22		22HK			W22
	Passenger	22		22HK			W22
1971-1970	Driver	16		16HK			
	Passenger	16		16HK			
300C							
2014	Driver	24		24HK		24HB	W24
	Passenger	21		21HK		21HB	W21
300M							
2004-1998	Driver	24		24HK			W24
	Passenger	22		22HK			W22
Aspen							
2009-2007	Driver	26		26HK			W26
	Passenger	21		21HK			W21
	Rear				14C		
Cirrus							
2000-1995	Driver	22		22HK			W22
	Passenger	22		22HK			W22
Concorde							
2004-1997, 1994-1993	Driver	24		24HK			W24
	Passenger	22		22HK			W22
1996-1995	Driver	24		24HK			W24
	Passenger	24		24HK			W24
Cordoba							
1983-1975	Driver	18		18HK			
	Passenger	18		18HK			
Crossfire							
2008-2004	Driver	20		20HK			W20
	Passenger	22		22HK			W22
Daytona							
1993-1984	Driver	18		18HK			
	Passenger	18		18HK			
Dynasty							
1993-1988	Driver	18		18HK			
	Passenger	18		18HK			
E Class							
1984-1983	Driver	16		16HK			
	Passenger	16		16HK			
Fifth Avenue							
1989-1983	Driver	18		18HK			
	Passenger	18		18HK			

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Conventional		Beam		Rear		Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER		
CHRYSLER (cont.)									
Grand Voyager									
2000	Driver	28		28HK					W28
	Passenger	28		28HK					W28
	Rear	18		18HK					W18
Imperial									
1993-1990, 1983-1981, 1975-1974	Driver	18		18HK					
	Passenger	18		18HK					
1973-1969	Driver	16		16HK					
	Passenger	16		16HK					
Intrepid									
2004-1993	Driver	24		24HK					W24
	Passenger	22		22HK					W22
LHS									
2001-1999, 1997, 1994	Driver	24		24HK					W24
	Passenger	22		22HK					W22
1996-1995	Driver	24		24HK					W24
	Passenger	24		24HK					W24
Laser									
1986-1984	Driver	18		18HK					
	Passenger	18		18HK					
	Rear	18		18HK					
LeBaron									
1995-1994	Driver	20		20HK					
	Passenger	20		20HK					
1993-1989, 1979-1977	Driver	18		18HK					
	Passenger	18		18HK					
1985-1982	Driver	16		16HK					
	Passenger	16		16HK					
1981-1980	Driver	18		18HK					
	Passenger	18		18HK					
	Rear	16		16HK					
LeBaron Convertible									
1988-1987	Driver	18		18HK					
	Passenger	18		18HK					
LeBaron Coupe									
1988-1987	Driver	18		18HK					
	Passenger	18		18HK					
LeBaron GTS									
1989-1985	Driver	18		18HK					
	Passenger	18		18HK					
LeBaron Sedan									
1988-1987	Driver	16		16HK					
	Passenger	16		16HK					
Neon									
2002-2000	Driver	22		22HK					W22
	Passenger	19		19HK					W19
1997-1995	Driver	21		21HK					W21
	Passenger	18		18HK					W18
New Yorker									
1996-1995	Driver	24		24HK					W24
	Passenger	24		24HK					W24
1994	Driver	24		24HK					W24
	Passenger	22		22HK					W22

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Specialty					
		Conventional	Beam		Rear	Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER
CHRYSLER (cont.)							
New Yorker (cont.)							
1993-1988, 1982-1974	Driver	18		18HK			
	Passenger	18		18HK			
1987-1983, 1973-1969	Driver	16		16HK			
	Passenger	16		16HK			
Newport							
1981-1974	Driver	18		18HK			
	Passenger	18		18HK			
1973-1969	Driver	16		16HK			
	Passenger	16		16HK			
PT Cruiser							
2010-2001	Driver	20		20HK			W20
	Passenger	21		21HK			W21
	Rear	16		16HK			W16
Pacifica							
2008-2004	Driver	22		22HK			W22
	Passenger	22		22HK			W22
	Rear	14		14HK			
Prowler							
2002-2001	Driver	17		17HK			W17
	Passenger	19		19HK			W19
Sebring							
2010-2007, 1995	Driver	24		24HK			W24
	Passenger	22		22HK			W22
2006, 2000- 1997	Driver	22		22HK			W22
	Passenger	22		22HK			W22
Sebring Convertible							
2005-2001	Driver	22		22HK			W22
	Passenger	22		22HK			W22
1996	Driver	21		21HK			W21
	Passenger	21		21HK			W21
Sebring Coupe							
2005-2001	Driver	24		24HK			W24
	Passenger	21		21HK			W21
2000-1996	Driver	24		24HK			W24
	Passenger	22		22HK			W22
Sebring Sedan							
2005-2001	Driver	22		22HK			W22
	Passenger	22		22HK			W22
TC Maserati							
1991-1989	Driver	18		18HK			
	Passenger	18		18HK			
Town & Country							
2014-2011	Driver	26		26HK			W26
	Passenger	20		20HK			W20
	Rear	16		16HK			W16
2010-2008	Driver	26		26HK			W26
	Passenger	20		20HK			W20
	Rear				16E		
2007-2001	Driver	28		28HK			W28
	Passenger	28		28HK			W28
	Rear	16		16HK			W16
2000-1996	Driver	28		28HK			W28
	Passenger	28		28HK			W28
	Rear	18		18HK			W18

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Specialty					
		Conventional	Beam		Rear	HYBRID	WINTER
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC		
CHRYSLER (cont.)							
Town & Country (cont.)							
1995	Driver	22		22HK			W22
	Passenger	22		22HK			W22
	Rear	18		18HK			W18
1994	Driver	22		22HK			W22
	Passenger	18		18HK			W18
	Rear	18		18HK			W18
1993-1991	Driver	18		18HK			W18
	Passenger	18		18HK			W18
	Rear	18		18HK			W18
1990	Driver	18		18HK			
	Passenger	18		18HK			
	Rear	16		16HK			
1988-1981	Driver	16		16HK			
	Passenger	16		16HK			
Voyager							
2008-2001	Driver	28		28HK			W28
	Passenger	28		28HK			W28
	Rear	16		16HK			W16
2000	Driver	28		28HK			W28
	Passenger	28		28HK			W28
	Rear	18		18HK			W18
DAEWOO							
Lanos							
2002-1999	Driver	19		19HK			W19
	Passenger	19		19HK			W19
	Rear	19		19HK			W19
Leganza							
2002-1999	Driver	22		22HK			W22
	Passenger	19		19HK			W19
Nubira							
2002-1999	Driver	20		20HK			W20
	Passenger	20		20HK			W20
Nubira Hatchback							
1999	Rear	18		18HK			W18
Nubira Sedan							
2002-1999	Rear	15		15HK			W15
Nubira Wagon							
2002-1999	Rear	15		15HK			W15
DODGE							
400							
1983-1982	Driver	16		16HK			
	Passenger	16		16HK			
600							
1988-1983	Driver	16		16HK			
	Passenger	16		16HK			
Aries							
1989-1981	Driver	16		16HK			
	Passenger	16		16HK			
	Rear	13					
Aspen							
1980, 1977-1976	Rear	16		16HK			
1979-1978	Rear	16					W16

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Specialty					
		Conventional	Beam		Rear	HYBRID	WINTER
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC		
DODGE (cont.)							
Avenger							
2014-2008, 2000-1995	Driver	24		24HK			W24
	Passenger	22		22HK			W22
B2500							
1998-1995	Driver	18		18HK			W18
	Passenger	18		18HK			W18
Caliber							
2012-2007	Driver	24		24HK			W24
	Passenger	17		17HK			W17
	Rear	11					
Caravan							
2007-2001	Driver	28		28HK			W28
	Passenger	28		28HK			W28
	Rear	16		16HK			W16
2000-1996	Driver	28		28HK			W28
	Passenger	28		28HK			W28
	Rear	18		18HK			W18
1995	Driver	22		22HK			W22
	Passenger	22		22HK			W22
	Rear	18		18HK			W18
1994	Driver	22		22HK			W22
	Passenger	18		18HK			W18
	Rear	18		18HK			W18
1993-1991	Driver	18		18HK			W18
	Passenger	18		18HK			W18
	Rear	18		18HK			W18
1990-1984	Driver	18		18HK			
	Passenger	18		18HK			
	Rear	16		16HK			
Challenger							
2015-2008	Driver	22		22HK			W22
	Passenger	22		22HK			W22
1974-1970	Driver	16		16HK			
	Passenger	16		16HK			
Charger							
2015-2011	Driver	24		24HK		24HB	W24
	Passenger	21		21HK		21HB	W21
2010-2006	Driver	22		22HK			W22
	Passenger	22		22HK			W22
1978-1975	Driver	18		18HK			
	Passenger	18		18HK			
1974-1971	Driver	16		16HK			
	Passenger	16		16HK			
Colt							
1995-1993	Driver	20		20HK			W20
	Passenger	19		19HK			W19
1992-1991	Driver	20		20HK			W20
	Passenger	17		17HK			W17
Coronet							
1976-1975	Driver	18		18HK			
	Passenger	18		18HK			
1974-1971	Driver	16		16HK			
	Passenger	16		16HK			

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Conventional		Beam		Rear		Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER		
DODGE (cont.)									
Dakota									
2010-2002	Driver	21		21HK					W21
	Passenger	21		21HK					W21
2001-1997	Driver	20		20HK					W20
	Passenger	20		20HK					W20
1996-1987	Driver	18		18HK					
	Passenger	18		18HK					
Dart									
2014-2013	Driver	26		26HK			26HB		W26
	Passenger	18		18HK			18HB		W18
Daytona									
1989-1985	Driver	18		18HK					
	Passenger	18		18HK					
	Rear	18		18HK					
Diplomat									
1989-1977	Driver	18		18HK					
	Passenger	18		18HK					
	Rear	16		16HK					
Durango									
2014-2011	Driver	22		22HK			22HB		W22
	Passenger	21		21HK			21HB		W21
	Rear					12A			
2009-2004	Driver	26		26HK					W26
	Passenger	20		20HK					W20
	Rear					14C			
2003-2002	Driver	21		21HK					W21
	Passenger	21		21HK					W21
2001-1998	Driver	20		20HK					W20
	Passenger	20		20HK					W20
	Rear	16		16HK					W16
Dynasty									
1993-1988	Driver	18		18HK					
	Passenger	18		18HK					
Grand Caravan									
2014-2011	Driver	26		26HK					W26
	Passenger	20		20HK					W20
	Rear	16		16HK					W16
2010-2008	Driver	26		26HK					W26
	Passenger	20		20HK					W20
	Rear					16E			
2007-2001	Driver	28		28HK					W28
	Passenger	28		28HK					W28
	Rear	16		16HK					W16
2000-1996	Driver	28		28HK					W28
	Passenger	28		28HK					W28
	Rear	18		18HK					W18
1995	Driver	22		22HK					W22
	Passenger	22		22HK					W22
	Rear	18		18HK					W18
1994	Driver	22		22HK					W22
	Passenger	18		18HK					W18
	Rear	18		18HK					W18
1993-1991	Driver	18		18HK					W18
	Passenger	18		18HK					W18
	Rear	18		18HK					W18

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Conventional		Beam		Rear		Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER		
DODGE (cont.)									
Grand Caravan (cont.)									
1990-1987	Driver	18		18HK					
	Passenger	18		18HK					
	Rear	16		16HK					
Intrepid									
2004-1997, 1994-1993	Driver	24		24HK					W24
	Passenger	22		22HK					W22
1996-1995	Driver	24		24HK					W24
	Passenger	24		24HK					W24
Journey									
2014-2009	Driver	24		24HK					W24
	Passenger	19		19HK					W19
	Rear					12A			
Lancer									
1989-1985	Driver	18		18HK					
	Passenger	18		18HK					
Magnum									
2008-2005	Driver	22		22HK					W22
	Passenger	22		22HK					W22
1979-1978	Driver	18		18HK					
	Passenger	18		18HK					
Mini Ram									
1988-1984	Driver	18		18HK					
	Passenger	18		18HK					
	Rear	16		16HK					
Mirada									
1983-1980	Driver	18		18HK					
	Passenger	18		18HK					
Monaco									
1992-1990	Driver	20		20HK					
	Passenger	20		20HK					
1978-1974	Driver	18		18HK					
	Passenger	18		18HK					
1973-1969	Driver	16		16HK					
	Passenger	16		16HK					
Neon									
2005-2000	Driver	22		22HK					W22
	Passenger	19		19HK					W19
1999-1995	Driver	21		21HK					W21
	Passenger	18		18HK					W18
Nitro									
2012-2009	Driver	19		19HK					W19
	Passenger	19		19HK					W19
	Rear	11							
2008-2007	Driver	19		19HK					W19
	Passenger	19		19HK					W19
	Rear					12E			
Polara									
1973-1969	Driver	16		16HK					
	Passenger	16		16HK					
Ram 1500									
2010-2009	Driver	22		22HK					W22
	Passenger	22		22HK					W22
2008-2002	Driver	24		24HK					W24
	Passenger	24		24HK					W24

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Conventional		Beam		Rear		Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER		
DODGE (cont.)									
Ram 1500 (cont.)									
2001-1995	Driver	20		20HK					W20
	Passenger	20		20HK					W20
Ram 1500 Van									
2003-1999	Driver	19		19HK					W19
	Passenger	19		19HK					W19
1998-1995	Driver	18		18HK					W18
	Passenger	18		18HK					W18
Ram 2500									
2010-2009	Driver	22		22HK					W22
	Passenger	22		22HK					W22
2008-2002	Driver	24		24HK					W24
	Passenger	24		24HK					W24
2001-1995	Driver	20		20HK					W20
	Passenger	20		20HK					W20
Ram 2500 Van									
2003-1999	Driver	19		19HK					W19
	Passenger	19		19HK					W19
1998-1996	Driver	18		18HK					W18
	Passenger	18		18HK					W18
Ram 3500									
2010-2009	Driver	22		22HK					W22
	Passenger	22		22HK					W22
2008-2002	Driver	24		24HK					W24
	Passenger	24		24HK					W24
2001-1995	Driver	20		20HK					W20
	Passenger	20		20HK					W20
Ram 3500 Van									
2003-1999	Driver	19		19HK					W19
	Passenger	19		19HK					W19
1997-1996	Driver	18		18HK					W18
	Passenger	18		18HK					W18
Ram 4500									
2010-2009	Driver	22		22HK					W22
	Passenger	22		22HK					W22
2008	Driver	24		24HK					W24
	Passenger	24		24HK					W24
Ram 5500									
2010-2009	Driver	22		22HK					W22
	Passenger	22		22HK					W22
2008	Driver	24		24HK					W24
	Passenger	24		24HK					W24
Ramcharger									
1993-1974	Driver	18		18HK					
	Passenger	18		18HK					
SX 2.0									
2005-2003	Driver	22		22HK					W22
	Passenger	19		19HK					W19
Shadow									
1994-1987	Driver	18		18HK					
	Passenger	18		18HK					
Spirit									
1995-1989	Driver	18		18HK					
	Passenger	18		18HK					

APPLICATION GUIDE PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Conventional Beam Rear Specialty					
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER
DODGE (cont.)							
Sprinter 2500							
2009-2007	Driver		260E				
	Passenger		240E				
	Rear				17X		
2006-2003	Driver	24		24HK			W24
	Passenger	22		22HK			W22
Sprinter 3500							
2009-2007	Driver		260E				
	Passenger		240E				
	Rear				17X		
2006-2003	Driver	24		24HK			W24
	Passenger	22		22HK			W22
St. Regis							
1981-1979	Driver	18		18HK			
	Passenger	18		18HK			
Stealth							
1996-1991	Driver	21		21HK			W21
	Passenger	20		20HK			W20
Stratus Coupe							
2005-2001	Driver	24		24HK			W24
	Passenger	21		21HK			W21
Stratus Sedan							
2006-1995	Driver	22		22HK			W22
	Passenger	22		22HK			W22
Viper							
2002-1992	Driver	16		16HK			W16
	Passenger	16		16HK			W16
EAGLE							
Medallion							
1989-1988	Driver	20		20HK			W20
	Passenger	20		20HK			W20
	Rear	18		18HK			W18
Premier							
1992-1988	Driver	20		20HK			
	Passenger	20		20HK			
Summit Coupe							
1996-1993	Driver	20		20HK			W20
	Passenger	19		19HK			W19
Summit Hatchback							
1992-1991	Driver	20		20HK			W20
	Passenger	17		17HK			W17
Summit Sedan							
1996-1993	Driver	20		20HK			W20
	Passenger	19		19HK			W19
1992-1991	Driver	20		20HK			W20
	Passenger	17		17HK			W17
Summit Wagon							
1996-1992	Driver	22		22HK			W22
	Passenger	18		18HK			W18
	Rear	16		16HK			W16
Talon							
1998-1997	Driver	24		24HK			W24
	Passenger	22		22HK			W22
	Rear	18		18HK			W18

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Conventional		Beam		Rear		Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER		
EAGLE (cont.)									
Talon (cont.)									
1996-1995	Driver	24		24HK					W24
	Passenger	22		22HK					W22
	Rear	19		19HK					W19
1994-1992	Driver	20		20HK					W20
	Passenger	20		20HK					W20
Vision									
1997-1995	Driver	24		24HK					W24
	Passenger	24		24HK					W24
1993	Driver	24		24HK					W24
	Passenger	22		22HK					W22
FERRARI									
348 Spider									
1995	Driver	20		20HK					W20
	Passenger	20		20HK					W20
512 M									
1995	Driver	20		20HK					W20
	Passenger	20		20HK					W20
F355									
2003-1999	Driver	21		21HK					W21
	Passenger	20		20HK					W20
F355 Berlinetta									
1996-1994	Driver	21		21HK					W21
	Passenger	20		20HK					W20
F355 F1									
1998	Driver	21		21HK					W21
	Passenger	20		20HK					W20
F355 GTS									
1998-1994	Driver	21		21HK					W21
	Passenger	20		20HK					W20
F355 Spider									
1999-1996	Driver	21		21HK					W21
	Passenger	20		20HK					W20
Mondial									
1985-1983	Driver	20		20HK					W20
	Passenger	20		20HK					W20
Mondial 3.2									
1988-1986	Driver	20		20HK					W20
	Passenger	20		20HK					W20
Mondial 8									
1985-1980	Driver	20		20HK					W20
	Passenger	20		20HK					W20
Mondial t									
1993-1989	Driver	20		20HK					W20
	Passenger	20		20HK					W20
Testarossa									
1988-1985	Driver	20		20HK					W20
	Passenger	20		20HK					W20
FIAT									
500									
2014-2011	Driver	24		24HK			24HB		
	Passenger	14		14HK			14HB		
	Rear					12A			
2010	Driver	24		24HK			24HB		
	Passenger	14		14HK			14HB		

APPLICATION GUIDE PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Conventional	Beam		Rear	Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER
FIAT (cont.)							
500L							
2014	Driver		260E				
	Passenger		150E				
FORD							
Aerostar							
1997-1986	Driver	22		22HK			W22
	Passenger	22		22HK			W22
	Rear	16		16HK			
Aspire							
1997-1994	Driver	20		20HK			W20
	Passenger	16		16HK			W16
Bronco							
1996-1980	Driver	18		18HK			W18
	Passenger	18		18HK			W18
C-Max							
2014-2013	Driver		280E				
	Passenger		250E				
	Rear				12E		
Contour							
2000-1995	Driver	22		22HK			W22
	Passenger	20		20HK			W20
Crown Victoria							
2011-1992	Driver	22		22HK			W22
	Passenger	22		22HK			W22
Custom							
1972-1971	Driver	18		18HK			
	Passenger	18		18HK			
Custom 500							
1977-1971	Driver	18		18HK			
	Passenger	18		18HK			
E-100 Econoline							
1983-1982	Driver	18		18HK			W18
	Passenger	18		18HK			W18
1981-1975	Driver	20		20HK			W20
	Passenger	20		20HK			W20
E-100 Econoline Club Wagon							
1983-1982	Driver	18		18HK			W18
	Passenger	18		18HK			W18
1981-1975	Driver	20		20HK			W20
	Passenger	20		20HK			W20
E-150							
2014-2003	Driver	20		20HK			W20
	Passenger	20		20HK			W20
E-150 Club Wagon							
2005-2003	Driver	20		20HK			W20
	Passenger	20		20HK			W20
E-150 Econoline Club Wagon							
2002-1998	Driver	20		20HK			W20
	Passenger	20		20HK			W20
1997-1992	Driver	22		22HK			W22
	Passenger	22		22HK			W22
1991-1982	Driver	18		18HK			W18
	Passenger	18		18HK			W18

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Conventional		Beam		Rear		Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER		
FORD (cont.)									
E-250									
2014-2003	Driver	20		20HK					W20
	Passenger	20		20HK					W20
E-250 Econoline									
2002-1998	Driver	20		20HK					W20
	Passenger	20		20HK					W20
1997-1992	Driver	22		22HK					W22
	Passenger	22		22HK					W22
1991-1981	Driver	18		18HK					W18
	Passenger	18		18HK					W18
E-250 Econoline Club Wagon									
1991-1981	Driver	18		18HK					W18
	Passenger	18		18HK					W18
E-250 Super Duty									
2005-2004	Driver	20		20HK					W20
	Passenger	20		20HK					W20
E-350									
2003	Driver	20		20HK					W20
	Passenger	20		20HK					W20
E-350 Club Wagon									
2005-2003	Driver	20		20HK					W20
	Passenger	20		20HK					W20
E-350 Econoline									
2008-2007, 2002-1998	Driver	20		20HK					W20
	Passenger	20		20HK					W20
1997-1991	Driver	22		22HK					W22
	Passenger	22		22HK					W22
E-350 Econoline Club Wagon									
2002-1998	Driver	20		20HK					W20
	Passenger	20		20HK					W20
1997-1992	Driver	22		22HK					W22
	Passenger	22		22HK					W22
1991-1982	Driver	19		19HK					W19
	Passenger	19		19HK					W19
E-350 Super Duty									
2014-2004	Driver	20		20HK					W20
	Passenger	20		20HK					W20
E-450 Econoline Super Duty Stripped									
2002-2000	Driver	20		20HK					W20
	Passenger	20		20HK					W20
E-550 Econoline Super Duty									
2002	Driver	20		20HK					W20
	Passenger	20		20HK					W20
E-550 Super Duty									
2003	Driver	20		20HK					W20
	Passenger	20		20HK					W20
EXP									
1988-1982	Driver	18		18HK					W18
	Passenger	18		18HK					W18
Econoline									
2006-1999	Driver	20		20HK					W20
	Passenger	20		20HK					W20
Econoline Super Duty									
1999-1998	Driver	20		20HK					W20
	Passenger	20		20HK					W20

APPLICATION GUIDE PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Conventional	Beam	Rear	Specialty		
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER
FORD (cont.)							
Econoline Super Duty (cont.)							
1997-1996	Driver	22		22HK			W22
	Passenger	22		22HK			W22
Econoline Van							
2014-2010	Driver	20		20HK			W20
	Passenger	20		20HK			W20
Econoline Wagon							
2014-2010	Driver	20		20HK			W20
	Passenger	20		20HK			W20
Edge							
2014-2007	Driver	26		26HK			W26
	Passenger	20		20HK			W20
	Rear				14E		
Elite							
1976-1975	Driver	16		16HK			
	Passenger	16		16HK			
Escape							
2015-2013	Driver		280E				
	Passenger		280E				
	Rear				12T		
2012-2008	Driver		200E				
	Passenger		200E				
	Rear				12E		
2007-2004	Driver	20		20HK			W20
	Passenger	18		18HK			W18
2003-2001	Driver	19		19HK			W19
	Passenger	19		19HK			W19
Escort							
2003-1994	Driver	20		20HK			W20
	Passenger	18		18HK			W18
1993-1991	Driver	20		20HK			W20
	Passenger	18		18HK			W18
	Rear	13		14HK			
1990-1981	Driver	18		18HK			
	Passenger	18		18HK			
	Rear	18		18HK			
Escort Wagon							
1990	Rear	13		14HK			
1989-1986	Rear	16		16HK			W16
1985-1981	Rear	15		15HK			W15
Excursion							
2005-2000	Driver	20		20HK			W20
	Passenger	20		20HK			W20
	Rear	16		16HK			W16
Expedition							
2015-2009	Driver	22		22HK			W22
	Passenger	22		22HK			W22
2008, 1998-1997	Driver	22		22HK			W22
	Passenger	22		22HK			W22
	Rear	16		16HK			W16
2007-2003	Driver	20		20HK			W20
	Passenger	20		20HK			W20
	Rear	17		17HK			W17

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Conventional		Beam		Rear		Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER		
FORD (cont.)									
Expedition (cont.)									
2002-1999	Driver	20		20HK					W20
	Passenger	20		20HK					W20
	Rear	16		16HK					W16
Explorer									
2015-2011	Driver		260E						
	Passenger		220E						
	Rear				12T				
2010-2006	Driver	20		20HK					W20
	Passenger	20		20HK					W20
	Rear	13							
2005	Driver	20		20HK					W20
	Passenger	20		20HK					W20
	Rear	16		16HK					W16
2004-2002	Driver	22		22HK					W22
	Passenger	22		22HK					W22
	Rear	16		16HK					W16
2001-1991	Driver	18		18HK					W18
	Passenger	18		18HK					W18
	Rear	14		14HK					
Explorer Sport									
2003-2002	Driver	18		18HK					W18
	Passenger	18		18HK					W18
	Rear	14		14HK					
Explorer Sport Trac									
2010-2007	Driver	20		20HK					W20
	Passenger	20		20HK					W20
2005-2001	Driver	18		18HK					W18
	Passenger	18		18HK					W18
F-150									
2014-2009, 1998-1997	Driver	22		22HK					W22
	Passenger	22		22HK					W22
2008-1999	Driver	20		20HK					W20
	Passenger	20		20HK					W20
1996-1995	Driver	18		18HK					W18
	Passenger	18		18HK					W18
1994-1980	Driver	18		18HK					
	Passenger	18		18HK					
F-150 Heritage									
2004	Driver	20		20HK					W20
	Passenger	20		20HK					W20
F-250									
2014-2009, 1998-1997	Driver	22		22HK					W22
	Passenger	22		22HK					W22
2008-1999	Driver	20		20HK					W20
	Passenger	20		20HK					W20
1996-1995	Driver	18		18HK					W18
	Passenger	18		18HK					W18
1994-1980	Driver	18		18HK					
	Passenger	18		18HK					
F-250 Super Duty									
2014-2009	Driver	22		22HK					W22
	Passenger	22		22HK					W22
2008-1999	Driver	20		20HK					W20
	Passenger	20		20HK					W20

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Specialty					
		Conventional	Beam		Rear	HYBRID	WINTER
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC		
FORD (cont.)							
F-350							
2014-2011, 2009, 1998- 1997	Driver	22		22HK			W22
	Passenger	22		22HK			W22
2008-1999	Driver	20		20HK			W20
	Passenger	20		20HK			W20
1996-1995	Driver	18		18HK			W18
	Passenger	18		18HK			W18
1994-1980	Driver	18		18HK			
	Passenger	18		18HK			
F-350 Super Duty							
2014-2009	Driver	22		22HK			W22
	Passenger	22		22HK			W22
2008-1999	Driver	20		20HK			W20
	Passenger	20		20HK			W20
F-450							
2014-2011, 2009, 1998- 1997	Driver	22		22HK			W22
	Passenger	22		22HK			W22
2008-1999	Driver	20		20HK			W20
	Passenger	20		20HK			W20
F-450 Super Duty							
2014-2009, 1997	Driver	22		22HK			W22
	Passenger	22		22HK			W22
2008-1999	Driver	20		20HK			W20
	Passenger	20		20HK			W20
F-550							
2014-2010	Driver	22		22HK			W22
	Passenger	22		22HK			W22
F-550 Super Duty							
2014-2009	Driver	22		22HK			W22
	Passenger	22		22HK			W22
2008-1999	Driver	20		20HK			W20
	Passenger	20		20HK			W20
Fairlane							
1970	Driver	16		16HK			
	Passenger	16		16HK			
Fairmont							
1983-1978	Driver	16		16HK			
	Passenger	16		16HK			
	Rear	16		16HK			
Festiva							
1993-1989	Driver	18		18HK			W18
	Passenger	18		18HK			W18
	Rear	15		15HK			W15
Fiesta							
2015-2011	Driver		250E				
	Passenger		160E				
Five Hundred							
2007-2005	Driver		240E				
	Passenger		200E				
Flex							
2015-2009	Driver	24		24HK			W24
	Passenger	22		22HK			W22
	Rear				12E		

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Conventional						Beam		Rear		Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER						
FORD (cont.)													
Focus													
2014-2012	Driver		280E										
	Passenger		280E										
	Rear				12E								
2011-2000	Driver	22		22HK							W22		
	Passenger	19		19HK							W19		
Focus Hatchback													
2007-2000	Driver	22		22HK							W22		
	Passenger	19		19HK							W19		
	Rear	15		15HK							W15		
Focus Wagon													
2007-2000	Driver	22		22HK							W22		
	Passenger	19		19HK							W19		
	Rear	11											
Freestar													
2007-2004	Driver	24		24HK							W24		
	Passenger	20		20HK							W20		
	Rear	16		16HK							W16		
Freestyle													
2007-2005	Driver		240E										
	Passenger		200E										
	Rear	13											
Fusion													
2015-2013	Driver		280E										
	Passenger		280E										
2012-2006	Driver	24		24HK							W24		
	Passenger	19		19HK							W19		
Galaxie 500													
1974-1970	Driver	18		18HK									
	Passenger	18		18HK									
Granada													
1982-1975	Driver	16		16HK									
	Passenger	16		16HK									
Grand Marquis													
2004-2000	Driver	22		22HK							W22		
	Passenger	22		22HK							W22		
LTD													
1986, 1983-1970	Driver	18		18HK									
	Passenger	18		18HK									
1985-1984	Driver	18		18HK									
	Passenger	18		18HK									
	Rear	16		16HK									
LTD II													
1979-1977	Driver	16		16HK									
	Passenger	16		16HK									
Maverick													
1977-1969	Driver	16		16HK									
	Passenger	16		16HK									
Mustang													
2015-2010	Driver		220E										
	Passenger		200E										
2009-2005	Driver	22		22HK							W22		
	Passenger	20		20HK							W20		
2004-1994	Driver	20		20HK							W20		
	Passenger	20		20HK							W20		

APPLICATION GUIDE PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Conventional		Beam		Rear		Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER		
FORD (cont.)									
Mustang (cont.)									
1993-1983, 1970-1969	Driver	16		16HK					
	Passenger	16		16HK					
1982-1979	Driver	16		16HK					
	Passenger	16		16HK					
	Rear	18		18HK					
1973-1971	Driver	18		18HK					
	Passenger	18		18HK					
Mustang Shelby GT500									
2009-2007	Driver		220E						
	Passenger		200E						
Mystique									
2000-1995	Driver	22		22HK					W22
	Passenger	20		20HK					W20
Pinto									
1980-1971	Driver	16		16HK					
	Passenger	16		16HK					
Police Interceptor Utility									
2015-2013	Driver		260E						
	Passenger		220E						
	Rear				12T				
Probe									
1997-1993	Driver	20		20HK					W20
	Passenger	20		20HK					W20
	Rear	20		20HK					W20
Ranchero									
1979-1966	Driver	16		16HK					
	Passenger	16		16HK					
Ranger									
2011-1992	Driver	18		18HK					W18
	Passenger	18		18HK					W18
1991-1983	Driver	18		18HK					
	Passenger	18		18HK					
Sable									
2001-1996	Driver	24		24HK					W24
	Passenger	20		20HK					W20
	Rear	18		18HK					W18
1995	Driver	20		20HK					W20
	Passenger	20		20HK					W20
	Rear	15		15HK					W15
Taurus									
2015-2010	Driver		260E						
	Passenger		200E						
2009-2008	Driver		240E						
	Passenger		200E						
2007-2005	Driver	24		24HK					W24
	Passenger	20		20HK					W20
2004-1996	Driver	24		24HK					W24
	Passenger	20		20HK					W20
	Rear	16		16HK					W16
1995-1992	Driver	20		20HK					W20
	Passenger	20		20HK					W20
	Rear	15		15HK					W15

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Conventional		Beam		Rear		Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER		
FORD (cont.)									
Taurus (cont.)									
1991-1986	Driver	20		20HK					
	Passenger	20		20HK					
	Rear	15		15HK					W15
Taurus X									
2009-2008	Driver		240E						
	Passenger		200E						
	Rear	13							
Tempo									
1994-1986	Driver	20		20HK					
	Passenger	20		20HK					
1985	Driver	19		19HK					
	Passenger	19		19HK					
1984	Driver	18		18HK					
	Passenger	18		18HK					
Thunderbird									
2005-2002	Driver	24		24HK					W24
	Passenger	22		22HK					W22
1997-1990	Driver	22		22HK					
	Passenger	22		22HK					
1989	Driver	22		22HK					
	Passenger	20		20HK					
1988-1983, 1976-1972	Driver	18		18HK					
	Passenger	18		18HK					
1982-1977, 1971-1967	Driver	16		16HK					
	Passenger	16		16HK					
Torino									
1976-1968	Driver	16		16HK					
	Passenger	16		16HK					
Transit									
2014	Driver		280E						
	Passenger		210E						
Transit Connect									
2015-2014	Driver		280E						
	Passenger		280E						
	Rear				14E				
2013-2010	Driver	26		26HK					W26
	Passenger	18		18HK					W18
	Rear	13		14HK					
Windstar									
2003-1996	Driver	24		24HK					W24
	Passenger	20		20HK					W20
	Rear	16		16HK					W16
1995	Driver	24		24HK					W24
	Passenger	20		20HK					W20
	Rear	13		14HK					
FREIGHTLINER									
Sprinter 2500									
2014-2007	Driver		260E						
	Passenger		240E						
2006-2002	Driver	24		24HK					W24
	Passenger	22		22HK					W22
Sprinter 3500									
2014-2007	Driver		260E						
	Passenger		240E						

APPLICATION GUIDE PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Conventional		Beam		Rear		Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER		
FREIGHTLINER (cont.)									
Sprinter 3500 (cont.)									
2006-2002	Driver	24		24HK					W24
	Passenger	22		22HK					W22
GMC									
Acadia									
2014-2013	Driver		240E						
	Passenger		210E						
	Rear	11							
2012-2007	Driver		240E						
	Passenger		210E						
C1500									
1999-1995	Driver	18		18HK					W18
	Passenger	18		18HK					W18
1994-1988	Driver	18		18HK					
	Passenger	18		18HK					
1986-1983	Driver	16		16HK					
	Passenger	16		16HK					
C1500 Suburban									
1999-1995	Driver	18		18HK					W18
	Passenger	18		18HK					W18
	Rear	14		14HK					
1994-1992	Driver	18		18HK					
	Passenger	18		18HK					
C2500									
2000-1995	Driver	18		18HK					W18
	Passenger	18		18HK					W18
1994-1988	Driver	18		18HK					
	Passenger	18		18HK					
1986-1983	Driver	16		16HK					
	Passenger	16		16HK					
C2500 Suburban									
1999-1995	Driver	18		18HK					W18
	Passenger	18		18HK					W18
	Rear	14		14HK					
1994-1992	Driver	18		18HK					
	Passenger	18		18HK					
C3500									
2000-1995	Driver	18		18HK					W18
	Passenger	18		18HK					W18
1994-1988	Driver	18		18HK					
	Passenger	18		18HK					
1986-1983	Driver	16		16HK					
	Passenger	16		16HK					
C3500HD									
2002-2001	Driver	22		22HK					W22
	Passenger	22		22HK					W22
2000-1995	Driver	18		18HK					W18
	Passenger	18		18HK					W18
1994-1991	Driver	18		18HK					
	Passenger	18		18HK					
C4500 Topkick									
2008-2004	Driver	22		22HK					W22
	Passenger	22		22HK					W22

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Specialty					
		Conventional TRADITIONAL	Beam BEAM ORIGINAL	Beam BEAM HOOK	Rear REAR SPECIFIC	HYBRID	WINTER
GMC (cont.)							
C5500 Topkick							
2008-2004	Driver	22		22HK			W22
	Passenger	22		22HK			W22
C6500 Topkick							
2008-2004	Driver	22		22HK			W22
	Passenger	22		22HK			W22
C7500 Topkick							
2008-2004	Driver	22		22HK			W22
	Passenger	22		22HK			W22
Caballero							
1987-1978	Driver	18		18HK			
	Passenger	18		18HK			
Canyon							
2012-2004	Driver	22		22HK			W22
	Passenger	19		19HK			W19
Envoy							
2009-2007	Driver	22		22HK			W22
	Passenger	22		22HK			W22
	Rear				12E		
2006-2002	Driver	22		22HK			W22
	Passenger	22		22HK			W22
	Rear	16		16HK			W16
Envoy XL							
2006-2002	Driver	22		22HK			W22
	Passenger	22		22HK			W22
	Rear	16		16HK			W16
Envoy XUV							
2005-2004	Driver	22		22HK			W22
	Passenger	22		22HK			W22
	Rear				12E		
G1500 Rally							
1995-1993	Driver	18		18HK			
	Passenger	18		18HK			
1992-1983	Driver	16		16HK			
	Passenger	16		16HK			
G1500 Rally Custom							
1984-1983	Driver	16		16HK			
	Passenger	16		16HK			
G1500 Rally STX							
1995-1993	Driver	18		18HK			
	Passenger	18		18HK			
1992-1983	Driver	16		16HK			
	Passenger	16		16HK			
G1500 Vandura							
1995-1993	Driver	18		18HK			
	Passenger	18		18HK			
1992-1983	Driver	16		16HK			
	Passenger	16		16HK			
G2500 Rally							
1995-1993	Driver	18		18HK			
	Passenger	18		18HK			
1992-1983	Driver	16		16HK			
	Passenger	16		16HK			

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Conventional	Beam	Rear	Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID
GMC (cont.)						
G2500 Rally Custom						
1984-1983	Driver	16		16HK		
	Passenger	16		16HK		
G2500 Rally STX						
1995-1993	Driver	18		18HK		
	Passenger	18		18HK		
1992-1983	Driver	16		16HK		
	Passenger	16		16HK		
G2500 Vandura						
1995-1993	Driver	18		18HK		
	Passenger	18		18HK		
1992-1983	Driver	16		16HK		
	Passenger	16		16HK		
G3500 Rally						
1995-1993	Driver	18		18HK		
	Passenger	18		18HK		
1992-1983	Driver	16		16HK		
	Passenger	16		16HK		
G3500 Rally Camper Special						
1995-1993	Driver	18		18HK		
	Passenger	18		18HK		
1992-1983	Driver	16		16HK		
	Passenger	16		16HK		
G3500 Rally Custom						
1984-1983	Driver	16		16HK		
	Passenger	16		16HK		
G3500 Rally STX						
1995-1993	Driver	18		18HK		
	Passenger	18		18HK		
1992-1983	Driver	16		16HK		
	Passenger	16		16HK		
G3500 Vandura						
1995-1993	Driver	18		18HK		
	Passenger	18		18HK		
1992-1983	Driver	16		16HK		
	Passenger	16		16HK		
G3500 Vandura Special						
1995-1993	Driver	18		18HK		
	Passenger	18		18HK		
1992-1983	Driver	16		16HK		
	Passenger	16		16HK		
Jimmy						
2005-1995	Driver	20		20HK		W20
	Passenger	20		20HK		W20
	Rear	14		14HK		
1994-1989	Driver	16		16HK		
	Passenger	16		16HK		
	Rear	14		14HK		
1988-1983	Driver	16		16HK		
	Passenger	16		16HK		
K1500						
1999-1995	Driver	18		18HK		W18
	Passenger	18		18HK		W18
1994-1988	Driver	18		18HK		
	Passenger	18		18HK		

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Conventional		Beam		Rear		Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER		
GMC (cont.)									
K1500 (cont.)									
1986-1983	Driver	16		16HK					
	Passenger	16		16HK					
K1500 Suburban									
1999-1995	Driver	18		18HK					W18
	Passenger	18		18HK					W18
	Rear	14		14HK					
1994-1992	Driver	18		18HK					
	Passenger	18		18HK					
K2500									
2000-1995	Driver	18		18HK					W18
	Passenger	18		18HK					W18
1994-1988	Driver	18		18HK					
	Passenger	18		18HK					
1986-1983	Driver	16		16HK					
	Passenger	16		16HK					
K2500 Suburban									
1999-1995	Driver	18		18HK					W18
	Passenger	18		18HK					W18
	Rear	14		14HK					
1994-1992	Driver	18		18HK					
	Passenger	18		18HK					
K3500									
2000-1995	Driver	18		18HK					W18
	Passenger	18		18HK					W18
1994-1988	Driver	18		18HK					
	Passenger	18		18HK					
1986-1983	Driver	16		16HK					
	Passenger	16		16HK					
P3500									
1999-1991	Driver	18		18HK					W18
	Passenger	18		18HK					W18
R1500									
1987	Driver	16		16HK					
	Passenger	16		16HK					
R1500 Suburban									
1991-1987	Driver	16		16HK					
	Passenger	16		16HK					
R2500									
1989-1988	Driver	18		18HK					
	Passenger	18		18HK					
1987	Driver	16		16HK					
	Passenger	16		16HK					
R2500 Suburban									
1991-1987	Driver	16		16HK					
	Passenger	16		16HK					
R3500									
1991-1988	Driver	18		18HK					
	Passenger	18		18HK					
1987	Driver	16		16HK					
	Passenger	16		16HK					
S15 Jimmy									
1984-1983	Driver	16		16HK					
	Passenger	16		16HK					

APPLICATION GUIDE PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Conventional					
		TRADITIONAL	Beam		Rear		Specialty
			BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER
GMC (cont.)							
Safari							
2005-1993	Driver	18		18HK			
	Passenger	18		18HK			
	Rear	14		14HK			
1992-1985	Driver	18		18HK			
	Passenger	18		18HK			
Savana 1500							
2014-1996	Driver	22		22HK			W22
	Passenger	22		22HK			W22
Savana 2500							
2014-1996	Driver	22		22HK			W22
	Passenger	22		22HK			W22
Savana 3500							
2014-1996	Driver	22		22HK			W22
	Passenger	22		22HK			W22
Savana 4500							
2014-2009	Driver	22		22HK			W22
	Passenger	22		22HK			W22
Sierra							
2015-2007	Driver		220E				
	Passenger		220E				
Sierra 1500							
2006-1999	Driver	22		22HK			W22
	Passenger	22		22HK			W22
Sierra 1500 Classic Denali							
2007	Driver	22		22HK			W22
	Passenger	22		22HK			W22
Sierra 1500 Classic Hybrid							
2007	Driver	22		22HK			W22
	Passenger	22		22HK			W22
Sierra 1500 Classic SL							
2007	Driver	22		22HK			W22
	Passenger	22		22HK			W22
Sierra 1500 Classic SLE							
2007	Driver	22		22HK			W22
	Passenger	22		22HK			W22
Sierra 1500 Classic SLT							
2007	Driver	22		22HK			W22
	Passenger	22		22HK			W22
Sierra 1500 Classic WT							
2007	Driver	22		22HK			W22
	Passenger	22		22HK			W22
Sierra 1500 HD							
2006-2005, 2003-2001	Driver	22		22HK			W22
	Passenger	22		22HK			W22
Sierra 1500 HD Classic SLE							
2007	Driver	22		22HK			W22
	Passenger	22		22HK			W22
Sierra 1500 HD Classic SLT							
2007	Driver	22		22HK			W22
	Passenger	22		22HK			W22
Sierra 2500							
2004-1999	Driver	22		22HK			W22
	Passenger	22		22HK			W22

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Conventional	Beam		Rear	Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER
GMC (cont.)							
Sierra 2500 HD							
2006-2001	Driver	22		22HK			W22
	Passenger	22		22HK			W22
Sierra 2500 HD Classic SL							
2007	Driver	22		22HK			W22
	Passenger	22		22HK			W22
Sierra 2500 HD Classic SLE							
2007	Driver	22		22HK			W22
	Passenger	22		22HK			W22
Sierra 2500 HD Classic SLT							
2007	Driver	22		22HK			W22
	Passenger	22		22HK			W22
Sierra 2500 HD Classic WT							
2007	Driver	22		22HK			W22
	Passenger	22		22HK			W22
Sierra 3500							
2006-2001	Driver	22		22HK			W22
	Passenger	22		22HK			W22
Sierra 3500 Classic SL							
2007	Driver	22		22HK			W22
	Passenger	22		22HK			W22
Sierra 3500 Classic SLE							
2007	Driver	22		22HK			W22
	Passenger	22		22HK			W22
Sierra 3500 Classic SLT							
2007	Driver	22		22HK			W22
	Passenger	22		22HK			W22
Sierra 3500 Classic WT							
2007	Driver	22		22HK			W22
	Passenger	22		22HK			W22
Sierra C3							
2001	Driver	22		22HK			W22
	Passenger	22		22HK			W22
Sonoma							
2004-1994	Driver	20		20HK			W20
	Passenger	20		20HK			W20
1993-1991	Driver	16		16HK			
	Passenger	16		16HK			
Sprint							
1977-1971	Driver	16		16HK			
	Passenger	16		16HK			
Syclone							
1991	Driver	16		16HK			
	Passenger	16		16HK			
Terrain							
2014-2010	Driver		240E				
	Passenger		170E				
	Rear	13					
Typhoon							
1993-1992	Driver	16		16HK			
	Passenger	16		16HK			
	Rear	14		14HK			
V1500							
1987	Driver	16		16HK			
	Passenger	16		16HK			

APPLICATION GUIDE PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Conventional	Beam		Rear	Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER
GMC (cont.)							
V1500 Suburban							
1991-1987	Driver	16		16HK			
	Passenger	16		16HK			
V2500							
1987	Driver	16		16HK			
	Passenger	16		16HK			
V2500 Suburban							
1991-1987	Driver	16		16HK			
	Passenger	16		16HK			
V3500							
1991-1988	Driver	18		18HK			
	Passenger	18		18HK			
1987	Driver	16		16HK			
	Passenger	16		16HK			
Yukon							
2015	Driver	22		22HK			W22
	Passenger	22		22HK			W22
	Rear	13					
2014-2009	Driver	22		22HK			W22
	Passenger	22		22HK			W22
	Rear				12E		
2008-2007	Driver		220E				
	Passenger		220E				
	Rear				12E		
2006-2000	Driver	22		22HK			W22
	Passenger	22		22HK			W22
	Rear	16		16HK			W16
1999-1992	Driver	18		18HK			W18
	Passenger	18		18HK			W18
	Rear	14		14HK			
Yukon XL							
2015	Driver	22		22HK			W22
	Passenger	22		22HK			W22
	Rear	13					
Yukon XL 1500							
2014-2009	Driver	22		22HK			W22
	Passenger	22		22HK			W22
	Rear				12E		
2008-2007	Driver		220E				
	Passenger		220E				
	Rear				12E		
2006-2000	Driver	22		22HK			W22
	Passenger	22		22HK			W22
	Rear	16		16HK			W16
Yukon XL 2500							
2013-2009	Driver	22		22HK			W22
	Passenger	22		22HK			W22
	Rear				12E		
2008-2007	Driver		220E				
	Passenger		220E				
	Rear				12E		
2006-2000	Driver	22		22HK			W22
	Passenger	22		22HK			W22
	Rear	16		16HK			W16

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Specialty					
		Conventional	Beam		Rear	HYBRID	WINTER
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC		
GEO							
Metro							
1997-1995	Driver	20		20HK			W20
	Passenger	19		19HK			W19
1994-1991	Driver	20		20HK			W20
	Passenger	18		18HK			W18
1990-1989	Driver	20		20HK			W20
	Passenger	18		18HK			W18
	Rear	15		15HK			W15
Prizm							
1997-1993	Driver	20		20HK			W20
	Passenger	18		18HK			W18
Spectrum							
1989	Driver	18		18HK			W18
	Passenger	18		18HK			W18
Storm							
1993-1990	Driver	22		22HK			W22
	Passenger	20		20HK			W20
Tracker							
1997-1995	Driver	17		17HK			W17
	Passenger	17		17HK			W17
	Rear	15		15HK			W15
1994-1993	Driver	17		17HK			W17
	Passenger	17		17HK			W17
1992-1990	Driver	17		17HK			W17
	Passenger	17		17HK			W17
	Rear	16		16HK			W16
HONDA							
Accord							
2014-2008	Driver	26		26HK		26HB	W26
	Passenger	19		19HK		19HB	W19
2007-2003	Driver	26		26HK			W26
	Passenger	18		18HK			W18
2002-1998, 1993-1990	Driver	24		24HK			W24
	Passenger	19		19HK			W19
1997-1994	Driver	24		24HK			W24
	Passenger	20		20HK			W20
1989-1986	Driver	19		19HK			W19
	Passenger	19		19HK			W19
	Rear	19		19HK			W19
Accord Wagon							
1997-1994	Driver	24		24HK			W24
	Passenger	20		20HK			W20
	Rear	15		15HK			W15
CR-V							
2014-2012	Driver	26		26HK		26HB	W26
	Passenger	16		16HK		16HB	W16
	Rear	13					
2011-2007	Driver	26		26HK		26HB	W26
	Passenger	16		16HK		16HB	W16
	Rear				14B		
2006-2002	Driver	21		21HK			W21
	Passenger	20		20HK			W20
	Rear	11					

APPLICATION GUIDE PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Specialty					
		Conventional TRADITIONAL	Beam BEAM ORIGINAL	Beam BEAM HOOK	Rear REAR SPECIFIC	HYBRID	WINTER
HONDA (cont.)							
CR-V (cont.)							
2001-1997	Driver	20		20HK			W20
	Passenger	19		19HK			W19
	Rear	13					
CR-Z							
2014-2011	Driver	26		26HK		26HB	W26
	Passenger	21		21HK		21HB	W21
	Rear	16		16HK		16HB	W16
CRX							
1991-1988	Driver	20		20HK			W20
	Passenger	19		19HK			W19
	Rear	17		17HK			W17
Civic							
2005-2001	Driver	21		21HK			W21
	Passenger	19		19HK			W19
2000-1996	Driver	20		20HK			W20
	Passenger	18		18HK			W18
	Rear	15		15HK			W15
1995-1992	Driver	22		22HK			W22
	Passenger	18		18HK			W18
1991-1988	Driver	20		20HK			W20
	Passenger	19		19HK			W19
1987-1984	Driver	18		18HK			W18
	Passenger	18		18HK			W18
Civic 2 Doors							
2014-2012	Driver	28		28HK		28HB	W28
	Passenger	24		24HK		24HB	W24
2011-2006	Driver		280E				
	Passenger		250E				
Civic 4 Doors							
2014-2008	Driver	26		26HK		26HB	W26
	Passenger	22		22HK		22HB	W22
Civic Si							
2005-2002	Driver	24		24HK			W24
	Passenger	16		16HK			W16
Civic Wagon							
1991-1988	Driver	20		20HK			W20
	Passenger	19		19HK			W19
	Rear	16		16HK			W16
Civic del Sol							
1997-1993	Driver	22		22HK			W22
	Passenger	19		19HK			W19
Crosstour							
2014-2012	Driver	26		26HK		26HB	W26
	Passenger	19		19HK		19HB	W19
	Rear	21		21HK		21HB	W21
EV Plus							
1999-1998	Driver	24		24HK			W24
	Passenger	22		22HK			W22
Element							
2011-2003	Driver	20		20HK			W20
	Passenger	20		20HK			W20
	Rear				12B		

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Conventional		Beam		Rear		Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER		
HONDA (cont.)									
Fit									
2014-2009	Driver	28		28HK		28HB			
	Passenger	14		14HK		14HB			
	Rear				14B				
2008-2006	Driver	24		24HK		24HB		W24	
	Passenger	16		16HK		16HB		W16	
	Rear				14B				
Insight									
2014-2012	Driver	26		26HK		26HB		W26	
	Passenger	18		18HK		18HB		W18	
	Rear	20		20HK		20HB		W20	
2011-2010	Driver	26		26HK		26HB		W26	
	Passenger	18		18HK		18HB		W18	
	Rear				16B				
2006-2000	Driver	22		22HK				W22	
	Passenger	19		19HK				W19	
	Rear	16		16HK				W16	
Odyssey									
2014-2005	Driver	26		26HK				W26	
	Passenger	22		22HK				W22	
	Rear				16B				
2004-1999	Driver	24		24HK				W24	
	Passenger	21		21HK				W21	
	Rear	17		17HK				W17	
1998-1995	Driver	24		24HK				W24	
	Passenger	24		24HK				W24	
	Rear	15		15HK				W15	
Passport									
2002-1999	Driver	19		19HK				W19	
	Passenger	19		19HK				W19	
	Rear	13							
1998	Driver	19		19HK				W19	
	Passenger	19		19HK				W19	
	Rear	14		14HK					
1997-1994	Driver	18		18HK				W18	
	Passenger	18		18HK				W18	
Pilot									
2014-2009	Driver	22		22HK				W22	
	Passenger	21		21HK				W21	
	Rear				14B				
2008-2003	Driver	24		24HK				W24	
	Passenger	21		21HK				W21	
	Rear				14B				
Prelude									
2001-1997	Driver	21		21HK				W21	
	Passenger	19		19HK				W19	
1996-1992	Driver	22		22HK				W22	
	Passenger	18		18HK				W18	
1991-1988	Driver	20		20HK				W20	
	Passenger	19		19HK				W19	
Ridgeline									
2014-2009	Driver	22		22HK				W22	
	Passenger	22		22HK				W22	
2008-2006	Driver	24		24HK				W24	
	Passenger	22		22HK				W22	

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Conventional	Beam	Rear	Specialty		
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER
HONDA (cont.)							
S2000							
2009-2000	Driver	16		16HK			W16
	Passenger	20		20HK			W20
HUMMER							
H1							
2006, 2004-2002	Driver	11					
	Passenger	11					
H2							
2009-2003	Driver	17		17HK			W17
	Passenger	17		17HK			W17
	Rear	11					
H3							
2010-2006	Driver	17		17HK			W17
	Passenger	16		16HK			W16
	Rear	11					
H3T							
2010-2009	Driver	17		17HK			W17
	Passenger	16		16HK			W16
HYUNDAI							
Accent							
2014-2012	Driver	26		26HK			W26
	Passenger	16		16HK			W16
	Rear				11A		
2011-2007	Driver	22		22HK			W22
	Passenger	16		16HK			W16
	Rear				14A		
2006	Driver	22		22HK			W22
	Passenger	16		16HK			W16
2005-2001, 1995	Driver	20		20HK			W20
	Passenger	18		18HK			W18
2000	Driver	20		20HK			W20
	Passenger	18		18HK			W18
	Rear	18		18HK			W18
1999-1996	Driver	20		20HK			W20
	Passenger	18		18HK			W18
	Rear	20		20HK			W20
Azera							
2014-2012	Driver	26		26HK		26HB	W26
	Passenger	18		18HK		18HB	W18
2011-2006	Driver	24		24HK			W24
	Passenger	20		20HK			W20
Elantra							
2014-2011	Driver	28		28HK			
	Passenger	14		14HK			
2010-2007	Driver	24		24HK			W24
	Passenger	18		18HK			W18
2006-2001	Driver	20		20HK			W20
	Passenger	18		18HK			W18
	Rear	20		20HK			W20
2000-1996	Driver	20		20HK			W20
	Passenger	18		18HK			W18
1995-1992	Driver	20		20HK			W20
	Passenger	19		19HK			W19

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Conventional						Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER		
HYUNDAI (cont.)									
Elantra Touring									
2009	Driver	24		24HK				W24	
	Passenger	18		18HK				W18	
Entourage									
2010-2007	Driver	26		26HK				W26	
	Passenger	18		18HK				W18	
Equus									
2014-2012	Driver	24		24HK		24HB		W24	
	Passenger	20		20HK		20HB		W20	
2011	Driver		240E						
	Passenger		200E						
Excel									
1994-1990	Driver	18		18HK				W18	
	Passenger	18		18HK				W18	
	Rear	16		16HK				W16	
1989-1988	Driver	17		17HK				W17	
	Passenger	17		17HK				W17	
	Rear	17		17HK				W17	
1987-1986	Driver	16		16HK				W16	
	Passenger	16		16HK				W16	
	Rear	16		16HK				W16	
Genesis									
2015	Driver	26		26HK		26HB		W26	
	Passenger	16		16HK		16HB		W16	
2014-2012	Driver	24		24HK		24HB		W24	
	Passenger	20		20HK		20HB		W20	
2011-2009	Driver		240E						
	Passenger		200E						
Genesis Coupe									
2014-2010	Driver	24		24HK				W24	
	Passenger	20		20HK				W20	
Santa Fe									
2014-2013	Driver	26		26HK					
	Passenger	14		14HK					
2012-2007	Driver	24		24HK				W24	
	Passenger	18		18HK				W18	
	Rear				14A				
2006-2005	Driver	24		24HK				W24	
	Passenger	20		20HK				W20	
	Rear	13							
2004-2001	Driver	22		22HK				W22	
	Passenger	20		20HK				W20	
	Rear	13							
Scoupe									
1995-1991	Driver	19		19HK				W19	
	Passenger	18		18HK				W18	
Sonata									
2014-2011	Driver	26		26HK		26HB		W26	
	Passenger	18		18HK		18HB		W18	
2010-2006	Driver	24		24HK				W24	
	Passenger	20		20HK				W20	
2005-1999	Driver	22		22HK				W22	
	Passenger	20		20HK				W20	
1998-1995	Driver	20		20HK				W20	
	Passenger	20		20HK				W20	

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Specialty					
		Conventional	Beam		Rear	HYBRID	WINTER
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC		
HYUNDAI (cont.)							
Sonata (cont.)							
1994-1989	Driver	20		20HK			W20
	Passenger	18		18HK			W18
Stellar							
1987-1985	Driver	18		18HK			W18
	Passenger	18		18HK			W18
Tiburon							
2008-2007	Driver	22		22HK			W22
	Passenger	18		18HK			W18
2006-2003, 2001-1997	Driver	22		22HK			W22
	Passenger	18		18HK			W18
	Rear	20		20HK			W20
Tucson							
2014-2005	Driver	24		24HK			W24
	Passenger	16		16HK			W16
Veloster							
2014-2012	Driver	26		26HK			W26
	Passenger	18		18HK			W18
XG300							
2001	Driver	22		22HK			W22
	Passenger	20		20HK			W20
XG350							
2005-2002	Driver	22		22HK			W22
	Passenger	20		20HK			W20
INFINITI							
EX35							
2012-2011	Driver	24		24HK		24HB	W24
	Passenger	17		17HK		17HB	W17
	Rear				14B		
2010-2008	Driver	22		22HK			W22
	Passenger	18		18HK			W18
	Rear				14B		
EX37							
2013	Driver	24		24HK		24HB	W24
	Passenger	17		17HK		17HB	W17
	Rear				14B		
FX35							
2012-2011	Driver	24		24HK		24HB	W24
	Passenger	19		19HK		19HB	W19
	Rear				14B		
2010-2009	Driver	22		22HK		22HB	W22
	Passenger	19		19HK		19HB	W19
	Rear				14B		
2008-2003	Driver	22		22HK			W22
	Passenger	20		20HK			W20
	Rear				14B		
FX37							
2013	Driver	24		24HK		24HB	W24
	Passenger	19		19HK		19HB	W19
	Rear				14B		
FX45							
2008-2003	Driver	22		22HK			W22
	Passenger	20		20HK			W20
	Rear				14B		

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Conventional		Beam		Rear		Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER		
INFINITI (cont.)									
FX50									
2013-2011	Driver	24		24HK		24HB		W24	
	Passenger	19		19HK		19HB		W19	
	Rear				14B				
2010-2009	Driver	22		22HK		22HB		W22	
	Passenger	19		19HK		19HB		W19	
	Rear				14B				
G20									
2002-1999, 1996-1991	Driver	21		21HK				W21	
	Passenger	19		19HK				W19	
G25									
2012-2011	Driver	26		26HK		26HB		W26	
	Passenger	16		16HK		16HB		W16	
G35 Coupe									
2007-2003	Driver	24		24HK				W24	
	Passenger	17		17HK				W17	
G35 Sedan									
2008-2007	Driver	26		26HK		26HB		W26	
	Passenger	16		16HK		16HB		W16	
2006-2003	Driver	22		22HK				W22	
	Passenger	18		18HK				W18	
G37									
2009-2008	Driver	26		26HK		26HB		W26	
	Passenger	17		17HK		17HB		W17	
G37 Coupe									
2013-2010	Driver	26		26HK		26HB		W26	
	Passenger	17		17HK		17HB		W17	
G37 Sedan									
2013-2010	Driver	26		26HK		26HB		W26	
	Passenger	16		16HK		16HB		W16	
I30									
2001-2000	Driver	26		26HK				W26	
	Passenger	17		17HK				W17	
1999-1996	Driver	22		22HK				W22	
	Passenger	21		21HK				W21	
I35									
2004-2002	Driver	26		26HK				W26	
	Passenger	17		17HK				W17	
JX35									
2013	Driver	26		26HK		26HB		W26	
	Passenger	17		17HK		17HB		W17	
M30									
1992-1990	Driver	21		21HK				W21	
	Passenger	19		19HK				W19	
M35									
2010-2006	Driver	24		24HK				W24	
	Passenger	19		19HK				W19	
M35h									
2013-2012	Driver	26		26HK		26HB		W26	
	Passenger	19		19HK		19HB		W19	
M37									
2013-2011	Driver	26		26HK		26HB		W26	
	Passenger	19		19HK		19HB		W19	

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Specialty					
		Conventional	Beam		Rear	HYBRID	WINTER
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC		
INFINITI (cont.)							
M45							
2010-2006	Driver	24		24HK			W24
	Passenger	19		19HK			W19
2004-2003	Driver	21		21HK			W21
	Passenger	19		19HK			W19
M56							
2013-2011	Driver	26		26HK		26HB	W26
	Passenger	19		19HK		19HB	W19
Q45							
2006-2002	Driver	26		26HK			W26
	Passenger	18		18HK			W18
2001-1997	Driver	22		22HK			W22
	Passenger	20		20HK			W20
1996-1990	Driver	21		21HK			W21
	Passenger	21		21HK			W21
Q50							
2014	Driver	26		26HK		26HB	W26
	Passenger	17		17HK		17HB	W17
Q60							
2014	Driver	26		26HK		26HB	W26
	Passenger	17		17HK		17HB	W17
Q70							
2014	Driver	26		26HK		26HB	W26
	Passenger	19		19HK		17HB	W19
QX4							
2003-1997	Driver	22		22HK			W22
	Passenger	21		21HK			W21
	Rear	11					
QX50							
2015-2014	Driver	24		24HK		24HB	W24
	Passenger	17		17HK		17HB	W17
	Rear				14B		
QX56							
2013-2011	Driver	24		24HK		24HB	W24
	Passenger	19		19HK		19HB	W19
2010-2004	Driver	24		24HK			W24
	Passenger	22		22HK			W22
	Rear				12B		
QX60							
2014	Driver	26		26HK		26HB	W26
	Passenger	17		17HK		17HB	W17
QX70							
2014	Driver	24		24HK		24HB	W24
	Passenger	19		19HK		19HB	W19
	Rear				14B		
QX80							
2014	Driver	24		24HK		24HB	W24
	Passenger	19		19HK		19HB	W19
ISUZU							
Amigo							
2000-1999	Driver	19		19HK			W19
	Passenger	19		19HK			W19
	Rear	13					
1998	Driver	19		19HK			W19
	Passenger	19		19HK			W19

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Conventional		Beam		Rear		Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER		
ISUZU (cont.)									
Amigo (cont.)									
1994-1989	Driver	18		18HK					W18
	Passenger	18		18HK					W18
Ascender									
2008-2007	Driver	22		22HK					W22
	Passenger	22		22HK					W22
	Rear				12E				
2006-2003	Driver	22		22HK					W22
	Passenger	22		22HK					W22
	Rear	16		16HK					W16
Axiom									
2004-2002	Driver	20		20HK					W20
	Passenger	19		19HK					W19
	Rear				14B				
Hombre									
2000-1996	Driver	20		20HK					W20
	Passenger	20		20HK					W20
Impulse									
1992-1990	Driver	22		22HK					W22
	Passenger	22		22HK					W22
	Rear	20		20HK					W20
Oasis									
1999-1996	Driver	24		24HK					W24
	Passenger	24		24HK					W24
	Rear	15		15HK					W15
Pickup									
1995-1981	Driver	18		18HK					W18
	Passenger	18		18HK					W18
Rodeo									
2004-1998	Driver	19		19HK					W19
	Passenger	19		19HK					W19
	Rear	13							
1997-1991	Driver	18		18HK					W18
	Passenger	18		18HK					W18
Stylus									
1993-1991	Driver	22		22HK					W22
	Passenger	20		20HK					W20
Trooper									
2002-1992	Driver	20		20HK					W20
	Passenger	20		20HK					W20
	Rear	15		15HK					W15
1991-1984	Driver	17		17HK					W17
	Passenger	17		17HK					W17
	Rear	16		16HK					W16
VehiCROSS									
2001-1999	Driver	24		24HK					W24
	Passenger	17		17HK					W17
i-280									
2006	Driver	22		22HK					W22
	Passenger	19		19HK					W19
i-290									
2008-2007	Driver	22		22HK					W22
	Passenger	19		19HK					W19

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Conventional		Beam		Rear		Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER		
ISUZU (cont.)									
i-350									
2006	Driver	22		22HK					W22
	Passenger	19		19HK					W19
i-370									
2008-2007	Driver	22		22HK					W22
	Passenger	19		19HK					W19
JAGUAR									
F-Type									
2015-2014	Driver	22		22HK					W22
	Passenger	21		21HK					W21
S-Type									
2003-2002	Driver	24		24HK					W24
	Passenger	19		19HK					W19
2001-1999	Driver	22		22HK					W22
	Passenger	22		22HK					W22
Vanden Plas									
2003-1988	Driver	21		21HK					W21
X-Type									
2008-2005	Driver	22		22HK					W22
	Passenger	19		19HK					W19
	Rear					14E			
2004-2001	Driver	22		22HK					W22
	Passenger	19		19HK					W19
XF									
2015-2009	Driver		230E						
	Passenger		190E						
XFR									
2015-2010	Driver		230E						
	Passenger		190E						
XFR-S									
2015-2013	Driver		230E						
	Passenger		190E						
XJ									
2014-2011	Driver		230E						
	Passenger		190E						
XJ12									
1996-1994, 1992-1988	Driver	21		21HK					W21
XJ6									
1997-1988	Driver	21		21HK					W21
XJ8									
2003-1998	Driver	21		21HK					W21
XK									
2014-2007	Driver	22		22HK			22HB		W22
	Passenger	21		21HK			21HB		W21
XK8									
2006-1997	Driver	21		21HK					W21
	Passenger	21		21HK					W21
XKR									
2014-2007	Driver	22		22HK			22HB		W22
	Passenger	21		21HK			21HB		W21
2006-2000	Driver	21		21HK					W21
	Passenger	21		21HK					W21

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Conventional	Beam		Rear	Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER
JEEP							
Cherokee							
2014	Driver	26		26HK		26HB	W26
	Passenger	18		18HK		18HB	W18
	Rear				14A		
2001-1997	Driver	18		18HK			W18
	Passenger	18		18HK			W18
1996-1984	Driver	18		18HK			
	Passenger	18		18HK			
1983-1974	Driver	16		16HK			
	Passenger	16		16HK			
Comanche							
1992-1986	Driver	18		18HK			
	Passenger	18		18HK			
Commander							
2010-2006	Driver	18		18HK			W18
	Passenger	18		18HK			W18
	Rear				14C		
Compass							
2014-2007	Driver	22		22HK			W22
	Passenger	20		20HK			W20
	Rear	11					
Grand Cherokee							
2014	Driver	22		22HK		22HB	W22
	Passenger	21		21HK		21HB	W21
	Rear				11A		
2013-2011	Driver	22		22HK			W22
	Passenger	21		21HK			W21
	Rear				12A		
2010-2005	Driver	21		21HK			W21
	Passenger	21		21HK			W21
	Rear				14C		
2004-1999	Driver	21		21HK			W21
	Passenger	21		21HK			W21
	Rear	11					
1998-1994	Driver	20		20HK			W20
	Passenger	20		20HK			W20
	Rear	11					
1993	Driver	20		20HK			W20
	Passenger	20		20HK			W20
Grand Wagoneer							
1993	Driver	16		16HK			W20
	Passenger	16		16HK			W20
1988-1984	Driver	16		16HK			
	Passenger	16		16HK			
J10							
1988-1974	Driver	16		16HK			
	Passenger	16		16HK			
J20							
1988-1974	Driver	16		16HK			
	Passenger	16		16HK			
Liberty							
2012-2008	Driver	19		19HK			W19
	Passenger	19		19HK			W19

APPLICATION GUIDE PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Conventional					
		TRADITIONAL	Beam		Rear		Specialty
			BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER
JEEP (cont.)							
Liberty (cont.)							
2007-2002	Driver	19		19HK			W19
	Passenger	19		19HK			W19
	Rear	11					
Patriot							
2014-2007	Driver	21		21HK			W21
	Passenger	21		21HK			W21
Scrambler							
1985-1984	Driver	16		16HK			
	Passenger	16		16HK			
TJ							
2006-2005	Driver	13					
	Passenger	13					
	Rear	17		17HK			W17
2004-1997	Driver	13					
	Passenger	13					
	Rear	18		18HK			W18
Wagoneer							
1990-1989	Driver	18		18HK			
	Passenger	18		18HK			
1988-1984	Driver	16		18HK			
	Passenger	16		18HK			
1983-1974	Driver	16		16HK			
	Passenger	16		16HK			
Wrangler							
2014-2007	Driver	15		15HK			W15
	Passenger	15		15HK			W15
	Rear				12E		
2006-2005	Driver	13					
	Passenger	13					
	Rear	17		17HK			W17
2004-1997	Driver	13					
	Passenger	13					
	Rear	18		18HK			W18
KIA							
Amanti							
2009-2004	Driver	24		24HK			W24
	Passenger	18		18HK			W18
Borrego							
2011-2009	Driver	24		24HK		24HB	W24
	Passenger	20		20HK		20HB	W20
	Rear				14A		
Forte							
2014	Driver	28		28HK			
	Passenger	14		14HK			
	Rear				12A		
2013-2011	Driver	24		24HK			W24
	Passenger	20		20HK			W20
	Rear				12A		
2010	Driver	24		24HK			W24
	Passenger	20		20HK			W20
Forte Koup							
2015-2014	Driver	28		28HK			
	Passenger	14		14HK			
	Rear				12A		

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Conventional		Beam		Rear		Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER		
KIA (cont.)									
Forte Koup (cont.)									
2013-2011	Driver	24		24HK					W24
	Passenger	20		20HK					W20
	Rear					12A			
2010	Driver	24		24HK					W24
	Passenger	20		20HK					W20
Magentis									
2010-2007	Driver	24		24HK					W24
	Passenger	18		18HK					W18
2006-2001	Driver	22		22HK					W22
	Passenger	20		20HK					W20
Optima									
2014-2007	Driver	24		24HK			24HB		W24
	Passenger	18		18HK			18HB		W18
2006-2001	Driver	22		22HK					W22
	Passenger	20		20HK					W20
Rio									
2014-2012	Driver	26		26HK					W26
	Passenger	16		16HK					W16
	Rear					11A			
2011-2006	Driver	22		22HK					W22
	Passenger	16		16HK					W16
	Rear					14A			
2005-2001	Driver	21		21HK					W21
	Passenger	18		18HK					W18
	Rear	13							
Rio5									
2011-2006	Driver	22		22HK					W22
	Passenger	16		16HK					W16
	Rear					14A			
Rondo									
2014, 2012-2011	Driver	28		28HK					W28
	Passenger	28		28HK					W28
	Rear					11A			
2010-2007	Driver	26		26HK					W26
	Passenger	16		16HK					W16
	Rear					14A			
Sedona									
2014, 2012-2006	Driver	26		26HK					W26
	Passenger	18		18HK					W18
2005-2002	Driver	24		24HK					W24
	Passenger	24		24HK					W24
	Rear	16		16HK					W16
Sephia									
2001-1998	Driver	21		21HK					W21
	Passenger	19		19HK					W19
1997-1994	Driver	21		21HK					W21
	Passenger	19		19HK					W19
	Rear	18		18HK					W18
Sorento									
2015-2011	Driver	24		24HK					W24
	Passenger	20		20HK					W20
	Rear					11A			

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Conventional					
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER
KIA (cont.)							
Sorento (cont.)							
2009-2003	Driver	24		24HK			W24
	Passenger	18		18HK			W18
	Rear	14		14HK			
Soul							
2014-2010	Driver	24		24HK			W24
	Passenger	20		20HK			W20
	Rear				11A		
Spectra							
2009-2005	Driver	24		24HK			W24
	Passenger	16		16HK			W16
	Rear				14A		
2004-2000	Driver	21		21HK			W21
	Passenger	19		19HK			W19
	Rear	18		18HK			W18
Spectra5							
2009-2005	Driver	24		24HK			W24
	Passenger	16		16HK			W16
	Rear				14A		
Sportage							
2014-2011	Driver	24		24HK			W24
	Passenger	18		18HK			W18
2010-2005	Driver	24		24HK			W24
	Passenger	16		16HK			W16
2002-1995	Driver	20		20HK			W20
	Passenger	20		20HK			W20
	Rear	16		16HK			W16
LADA							
Samara							
1993-1988	Driver	21		21HK			W21
	Passenger	21		21HK			W21
LAFORZA							
Laforza							
1990-1989	Driver	22		22HK			W22
	Passenger	22		22HK			W22
	Rear	15		15HK			W15
LAND ROVER							
Defender 110							
1993	Driver	13					
	Passenger	13					
	Rear	13					
Defender 90							
1997, 1995-1994	Driver	13					
	Passenger	13					
	Rear	13					
Discovery							
1999	Driver	18		18HK			W18
	Passenger	18		18HK			W18
1998-1994	Driver	18		18HK			W18
	Passenger	18		18HK			W18
	Rear	14		14HK			
Freelander							
2006-2002	Driver	22		22HK			W22
	Passenger	21		21HK			W21

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Specialty					
		Conventional	Beam		Rear	HYBRID	WINTER
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC		
LAND ROVER (cont.)							
LR2							
2014-2008	Driver		240E				
	Passenger		200E				
	Rear	14		14HK			
LR3							
2009-2005	Driver	22		22HK			W22
	Passenger	22		22HK			W22
	Rear	16		16HK			W16
LR4							
2014-2010	Driver	22		22HK			W22
	Passenger	22		22HK			W22
	Rear	16		16HK			W16
Range Rover							
2014-2013	Driver	24		24HK		24HB	W24
	Passenger	20		20HK		20HB	W20
	Rear	16		16HK			W16
2012-2002	Rear	18		18HK			W18
2001-1995	Driver	22		22HK			W22
	Passenger	22		22HK			W22
	Rear	19		19HK			W19
1989-1987	Driver	17		17HK			
	Passenger	17		17HK			
	Rear	17		17HK			
Range Rover Sport							
2014-2013	Driver	24		24HK		24HB	W24
	Passenger	20		20HK		20HB	W20
	Rear	16		16HK			W16
2012-2006	Driver	22		22HK			W22
	Passenger	22		22HK			W22
	Rear	16		16HK			W16
LEXUS							
CT200h							
2014-2011	Driver	26		26HK		26HB	W26
	Passenger	18		18HK		18HB	W18
ES300							
2003-2002	Driver	24		24HK			W24
	Passenger	20		20HK			W20
2001-1997	Driver	22		22HK			W22
	Passenger	18		18HK			W18
1996-1992	Driver	21		21HK			W21
	Passenger	19		19HK			W19
ES300h							
2014-2013	Driver	26		26HK		26HB	W26
	Passenger	18		18HK		18HB	W18
ES330							
2006-2004	Driver	24		24HK			W24
	Passenger	20		20HK			W20
ES350							
2014-2013	Driver	26		26HK		26HB	W26
	Passenger	18		18HK		18HB	W18
2012-2007	Driver	24		24HK		24HB	W24
	Passenger	19		19HK		19HB	W19
GS300							
2006	Driver	26		26HK		26HB	W26
	Passenger	18		18HK		18HB	W18

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Conventional					
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	SPECIALTY
LEXUS (cont.)							
GS300 (cont.)							
2005-1998	Driver	24		24HK			W24
	Passenger	20		20HK			W20
1997-1993	Driver	21		21HK			W21
	Passenger	19		19HK			W19
GS350							
2014-2013, 2011-2007	Driver	26		26HK		26HB	W26
	Passenger	18		18HK		18HB	W18
GS400							
2000-1998	Driver	24		24HK			W24
	Passenger	20		20HK			W20
GS430							
2007-2006	Driver	26		26HK		26HB	W26
	Passenger	18		18HK		18HB	W18
2005-2001	Driver	24		24HK			W24
	Passenger	20		20HK			W20
GS450h							
2014-2013, 2011-2007	Driver	26		26HK		26HB	W26
	Passenger	18		18HK		18HB	W18
GS460							
2011-2008	Driver	26		26HK		26HB	W26
	Passenger	18		18HK		18HB	W18
GX460							
2014-2010	Driver	26		26HK		26HB	W26
	Passenger	20		20HK		20HB	W20
	Rear				12A		
GX470							
2009-2003	Driver	22		22HK			W22
	Passenger	21		21HK			W21
HS250h							
2012-2010	Driver	26		26HK		26HB	W26
	Passenger	18		18HK		18HB	W18
IS F							
2014-2008	Driver	22		22HK		22HB	W22
	Passenger	20		20HK		20HB	W20
IS250							
2014	Driver	24		24HK		24HB	W24
	Passenger	18		18HK		18HB	W18
2013-2006	Driver	22		22HK		22HB	W22
	Passenger	20		20HK		20HB	W20
IS250 Convertible							
2014	Driver	22		22HK		22HB	W22
	Passenger	20		20HK		20HB	W20
IS300							
2005-2001	Driver	22		22HK			W22
	Passenger	20		20HK			W20
IS350							
2014	Driver	24		24HK		24HB	W24
	Passenger	18		18HK		18HB	W18
2013-2006	Driver	22		22HK		22HB	W22
	Passenger	20		20HK		20HB	W20
IS350 Convertible							
2014	Driver	22		22HK		22HB	W22
	Passenger	20		20HK		20HB	W20

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Specialty					
		Conventional	Beam		Rear	HYBRID	WINTER
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC		
LEXUS (cont.)							
LS400							
2000-1990	Driver	22		22HK			W22
	Passenger	16		16HK			W16
LS430							
2006-2001	Driver	24		24HK			W24
	Passenger	16		16HK			W16
LS460							
2014-2007	Driver	24		24HK		24HB	W24
	Passenger	17		17HK		17HB	W17
LS600h							
2014-2008	Driver	24		24HK		24HB	W24
	Passenger	17		17HK		17HB	W17
LX450							
1997-1996	Driver	18		18HK			W18
	Passenger	18		18HK			W18
	Rear	16		16HK			W16
LX470							
2007-2000	Driver	24		24HK			W24
	Passenger	22		22HK			W22
	Rear	16		16HK			W16
1999-1998	Driver	20		20HK			W20
	Passenger	20		20HK			W20
	Rear	16		16HK			W16
LX570							
2014-2013, 2011-2008	Driver	24		24HK		24HB	W24
	Passenger	22		22HK		22HB	W22
	Rear				12A		
RX300							
2003-1999	Driver	24		24HK			W24
	Passenger	21		21HK			W21
	Rear	16		16HK			W16
RX330							
2006-2004	Driver	26		26HK			W26
	Passenger	22		22HK			W22
	Rear				14A		
RX350							
2014-2010	Driver	26		26HK		26HB	W26
	Passenger	22		22HK		22HB	W22
	Rear				16A		
2009-2007	Driver	26		26HK			W26
	Passenger	22		22HK			W22
	Rear				14A		
RX400h							
2008-2006	Driver	26		26HK			W26
	Passenger	22		22HK			W22
	Rear				14A		
RX450h							
2014-2010	Driver	26		26HK		26HB	W26
	Passenger	22		22HK		22HB	W22
	Rear				16A		
SC300							
2000-1992	Driver	21		21HK			W21
	Passenger	20		20HK			W20

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Conventional					
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER
LEXUS (cont.)							
SC400							
2000-1992	Driver	21		21HK			W21
	Passenger	20		20HK			W20
SC430							
2010-2002	Driver	24		24HK			W24
	Passenger	20		20HK			W20
LINCOLN							
Aviator							
2005-2004	Driver	20		20HK			W20
	Passenger	20		20HK			W20
	Rear	16		16HK			W16
2003	Driver	22		22HK			W22
	Passenger	22		22HK			W22
	Rear	16		16HK			W16
Blackwood							
2003-2002	Driver	20		20HK			W20
	Passenger	20		20HK			W20
Continental							
2002-1998	Driver	24		24HK			W24
	Passenger	20		20HK			W20
1997-1988	Driver	20		20HK			W20
	Passenger	20		20HK			W20
1980-1973	Driver	18		18HK			
	Passenger	18		18HK			
1972-1970	Driver	19		19HK			
	Passenger	19		19HK			
LS							
2006-2000	Driver	24		24HK			W24
	Passenger	19		19HK			W19
MKC							
2015	Driver		260E				
	Passenger		160E				
	Rear				11V		
MKS							
2014-2009	Driver		260E				
	Passenger		200E				
MKT							
2014-2010	Driver		240E				
	Passenger		220E				
	Rear				12E		
MKX							
2014-2007	Driver	26		26HK			W26
	Passenger	20		20HK			W20
	Rear				14E		
MKZ							
2014-2013	Driver		230E				
	Passenger		200E				
2012-2007	Driver	24		24HK			W24
	Passenger	19		19HK			W19
Mark III							
1971-1968	Driver	16		16HK			
	Passenger	16		16HK			
Mark IV							
1976-1972	Driver	18		18HK			
	Passenger	18		18HK			

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Conventional		Beam		Rear		Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER		
LINCOLN (cont.)									
Mark LT									
2008-2006	Driver	20		20HK					W20
	Passenger	20		20HK					W20
Mark V									
1979-1977	Driver	18		18HK					
	Passenger	18		18HK					
Mark VI									
1983-1980	Driver	18		18HK					
	Passenger	18		18HK					
Mark VII									
1992-1984	Driver	18		18HK					
	Passenger	18		18HK					
Mark VIII									
1998-1993	Driver	22		22HK					W22
	Passenger	22		22HK					W22
Navigator									
2014-2009	Driver	22		22HK					W22
	Passenger	22		22HK					W22
2008	Driver	22		22HK					W22
	Passenger	22		22HK					W22
	Rear	16		16HK					W16
2007-2003	Driver	20		20HK					W20
	Passenger	20		20HK					W20
	Rear	17		17HK					W17
2002-1998	Driver	20		20HK					W20
	Passenger	20		20HK					W20
	Rear	16		16HK					W16
Town Car									
2011-1993	Driver	22		22HK					W22
	Passenger	22		22HK					W22
1992-1990	Driver	22		22HK					
	Passenger	22		22HK					
1989-1981	Driver	18		18HK					
	Passenger	18		18HK					
Versailles									
1980-1977	Driver	16		16HK					
	Passenger	16		16HK					
Zephyr									
2006	Driver	24		24HK					W24
	Passenger	19		19HK					W19
LOTUS									
Elise									
2011-2004	Driver	26		26HK					W26
Evora									
2013-2010	Driver		260E						
Exige									
2010-2005	Driver	26		26HK					W26
MASERATI									
228i									
1990-1989	Driver	20		20HK					W20
	Passenger	20		20HK					W20
3200 GT									
2003-1999	Driver	22		22HK					W22
	Passenger	22		22HK					W22

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Conventional	Beam	Rear	Specialty		
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER
MASERATI (cont.)							
430i							
1989	Driver	20		20HK			W20
	Passenger	20		20HK			W20
Biturbo							
1987-1983	Driver	20		20HK			W20
	Passenger	20		20HK			W20
Coupe							
2007-2003	Driver	22		22HK			W22
	Passenger	22		22HK			W22
Spyder							
2004-2002	Driver	22		22HK			W22
	Passenger	22		22HK			W22
MAZDA							
2							
2014-2011	Driver	24		24HK			
	Passenger	14		14HK			
	Rear				14B		
3							
2014	Driver	24		24HK		24HB	W24
	Passenger	18		18HK		18HB	W18
	Rear				12A		
2013-2010	Driver	24		24HK			W24
	Passenger	19		19HK			W19
	Rear				14A		
2009-2004	Driver	21		21HK			W21
	Passenger	19		19HK			W19
	Rear				14E		
323							
1995-1990	Driver	21		21HK			W21
	Passenger	18		18HK			W18
1989-1986	Driver	18		18HK			W18
	Passenger	18		18HK			W18
	Rear	18		18HK			W18
5							
2014-2012, 2010-2006	Driver	26		26HK			W26
	Passenger	16		16HK			W16
	Rear				12A		
6							
2014-2009	Driver	24		24HK		24HB	W24
	Passenger	18		18HK		18HB	W18
2008	Driver	22		22HK			W22
	Passenger	18		18HK			W18
	Rear	20		20HK			W20
2007-2003	Driver	22		22HK			W22
	Passenger	18		18HK			W18
6 Hatchback							
2007-2004	Driver	22		22HK			W22
	Passenger	18		18HK			W18
	Rear	20		20HK			W20
6 Wagon							
2007-2004	Driver	22		22HK			W22
	Passenger	18		18HK			W18
	Rear				12A		

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Conventional						Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER		
MAZDA (cont.)									
626									
2002-1998	Driver	20		20HK				W20	
	Passenger	19		19HK				W19	
1997-1993	Driver	21		21HK				W21	
	Passenger	20		20HK				W20	
1992-1988	Driver	19		19HK				W19	
	Passenger	19		19HK				W19	
	Rear	22		22HK				W22	
1987-1986	Driver	18		18HK				W18	
	Passenger	18		18HK				W18	
	Rear	18		18HK				W18	
929									
1995-1992	Driver	21		21HK				W21	
	Passenger	20		20HK				W20	
1991-1988	Driver	20		20HK				W20	
	Passenger	19		19HK				W19	
B2200									
1993-1988	Driver	18		18HK				W18	
	Passenger	18		18HK				W18	
B2300									
2010-2001, 1997-1994	Driver	18		18HK				W18	
	Passenger	18		18HK				W18	
B2500									
2001-1998	Driver	18		18HK				W18	
	Passenger	18		18HK				W18	
B2600									
1993-1988	Driver	18		18HK				W18	
	Passenger	18		18HK				W18	
B3000									
2008-1994	Driver	18		18HK				W18	
	Passenger	18		18HK				W18	
B4000									
2010-1994	Driver	18		18HK				W18	
	Passenger	18		18HK				W18	
CX-5									
2014-2013	Driver	24		24HK			24HB	W24	
	Passenger	18		18HK			18HB	W18	
	Rear					14A			
CX-7									
2012-2007	Driver	26		26HK			26HB	W26	
	Passenger	16		16HK			16HB	W16	
	Rear					14A			
CX-9									
2014-2007	Driver	26		26HK			26HB	W26	
	Passenger	17		17HK			17HB	W17	
	Rear					14A			
MPV									
2006-2000	Driver	24		24HK				W24	
	Passenger	24		24HK				W24	
	Rear	16		16HK				W16	
1998-1996	Driver	22		22HK				W22	
	Passenger	20		20HK				W20	
	Rear	17		17HK				W17	

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Specialty					
		Conventional	Beam		Rear	Specialty	Specialty
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER
MAZDA (cont.)							
MPV (cont.)							
1995-1990	Driver	22		22HK			W22
	Passenger	20		20HK			W20
	Rear	16		16HK			W16
1989	Driver	22		22HK			W22
	Passenger	20		20HK			W20
	Rear	16		16HK			
MX-3							
1996-1992	Driver	21		21HK			W21
	Passenger	18		18HK			W18
	Rear	21		21HK			W21
MX-5 Miata							
2014-2006	Driver	18		18HK			W18
	Passenger	18		18HK			W18
MX-6							
1997-1993	Driver	20		20HK			W20
	Passenger	20		20HK			W20
1992-1988	Driver	19		19HK			W19
	Passenger	19		19HK			W19
Navajo							
1994-1991	Driver	18		18HK			W18
	Passenger	18		18HK			W18
Protege							
2003-2002	Driver	21		21HK			W21
	Passenger	19		19HK			W19
	Rear	14		14HK			
2001-1999	Driver	21		21HK			W21
	Passenger	19		19HK			W19
1998-1990	Driver	21		21HK			W21
	Passenger	18		18HK			W18
Protege5							
2003-2002	Driver	21		21HK			W21
	Passenger	19		19HK			W19
	Rear	14		14HK			
RX-4							
1978-1974	Driver	17		17HK			
	Passenger	17		17HK			
RX-7							
1995-1994	Driver	20		20HK			W20
	Passenger	20		20HK			W20
1993	Driver	20		20HK			W20
	Passenger	20		20HK			W20
	Rear	18		18HK			W18
RX-8							
2011-2004	Driver	20		20HK			W20
	Passenger	18		18HK			W18
Tribute							
2011-2008	Driver		200E				
	Passenger		200E				
	Rear				12E		
2006-2005	Driver	20		20HK			W20
	Passenger	18		18HK			W18
2004-2001	Driver	19		19HK			W19
	Passenger	19		19HK			W19

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Specialty					
		Conventional	Beam		Rear	HYBRID	WINTER
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC		
MERCEDES-BENZ							
190D							
1989-1986	Driver	24		24HK			W24
1985-1984	Driver	20		20HK			W20
190E							
1993-1986	Driver	24		24HK			W24
1985-1984	Driver	20		20HK			W20
230							
1978-1977	Driver	20		20HK			W20
	Passenger	20		20HK			W20
1976-1974	Driver	16		16HK			W16
	Passenger	16		16HK			W16
240D							
1983-1977	Driver	20		20HK			W20
	Passenger	20		20HK			W20
1976-1974	Driver	16		16HK			W16
	Passenger	16		16HK			W16
250							
1972-1968	Driver	16		16HK			W16
	Passenger	16		16HK			W16
260E							
1989-1987	Driver	24		24HK			W24
280							
1976-1973	Driver	16		16HK			W16
	Passenger	16		16HK			W16
280C							
1976-1973	Driver	16		16HK			W16
	Passenger	16		16HK			W16
280CE							
1981-1978	Driver	20		20HK			W20
	Passenger	20		20HK			W20
280E							
1981-1977	Driver	20		20HK			W20
	Passenger	20		20HK			W20
280S							
1976-1975	Driver	19		19HK			W19
	Passenger	18		18HK			W18
280SE							
1980-1977	Driver	19		19HK			W19
	Passenger	18		18HK			W18
300CD							
1985-1978	Driver	20		20HK			W20
	Passenger	20		20HK			W20
300CE							
1993-1988	Driver	24		24HK			W24
300D							
1993-1990	Driver	24		24HK			W24
1985-1977	Driver	20		20HK			W20
	Passenger	20		20HK			W20
1976-1975	Driver	16		16HK			W16
	Passenger	16		16HK			W16
300E							
1993-1988	Driver	24		24HK			W24
300SD							
1993-1992	Driver	24		24HK			W24
	Passenger	28		28HK			W28

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Conventional	Beam		Rear	Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER
MERCEDES-BENZ (cont.)							
300SD (cont.)							
1980-1978	Driver	19		19HK			W19
	Passenger	18		18HK			W18
300SE							
1993-1992	Driver	24		24HK			W24
	Passenger	28		28HK			W28
1991-1988	Driver	24		24HK			W24
300SEL							
1973-1968	Driver	16		16HK			W16
	Passenger	16		16HK			W16
300SL							
1993-1992	Driver	24		24HK			W24
	Passenger	28		28HK			W28
1991-1990	Driver	24		24HK			W24
300TD							
1985-1979	Driver	20		20HK			W20
	Passenger	20		20HK			W20
	Rear	16		16HK			W16
300TE							
1993-1988	Driver	24		24HK			W24
	Rear	18		18HK			W18
380SL							
1985-1981	Driver	19		19HK			W19
	Passenger	19		19HK			W19
380SLC							
1981	Driver	19		19HK			W19
	Passenger	19		19HK			W19
400E							
1993-1992	Driver	24		24HK			W24
400SE							
1992	Driver	24		24HK			W24
	Passenger	28		28HK			W28
450SE							
1976-1973	Driver	19		19HK			W19
	Passenger	18		18HK			W18
450SEL							
1980-1973	Driver	19		19HK			W19
	Passenger	18		18HK			W18
450SL							
1980-1976	Driver	19		19HK			W19
	Passenger	19		19HK			W19
1975-1973	Driver	18		18HK			W18
	Passenger	18		18HK			W18
450SLC							
1980-1976	Driver	19		19HK			W19
	Passenger	19		19HK			W19
1975-1973	Driver	18		18HK			W18
	Passenger	18		18HK			W18
500E							
1993-1992	Driver	24		24HK			W24
500SEC							
1993	Driver	24		24HK			W24
	Passenger	28		28HK			W28

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Conventional	Beam		Rear	Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER
MERCEDES-BENZ (cont.)							
500SEL							
1993-1992	Driver	24		24HK			W24
	Passenger	28		28HK			W28
500SL							
1993-1990	Driver	24		24HK			W24
560SL							
1989-1986	Driver	18		18HK			W18
	Passenger	18		18HK			W18
600SEC							
1993	Driver	24		24HK			W24
600SEL							
1993-1992	Driver	24		24HK			W24
	Passenger	28		28HK			W28
600SL							
1993	Driver	24		24HK			W24
A180							
2014	Driver		260E				
	Passenger		240E				
A200							
2014	Driver		260E				
	Passenger		240E				
A250							
2014	Driver		260E				
	Passenger		240E				
A45 AMG							
2014	Driver		260E				
	Passenger		240E				
B180							
2014	Driver		260E				
	Passenger		190E				
2012	Driver		260E				
	Passenger		240E				
	Rear				10D		
B200							
2011	Driver		260E				
	Passenger		240E				
	Rear				10D		
2010-2006	Driver		260E				
	Passenger		220E				
B250							
2014-2013	Driver		260E				
	Passenger		190E				
C180							
2015	Driver		220E				
	Passenger		220E				
2014-2011	Driver		240E				
	Passenger		240E				
C200							
2015	Driver		220E				
	Passenger		220E				
2014-2010	Driver		240E				
	Passenger		240E				
2004	Driver		22G2				
	Passenger		22G2				

APPLICATION GUIDE PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Conventional	Beam	Rear	Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID
MERCEDES-BENZ (cont.)						
C200 (cont.)						
2003-2001	Driver	24		24HK		W24
	Passenger	22		22HK		W22
C220						
1997-1994	Driver	24		24HK		W24
C230						
2009	Driver		240E			
	Passenger		240E			
2007-2004	Driver		22G2			
	Passenger		22G2			
2003-2002	Driver	24		24HK		W24
	Passenger	22		22HK		W22
2000-1996	Driver	24		24HK		W24
C240						
2005-2004	Driver		22G2			
	Passenger		22G2			
2003	Driver	24		24HK		W24
	Passenger	22		22HK		W22
2002-2001	Driver	24		24HK		W24
	Passenger	22		22HK		W22
	Rear	16		16HK		W16
C240 Wagon						
2005-2003	Rear	16		16HK		W16
C250						
2015	Driver		220E			
	Passenger		220E			
2014-2010	Driver		240E			
	Passenger		240E			
C280						
2009	Driver		240E			
	Passenger		240E			
2007-2006	Driver		22G2			
	Passenger		22G2			
2000-1994	Driver	24		24HK		W24
C300						
2014-2009	Driver		240E			
	Passenger		240E			
C32 AMG						
2004	Driver		22G2			
	Passenger		22G2			
2003-2002	Driver	24		24HK		W24
	Passenger	22		22HK		W22
	Rear	16		16HK		W16
C320						
2005-2004	Driver		22G2			
	Passenger		22G2			
2003-2002	Driver	24		24HK		W24
	Passenger	22		22HK		W22
2001	Driver	24		24HK		W24
	Passenger	22		22HK		W22
	Rear	16		16HK		W16
C320 Wagon						
2004-2002	Rear	16		16HK		W16

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Conventional	Beam		Rear	Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER
MERCEDES-BENZ (cont.)							
C350							
2014-2009	Driver		240E				
	Passenger		240E				
2007-2006	Driver		22G2				
	Passenger		22G2				
C36 AMG							
1997-1995	Driver	24		24HK			W24
C43 AMG							
2000-1998	Driver	24		24HK			W24
C55 AMG							
2007-2005	Driver		22G2				
	Passenger		22G2				
C63 AMG							
2014-2009	Driver		240E				
	Passenger		240E				
CL200							
2003-2002	Driver		280E				
	Passenger		280E				
CL230							
2005-2002	Driver		280E				
	Passenger		280E				
CL500							
2013-2001	Driver		280E				
	Passenger		280E				
1999-1997	Driver	24		24HK			W24
	Passenger	24		24HK			W24
CL55 AMG							
2006-2001	Driver		280E				
	Passenger		280E				
CL550							
2014-2007	Driver		280E				
	Passenger		280E				
CL600							
2014-2001	Driver		280E				
	Passenger		280E				
1999-1997	Driver	24		24HK			W24
	Passenger	24		24HK			W24
CL63 AMG							
2014-2008	Driver		280E				
	Passenger		280E				
CL65 AMG							
2014-2008, 2006-2005	Driver		280E				
	Passenger		280E				
CLA200							
2014	Driver		240E				
	Passenger		190E				
CLA250							
2014	Driver		240E				
	Passenger		190E				
CLA45 AMG							
2014	Driver		240E				
	Passenger		190E				
CLK280							
2009-2007	Driver		22G2				
	Passenger		22G2				

APPLICATION GUIDE PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Conventional	Beam	Rear	Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID
MERCEDES-BENZ (cont.)						
CLK320						
2005-2004	Driver		22G2			
	Passenger		22G2			
2003-1998	Driver	24		24HK		W24
CLK350						
2009-2006	Driver		22G2			
	Passenger		22G2			
CLK430						
2003-1999	Driver	24		24HK		W24
CLK500						
2009-2004	Driver		22G2			
	Passenger		22G2			
2003	Driver	24		24HK		W24
CLK55 AMG						
2006-2004	Driver		22G2			
	Passenger		22G2			
2003-2001	Driver	24		24HK		W24
CLK550						
2009-2007	Driver		22G2			
	Passenger		22G2			
CLK63 AMG						
2009-2007	Driver		22G2			
	Passenger		22G2			
CLS350						
2014-2012	Driver		240E			
	Passenger		240E			
2011-2007	Driver		260E			
	Passenger		260E			
CLS500						
2014-2012	Driver		240E			
	Passenger		240E			
2009-2005	Driver		260E			
	Passenger		260E			
CLS55 AMG						
2006	Driver		260E			
	Passenger		260E			
CLS550						
2014-2012	Driver		240E			
	Passenger		240E			
2011-2007	Driver		260E			
	Passenger		260E			
CLS63 AMG						
2014-2012	Driver		240E			
	Passenger		240E			
2011-2007	Driver		260E			
	Passenger		260E			
CLS63 AMG S						
2014	Driver		240E			
	Passenger		240E			
E200						
2014-2012	Driver		240E			
	Passenger		240E			
E250						
2014-2011	Driver		240E			
	Passenger		240E			

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Conventional	Beam		Rear	Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER
MERCEDES-BENZ (cont.)							
E280							
2009-2007	Driver		260E				
	Passenger		260E				
1999	Driver	24		24HK			W24
E300							
2013-2012, 2010	Driver		240E				
	Passenger		240E				
2009-2008	Driver		260E				
	Passenger		260E				
1999-1995	Driver	24		24HK			W24
	Rear	16		16HK			W16
E320							
2009-2003	Driver		260E				
	Passenger		260E				
2002-1994	Driver	24		24HK			W24
E320 Wagon							
2005-2003	Rear	17		17HK			W17
2002-1998	Rear	16		16HK			W16
1995-1994	Rear	18		18HK			W18
E350							
2014-2010	Driver		240E				
	Passenger		240E				
2009-2006	Driver		260E				
	Passenger		260E				
E350 Wagon							
2009-2006	Rear	17		17HK			W17
E400							
2014-2013	Driver		240E				
	Passenger		240E				
E420							
1999-1997, 1995-1994	Driver	24		24HK			W24
E430							
2002-1998	Driver	24		24HK			W24
E500							
2014-2013	Driver		240E				
	Passenger		240E				
2009-2007	Driver		260E				
	Passenger		260E				
2006-2003	Driver		260E				
	Passenger		260E				
	Rear	17		17HK			W17
2002, 1997, 1994	Driver	24		24HK			W24
E500 Wagon							
2006-2004	Rear	17		17HK			W17
E55 AMG							
2006-2003	Driver		260E				
	Passenger		260E				
2002-1998	Driver	24		24HK			W24
E55 AMG Wagon							
2006	Rear	17		17HK			W17
E550							
2014-2010	Driver		240E				
	Passenger		240E				

APPLICATION GUIDE PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Conventional	Beam	Rear	Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID
MERCEDES-BENZ (cont.)						
E550 (cont.)						
2009-2007	Driver		260E			
	Passenger		260E			
E63 AMG						
2014-2010	Driver		240E			
	Passenger		240E			
2009-2007	Driver		260E			
	Passenger		260E			
E63 AMG S						
2014	Driver		240E			
	Passenger		240E			
E63 AMG Wagon						
2009-2007	Rear	17		17HK		W17
G500						
2014-2013, 2011-2002	Driver	16		16HK		W16
	Passenger	16		16HK		W16
	Rear	15		15HK		W15
G55 AMG						
2011-2003	Driver	16		16HK		W16
	Passenger	16		16HK		W16
	Rear	15		15HK		W15
G550						
2014-2009	Driver	16		16HK		W16
	Passenger	16		16HK		W16
	Rear	15		15HK		W15
G63 AMG						
2014-2013	Driver	16		16HK		W16
	Passenger	16		16HK		W16
	Rear	15		15HK		W15
G65 AMG						
2014	Driver	16		16HK		W16
	Passenger	16		16HK		W16
	Rear	15		15HK		W15
GL320						
2009-2007	Driver		280E			
	Passenger		210E			
GL350						
2014-2013	Driver		260E			
	Passenger		230E			
2012-2010	Driver		280E			
	Passenger		210E			
GL450						
2014-2013	Driver		260E			
	Passenger		230E			
2012-2007	Driver		280E			
	Passenger		210E			
GL500						
2014	Driver		260E			
	Passenger		230E			
2012-2008	Driver		280E			
	Passenger		210E			
GL550						
2014-2013	Driver		260E			
	Passenger		230E			

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Conventional						Beam		Rear		Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER						
MERCEDES-BENZ (cont.)													
GL550 (cont.)													
2012-2008	Driver		280E										
	Passenger		210E										
GL63 AMG													
2014-2013	Driver		260E										
	Passenger		230E										
GLA250													
2015	Driver		240E										
	Passenger		190E										
GLA45 AMG													
2015	Driver		240E										
	Passenger		190E										
GLK250													
2014-2013	Driver		220E										
	Passenger		190E										
	Rear					12E							
GLK280													
2009	Driver		220E										
	Passenger		190E										
	Rear					12E							
GLK300													
2014, 2012-2010	Driver		220E										
	Passenger		190E										
	Rear					12E							
GLK350													
2014-2009	Driver		220E										
	Passenger		190E										
	Rear					12E							
ML320													
2009-2007	Driver		280E										
	Passenger		210E										
2003-2000	Driver	22		22HK							W22		
	Passenger	22		22HK							W22		
	Rear	17		17HK							W17		
1999-1998	Driver	22		22HK							W22		
	Passenger	22		22HK							W22		
	Rear	16		16HK							W16		
ML350													
2014-2012	Driver		260E										
	Passenger		230E										
2011-2006	Driver		280E										
	Passenger		210E										
2005-2003	Driver	22		22HK							W22		
	Passenger	22		22HK							W22		
	Rear	17		17HK							W17		
ML430													
2001-2000	Driver	22		22HK							W22		
	Passenger	22		22HK							W22		
	Rear	17		17HK							W17		
1999-1998	Driver	22		22HK							W22		
	Passenger	22		22HK							W22		
	Rear	16		16HK							W16		
ML450													
2011-2010	Driver		280E										
	Passenger		210E										

APPLICATION GUIDE PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Conventional	Beam	Rear	Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID
MERCEDES-BENZ (cont.)						
ML500						
2014-2013	Driver		260E			
	Passenger		230E			
2009-2006	Driver		280E			
	Passenger		210E			
2005-2002	Driver	22		22HK		W22
	Passenger	22		22HK		W22
	Rear	17		17HK		W17
ML55 AMG						
2003-2000	Driver	22		22HK		W22
	Passenger	22		22HK		W22
	Rear	17		17HK		W17
ML550						
2014-2012	Driver		260E			
	Passenger		230E			
2011-2008	Driver		280E			
	Passenger		210E			
ML63 AMG						
2014-2012	Driver		260E			
	Passenger		230E			
2011-2007	Driver		280E			
	Passenger		210E			
R320						
2009-2007	Driver		280E			
	Passenger		210E			
R350						
2013-2006	Driver		280E			
	Passenger		210E			
R500						
2008-2006	Driver		280E			
	Passenger		210E			
R63 AMG						
2007	Driver		280E			
	Passenger		210E			
S350						
2013-2012, 2006	Driver		280E			
	Passenger		280E			
1995-1994	Driver	22		22HK		W22
	Passenger	22		22HK		W22
S400						
2013-2010	Driver		280E			
	Passenger		280E			
S430						
2006-1999	Driver		280E			
	Passenger		280E			
S450						
2011-2008	Driver		280E			
	Passenger		280E			
S500						
2011-2001	Driver		280E			
	Passenger		280E			
1998-1995	Driver	22		22HK		W22
	Passenger	22		22HK		W22

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Conventional	Beam		Rear	Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER
MERCEDES-BENZ (cont.)							
S55 AMG							
2006-2001	Driver		280E				
	Passenger		280E				
S550							
2013-2007	Driver		280E				
	Passenger		280E				
S600							
2013-2001	Driver		280E				
	Passenger		280E				
1998-1995	Driver	22		22HK			W22
	Passenger	22		22HK			W22
S63 AMG							
2013-2008	Driver		280E				
	Passenger		280E				
S65 AMG							
2013-2005	Driver		280E				
	Passenger		280E				
SL320							
1997-1994	Driver	24		24HK			W24
SL500							
2011-2002	Driver		260E				
	Passenger		260E				
2001-1994	Driver	24		24HK			W24
SL55 AMG							
2008-2002	Driver		260E				
	Passenger		260E				
SL550							
2011-2007	Driver		260E				
	Passenger		260E				
SL60 AMG							
1999-1997	Driver	24		24HK			W24
SL600							
2011-2002	Driver		260E				
	Passenger		260E				
2001-1994	Driver	24		24HK			W24
SL63 AMG							
2011-2009	Driver		260E				
	Passenger		260E				
SL65 AMG							
2011-2005	Driver		260E				
	Passenger		260E				
SLK200							
2014-2005	Driver		220E				
	Passenger		220E				
2004-2003	Driver	22		22HK			W22
	Passenger	22		22HK			W22
SLK230							
2004-1997	Driver	22		22HK			W22
	Passenger	22		22HK			W22
SLK250							
2014-2012	Driver		220E				
	Passenger		220E				
SLK280							
2008-2006	Driver		220E				
	Passenger		220E				

APPLICATION GUIDE PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Conventional Beam Rear Specialty					
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER
MERCEDES-BENZ (cont.)							
SLK300							
2011-2009	Driver		220E				
	Passenger		220E				
SLK32 AMG							
2004-2002	Driver	22		22HK			W22
	Passenger	22		22HK			W22
SLK320							
2004-2001	Driver	22		22HK			W22
	Passenger	22		22HK			W22
SLK350							
2014-2005	Driver		220E				
	Passenger		220E				
SLK55 AMG							
2014-2005	Driver		220E				
	Passenger		220E				
SLR McLaren							
2009-2005	Driver		260E				
	Passenger		260E				
SLS AMG							
2014-2013	Driver		200E				
	Passenger		200E				
Sprinter							
2012-2010	Driver		260E				
	Passenger		240E				
	Rear				17X		
Sprinter 2500							
2014-2010	Driver		260E				
	Passenger		240E				
	Rear				17X		
Sprinter 3500							
2014-2010	Driver		260E				
	Passenger		240E				
	Rear				17X		
MERCURY							
Bobcat							
1980-1979	Driver	16		16HK			
Capri							
1986-1983	Driver	16		16HK			
	Passenger	16		16HK			
	Rear	18		18HK			
1982-1979	Rear	18		18HK			
Cougar							
2002-1999	Driver	22		22HK			W22
	Passenger	20		20HK			W20
	Rear	22		22HK			W22
1997-1990	Driver	22		22HK			
	Passenger	22		22HK			
1989	Driver	22		22HK			
	Passenger	20		20HK			
1988-1983	Driver	18		18HK			
	Passenger	18		18HK			
1982-1974	Driver	16		16HK			
	Passenger	16		16HK			

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Conventional						Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER		
MERCURY (cont.)									
Grand Marquis									
2011-1994	Driver	22		22HK				W22	
	Passenger	22		22HK				W22	
1993	Driver	22		22HK					
	Passenger	22		22HK					
1990-1975	Driver	18		18HK					
	Passenger	18		18HK					
LN7									
1983-1982	Driver	18		18HK					
	Passenger	18		18HK					
	Rear	18		18HK					
Lynx									
1987-1981	Driver	18		18HK					
	Passenger	18		18HK					
	Rear	18		18HK					
Marauder									
2004-2003	Driver	22		22HK					
	Passenger	22		22HK					
Mariner									
2011-2008	Driver		200E						
	Passenger		200E						
	Rear				12E				
2007-2005	Driver	20		20HK				W20	
	Passenger	18		18HK				W18	
Marquis									
1986, 1983-1971	Driver	18		18HK					
	Passenger	18		18HK					
1985-1984	Driver	18		18HK					
	Passenger	18		18HK					
	Rear	16		16HK					
Milan									
2011-2006	Driver	24		24HK				W24	
	Passenger	19		19HK				W19	
Monarch									
1980-1975	Driver	16		16HK					
	Passenger	16		16HK					
Montego									
2007-2005	Driver		240E						
	Passenger		200E						
1976-1970	Driver	16		16HK					
	Passenger	16		16HK					
Monterey									
2007-2004	Driver	24		24HK				W24	
	Passenger	20		20HK				W20	
	Rear	16		16HK				W16	
1974-1971	Driver	18		18HK					
	Passenger	18		18HK					
Mountaineer									
2010-2006	Driver	20		20HK				W20	
	Passenger	20		20HK				W20	
	Rear	13							
2005	Driver	20		20HK				W20	
	Passenger	20		20HK				W20	
	Rear	16		16HK				W16	

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Conventional	Beam	Rear	Specialty		
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER
MERCURY (cont.)							
Mountaineer (cont.)							
2004-2002	Driver	22		22HK			W22
	Passenger	22		22HK			W22
	Rear	16		16HK			W16
2001-1997	Driver	18		18HK			W18
	Passenger	18		18HK			W18
	Rear	14		14HK			
Mystique							
2000-1995	Driver	22		22HK			W22
	Passenger	20		20HK			W20
Sable							
2009-2008	Driver		240E				
	Passenger		200E				
2005-1996	Driver	24		24HK			W24
	Passenger	20		20HK			W20
	Rear	18		18HK			W18
1995-1989	Driver	20		20HK			W20
	Passenger	20		20HK			W20
1988-1986	Driver	20		20HK			
	Passenger	20		20HK			
	Rear	15		15HK			W15
Topaz							
1994-1986	Driver	20		20HK			
	Passenger	20		20HK			
1985	Driver	19		19HK			
	Passenger	19		19HK			
1984	Driver	18		18HK			
	Passenger	18		18HK			
Tracer							
1999-1991	Driver	20		20HK			W20
	Passenger	18		18HK			W18
	Rear	14		14HK			
Villager							
2002-1999	Driver	22		22HK			W22
	Passenger	22		22HK			W22
	Rear	14		14HK			
1998-1995	Driver	22		22HK			W22
	Passenger	22		22HK			W22
Zephyr							
1983-1978	Driver	16		16HK			
	Passenger	16		16HK			
MINI							
Cooper							
2014	Driver	18		18HK		18HB	W18
	Passenger	19		19HK		19HB	W19
	Rear				10D		
2013-2002	Driver	18		18HK			W18
	Passenger	19		19HK			W19
	Rear				10D		
Cooper Clubman							
2014-2013	Rear				12X		
Cooper Countryman							
2014-2011	Driver		190E				
	Passenger		200E				
	Rear				10D		

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Specialty					
		Conventional	Beam		Rear	HYBRID	WINTER
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC		
MINI (cont.)							
Cooper Coupe							
2014-2012	Driver		200E				
	Passenger		210E				
Cooper Paceman							
2014-2013	Driver		190E				
	Passenger		200E				
Cooper Roadster							
2014-2012	Driver		200E				
	Passenger		210E				
MINISUBISHI							
3000GT							
1999-1991	Driver	21		21HK			W21
	Passenger	20		20HK			W20
Diamante							
2004-1997	Driver	22		22HK			W22
	Passenger	20		20HK			W20
1996-1992	Driver	20		20HK			W20
	Passenger	19		19HK			W19
Eclipse							
2012-2006	Driver	24		24HK			W24
	Passenger	22		22HK			W22
	Rear	17		17HK			W17
2005-2000	Driver	24		24HK			W24
	Passenger	21		21HK			W21
	Rear	22		22HK			W22
1999-1997	Driver	24		24HK			W24
	Passenger	22		22HK			W22
	Rear	18		18HK			W18
1996-1995	Driver	24		24HK			W24
	Passenger	22		22HK			W22
	Rear	19		19HK			W19
1994-1992	Driver	20		20HK			W20
	Passenger	20		20HK			W20
	Rear						W17
Endeavor							
2011-2010	Driver	26		26HK			W26
	Passenger	21		21HK			W21
	Rear				12A		
2008-2004	Driver	26		26HK			W26
	Passenger	21		21HK			W21
	Rear				14A		
Expo LRV Wagon							
1994-1992	Driver	22		22HK			W22
	Passenger	18		18HK			W18
	Rear	16		16HK			W16
Galant							
2012-2004	Driver	26		26HK			W26
	Passenger	19		19HK			W19
2003-1999	Driver	24		24HK			W24
	Passenger	18		18HK			W18
1998-1994	Driver	21		21HK			W21
	Passenger	19		19HK			W19
1993-1989	Driver	19		19HK			W19
	Passenger	18		18HK			W18

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Specialty					
		Conventional	Beam		Rear	HYBRID	WINTER
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC		
MITSUBISHI (cont.)							
Galant (cont.)							
1988-1985	Driver	19		19HK			W17
	Passenger	18		18HK			W17
Lancer							
2014-2010	Driver	26		26HK			W26
	Passenger	18		18HK			W18
	Rear	14		14HK			
2009-2008	Driver	26		26HK			W26
	Passenger	18		18HK			W18
2007-2002	Driver	24		24HK			W24
	Passenger	18		18HK			W18
	Rear	17		17HK			W17
Lancer Ralliart							
2014-2010	Driver	26		26HK			W26
	Passenger	18		18HK			W18
	Rear				14B		
Mirage							
2014	Driver	24		24HK			W24
	Passenger	16		16HK			W16
	Rear				12A		
2002-1997	Driver	21		21HK			W21
	Passenger	19		19HK			W19
1996-1993	Driver	20		20HK			W20
	Passenger	19		19HK			W19
1992-1991	Driver	20		20HK			W20
	Passenger	17		17HK			W17
Montero							
2006-2001	Driver	20		20HK			W20
	Passenger	20		20HK			W20
	Rear	16		16HK			W16
2000-1992	Driver	19		19HK			W19
	Passenger	19		19HK			W19
Montero Sport							
2005-1997	Driver	20		20HK			W20
	Passenger	20		20HK			W20
	Rear	17		17HK			W17
Outlander							
2014	Driver	26		26HK		26HB	W26
	Passenger	18		18HK		18HB	W18
	Rear				12B		
2013-2007	Driver	24		24HK			W24
	Passenger	21		21HK			W21
	Rear				12B		
2006-2003	Driver	22		22HK			W22
	Passenger	19		19HK			W19
	Rear				14A		
Outlander Sport							
2014-2011	Driver	24		24HK		24HB	W24
	Passenger	21		21HK		21HB	W21
Precis							
1994-1990	Driver	18		18HK			W18
	Passenger	18		18HK			W18
1989-1987	Driver	17		17HK			W17
	Passenger	17		17HK			W17
	Rear	17		17HK			W17

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Conventional						Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER		
MITSUBISHI (cont.)									
Raider									
2009-2006	Driver	21		21HK				W21	
	Passenger	21		21HK				W21	
NISSAN									
200SX									
1998	Driver	21		21HK				W21	
	Passenger	18		18HK				W18	
1997-1995	Driver	21		21HK				W21	
	Passenger	19		19HK				W19	
1988-1984	Driver	20		20HK				W20	
	Passenger	20		20HK				W20	
240SX									
1998-1995	Driver	21		21HK				W21	
	Passenger	20		20HK				W20	
1994-1989	Driver	20		20HK				W20	
	Passenger	20		20HK				W20	
	Rear	20		20HK				W20	
300ZX									
1996-1995	Driver	21		21HK				W21	
	Passenger	21		21HK				W21	
	Rear	16		16HK				W16	
1994-1990	Driver	21		21HK				W21	
	Passenger	21		21HK				W21	
	Rear	19		19HK				W19	
1989-1987	Driver	19		19HK				W19	
	Passenger	19		19HK				W19	
	Rear	19		19HK				W19	
1986	Driver	19		19HK				W19	
	Passenger	19		19HK				W19	
350Z									
2009-2003	Driver	20		20HK				W20	
	Passenger	18		18HK				W18	
	Rear	18		18HK				W18	
370Z									
2014-2009	Driver	21		21HK		21HB		W21	
	Passenger	19		19HK		19HB		W19	
720									
1986-1980	Driver	16		16HK				W16	
	Passenger	16		16HK				W16	
Altima									
2014-2007	Driver	28		28HK		28HB		W28	
	Passenger	17		17HK		17HB		W17	
2006-2002	Driver	26		26HK				W26	
	Passenger	17		17HK				W17	
2001-1993	Driver	21		21HK				W21	
	Passenger	20		20HK				W20	
Altima Coupe									
2011-2008	Driver	28		28HK				W28	
	Passenger	17		17HK				W17	
Armada									
2014-2005	Driver	24		24HK				W24	
	Passenger	22		22HK				W22	
	Rear				12B				

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Conventional		Beam		Rear		Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER		
NISSAN (cont.)									
Axxess									
1992-1990	Passenger	22		22HK					W22
	Rear	16		16HK					W16
Cube									
2014-2009	Driver	20		20HK					W20
	Passenger	20		20HK					W20
	Rear					12B			
Frontier									
2014-2005	Driver	24		24HK					W24
	Passenger	18		18HK					W18
2004-1998	Driver	19		19HK					W19
	Passenger	19		19HK					W19
GT-R									
2012-2009	Driver	22		22HK			22HB		W22
	Passenger	19		19HK			19HB		W19
Juke									
2014-2011	Driver	22		22HK					
	Passenger	14		14HK					
	Rear					12E			
Leaf									
2014-2011	Driver	26		26HK			26HB		W26
	Passenger	16		16HK			16HB		W16
Maxima									
2014-2009	Driver	28		28HK			28HB		W28
	Passenger	17		17HK			17HB		W17
2008-2000	Driver	26		26HK					W26
	Passenger	17		17HK					W17
1999-1995	Driver	22		22HK					W22
	Passenger	21		21HK					W21
1994-1989	Driver	21		21HK					W21
	Passenger	20		20HK					W20
1988-1985	Driver	19		19HK					W19
	Passenger	19		19HK					W19
	Rear	16		16HK					W16
Murano									
2014-2009	Driver	26		26HK			26HB		W26
	Passenger	16		16HK			16HB		W16
	Rear					12B			
2008-2006	Driver	26		26HK			26HB		W26
	Passenger	18		18HK			18HB		W18
	Rear					14B			
2005-2003	Driver	26		26HK					W26
	Passenger	19		19HK					W19
NV1500									
2014-2012	Driver	21		21HK					W21
	Passenger	21		21HK					W21
NV200									
2014-2013	Driver	21		21HK					W21
	Passenger	21		21HK					W21
NV2500									
2014-2012	Driver	21		21HK					W21
	Passenger	21		21HK					W21
NV350 Urvan									
2014	Driver	21		21HK					W21
	Passenger	21		21HK					W21

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Specialty					
		Conventional	Beam		Rear	HYBRID	WINTER
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC		
NISSAN (cont.)							
NV3500							
2014-2012	Driver	21		21HK			W21
	Passenger	21		21HK			W21
Pathfinder							
2014-2013	Driver	26		26HK		26HB	W26
	Passenger	17		17HK		17HB	W17
	Rear				12E		
2012-2005	Driver	24		24HK			W24
	Passenger	18		18HK			W18
	Rear				12B		
2004-1996	Driver	22		22HK			W22
	Passenger	21		21HK			W21
	Rear	11					
1995-1987	Driver	19		19HK			W19
	Passenger	19		19HK			W19
Pickup							
1997-1995	Driver	19		19HK			W19
	Passenger	19		19HK			W19
Platina							
2008-2007	Driver	21		21HK			W21
	Passenger	18		18HK			W18
Pulsar NX							
1990-1987	Driver	21		21HK			W21
	Passenger	21		21HK			W21
Quest							
2014-2011	Driver	26		26HK		26HB	W26
	Passenger	19		19HK		19HB	W19
	Rear				12B		
2009-2004	Driver	26		26HK			W26
	Passenger	18		18HK			W18
	Rear				14E		
2002-1993	Driver	22		22HK			W22
	Passenger	22		22HK			W22
Rogue							
2014	Driver	26		26HK		26HB	W26
	Passenger	17		17HK		17HB	W17
	Rear				12E		
2013-2008	Driver	26		26HK			
	Passenger	14		14HK			
	Rear				12E		
Sentra							
2014-2013	Driver	28		28HK		26HB	W26
	Passenger	14		14HK		14HB	W15
2012-2007	Driver	26		26HK			W26
	Passenger	17		17HK			W17
2006-2003	Driver	22		22HK			W22
	Passenger	17		17HK			W17
2002-2000	Driver	22		22HK			W22
	Passenger	16		16HK			W16
1999-1995	Driver	21		21HK			W21
	Passenger	19		19HK			W19
1994-1991	Driver	20		20HK			W20
	Passenger	19		19HK			W19
1990-1987	Driver	19		19HK			W19
	Passenger	18		18HK			W18

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Specialty					
		Conventional	Beam		Rear	Specialty	Specialty
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER
NISSAN (cont.)							
Sentra (cont.)							
1986-1985	Driver	18		18HK			W18
	Passenger	18		18HK			W18
Stanza							
1992-1990	Driver	20		20HK			W20
	Passenger	20		20HK			W20
1989-1987	Driver	19		19HK			W19
	Passenger	19		19HK			W19
Stanza Wagon							
1988-1986	Driver	19		19HK			W19
	Passenger	19		19HK			W19
Tsuru							
2008-2007	Driver	18		18HK			W18
	Passenger	18		18HK			W18
Van XE							
1988-1987	Driver	22		22HK			W22
	Passenger	19		19HK			W19
Versa							
2015-2014	Driver	26		26HK		26HB	
	Passenger	14		14HK		14HB	
	Rear				14E		
2013-2007	Driver	26		26HK			
	Passenger	14		14HK			
	Rear				14E		
Versa Note							
2015-2014	Driver	28					
	Passenger	11					
	Rear				12B		
X-Trail							
2008-2002	Driver	24		24HK			W24
	Passenger	15		15HK			W15
	Rear	17		17HK			W17
Xterra							
2014-2005	Driver	24		24HK			W24
	Passenger	18		18HK			W18
	Rear				12B		
2004-2000	Driver	19		19HK			W19
	Passenger	19		19HK			W19
	Rear	13					
OLDSMOBILE							
98							
1990-1985	Driver	19		19HK			
	Passenger	19		19HK			
98 Regency							
1994-1992	Driver	22		22HK			
	Passenger	22		22HK			
1984-1973	Driver	18		18HK			
	Passenger	18		18HK			
Achieva							
1998-1992	Driver	19		19HK			
	Passenger	19		19HK			
Alero							
2004-1999	Driver	22		22HK			W22
	Passenger	17		17HK			W17

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Conventional	Beam		Rear	Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER
OLDSMOBILE (cont.)							
Aurora							
2003-2001	Driver	22		22HK			W22
	Passenger	22		22HK			W22
1999-1995	Driver	22		22HK			
	Passenger	22		22HK			
Bravada							
2004-2001	Driver	22		22HK			W22
	Passenger	22		22HK			W22
	Rear	16		16HK			W16
2000-1996	Driver	20		20HK			W20
	Passenger	20		20HK			W20
	Rear	13					
1994-1991	Driver	16		16HK			
	Passenger	16		16HK			
Custom Cruiser							
1992-1991	Driver	22		22HK			
	Passenger	22		22HK			
	Rear	17		17HK			
1990-1971	Driver	18		18HK			
	Passenger	18		18HK			
	Rear	16		16HK			
Cutlass							
1999-1997	Driver	22		22HK			W22
	Passenger	19		19HK			W19
Cutlass Calais							
1991-1988	Driver	19		19HK			
	Passenger	19		19HK			
Cutlass Ciera							
1996-1984	Driver	18		18HK			
	Passenger	18		18HK			
Cutlass Cruiser							
1983-1980	Driver	18		18HK			
	Passenger	18		18HK			
	Rear	16		16HK			
Cutlass Supreme							
1997-1989	Driver	20		20HK			
	Passenger	20		20HK			
1988	Driver	20		20HK			
	Passenger	18		20HK			
1987-1978	Driver	18		18HK			
	Passenger	18		18HK			
1977-1968	Driver	16		16HK			
	Passenger	16		16HK			
Delta 88							
1991-1986	Driver	19		19HK			
	Passenger	19		19HK			
1985-1968	Driver	18		18HK			
	Passenger	18		18HK			
F85							
1972-1968	Driver	16		16HK			
	Passenger	16		16HK			
Firenza							
1988-1983	Driver	16		16HK			
	Passenger	16		16HK			
	Rear	16		16HK			

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Conventional	Beam	Rear	Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID
OLDSMOBILE (cont.)						
Firenza (cont.)						
1982	Driver	16		16HK		
	Passenger	16		16HK		
Intrigue						
2002-1998	Driver	22		22HK		W22
	Passenger	22		22HK		W22
LSS						
1998-1996	Driver	22		22HK		
	Passenger	22		22HK		
Omega						
1984-1980	Driver	18		18HK		
	Passenger	18		18HK		
1979-1973	Driver	16		16HK		
	Passenger	16		16HK		
Silhouette						
2004-1997	Driver	24		24HK		W24
	Passenger	24		24HK		W24
	Rear	16		16HK		W16
1996-1990	Driver	24		24HK		
	Passenger	24		24HK		
Toronado						
1992-1986	Driver	19		19HK		
	Passenger	19		19HK		
1985-1971	Driver	18		18HK		
	Passenger	18		18HK		
Toronado Trofeo						
1992-1988	Driver	19		19HK		
	Passenger	19		19HK		
Vista Cruiser						
1975-1973	Driver	18		18HK		
	Passenger	18		18HK		
PEUGEOT						
505						
1991-1981	Driver	18		18HK		W18
	Passenger	18		18HK		W18
604						
1984-1979	Driver	18		18HK		W18
	Passenger	18		18HK		W18
PLYMOUTH						
Acclaim						
1995-1989	Driver	18		18HK		
	Passenger	18		18HK		
Barracuda						
1974-1970	Driver	16		16HK		
	Passenger	16		16HK		
Breeze						
2000-1996	Driver	22		22HK		W22
	Passenger	22		22HK		W22
Caravelle						
1989-1983	Driver	16		16HK		
	Passenger	16		16HK		
Colt						
1995	Driver	20		20HK		W20
	Passenger	19		19HK		W19

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Conventional					
		TRADITIONAL	Beam		Rear		Specialty
			BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER
PLYMOUTH (cont.)							
Colt (cont.)							
1994-1989	Driver	20		20HK			W20
	Passenger	17		17HK			W17
Colt Vista Wagon							
1994-1992	Driver	22		22HK			W22
	Passenger	18		18HK			W18
Fury							
1978-1974	Driver	18		18HK			
1973-1969	Driver	16		16HK			
	Passenger	16		16HK			
Gran Fury							
1989-1980, 1977-1974	Driver	18		18HK			
	Passenger	16		16HK			
1973-1972	Driver	16		16HK			
	Passenger	16		16HK			
Grand Voyager							
2000-1996	Driver	28		28HK			W28
	Passenger	28		28HK			W28
	Rear	18		18HK			W18
1995	Driver	22		22HK			W22
	Passenger	22		22HK			W22
	Rear	18		18HK			W18
1994	Driver	22		22HK			W22
	Passenger	18		18HK			W18
	Rear	18		18HK			W18
1993-1991	Driver	18		18HK			
	Passenger	18		18HK			
	Rear	18		18HK			
1990-1987	Driver	18		18HK			
	Passenger	18		18HK			
	Rear	16		16HK			
Laser							
1994-1992	Driver	20		20HK			W20
Neon							
2001-2000	Driver	22		22HK			W22
	Passenger	19		19HK			W19
1999-1995	Driver	21		21HK			W21
	Passenger	18		18HK			W18
Prowler							
2001-1999, 1997	Driver	17		17HK			W17
	Passenger	19		19HK			W19
Reliant							
1989-1981	Driver	16		16HK			
	Passenger	16		16HK			
	Rear	13					
Roadrunner							
1975	Driver	18		18HK			
	Passenger	18		18HK			
1974-1971	Driver	16		16HK			
	Passenger	16		16HK			
Satellite							
1974-1971	Driver	16		16HK			
	Passenger	16		16HK			

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Conventional	Beam	Rear	Specialty		
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER
PLYMOUTH (cont.)							
Sundance							
1994-1987	Driver	18		18HK			
	Passenger	18		18HK			
Voyager							
2000-1996	Driver	28		28HK			W28
	Passenger	28		28HK			W28
	Rear	18		18HK			W18
1995	Driver	22		22HK			W22
	Passenger	22		22HK			W22
	Rear	18		18HK			W18
1994	Driver	22		22HK			W22
	Passenger	18		18HK			W18
	Rear	18		18HK			W18
1993-1991	Driver	18		18HK			
	Passenger	18		18HK			
	Rear	18		18HK			
1990-1984	Driver	18		18HK			
	Passenger	18		18HK			
	Rear	16		16HK			
PONTIAC							
6000							
1991-1984	Rear	16		16HK			
Acadian							
1987-1982	Driver	16		16HK			
	Passenger	16		16HK			
	Rear	16		16HK			
1981-1976	Rear	16		16HK			
Aztek							
2005-2001	Driver	24		24HK			W24
	Passenger	22		22HK			W22
Bonneville							
2005-2000	Driver	22		22HK			W22
	Passenger	22		22HK			W22
1999-1992	Driver	22		22HK			
	Passenger	22		22HK			
1991-1987	Driver	19		19HK			
	Passenger	19		19HK			
1986-1971	Driver	18		18HK			
	Passenger	18		18HK			
Catalina							
1981-1971	Driver	18		18HK			
	Passenger	18		18HK			
1970	Driver	19		19HK			
	Passenger	19		19HK			
Executive							
1970	Driver	18		18HK			
	Passenger	18		18HK			
Fiero							
1988-1984	Driver	18		18HK			
	Passenger	18		18HK			
Firebird							
1981-1970	Passenger	18		18HK			
Firebird Trans Am							
2002-1998	Driver	24		24HK			W24
	Passenger	24		24HK			W24

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Conventional	Beam		Rear	Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER
PONTIAC (cont.)							
Firebird Trans Am (cont.)							
1992-1982	Driver	18		18HK			
	Passenger	18		18HK			
	Rear	18		18HK			
1981-1970	Driver	18		18HK			
Firefly							
2000-1995	Driver	20		20HK			W20
	Passenger	19		19HK			W19
1994, 1991-1989	Driver	20		20HK			W20
	Passenger	18		18HK			W18
	Rear	15		15HK			W15
1988-1985	Driver	16		16HK			
	Passenger	16		16HK			
	Rear	15		15HK			W15
G3							
2010-2009	Driver	22		22HK			W22
	Passenger	18		18HK			W18
G5							
2010-2007	Driver	22		22HK			W22
	Passenger	17		17HK			W17
G6							
2010-2005	Driver		240E				
	Passenger		210E				
G8							
2009-2008	Driver		260E				
	Passenger		150E				
GTO							
2006-2004	Driver	22		22HK			W22
	Passenger	20		20HK			W20
1972-1968	Driver	16		16HK			
	Passenger	16		16HK			
Grand Am Coupe							
2005-1999	Driver	22		22HK			W22
	Passenger	17		17HK			W17
1998-1985	Driver	19		19HK			
	Passenger	19		19HK			
1980-1978	Driver	18		18HK			
	Passenger	18		18HK			
1975	Driver	16		16HK			
	Passenger	16		16HK			
Grand Am Sedan							
2005-1999	Driver	22		22HK			W22
	Passenger	17		17HK			W17
1998-1986	Driver	19		19HK			
	Passenger	19		19HK			
1979-1978	Driver	18		18HK			
	Passenger	18		18HK			
1975	Driver	16		16HK			
	Passenger	16		16HK			
Grand LeMans							
1983-1975	Driver	16		16HK			
	Passenger	16		16HK			
Grand Prix							
2008-1997	Driver	22		22HK			W22
	Passenger	22		22HK			W22

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Conventional		Beam		Rear		Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER		
PONTIAC (cont.)									
Grand Prix (cont.)									
1996-1988	Driver	20		20HK					
	Passenger	20		20HK					
1987-1978	Driver	18		18HK					
	Passenger	18		18HK					
1977-1968	Driver	16		16HK					
	Passenger	16		16HK					
Grandville									
1975-1971	Driver	18		18HK					
	Passenger	18		18HK					
J2000									
1982	Driver	16		16HK					
	Passenger	16		16HK					
	Rear	16		16HK					
LeMans									
1993-1988	Driver	18		18HK					W18
	Passenger	18		18HK					W18
1981-1978	Driver	18		18HK					
	Passenger	18		18HK					
1977-1968	Driver	16		16HK					
	Passenger	16		16HK					
Montana									
2009-2006	Driver	24		24HK					W24
	Passenger	22		22HK					W22
	Rear	16		16HK					W16
2005-1999	Driver	24		24HK					W24
	Passenger	24		24HK					W24
	Rear	16		16HK					W16
Montana SV6									
2008-2005	Driver	24		24HK					W24
	Passenger	22		22HK					W22
	Rear	16		16HK					W16
Optima									
1991-1988	Driver	18		18HK					W18
	Passenger	18		18HK					W18
Parisienne									
1986-1983	Driver	18		18HK					
	Passenger	18		18HK					
Phoenix									
1984-1980	Driver	18		18HK					
	Passenger	18		18HK					
1979-1977	Driver	16		16HK					
	Passenger	16		16HK					
Pursuit									
2006-2005	Driver	22		22HK					W22
	Passenger	17		17HK					W17
Safari Wagon									
1989-1987	Driver	18		18HK					
	Passenger	18		18HK					
	Rear	16		16HK					
Solstice									
2009-2006	Driver	16		16HK					W16
	Passenger	22		22HK					W22

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Specialty					
		Conventional TRADITIONAL	Beam BEAM ORIGINAL	Beam BEAM HOOK	Rear REAR SPECIFIC	HYBRID	WINTER
PONTIAC (cont.)							
Sunbird							
1994-1990	Driver	17		17HK			
	Passenger	17		17HK			
1989-1986	Driver	16		16HK			
	Passenger	16		16HK			
Sunburst							
1988-1985	Driver	18		18HK			
	Passenger	18		18HK			
Sunfire							
2005-1995	Driver	22		22HK			W22
	Passenger	17		17HK			W17
Sunrunner							
1997-1995	Driver	17		17HK			W17
	Passenger	17		17HK			W17
T1000							
1982	Driver	16		16HK			
	Passenger	16		16HK			
Tempest							
1991-1987	Driver	19		19HK			
	Passenger	19		19HK			
1970-1968	Driver	16		16HK			
	Passenger	16		16HK			
Torrent							
2009-2006	Driver	24		24HK			W24
	Passenger	19		19HK			W19
	Rear	15		15HK			W15
Trans Sport							
1999-1997	Driver	24		24HK			W24
	Passenger	24		24HK			W24
	Rear	16		16HK			W16
1996-1990	Driver	22		22HK			
	Passenger	22		22HK			
Ventura							
1977-1971	Driver	16		16HK			
	Passenger	16		16HK			
Vibe							
2010-2009	Driver	26		26HK		26HB	W26
	Passenger	17		17HK		17HB	W17
	Rear				11A		
2008-2003	Driver	21		21HK			W21
	Passenger	18		18HK			W18
	Rear				11A		
Wave							
2008-2005	Driver	22		22HK			W22
	Passenger	19		19HK			W19
	Rear	15		15HK			W15
Wave Sedan							
2008-2005	Driver	22		22HK			W22
	Passenger	18		18HK			W18
	Rear	15		15HK			W15
PORSCHE							
911							
2015-2013	Driver		21TB				
	Passenger		21TB				

APPLICATION GUIDE PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Conventional	Beam	Rear	Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID
PORSCHE (cont.)						
911 (cont.)						
2012-2006	Driver	22		22HK		W22
	Passenger	22		22HK		W22
	Rear		220E			
2005	Driver	22		22HK		W22
	Passenger	22		22HK		W22
2004-1999	Driver	22		22HK		W22
	Passenger	22		22HK		W22
	Rear	22		22HK		W22
1998-1995	Driver	15		15HK		W15
	Passenger	18		18HK		W18
944						
1991-1985	Driver	19		19HK		W19
	Passenger	19		19HK		W19
968						
1995-1992	Driver	19		19HK		W19
	Passenger	19		19HK		W19
	Rear	20		20HK		W20
Boxster						
2015-2013	Driver		21TB			
	Passenger		21TB			
2012-1997	Driver	22		22HK		W22
	Passenger	22		22HK		W22
Cayenne						
2014-2012	Driver		240E			
	Passenger		240E			
2011-2009	Driver		240E			
	Passenger		240E			
	Rear	15		15HK		W15
2008, 2006-2003	Driver		260E			
	Passenger		260E			
	Rear	15		15HK		W15
Cayman						
2015-2014	Driver		21TB			
	Passenger		21TB			
2012-2006	Driver	22		22HK		W22
	Passenger	22		22HK		W22
Macan						
2015	Driver		24TB			
	Passenger		20TB			
Panamera						
2015-2014	Driver		24TB			
	Passenger		20TB			
2013-2010	Driver	24		24HK		W24
	Passenger	21		21HK		W21
RAM						
1500						
2014-2011	Driver	22		22HK		W22
	Passenger	22		22HK		W22
2500						
2014-2011	Driver	22		22HK		W22
	Passenger	22		22HK		W22
3500						
2014-2011	Driver	22		22HK		W22
	Passenger	22		22HK		W22

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Conventional		Beam		Rear		Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER		
RAM (cont.)									
C/V									
2014-2012	Driver	26		26HK					W26
	Passenger	20		20HK					W20
Dakota									
2012-2010	Driver	21		21HK					W21
	Passenger	21		21HK					W21
RENAULT									
Alliance									
1987-1983	Driver	18		18HK					
	Passenger	18		18HK					
Alliance GTA Convertible									
1987	Driver	18		18HK					
	Passenger	18		18HK					
Encore									
1986-1984	Driver	18		18HK					
	Passenger	18		18HK					
	Rear	18		18HK					
R15									
1976-1972	Driver	16		16HK					W16
	Passenger	16		16HK					W16
R17									
1979-1972	Driver	16		16HK					W16
	Passenger	16		16HK					W16
R18i									
1986-1981	Driver	16		16HK					W16
	Passenger	16		16HK					W16
ROLLS ROYCE									
Corniche									
2002-2000	Driver	22		22HK					W22
	Passenger	22		22HK					W22
Corniche II									
1992	Driver	16		16HK					
	Passenger	14		14HK					
Silver Spur									
1988-1981	Driver	18		18HK					W18
	Passenger	18		18HK					W18
SAAB									
9-2X									
2006-2005	Driver	22		22HK					W22
	Passenger	17		17HK					W17
	Rear					14B			
9-3									
2011-2008	Driver		230E						
	Passenger		230E						
2007-2004	Driver	24		24HK					W24
	Passenger	22		22HK					W22
2003-1999	Driver	21		21HK					W21
	Passenger	21		21HK					W21
	Rear	20		20HK					W20
9-5									
2011-2010	Driver	24		24HK			24HB		W24
	Passenger	21		21HK			21HB		W21
2007-2006, 2000-1999	Driver	22		22HK					W22
	Passenger	22		22HK					W22

APPLICATION GUIDE PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Specialty					
		Conventional TRADITIONAL	Beam BEAM ORIGINAL	Beam BEAM HOOK	Rear REAR SPECIFIC	HYBRID	WINTER
SAAB (cont.)							
9-5 (cont.)							
2005-2001	Driver	22		22HK			W22
	Passenger	22		22HK			W22
	Rear				14E		
9-7x							
2009-2005	Driver	22		22HK			W22
	Passenger	22		22HK			W22
	Rear				12E		
900							
1998-1994	Driver	21		21HK			W21
	Passenger	21		21HK			W21
	Rear	20		20HK			W20
1993-1979	Driver	16		16HK			W16
	Passenger	16		16HK			W16
900 Convertible							
1994-1991	Driver	18		18HK			W18
	Passenger	18		18HK			W18
9000							
1998-1986	Driver	21		21HK			W21
	Passenger	21		21HK			W21
	Rear	21		21HK			W21
SATURN							
Astra							
2009-2008	Driver		220E				
	Passenger		180E				
Aura							
2009-2007	Driver		240E				
	Passenger		210E				
Ion							
2007-2003	Driver	22		22HK			W22
	Passenger	19		19HK			W19
Ion Coupe							
2007-2003	Driver	22		22HK			W22
	Passenger	19		19HK			W19
L100							
2002-2001	Driver	19		19HK			W19
	Passenger	19		19HK			W19
	Rear	13					
L200							
2003-2001	Driver	19		19HK			W19
	Passenger	19		19HK			W19
	Rear	13					
L300							
2005-2001	Driver	19		19HK			W19
	Passenger	19		19HK			W19
	Rear	13					
LS							
2000	Driver	19		19HK			W19
	Passenger	19		19HK			W19
	Rear	13					
LS1							
2000	Driver	19		19HK			W19
	Passenger	19		19HK			W19
	Rear	13					

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Specialty					
		Conventional	Beam		Rear	HYBRID	WINTER
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC		
SATURN (cont.)							
LS2							
2000	Driver	19		19HK			W19
	Passenger	19		19HK			W19
	Rear	13					
LW1							
2000	Driver	19		19HK			W19
	Passenger	19		19HK			W19
	Rear	13					
LW2							
2000	Driver	19		19HK			W19
	Passenger	19		19HK			W19
	Rear	13					
LW200							
2003-2001	Driver	19		19HK			W19
	Passenger	19		19HK			W19
	Rear	13					
LW300							
2003-2001	Driver	19		19HK			W19
	Passenger	19		19HK			W19
	Rear	13					
Outlook							
2010-2007	Driver		240E				
	Passenger		210E				
Relay							
2007-2005	Driver	24		24HK			W24
	Passenger	22		22HK			W22
	Rear	16		16HK			W16
SC							
1992-1991	Driver	22		22HK			W22
	Passenger	21		21HK			W21
	Rear	16		16HK			W16
SL							
2002-1991	Driver	22		22HK			W22
	Passenger	21		21HK			W21
	Rear	16		16HK			W16
SW1							
1999-1993	Driver	22		22HK			W22
	Passenger	21		21HK			W21
	Rear	16		16HK			W16
SW2							
2001-1993	Driver	22		22HK			W22
	Passenger	21		21HK			W21
	Rear	16		16HK			W16
Sky							
2010-2007	Driver	16		16HK			W16
	Passenger	22		22HK			W22
Vue							
2010-2008	Driver	24		24HK			W24
	Passenger	16		16HK			W16
2007-2002	Driver	24		24HK			W24
	Passenger	19		19HK			W19
	Rear	11					

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Conventional	Beam		Rear	Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER
SCION							
FR-S							
2015-2013	Driver	22		22HK		22HB	W22
	Passenger	20		20HK		20HB	W20
iQ							
2014-2012	Driver	24		24HK		24HB	W24
	Passenger	18		18HK		18HB	W18
	Rear				11A		
tC							
2014-2011	Driver	24		24HK		24HB	W24
	Passenger	18		18HK		18HB	W18
2010-2005	Driver	26		26HK			W26
	Passenger	16		16HK			W16
xA							
2006-2004	Driver	24		24HK			W24
	Passenger	16		16HK			W16
	Rear				12A		
xB							
2014-2008	Driver	22		22HK		22HB	W22
	Passenger	20		20HK		20HB	W20
	Rear				14A		
2006-2004	Driver	20		20HK			W20
	Passenger	20		20HK			W20
xD							
2014-2008	Driver	26		26HK		26HB	
	Passenger	14		14HK		14HB	
SMART							
Forfour							
2006-2005	Driver	22		22HK			W22
	Passenger	18		18HK			W18
Fortwo							
2014-2007	Driver		230E				
	Passenger		210E				
2006-2005	Driver	21		21HK			W21
	Passenger	21		21HK			W21
	Rear	13					
STERLING							
825							
1988-1987	Driver	19		19HK			W19
	Passenger	19		19HK			W19
827							
1991-1989	Driver	19		19HK			W19
	Passenger	19		19HK			W19
SUBARU							
B9 Tribeca							
2007-2006	Rear				14B		
BRZ							
2015-2013	Driver	22		22HK		22HB	W22
	Passenger	20		20HK		20HB	W20
Baja							
2006-2003	Driver	22		22HK			W22
	Passenger	20		20HK			W20
Forester							
2015-2014	Driver	26		26HK		26HB	W26
	Passenger	17		17HK		17HB	W17
	Rear				14B		

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Conventional		Beam		Rear		Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER		
SUBARU (cont.)									
Forester (cont.)									
2013-2009	Driver	24		24HK		24HB		W24	
	Passenger	18		18HK		18HB		W18	
	Rear				14B				
2008-2006	Driver	22		22HK				W22	
	Passenger	19		19HK				W19	
	Rear				14B				
2005-2004	Driver	22		22HK				W22	
	Passenger	19		19HK				W19	
	Rear				16B				
2003	Driver	22		22HK				W22	
	Passenger	19		19HK				W19	
	Rear	15		15HK				W15	
2002-1998	Driver	21		21HK				W21	
	Passenger	19		19HK				W19	
	Rear	15		15HK				W15	
Impreza									
2014-2012	Driver	26		26HK				W26	
	Passenger	16		16HK				W16	
	Rear				12B				
2011-2010	Driver	24		24HK				W24	
	Passenger	16		16HK				W16	
	Rear				16B				
2009	Driver	24		24HK				W24	
	Passenger	16		16HK	16B			W16	
2008	Driver	24		24HK				W24	
	Passenger	16		16HK				W16	
	Rear				14B				
2007-2005	Driver	22		22HK				W22	
	Passenger	17		17HK				W17	
	Rear				14B				
2004	Driver	22		22HK				W22	
	Passenger	17		17HK				W17	
	Rear				16B				
2003-2002	Driver	22		22HK				W22	
	Passenger	17		17HK				W17	
	Rear	15		15HK				W15	
2001-1993	Driver	21		21HK				W21	
	Passenger	18		18HK				W18	
	Rear	15		15HK				W15	
Impreza WRX STI									
2014-2010	Driver	24		24HK		24HB		W24	
	Passenger	16		16HK		16HB		W16	
	Rear				16B				
Justy									
1995-1993, 1989	Driver	18		18HK				W18	
	Passenger	17		17HK				W17	
1992-1990	Driver	18		18HK				W18	
	Passenger	17		17HK				W17	
	Rear	15		15HK				W15	
1988-1987	Driver	17		17HK				W17	
	Passenger	17		17HK				W17	
	Rear	13							

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Conventional		Beam		Rear		Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER		
SUBARU (cont.)									
Legacy									
2014-2010	Driver	26		26HK		26HB		W26	
	Passenger	19		19HK		19HB		W19	
2009-2005	Driver	24		24HK				W24	
	Passenger	18		18HK				W18	
	Rear				14B				
2004-2000	Driver	22		22HK				W22	
	Passenger	20		20HK				W20	
	Rear	15		15HK				W15	
1999-1995	Driver	21		21HK				W21	
	Passenger	19		19HK				W19	
	Rear	15		15HK				W15	
1994-1990	Driver	20		20HK				W20	
	Passenger	18		18HK				W18	
	Rear	15		15HK				W15	
Outback									
2014-2010	Driver	26		26HK		26HB		W26	
	Passenger	19		19HK		19HB		W19	
	Rear				14B				
2009-2005	Driver	24		24HK				W24	
	Passenger	18		18HK				W18	
	Rear				14B				
2004-2000	Driver	22		22HK				W22	
	Passenger	20		20HK				W20	
	Rear	15		15HK				W15	
SVX									
1997-1992	Driver	22		22HK				W22	
	Passenger	20		20HK				W20	
	Rear	18		18HK				W18	
Tribeca									
2014-2008	Passenger	20		20HK				W20	
	Rear				14B				
WRX									
2014-2012	Driver	26		26HK				W26	
	Passenger	16		16HK				W16	
	Rear				12B				
WRX STI									
2014-2013	Driver	24		24HK		24HB		W24	
	Passenger	16		16HK		16HB		W16	
	Rear				16B				
XV Crosstrek									
2015-2013	Driver	26		26HK				W26	
	Passenger	16		16HK				W16	
	Rear				12B				
SUZUKI									
Aerio									
2007-2004	Driver	22		22HK				W22	
	Passenger	18		18HK				W18	
	Rear				12B				
2003-2002	Driver	22		22HK				W22	
	Passenger	18		18HK				W18	
Equator									
2012-2009	Driver	24		24HK				W24	
	Passenger	18		18HK				W18	

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Conventional		Beam		Rear		Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER		
SUZUKI (cont.)									
Esteem									
2002-1995	Driver	20		20HK					W20
	Passenger	18		18HK					W18
	Rear	13							
Forenza									
2008-2004	Driver	22		22HK					W22
	Passenger	19		19HK					W19
Grand Vitara									
2013-2006	Driver	19		19HK					W19
	Passenger	19		19HK					W19
	Rear					12A			
2005	Driver	19		19HK					W19
	Passenger	19		19HK					W19
	Rear	13							
2004-1999	Driver	19		19HK					W19
	Passenger	19		19HK					W19
	Rear	15		15HK					W15
Kizashi									
2014-2010	Driver	24		24HK			24HB		W24
	Passenger	20		20HK			20HB		W20
Reno									
2008-2005	Driver	22		22HK					W22
	Passenger	19		19HK					W19
	Rear	18		18HK					W18
SX4									
2013-2011	Driver	26		26HK					W26
	Passenger	15		15HK					W15
	Rear					12B			
2010-2007	Driver	26		26HK					W26
	Passenger	15		15HK					W15
Sidekick									
1998-1989	Driver	17		17HK					W17
	Passenger	17		17HK					W17
	Rear	15		15HK					W15
Swift									
2010-2009	Driver	21		21HK					W21
	Passenger	18		18HK					W18
	Rear	15		15HK					W15
2008-2007	Driver	22		22HK					W22
	Passenger	19		19HK					W19
	Rear	15		15HK					W15
2001-1995	Driver	20		20HK					W20
	Passenger	19		19HK					W19
	Rear	15		15HK					W15
1994-1989	Driver	20		20HK					W20
	Passenger	18		18HK					W18
	Rear	15		15HK					W15
Verona									
2006-2004	Driver	22		22HK					W22
	Passenger	20		20HK					W20
Vitara									
2004-1999	Driver	19		19HK					W19
	Passenger	19		19HK					W19
	Rear	15		15HK					W15

APPLICATION GUIDE PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Conventional	Beam	Rear	Specialty		
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER
SUZUKI (cont.)							
X-90							
1998-1996	Driver	17		17HK			W17
	Passenger	18		18HK			W18
XL-7							
2009-2007	Driver	24		24HK			W24
	Passenger	19		19HK			W19
	Rear	13					
2006-2005	Driver	19		19HK			W19
	Passenger	19		19HK			W19
	Rear	13					
2004-2002	Driver	19		19HK			W19
	Passenger	19		19HK			W19
	Rear	15		15HK			W15
TESLA							
Roadster							
2011-2008	Driver	26		26HK			W26
	Passenger	26		26HK			W26
S							
2014-2012	Driver		280E				
	Passenger		180E				
TOYOTA							
4Runner							
2014-2010	Driver	24		24HK		24HB	W24
	Passenger	20		20HK		20HB	W20
2009-2003	Driver	22		22HK			W22
	Passenger	20		20HK			W20
2002-1993	Driver	17		17HK			W17
	Passenger	17		17HK			W17
Avalon							
2015-2013	Driver	26		26HK		26HB	W26
	Passenger	18		18HK		18HB	W18
2012-2005	Driver		260E				
	Passenger		200E				
2004-2000	Driver	24		24HK			W24
	Passenger	17		17HK			W17
1999-1995	Driver	21		21HK			W21
	Passenger	19		19HK			W19
Camry							
2015-2012	Driver	26		26HK		26HB	W26
	Passenger	18		18HK		18HB	W18
2011-2007	Driver	24		24HK		24HB	W24
	Passenger	20		20HK		20HB	W20
2006-2002	Driver	24		24HK			W24
	Passenger	19		19HK			W19
2001-1992	Driver	21		21HK			W21
	Passenger	19		19HK			W19
Celica							
2005-2000	Driver	26		26HK			W26
	Passenger	16		16HK			W16
	Rear	20		20HK			W20
1999-1994	Driver	21		21HK			W21
	Passenger	20		20HK			W20
	Rear	20		20HK			W20

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Conventional		Beam		Rear		Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER		
TOYOTA (cont.)									
Corolla									
2014-2009	Driver	26		26HK		26HB		W26	
	Passenger	16		16HK		16HB		W16	
2008-2002	Driver	24		24HK				W24	
	Passenger	18		18HK				W18	
2001-1997	Driver	20		20HK				W20	
	Passenger	18		18HK				W18	
1996-1993	Driver	20		20HK				W20	
	Passenger	18		18HK				W18	
	Rear	16		16HK				W16	
Echo									
2005-2000	Driver	22		22HK					
	Passenger	13		14HK					
FJ Cruiser									
2014-2007	Driver	16		16HK					
	Passenger	14		14HK					
	Front	14		14HK					
Highlander									
2014-2008	Driver	26		26HK		26HB		W26	
	Passenger	20		20HK		20HB		W20	
	Rear					12A			
2007-2001	Driver	22		22HK				W22	
	Passenger	19		19HK				W19	
	Rear					12A			
Land Cruiser									
2014-2013	Driver	24		24HK		24HB		W24	
	Passenger	22		22HK		22HB		W22	
	Rear					12A			
2011-2008	Driver	24		24HK				W24	
	Passenger	22		22HK				W22	
	Rear					12A			
2007-2000	Driver	24		24HK				W24	
	Passenger	22		22HK				W22	
	Rear	16		16HK				W16	
1999-1998	Driver	20		20HK				W20	
	Passenger	20		20HK				W20	
	Rear	16		16HK				W16	
1997-1993	Driver	18		18HK				W18	
	Passenger	18		18HK				W18	
	Rear	16		16HK				W16	
MR2									
1995-1993	Driver	20		20HK				W20	
	Passenger	19		19HK				W19	
MR2 Spyder									
2006-2000	Driver	20		20HK				W20	
	Passenger	19		19HK				W19	
Matrix									
2014-2009	Driver	26		26HK		26HB		W26	
	Passenger	17		17HK		17HB		W17	
	Rear					12A			
2008-2003	Driver	21		21HK				W21	
	Passenger	18		18HK				W18	
	Rear					11A			

APPLICATION GUIDE PASSENGER CAR & LIGHT TRUCKS

Make / Year / Model		Specialty					
		Conventional	Beam		Rear	HYBRID	WINTER
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC		
TOYOTA (cont.)							
Paseo							
1999-1992	Driver	21		21HK			W21
	Passenger	18		18HK			W18
Pickup							
1995-1993	Driver	17		17HK			W17
	Passenger	17		17HK			W17
Prius							
2014-2010	Driver	26		26HK		26HB	W26
	Passenger	19		19HK		19HB	W19
	Rear				16A		
2009-2004	Driver	26		26HK			W26
	Passenger	18		18HK			W18
	Rear				16A		
2003-2001	Driver	24		24HK			W24
	Passenger	17		17HK			W17
Prius C							
2014-2012	Driver	28		28HK		28HB	
	Passenger	14		14HK		14HB	
Prius V							
2014-2012	Driver	26		26HK		26HB	W26
	Passenger	19		19HK		19HB	W19
	Rear				11A		
RAV4							
2015	Driver	26		26HK		26HB	W26
	Passenger	16		16HK		16HB	W16
2014-2013	Driver	26		26HK		26HB	W26
	Passenger	16		16HK		16HB	W16
	Rear				12A		
2012-2006	Driver	24		24HK			W24
	Passenger	17		17HK			W17
	Rear				12A		
2005-2001	Driver	22		22HK			W22
	Passenger	19		19HK			W19
	Rear				12A		
2000-1996	Driver	20		20HK			W20
	Passenger	18		18HK			W18
	Rear	13		14HK			
RAV4 EV							
2015-2013	Driver	24		24HK		24HB	W24
	Passenger	17		17HK		17HB	W17
Sequoia							
2014-2008	Driver		260E				
	Passenger		230E				
2007-2003	Driver	19		19HK			W19
	Passenger	19		19HK			W19
2002-2001	Driver	19		19HK			W19
	Passenger	19		19HK			W19
	Rear	13					
Sienna							
2014-2011	Driver	28		28HK		28HB	W28
	Passenger	20		20HK		20HB	W20
	Rear				16A		
2010-2006	Driver	26		26HK			W26
	Passenger	19		19HK			W19
	Rear	16		16HK			W16

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Conventional		Beam		Rear		Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER		
TOYOTA (cont.)									
Sienna (cont.)									
2005	Driver	26		26HK					W26
	Passenger	19		19HK					W19
2004	Driver	26		26HK					W26
	Passenger	19		19HK					W19
	Rear				14A				
2003-1998	Driver	24		24HK					W24
	Passenger	18		18HK					W18
	Rear	17		17HK					W17
Solara									
2008-2004	Driver	24		24HK					W24
	Passenger	19		19HK					W19
2003-1999	Driver	22		22HK					W22
	Passenger	21		21HK					W21
Supra									
1998-1994	Driver	21		21HK					W21
	Passenger	19		19HK					W19
	Rear	18		18HK					W18
T100									
1998-1993	Driver	19		19HK					W19
	Passenger	19		19HK					W19
Tacoma									
2014-2005	Driver	22		22HK					W22
	Passenger	21		21HK					W21
2004-1995	Driver	17		17HK					W17
	Passenger	17		17HK					W17
Tercel									
1999-1991	Driver	18		18HK					W18
	Passenger	18		18HK					W18
Tundra									
2014-2007	Driver		260E						
	Passenger		230E						
2006-2000	Driver	19		19HK					W19
	Passenger	19		19HK					W19
Venza									
2014-2009	Driver	26		26HK			26HB		W26
	Passenger	22		22HK			22HB		W22
	Rear				12A				
Yaris									
2014-2012	Driver	28		28HK			28HB		W28
	Rear				12A				
2011-2007	Driver	26		26HK					
	Passenger	13		14HK					
	Rear				12A				
2006, 2004	Driver	26		26HK					
	Passenger	13		14HK					
VOLKSWAGEN									
Beetle									
2014-2012	Driver		21TB						
	Passenger		21TB						
2011-1998	Driver	21		21HK					W21
	Passenger	21		21HK					W21
Beetle Cabrio									
2011-2010	Driver	21		21HK					W21
	Passenger	21		21HK					W21

Make / Year / Model		Conventional					
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER
VOLKSWAGEN (cont.)							
CC							
2014-2013	Driver		24TB				
	Passenger		19TB				
2012-2009	Driver		240E				
	Passenger		190E				
Cabrio							
2002-1995	Driver	21		21HK			W21
	Passenger	19		19HK			W19
Cabriolet							
1993-1985	Driver	16		16HK			W16
	Passenger	16		16HK			W16
Corrado							
1995-1990	Driver	19		19HK			W19
	Passenger	19		19HK			W19
	Rear	18		18HK			W18
Dasher							
1981-1974	Driver	16		16HK			W16
	Passenger	16		16HK			W16
Eos							
2015-2007	Driver		240E				
	Passenger		190E				
EuroVan							
2009-2006	Driver	21		21HK			W21
	Passenger	16		16HK			W16
2004-1999, 1997-1995	Driver	21		21HK			W21
	Passenger	21		21HK			W21
	Rear	16		16HK			W16
1994-1992	Driver	21		21HK			W21
	Passenger	21		21HK			W21
	Rear	18		18HK			W18
Fox							
1993-1987	Driver	18		18HK			W18
	Passenger	18		18HK			W18
	Rear	18		18HK			W18
GTI							
2015	Driver		260E				
	Passenger		180E				
2014-2010	Driver		240E				
	Passenger		190E				
2009-2007	Driver		240E				
	Passenger		190E				
	Rear				13V		
2006	Driver	21		21HK			W21
	Passenger	19		19HK			W19
	Rear				13V		
Golf							
2015	Driver		260E				
	Passenger		180E				
2014-2010, 2007	Driver		240E				
	Passenger		190E				
2006-1993	Driver	21		21HK			W21
	Passenger	19		19HK			W19
	Rear	13					

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model		Conventional		Beam		Rear		Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER		
VOLKSWAGEN (cont.)									
Golf (cont.)									
1992-1985	Driver	16		16HK					W16
	Passenger	16		16HK					W16
	Rear	16		16HK					W16
Jetta									
2014-2011	Driver		24TB						
	Passenger		19TB						
2010-2006	Driver		240E						
	Passenger		190E						
2005-1993	Driver	21		21HK					W21
	Passenger	19		19HK					W19
	Rear	15		15HK					W15
1992-1980	Driver	16		16HK					W16
	Passenger	16		16HK					W16
Jetta Wagon									
2014-2011	Driver		240E						
	Passenger		190E						
Passat									
2014-2012	Driver		24TB						
	Passenger		19TB						
2010-2006	Driver		240E						
	Passenger		190E						
	Rear					11V			
2005-2002	Driver		210E						
	Passenger		190E						
	Rear	15		15HK					W15
2001-1997	Driver	21		21HK					W21
	Passenger	21		21HK					W21
	Rear	15		15HK					W15
1996-1990	Driver	21		21HK					W21
	Passenger	21		21HK					W21
	Rear	16		16HK					W16
Quantum									
1988-1982	Driver	18		18HK					W18
	Passenger	18		18HK					W18
	Rear	13		14HK					
R32									
2008	Driver		240E						
	Passenger		190E						
Rabbit									
2009-2006	Driver		240E						
	Passenger		190E						
1984-1975	Driver	16		16HK					W16
	Passenger	16		16HK					W16
	Rear	16		16HK					W16
Routan									
2012-2011	Driver	26		26HK					W26
	Passenger	20		20HK					W20
	Rear	16		16HK					W16
2010-2009	Driver	26		26HK					W26
	Passenger	20		20HK					W20
	Rear					16E			

Make / Year / Model		Conventional		Beam		Rear		Specialty	
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER		
VOLKSWAGEN (cont.)									
Scirocco									
1989-1986	Driver	19		19HK					W19
	Passenger	19		19HK					W19
	Rear	16		16HK					W16
1985-1975	Driver	18		18HK					W18
	Passenger	18		18HK					W18
	Rear	16		16HK					W16
Tiguan									
2015-2009	Driver		240E						
	Passenger		190E						
	Rear				13V				
Touareg									
2014-2011	Driver		260E						
	Passenger		260E						
	Rear				14T				
2010-2004	Driver		260E						
	Passenger		260E						
	Rear				13V				
Transporter									
1994-1992	Driver	21		21HK					W21
	Passenger	21		21HK					W21
	Rear	16		16HK					W16
1991-1985	Driver	18		18HK					W18
	Passenger	18		18HK					W18
	Rear	16		16HK					W16
1979-1968	Driver	15		15HK					W15
	Passenger	15		15HK					W15
Vanagon									
1991-1980	Driver	18		18HK					W18
	Passenger	18		18HK					W18
	Rear	16		16HK					W16
VOLVO									
240									
1993-1990	Driver	16		16HK					W16
	Passenger	16		16HK					W16
	Rear	17		17HK					W17
745									
1985	Driver	20		20HK					W20
	Passenger	20		20HK					W20
	Rear	11							
760									
1990-1989	Driver	21		21HK					W21
	Passenger	21		21HK					W21
	Rear	14		14HK					
1988-1986	Driver	20		20HK					W20
	Passenger	20		20HK					W20
	Rear	13							
1985-1983	Driver	19		19HK					W19
	Passenger	19		19HK					W19
780									
1991-1987	Driver	20		20HK					W20
	Passenger	20		20HK					W20

APPLICATION GUIDE

PASSENGER CAR & LIGHT TRUCKS



Make / Year / Model	Conventional		Beam		Rear		Specialty	
	TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER		
VOLVO (cont.)								
850								
1997-1993	Driver	21		21HK				W21
	Passenger	21		21HK				W21
	Rear	17		17HK				W17
940								
1995-1991	Driver	20		20HK				W20
	Passenger	20		20HK				W20
	Rear	14		14HK				
960								
1997-1992	Driver	21		21HK				W21
	Passenger	21		21HK				W21
	Rear	14		14HK				
C30								
2013-2011	Driver		260E					
	Passenger		200E					
	Rear				14E			
2010-2007	Driver		260E					
	Passenger		200E					
	Rear				16T			
C70								
2013-2006	Driver		260E					
	Passenger		190E					
2005-1998	Driver	21		21HK				W21
	Passenger	21		21HK				W21
DL								
1984	Driver	16		16HK				W16
	Passenger	16		16HK				W16
	Rear	11						
GLE								
1984	Driver	16		16HK				W16
	Passenger	16		16HK				W16
	Rear	11						
S40								
2012-2004	Driver		260E					
	Passenger		200E					
2003-1999	Driver	21		21HK				W21
	Passenger	20		20HK				W20
S60								
2015-2011	Driver		260E					
	Passenger		200E					
2009-2005	Driver		240E					
	Passenger		220E					
2004-2001	Driver	24		24HK				W24
	Passenger	22		22HK				W22
S70								
2000-1998	Driver	21		21HK				W21
	Passenger	21		21HK				W21
S80								
2015-2007	Driver		260E					
	Passenger		200E					
2006-2004	Driver		240E					
	Passenger		220E					
2003-1999	Driver	24		24HK				W24
	Passenger	22		22HK				W22

Make / Year / Model		Conventional	Beam		Rear		Specialty
		TRADITIONAL	BEAM ORIGINAL	BEAM HOOK	REAR SPECIFIC	HYBRID	WINTER
VOLVO (cont.)							
S90							
1998-1997	Driver	21		21HK			W21
	Passenger	21		21HK			W21
V40							
2004-1999	Driver	21		21HK			W21
	Passenger	20		20HK			W20
	Rear	16		16HK			W16
V50							
2011-2005	Driver		260E				
	Passenger		200E				
	Rear	13					
V60							
2015	Driver		260E				
	Passenger		200E				
V70							
2010-2008	Driver		260E				
	Passenger		200E				
	Rear				14T		
2007-2005	Driver		240E				
	Passenger		220E				
2004-2001	Driver	24		24HK			W24
	Passenger	22		22HK			W22
	Rear	16		16HK			W16
2000-1998	Driver	21		21HK			W21
	Passenger	21		21HK			W21
	Rear	18		18HK			W18
V90							
1998-1997	Driver	21		21HK			W21
	Passenger	21		21HK			W21
	Rear	13					
XC60							
2015-2012	Driver		260E				
	Passenger		200E				
	Rear				14E		
2011-2010	Driver		260E				
	Passenger		200E				
	Rear				16T		
XC70							
2015-2008	Driver		260E				
	Passenger		200E				
	Rear				14T		
2007-2005	Driver		240E				
	Passenger		220E				
2004-2003	Driver	24		24HK			W24
	Passenger	22		22HK			W22
	Rear	16		16HK			W16
XC90							
2014-2012	Driver		240E				
	Passenger		220E				
	Rear				14E		
2011-2005	Driver		240E				
	Passenger		220E				
	Rear				16T		
2004-2003	Driver	24		24HK			W24
	Passenger	22		22HK			W22



ULTIMATE®

APPLICATION GUIDE HEAVY DUTY VEHICLES



IMPORTANT NOTICE: In preparation for this catalog, every effort has been made to obtain accurate and complete information at the time of printing. Valeo Service assumes no responsibility or liability for any errors or omissions contained in this catalog. All references to the original manufacturer trade names and part numbers are for identification purposes only.

APPLICATION GUIDE HEAVY DUTY VEHICLES

Make / Year / Model - For...		HEAVY DUTY Conventional
BERING TRUCK		
LD Series		
2001-99	Front	20HD
HD Series		
2001-99	Front	22HD
MD Series		
2001-99	Front	22HD
CHEVROLET		
C4500, C5500, C6500, C7500, C8500		
2009-03	Front	22HD
C5500, C6500, C7500, C8500		
2002-97	Front	18HD
Kodiak		
1996-90	Front	18HD
P Series		
2002-91	Front	18HD
Grumman		
1999-93	Front	20HD
Express		
2014-96	Front	22HD
Tiltmaster (W3500, W4500, W5500)		
2010-05	Front	20HD
Tiltmaster (W3-W7)		
2004-95	Front	20HD
T5500, T6500, T7500, T8500		
2009-97	Front	22HD
WT5500		
2004-00	Front	22HD
DAF		
LF Series		
2002	Front	24HD
65, 75, 85 Series		
2001-92	Front	24HD
95 Series		
2001-97	Front	24HD
DODGE		
Sprinter		
2006-03	Driver Passenger	24HD 22HD
FORD		
Aeromax, Aeroview		
1998-96	Front	20HD
F Series		
2015-09	Front	22HD
2008-00	Front	20HD
1999-98	Front	22HD
1997-94(L)	Front	18HD
L Series (Louisville)		
1998	Front	20HD
L Series (except LN, LTL)		
1997-96	Front	20HD
LCF		
2009-06	Driver Passenger	21HD 20HD
FREIGHTLINER		
108SD, 114SD, 122SD		
2014-11	Front	22HD
Argosy		
2006-99	Front	21HD
Business Class M2		
2014-02	Front	22HD
Cascadia		
2015-08	Front	24HD
Century Class (C112, C120)		
2010-96	Front	22HD

Make / Year / Model - For...		HEAVY DUTY Conventional
FREIGHTLINER (Cont.)		
Columbia		
2011-00	Front	22HD
Coronado		
2014-01	Front	22HD
FLH Series		
1998	Front	21HD
FL Series (Business Class)		
2003-91	Front	24HD
Sport Chassis		
2001-99	Front	24HD
FUSO		
FE		
2014-09	Front	20HD
2008-96	Front	21HD
FG		
2008-97	Front	21HD
FH		
2004-96	Front	21HD
FK		
2010-08	Front	26HD
FM		
2008	Front	26HD
GMC		
C4500, C5500, C6500, C7500, C8500		
2009-03	Front	22HD
C5500, C6500, C7500, C8500		
2002-97	Front	18HD
Topkick		
1996-90	Front	18HD
Grumman		
1999-93	Front	20HD
P Series		
2002-91	Front	18HD
Forward (W3500, W4500, W5500)		
2010-05	Front	20HD
Forward (W3 - W7)		
2004-95	Front	20HD
T5500, T6500, T7500, T8500		
2009-97	Front	22HD
WT5500		
2004-00	Front	22HD
HINO		
All Models		
2014-05	Driver Passenger	26HD 22HD
INTERNATIONAL / NAVISTAR		
CF500, CF600		
2007-05	Driver Passenger	21HD 20HD
City Star		
2009-08	Front	21HD
CXT		
2007-05	Front	22HD
Durastar		
2015-08	Front	22HD
Lonestar		
2012-09	Front	22HD
MXT		
2007-05	Front	22HD
Prostar		
2009-07	Front	22HD
RXT		
2007-05	Front	22HD

APPLICATION GUIDE HEAVY DUTY VEHICLES



Make / Year / Model - For...	HEAVY DUTY	
	Conventional	
INTERNATIONAL / NAVISTAR (Cont.)		
TerraStar		
2012-10 Front		22HD
Transtar		
2012-08 Front		22HD
Workstar		
2012-08 Front		22HD
4100		
2007-06 Front		22HD
4200, 4300, 4400		
2007-02 Front		22HD
4700, 4800, 4900		
2003-02 Front		22HD
5500i, 5600i, 5900i (1-pc windshield)		
2007-99 Front		22HD
5500i, 5600i, 5900i (2-pc windshield)		
2009-58 Front		18HD
7300, 7400, 7500, 7600, 7700		
2007-05 Front		22HD
7300, 7400, 7500, 7600		
2004-02 Front		22HD
8500, 8600		
2007-02 Front		22HD
9100i (1-pc windshield)		
2003-99 Front		22HD
9100i (2-pc windshield)		
2003-99 Front		18HD
9200i (1-pc windshield)		
2009-99 Front		22HD
9200i (2-pc windshield)		
2009-99 Front		18HD
9400i (1-pc windshield)		
2007-99 Front		22HD
9400i (2-pc windshield)		
2007-99 Front		18HD
9900i, 9900ix, (1-pc windshield)		
2015-99 Front		22HD
9900i, 9900ix, (2-pc windshield)		
2015-99 Front		18HD
ISUZU		
FTR, FVR, FXR		
2009-05 Front		22HD
FRR, FSR, FTR, FVR		
2004-97 Front		22HD
HTR, HVR, HXR		
2007-06 Front		22HD
NPR, NRR		
2014-95 (L) Front		20HD
NPR, NRR		
1995-86 Front		19HD
NQR		
2014-99 Front		20HD
IVECO		
All Models		
1991-80 Front		18HD
KENWORTH		
K130, K150, K220		
1993-90 Front		19HD
K260		
2008-07 Front		24HD
K270, K370		
2014-12 Front		24HD

Make / Year / Model - For...	HEAVY DUTY	
	Conventional	
KENWORTH (Cont.)		
K300		
2000 Front		21HD
K360		
2008-07 Front		24HD
T170		
2009-08 Front		18HD
T270		
2014 Front		18HD
2013-12 Front		24HD
2009-07 Front		18HD
T300		
2015-14 Front		18HD
2009-07 Front		18HD
T370		
2015 Front		24HD
2012-07 Front		18HD
T440 (1-pc windshield)		
2012-10 Front		18HD
T470		
2012-10 Front		18HD
T600		
2008-07 Front		18HD
T660 (1-pc windshield)		
2015-07 Front		18HD
T680		
2015-13 Front		22HD
T700		
2012-10 Front		20HD
T800		
2015-07 Front		18HD
T880		
2015-14 Front		22HD
T2000		
2008-06 Front		20HD
2005-97 Front		19HD
W900 (1-pc windshield)		
2015-07 Front		18HD
MACK		
CL Series		
1996-93 Front		20HD
CS Series		
2001-93 Front		24HD
DM, DMM Series		
2004-93 Front		18HD
Freedom		
2004-02 Front		24HD
MS Series		
2001-93 Front		24HD
R Series		
2004-93 Front		18HD
MORGAN OLSON		
Route Star Step Van		
2009-2008 Front		20HD
PETERBILT		
All Conventional (except 567, 579, 587 - 2-pc windshield)		
2015-13 Front		18HD
All conventional (except 587 - 2-pc windshield)		
2012 Front		18HD
All conventional (except 387, 587 - 2-pc windshield)		
2011 Front		18HD
All conventional (except 387)		
2010-00 Front		18HD

APPLICATION GUIDE HEAVY DUTY VEHICLES

Make / Year / Model - For...	HEAVY DUTY	
	Conventional	
PETERBILT (Contd.)		
All conventional (except 377, 385)		
1999-97 Front		18HD
All conventional (except 377)		
1996 Front		18HD
210, 220		
2015-08 Front		24HD
270		
2001-00 Front		21HD
385 (2-pc windshield)		
1999-97 Front		18HD
387		
2011-06 Front		20HD
2005-00 Front		19HD
567, 579		
2015-13 Front		22HD
587		
2015-11 Front		20HD
STERLING		
Acterra		
2009-00 Front		20HD
A/AT Series		
2009-98 Front		20HD
L/LT Series		
2009-98 Front		20HD
Silverstar		
2003-99 Front		20HD
360		
2009-07 Front		21HD
SUPREME CORP		
Step Van		
1994 Front		18HD
UD TRUCKS		
600T		
1994 Front		19HD
1993-92 Front		18HD
1200		
2004-99 Front		20HD
1300		
2007-05 Front		20HD
1993-92 Front		18HD
1400		
2010-93 Front		20HD
1800		
2009-01 Front		26HD
1994 Front		19HD
2000, 2300		
2013-11 Front		22HD
2010-07 Front		26HD
1994 Front		19HD
2600		
2013-11 Front		22HD
2009-01 Front		26HD
1994 Front		19HD
2800		
1994 Front		19HD
3000		
1994 Front		19HD
3300		
2013-11 Front		22HD
2010-01 Front		26HD
1994 Front		19HD

Make / Year / Model - For...	HEAVY DUTY	
	Conventional	
UNION CITY BODY CO		
Step Van		
2003 Front		18HD
Step Van		
1994 Front		18HD
VOLVO TRUCKS N.A.		
Autocar ACL Series		
2001-95 Front		20HD
VHD		
2015-14 (L) Front		24HD
2014-01 Front		22HD
VN Series		
2015-14 (L) Front		24HD
2014-97 Front		22HD
VT		
2010-06 Front		22HD
WA, WC, WG, WI Series		
2001-84 Front		20HD
WESTERN STAR		
All Conventional		
2014-01 Front		20HD
1999-96 Front		20HD
1995-90 Front		18HD
All conventional (except 3700 Series)		
2000 Front		20HD
3700 Series		
2000 Front		22HD
WORKHORSE		
P Series Step Van		
2007 Front		24HD
2002-00 df		18HD
2007 Front		24HD
2002-00 Front		18HD



ULTIMATE®

PRODUCT INFORMATION GUIDE BUYER'S GUIDE



IMPORTANT NOTICE: In preparation for this catalog, every effort has been made to obtain accurate and complete information at the time of printing. Valeo Service assumes no responsibility or liability for any errors or omissions contained in this catalog. All references to the original manufacturer trade names and part numbers are for identification purposes only.

BUYER'S GUIDE

Make	Model	Years
Beam Original		
150E		
Chevrolet	Sonic	2014-2012
Chevrolet	SS	2014
Fiat	500L	2014
Pontiac	G8	2009-2008
160E		
Chevrolet	Spark	2014-2012
Chevrolet	Spark EV	2014
Ford	Fiesta	2015-2011
Lincoln	MKC	2015
170E		
Cadillac	SRX	2014-2010
Chevrolet	Equinox	2013-2010
GMC	Terrain	2014-2010
180E		
BMW	2 Series	2014
BMW	3 Series	2013-2012
BMW	4 Series	2015-2014
BMW	M3	2013-2010
BMW	M4	2015
BMW	X1	2015-2012
Cadillac	CTS	2014
Chevrolet	Colorado	2015
Saturn	Astra	2009-2008
Tesla	S	2014-2010
Volkswagen	Golf	2015
Volkswagen	GTI	2015
190E		
Audi	A3	2013-2006
Audi	A3 Quattro	2012-2006
BMW	3-Series E90/E91	2010-2013
Jaguar	XF	2015-2009
Jaguar	XFR	2015-2010
Jaguar	XJ	2014-2011
Mercedes-Benz	B180	2014
Mercedes-Benz	B250	2014
Mercedes-Benz	CLA200	2014
Mercedes-Benz	CLA250	2014
Mercedes-Benz	CLA45 AMG	2014
Mercedes-Benz	GLA250	2015
Mercedes-Benz	GLA45 AMG	2015
Mercedes-Benz	GLK250	2014-2013
Mercedes-Benz	GLK280	2009

Mercedes-Benz	GLK300	2014-2010
Mercedes-Benz	GLK350	2014-2009
Mini	Cooper Countryman	2014-2011
Mini	Cooper Paceman	2014-2013
Volkswagen	CC	2012-2009
Volkswagen	Eos	2015-2007
Volkswagen	Golf	2014-2010
Volkswagen	Golf	2007
Volkswagen	GTI	2014-2007
Volkswagen	Jetta	2014-2003
Volkswagen	Passat	2002
Volkswagen	Passat	2009-2006
Volkswagen	Passat	2014-2012
Volkswagen	R32	2011
Volkswagen	Rabbit	2013-2012
Volkswagen	Rabbit	2010-2009
Volkswagen	Tiguan	2011-2006
Volvo	C70	2013-2006
200E		
Aston Martin	DB9	2014-2012
Aston Martin	DBS	2012
Aston Martin	Rapide	2014-2012
Aston Martin	V12 Vantage	2014-2012
Aston Martin	V8 Vantage	2014-2011
BMW	1 Series M	2013
BMW	1 Series	2013-2008
BMW	X3	2012-2010
BMW	X5	2014-2013
BMW	X5	2009-2007
BMW	X6	2012-2008
Ford	Escape	2011-2006
Ford	Five Hundred	2007-2006
Ford	Freestyle	2005
Ford	Freestyle	2015-2014
Ford	Mustang	2015-2014
Ford	Mustang	2012-2007
Ford	Taurus	2013-2008
Ford	Taurus X	2012-2011
Hyundai	Equus	2011-2010
Hyundai	Genesis	2009
Hyundai	Genesis	2014-2013
Land Rover	LR2	2014-2008
Lincoln	MKS	2014-2009
Mazda	Tribute	2010-2008
Mazda	Tribute	2014
Mercedes-Benz	SLS AMG	2013
Mercedes-Benz	SLS AMG	2011
Mercury	Mariner	2010-2006
Mercury	Montego	2009-2008

Mercury	Montego	2005
Mercury	Sable	2014
Mini	Cooper	2014-2011
Mini	Cooper Countryman	2010-2007
Mini	Cooper Paceman	2013-2005
Toyota	Avalon	2015-2013
Toyota	Avalon	2008-2004
Volvo	C30	2015-2011
Volvo	S40	2011-2007
Volvo	S60	2015
Volvo	S60	2010-2009
Volvo	S60	2006-2005
Volvo	S80	2015-2010
Volvo	S80	2008
Volvo	V50	2013-2008
Volvo	V50	2005
Volvo	V60	2015
Volvo	V70	2010-2008
Volvo	XC60	2015-2010
Volvo	XC70	2015-2008
210E		
Audi	TT	2014-2004
Audi	TT Quattro	2015-2004
BMW	i3	2015-2014
Buick	Enclave	2015-2008
Buick	Lucerne	2011-2006
Cadillac	STS	2011-2005
Chevrolet	Malibu	2012-2008
Chevrolet	Traverse	2014-2009
Ford	Transit	2014
GMC	Acadia	2014-2007
Mercedes-Benz	GL320	2009-2007
Mercedes-Benz	GL350	2012-2010
Mercedes-Benz	GL450	2012-2007
Mercedes-Benz	GL500	2012-2008
Mercedes-Benz	GL550	2012-2008
Mercedes-Benz	ML320	2009-2007
Mercedes-Benz	ML350	2011-2006
Mercedes-Benz	ML450	2011-2010
Mercedes-Benz	ML500	2009-2006
Mercedes-Benz	ML550	2011-2008
Mercedes-Benz	ML63 AMG	2011-2007
Mercedes-Benz	R320	2009-2007
Mercedes-Benz	R350	2013-2006
Mercedes-Benz	R500	2008-2006
Mercedes-Benz	R63 AMG	2007
Mini	Cooper	2014-2012
Pontiac	G6	2010-2005
Saturn	Aura	2009-2007

BUYER'S GUIDE



Saturn	Outlook	2009-2007
Smart	Fortwo	2014-2007
Volkswagen	Passat	2005-2002
Volkswagen	Phaeton	2006-2004
220E		
Audi	TT	2014-2008
Audi	TT Quattro	2015-2008
BMW	2 Series	2014
BMW	6 Series	2010-2004
BMW	M6	2010-2006
Cadillac	Escalade	2007
Cadillac	Escalade ESV	2007
Cadillac	Escalade EXT	2007
Cadillac	STS	2011-2005
Chevrolet	Avalanche	2007
Chevrolet	Colorado	2015
Chevrolet	Silverado 1500	2015-2008
Chevrolet	Silverado 2500	2014-2008
Chevrolet	Silverado 2500	2009-2008
Chevrolet	Silverado 2500 HD	2015-2008
Chevrolet	Silverado 3500	2015-2011
Chevrolet	Silverado 3500	2009-2008
Chevrolet	Silverado 3500 HD	2015-2008
Chevrolet	Suburban 1500	2008-2007
Chevrolet	Suburban 2500	2008-2007
Chevrolet	Tahoe	2008-2007
Ford	Explorer	2015-2011
Ford	Mustang	2015-2007
Ford	Police Interceptor Utility	2015-2013
GMC	Sierra	2014-2007
GMC	Sierra 1500	2015-2007
GMC	Sierra 2500 HD	2015-2007
GMC	Sierra 3500 HD	2015-2007
GMC	Yukon	2008-2007
GMC	Yukon XL 1500	2008-2007
GMC	Yukon XL 2500	2008-2007
Lincoln	MKT	2014-2010
Mercedes-Benz	B200	2010-2006
Mercedes-Benz	C180	2015
Mercedes-Benz	C200	2015
Mercedes-Benz	C250	2015
Mercedes-Benz	GLK250	2014-2013
Mercedes-Benz	GLK280	2009
Mercedes-Benz	GLK300	2014
Mercedes-Benz	GLK300	2012-2010
Mercedes-Benz	GLK350	2012-2009
Mercedes-Benz	SLK200	2014-2005
Mercedes-Benz	SLK250	2014-2012

Mercedes-Benz	SLK280	2008-2006
Mercedes-Benz	SLK300	2011-2009
Mercedes-Benz	SLK350	2014-2005
Mercedes-Benz	SLK55 AMG	2014-2005
Porsche	911	2012-2006
Saturn	Astra	2009-2008
Volvo	S60	2009-2005
Volvo	S80	2006-2004
Volvo	V70	2007-2005
Volvo	XC70	2007-2005
Volvo	XC90	2014-2005
230E		
BMW	5 Series	2009-2004
Jaguar	XF	2015-2009
Jaguar	XFR	2015-2010
Jaguar	XFR-S	2015-2013
Jaguar	XJ	2014-2011
Lincoln	MKZ	2014-2013
Mercedes-Benz	GL350	2014-2013
Mercedes-Benz	GL450	2014-2013
Mercedes-Benz	GL500	2014
Mercedes-Benz	GL550	2014-2013
Mercedes-Benz	GL63 AMG	2014-2013
Mercedes-Benz	ML350	2014-2012
Mercedes-Benz	ML500	2014-2013
Mercedes-Benz	ML550	2014-2012
Mercedes-Benz	ML63 AMG	2014-2012
Saab	3-Sep	2011-2008
Smart	Fortwo	2014-2007
Toyota	Sequoia	2014-2008
Toyota	Tundra	2014-2007
240E		
Audi	A3	2013-2006
Audi	A3 Quattro	2013-2006
BMW	3 Series	2014-2011
BMW	4 Series	2015-2014
BMW	5 Series	2009-2004
BMW	6 Series	2010-2006
BMW	6 Series	2004
BMW	M3	2015
BMW	M3	2013-2010
BMW	M4	2015
BMW	M6	2010-2006
BMW	X1	2015-2012
BMW	X5	2011-2007
BMW	X6	2014-2008
Buick	Lucerne	2011-2006
Cadillac	CTS	2014

Chevrolet	Equinox	2014-2010
Chevrolet	Malibu	2012-2008
Chevrolet	Spark	2014-2012
Chevrolet	Spark EV	2014
Dodge	Sprinter 2500	2009-2007
Dodge	Sprinter 3500	2009-2007
Ford	Five Hundred	2007-2005
Ford	Freestyle	2007-2005
Ford	Taurus	2009-2008
Ford	Taurus X	2009-2008
Freightliner	Sprinter 2500	2014-2007
Freightliner	Sprinter 3500	2014-2007
GMC	Acadia	2014-2007
GMC	Terrain	2014-2010
Hyundai	Equus	2012-2011
Hyundai	Genesis	2011-2009
Land Rover	LR2	2014-2008
Lincoln	MKT	2014-2010
Mercedes-Benz	A180	2014
Mercedes-Benz	A200	2014
Mercedes-Benz	A250	2014
Mercedes-Benz	A45 AMG	2014
Mercedes-Benz	B180	2012
Mercedes-Benz	B200	2011
Mercedes-Benz	C180	2014-2011
Mercedes-Benz	C200	2014-2010
Mercedes-Benz	C230	2009
Mercedes-Benz	C250	2014-2010
Mercedes-Benz	C280	2009
Mercedes-Benz	C280	2009
Mercedes-Benz	C300	2014-2009
Mercedes-Benz	C350	2014-2009
Mercedes-Benz	C63 AMG	2014-2009
Mercedes-Benz	CLA200	2014
Mercedes-Benz	CLA250	2014
Mercedes-Benz	CLA45 AMG	2014
Mercedes-Benz	CLS350	2014-2012
Mercedes-Benz	CLS500	2014-2012
Mercedes-Benz	CLS550	2014-2012
Mercedes-Benz	CLS63 AMG	2014-2012
Mercedes-Benz	CLS63 AMG S	2014
Mercedes-Benz	E200	2014-2012
Mercedes-Benz	E250	2014-2011
Mercedes-Benz	E300	2013-2010
Mercedes-Benz	E350	2014-2010
Mercedes-Benz	E400	2014-2013
Mercedes-Benz	E500	2014-2013
Mercedes-Benz	E550	2014-2010
Mercedes-Benz	E63 AMG	2014-2010
Mercedes-Benz	E63 AMG S	2014

BUYER'S GUIDE

Mercedes-Benz	GLA250	2015
Mercedes-Benz	GLA45 AMG	2015
Mercedes-Benz	Sprinter	2012
Mercedes-Benz	Sprinter	2011
Mercedes-Benz	Sprinter	2010
Mercedes-Benz	Sprinter 2500	2014-2010
Mercedes-Benz	Sprinter 3500	2014-2010
Mercury	Montego	2007-2005
Mercury	Sable	2009-2008
Pontiac	G6	2010-2005
Porsche	Cayenne	2014-2009
Saturn	Aura	2009-2007
Saturn	Outlook	2009-2007
Volkswagen	CC	2012-2009
Volkswagen	Eos	2015-2007
Volkswagen	Golf	2014-2010
Volkswagen	Golf	2007
Volkswagen	GII	2014-2007
Volkswagen	Jetta	2014-2006
Volkswagen	Passat	2010-2006
Volkswagen	Phaeton	2006-2004
Volkswagen	R32	2008
Volkswagen	Rabbit	2009-2006
Volkswagen	Tiguan	2014-2009
Volvo	S60	2009-2005
Volvo	S80	2006-2004
Volvo	V70	2007-2005
Volvo	XC70	2007-2005
Volvo	XC90	2014-2005

250E

Buick	Enclave	2015-2008
Buick	Verano	2015-2012
Chevrolet	Traverse	2014-2009
Chevrolet	Volt	2014-2011
Ford	C-Max	2014-2013
Ford	Fiesta	2015-2011
Honda	Civic	2011-2006

260E

Aston Martin	DB9	2014-2012
Aston Martin	DBS	2012
Aston Martin	Rapide	2014-2012
Aston Martin	V12 Vantage	2014-2012
Aston Martin	V8 Vantage	2014-2012
Audi	Q7	2014-2007
BMW	X3	2014-2011
Buick	Verano	2015-2012
Cadillac	SRX	2014-2010
Chevrolet	Sonic	2014-2012

Chevrolet	SS	2014
Chevrolet	Volt	2014-2011
Dodge	Sprinter 2500	2009-2007
Dodge	Sprinter 3500	2009-2007
Fiat	500L	2014
Ford	Explorer	2015-2011
Ford	Police Interceptor Utility	2015
Ford	Police Interceptor Utility	2014
Ford	Police Interceptor Utility	2013
Ford	Taurus	2015-2010
Freightliner	Sprinter 2500	2014-2007
Freightliner	Sprinter 3500	2014-2007
Lincoln	MKC	2015
Lincoln	MKS	2014-2009
Lotus	Evora	2013-2010
Mercedes-Benz	A180	2014
Mercedes-Benz	A200	2014
Mercedes-Benz	A250	2014
Mercedes-Benz	A45 AMG	2014
Mercedes-Benz	B180	2014
Mercedes-Benz	B180	2012
Mercedes-Benz	B200	2011-2006
Mercedes-Benz	B250	2014
Mercedes-Benz	CLS350	2011-2007
Mercedes-Benz	CLS500	2009-2005
Mercedes-Benz	CLS500	2009-2005
Mercedes-Benz	CLS55 AMG	2006
Mercedes-Benz	CLS550	2011-2007
Mercedes-Benz	CLS63 AMG	2011-2007
Mercedes-Benz	E280	2009-2007
Mercedes-Benz	E300	2009-2008
Mercedes-Benz	E320	2009-2003
Mercedes-Benz	E350	2009-2006
Mercedes-Benz	E500	2009-2003
Mercedes-Benz	E55 AMG	2006-2003
Mercedes-Benz	E550	2009-2007
Mercedes-Benz	E63 AMG	2009-2007
Mercedes-Benz	GL350	2014-2013
Mercedes-Benz	GL450	2014-2013
Mercedes-Benz	GL500	2014
Mercedes-Benz	GL550	2014-2013
Mercedes-Benz	GL63 AMG	2014-2013
Mercedes-Benz	ML350	2014-2012
Mercedes-Benz	ML500	2014-2013
Mercedes-Benz	ML550	2014-2012
Mercedes-Benz	ML63 AMG	2014-2012
Mercedes-Benz	SL500	2011-2002
Mercedes-Benz	SL55 AMG	2008-2002
Mercedes-Benz	SL550	2011-2007

Mercedes-Benz	SL600	2011-2002
Mercedes-Benz	SL63 AMG	2011-2009
Mercedes-Benz	SL65 AMG	2011-2005
Mercedes-Benz	SLR McLaren	2009-2005
Mercedes-Benz	Sprinter	2012-2010
Mercedes-Benz	Sprinter 2500	2014-2010
Mercedes-Benz	Sprinter 3500	2014-2010
Pontiac	G8	2009-2008
Porsche	Cayenne	2008
Porsche	Cayenne	2006-2003
Toyota	Avalon	2012-2005
Toyota	Sequoia	2014-2008
Toyota	Tundra	2014-2007
Volkswagen	Golf	2015
Volkswagen	GTI	2015
Volkswagen	Touareg	2014-2004
Volvo	C30	2013-2007
Volvo	C70	2013-2006
Volvo	S40	2012-2004
Volvo	S60	2015-2011
Volvo	S80	2015-2007
Volvo	V50	2011-2005
Volvo	V60	2015
Volvo	V70	2010-2008
Volvo	XC60	2015-2010
Volvo	XC70	2015-2008

280E

BMW	i3	2015-2014
Ford	C-Max	2014-2013
Ford	Escape	2015-2013
Ford	Focus	2014-2012
Ford	Fusion	2015-2013
Ford	Transit	2014
Ford	Transit Connect	2015-2014
Honda	Civic	2011-2006
Mercedes-Benz	CL200	2003-2002
Mercedes-Benz	CL230	2005-2002
Mercedes-Benz	CL500	2013-2001
Mercedes-Benz	CL55 AMG	2006-2001
Mercedes-Benz	CL550	2014-2007
Mercedes-Benz	CL600	2014-2001
Mercedes-Benz	CL63 AMG	2014-2008
Mercedes-Benz	CL65 AMG	2014-2008
Mercedes-Benz	CL65 AMG	2006-2005
Mercedes-Benz	GL320	2009-2007
Mercedes-Benz	GL350	2012-2010
Mercedes-Benz	GL450	2012-2007
Mercedes-Benz	GL500	2012-2008
Mercedes-Benz	GL550	2012-2008

Mercedes-Benz	ML320	2009-2007
Mercedes-Benz	ML350	2011-2006
Mercedes-Benz	ML450	2011-2010
Mercedes-Benz	ML500	2009-2006
Mercedes-Benz	ML550	2011-2008
Mercedes-Benz	ML63 AMG	2011-2007
Mercedes-Benz	R320	2009-2007
Mercedes-Benz	R350	2013-2006
Mercedes-Benz	R500	2008-2006
Mercedes-Benz	R63 AMG	2007
Mercedes-Benz	S350	2013-2012
Mercedes-Benz	S350	2006
Mercedes-Benz	S400	2013-2010
Mercedes-Benz	S430	2006
Mercedes-Benz	S450	2011-2008
Mercedes-Benz	S500	2011-2006
Mercedes-Benz	S55 AMG	2006
Mercedes-Benz	S550	2013-2007
Mercedes-Benz	S600	2013-2006
Mercedes-Benz	S63 AMG	2013-2008
Mercedes-Benz	S65 AMG	2013-2006
Tesla	S	2014-2012

Beam Original - Specifics

18SN

BMW	3 Series	2009-2007
BMW	M3	2009-2008

18SL

BMW	5 Series	2014-2011
BMW	M5	2014-2013

19SL

BMW	3 Series	2009-2006
BMW	M3	2009-2008

19TB

Audi	A3	2015-2014
Audi	A3 Quattro	2015
Audi	S3	2015
Volkswagen	CC	2014-2013
Volkswagen	Jetta	2014-2011
Volkswagen	Passat	2014-2012

20TB

Audi	A4	2014-2009
Audi	A4 Allroad	2014-2013
Audi	A4 Quattro	2014-2009
Audi	A5	2014-2008
Audi	A5 Quattro	2014-2008
Audi	Allroad	2015-2013

Audi	Q5	2015-2009
Audi	RS5	2014-2013
Audi	RS5	2011
Audi	S4	2014-2009
Audi	S5	2014-2008
Audi	SQ5	2015-2014
Porsche	Macan	2015
Porsche	Panamera	2015-2014

21TB

Audi	A6	2014-2011
Audi	A6 Quattro	2014-2011
Audi	A7 Quattro	2015-2012
Audi	A8 Quattro	2014-2011
Audi	RS7	2015-2014
Audi	S6	2014-2013
Audi	S7	2015-2013
Audi	S8	2015-2013
Porsche	911	2015-2013
Porsche	Boxster	2015-2013
Porsche	Cayman	2015-2014
Volkswagen	Beetle	2014-2012

22GL

Audi	A4	2009-2003
Audi	A4 Quattro	2008-2004
Audi	A6	2005-2002
Audi	A6 Quattro	2005-2002
Audi	RS4	2008-2007
Audi	S4	2008-2004
Audi	S6	2004-2002

22G2

Mercedes-Benz	C200	2004
Mercedes-Benz	C230	2007-2004
Mercedes-Benz	C240	2005-2004
Mercedes-Benz	C280	2007-2006
Mercedes-Benz	C32 AMG	2004
Mercedes-Benz	C320	2005-2004
Mercedes-Benz	C350	2007-2006
Mercedes-Benz	C55 AMG	2007-2005
Mercedes-Benz	CLK280	2009-2007
Mercedes-Benz	CLK320	2005-2004
Mercedes-Benz	CLK350	2009-2006
Mercedes-Benz	CLK500	2009-2004
Mercedes-Benz	CLK55 AMG	2006-2004
Mercedes-Benz	CLK550	2009-2007
Mercedes-Benz	CLK63 AMG	2009-2007

22G3

Audi	A6	2010-2006
------	----	-----------

Audi	A6 Quattro	2010-2006
Audi	S6	2011-2007

23G1

Audi	A4	2008-2003
Audi	RS4	2008
Audi	S4	2008-2004

24G2

Audi	A8 Quattro	2010-2003
Audi	S8	2010-2007
Audi	S8	2003

24SL

BMW	3 Series	2009-2006
BMW	M3	2009-2008

24TB

Audi	A4	2014-2009
Audi	A4 Allroad	2014-2013
Audi	A4 Quattro	2014-2009
Audi	A5	2014-2008
Audi	A5 Quattro	2014-2008
Audi	Allroad	2015-2013
Audi	Q5	2015-2009
Audi	RS5	2014-2013
Audi	RS5	2011
Audi	S4	2014-2009
Audi	S5	2014-2008
Audi	SQ5	2015-2014
Porsche	Macan	2015
Porsche	Panamera	2015-2014
Volkswagen	CC	2014-2013
Volkswagen	Jetta	2014-2011
Volkswagen	Passat	2014-2012

26SN

BMW	5 Series	2014-2011
BMW	M5	2014-2013

27TB

Audi	A8 Quattro	2014-2011
Audi	S8	2015-2013

Hybrid

14HB

Acura	MDX	2015-2014
Acura	RDX	2015-2007
Honda	CR-V	2011-2007
Honda	Fit	2014-2007
Honda	Pilot	2008-2003

BUYER'S GUIDE

Infiniti	EX35	2012-2008
Infiniti	EX37	2013
Infiniti	FX35	2012-2003
Infiniti	FX37	2013
Infiniti	FX45	2008-2003
Infiniti	FX50	2013-2009
Infiniti	QX50	2015-2014
Infiniti	QX70	2014
Isuzu	Axiom	2004-2002
Mazda	2	2014-2011
Mitsubishi	Lancer	2014-2009
Nissan	Murano	2008-2006
Saab	9-2X	2006-2005
Subaru	B9 Tribeca	2007-2006
Subaru	Forester	2015-2006
Subaru	Impreza	2007-2005
Subaru	Legacy	2009-2005
Subaru	Outback	2014-2005
Subaru	Tribeca	2014-2008

16HB

Honda	Insight	2011-2010
Honda	Odyssey	2014-2005
Subaru	Forester	2005-2004
Subaru	Impreza	2014-2008
Subaru	Impreza	2004
Subaru	WRX	2014-2012
Subaru	WRX STI	2014-2013

17HB

Infiniti	EX35	2012-2011
Infiniti	EX37	2013
Infiniti	G37	2013-2010
Infiniti	JX35	2013
Infiniti	QX50	2015-2014
Infiniti	QX60	2014
Lexus	LS460	2014-2007
Lexus	LS600h	2014-2008
Mazda	CX-9	2014-2007
Nissan	Altima	2014-2007
Nissan	Maxima	2014-2009
Nissan	Pathfinder	2014-2013
Nissan	Rogue	2014
Pontiac	Vibe	2010-2009
Subaru	Forester	2015-2014
Toyota	Matrix	2014-2009
Toyota	RAV4	2015-2013

18HB

Buick	Allure	2010
-------	--------	------

Buick	LaCrosse	2014-2010
Buick	Regal	2015-2011
Cadillac	ATS	2014-2013
Cadillac	XTS	2014-2013
Chevrolet	HHR	2011-2006
Dodge	Dart	2014-2013
Honda	Insight	2014-2010
Hyundai	Azera	2014-2012
Jeep	Cherokee	2014
Kia	Optima	2014-2007
Lexus	CT200h	2014-2011
Lexus	ES300h	2014-2013
Lexus	ES350	2014-2013
Lexus	GS300	2006
Lexus	GS350	2014-2007
Lexus	GS430	2007-2006
Lexus	GS450h	2014-2007
Lexus	GS460	2011-2008
Lexus	HS250h	2012-2010
Lexus	IS250	2014
Lexus	IS350	2014
Mazda	3	2014
Mazda	6	2014-2009
Mazda	CX-5	2014-2013
Mini	Cooper	2014
Mitsubishi	Outlander	2014
Nissan	Murano	2007-2006
Scion	iQ	2014-2012
Scion	tC	2014-2011
Subaru	Forester	2013-2009
Toyota	Avalon	2015-2013
Toyota	Camry	2015-2012

19HB

Acura	ILX	2015-2013
Acura	ZDX	2013-2010
Cadillac	CTS	2013-2008
Chevrolet	Impala	2014
Chevrolet	Malibu	2014-2013
Honda	Accord	2014-2008
Honda	Crosstour	2014-2012
Infiniti	FX35	2012-2009
Infiniti	FX37	2013
Infiniti	FX50	2013-2009
Infiniti	M35h	2013-2012
Infiniti	M37	2013-2011
Infiniti	M56	2013-2011
Infiniti	QX56	2013-2011
Infiniti	QX70	2014
Infiniti	QX80	2014

Lexus	ES350	2012-2007
Mini	Cooper	2014
Nissan	370Z	2014-2009
Nissan	GT-R	2012-2009
Nissan	Quest	2014-2011
Subaru	Legacy	2014-2010
Subaru	Outback	2014-2010
Toyota	Prius	2014-2010
Toyota	Prius V	2014-2012

20HB

BMW	X5	2014
Chevrolet	Corvette	2014
Honda	Insight	2014-2012
Kia	Borrego	2010-2009
Land Rover	Range Rover	2014-2013
Land Rover	Range Rover Sport	2014-2013
Lexus	GX460	2014-2010
Lexus	IS F	2014-2008
Lexus	IS250	2014-2006
Lexus	IS350	2014-2006
Scion	FR-S	2015-2013
Scion	xB	2014-2008
Subaru	BRZ	2015-2013
Suzuki	Kizashi	2012-2010
Toyota	4Runner	2014-2010
Toyota	Camry	2011-2007
Toyota	Highlander	2014-2008
Toyota	Sienna	2014-2011

21HB

Acura	MDX	2015-2014
Chevrolet	Camaro	2014-2010
Chevrolet	Impala	2013-2011
Chrysler	300	2014-2011
Chrysler	300C	2014
Dodge	Charger	2015-2011
Dodge	Durango	2014-2011
Honda	CR-Z	2014-2011
Honda	Crosstour	2014-2012
Jaguar	XK	2014-2007
Jaguar	XKR	2014-2007
Jeep	Grand Cherokee	2014
Mitsubishi	Outlander Sport	2014-2011
Nissan	370Z	2014-2009
Saab	41887	2011-2010

22HB

Acura	CSX	2011-2008
Acura	TSX	2014-2009

Buick	Allure	2009-2005
Buick	LaCrosse	2009-2006
Cadillac	ATS	2014-2013
Cadillac	CTS	2013-2008
Cadillac	DTS	2011-2006
Cadillac	Escalade	2015
Chevrolet	Corvette	2014
Chevrolet	Impala	2013-2006
Chevrolet	Suburban	2015
Chevrolet	Tahoe	2015
Dodge	Durango	2014-2011
Honda	Civic	2014-2008
Infiniti	FX35	2010-2009
Infiniti	FX50	2010-2009
Jaguar	XK	2014-2007
Jaguar	XKR	2014-2007
Jeep	Grand Cherokee	2014
Lexus	IS F	2014-2008
Lexus	IS250	2014-2006
Lexus	IS350	2014-2006
Lexus	LX570	2014-2008
Lexus	RX350	2014-2010
Lexus	RX450h	2014-2010
Nissan	GT-R	2012-2009
Scion	FR-S	2015-2013
Scion	xB	2014-2008
Subaru	BRZ	2015-2013
Toyota	Land Cruiser	2014-2013
Toyota	Venza	2014-2009

24HB

Acura	TSX	2014-2009
BMW	X5	2014
Buick	Regal	2015-2011
Chevrolet	Camaro	2014-2010
Chevrolet	Impala	2014
Chevrolet	Malibu	2014-2013
Chrysler	300	2014-2011
Chrysler	300C	2014
Dodge	Charger	2015-2011
Fiat	500	2014-2010
Honda	Civic	2014-2012
Honda	Fit	2008-2006
Infiniti	EX35	2012-2011
Infiniti	EX37	2013
Infiniti	FX35	2012-2011
Infiniti	FX37	2013
Infiniti	FX50	2013-2011
Infiniti	QX50	2015-2014
Infiniti	QX56	2013-2011

Infiniti	QX70	2014
Infiniti	QX80	2014
Kia	Borrego	2010-2009
Kia	Optima	2014-2007
Land Rover	Range Rover	2014-2013
Land Rover	Range Rover Sport	2014-2013
Lexus	ES350	2012-2007
Lexus	IS250	2014
Lexus	IS350	2014
Lexus	LS460	2014-2007
Lexus	LS600h	2014-2008
Lexus	LX570	2014-2008
Mazda	3	2014
Mazda	6	2014-2009
Mazda	CX-5	2014-2013
Mitsubishi	Outlander Sport	2014-2011
Saab	41887	2011-2010
Scion	iQ	2014-2012
Scion	tC	2014-2011
Subaru	Forester	2013-2009
Subaru	Impreza	2014-2008
Suzuki	Kizashi	2012-2010
Toyota	4Runner	2014-2010
Toyota	Camry	2011-2007
Toyota	Land Cruiser	2014-2013
Toyota	RAV4	2015-2013

26HB

Acura	CSX	2011-2008
Acura	ILX	2015-2013
Acura	MDX	2015-2014
Acura	RDX	2015-2007
Acura	ZDX	2013-2010
Buick	Allure	2010
Buick	LaCrosse	2014-2010
Cadillac	XTS	2014-2013
Dodge	Dart	2014-2013
Honda	Accord	2014-2008
Honda	Civic	2014-2008
Honda	CR-V	2014-2007
Honda	CR-Z	2014-2011
Honda	Crosstour	2014-2012
Honda	Fit	2014-2009
Honda	Insight	2014-2010
Hyundai	Azera	2014-2012
Hyundai	Genesis	2015
Infiniti	G25	2012-2011
Infiniti	G35	2008-2008
Infiniti	G37	2013-2010
Infiniti	JX35	2013

Infiniti	M35h	2013-2012
Infiniti	M37	2013-2011
Infiniti	M56	2013-2011
Infiniti	Q50	2014
Infiniti	QX60	2014
Jeep	Cherokee	2014
Lexus	CT200h	2014-2011
Lexus	ES300h	2014-2013
Lexus	ES350	2014-2013
Lexus	GS300	2006
Lexus	GS350	2014-2007
Lexus	GS430	2007-2006
Lexus	GS450h	2014-2007
Lexus	GS460	2014-2008
Lexus	HS250h	2012-2010
Lexus	RX350	2014-2010
Lexus	RX450h	2014-2010
Mazda	CX-7	2012-2007
Mazda	CX-9	2014-2007
Mitsubishi	Outlander	2014
Nissan	Leaf	2014-2011
Nissan	Murano	2014-2006
Nissan	Pathfinder	2014-2013
Nissan	Quest	2014-2011
Nissan	Rogue	2014
Nissan	Sentra	2014-2013
Nissan	Versa	2015-2014
Pontiac	Vibe	2010-2009
Scion	xD	2014-2008
Subaru	Forester	2015-2014
Subaru	Impreza	2014-2012
Subaru	Legacy	2014-2010
Subaru	Outback	2014-2010
Toyota	Avalon	2015-2013
Toyota	Camry	2015-2013
Toyota	Corolla	2014-2009
Toyota	Highlander	2014-2008
Toyota	Matrix	2014-2009
Toyota	Prius	2014-2010
Toyota	Prius V	2014-2012
Toyota	RAV4	2015-2013
Toyota	Venza	2014-2009

28HB

Honda	Civic	2014-2012
Nissan	Altima	2014-2007
Nissan	Maxima	2014-2009
Toyota	Prius C	2014-2012
Toyota	Sienna	2014-2011
Toyota	Yaris	2014-2012

BUYER'S GUIDE

Rear - Beam

11V

Lincoln	MKC	2015
Volkswagen	Passat	2010-2006

12T

Ford	Escape	2015-2013
Ford	Explorer	2015-2011
Ford	Police Interceptor Utility	2015-2013
Mini	Cooper Paceman	2014-2013

12X

BMW	X1	2015-2012
Mini	Cooper	2014-2008

13V

BMW	X3	2014-2011
Volkswagen	GTI	2009-2006
Volkswagen	Tiguan	2015-2009
Volkswagen	Touareg	2010-2004

14T

BMW	X5	2013-2007
Volkswagen	Touareg	2014-2011
Volvo	V70	2010-2008
Volvo	XC70	2015-2008

16T

Audi	A4 Allroad	2014-2013
Volvo	C30	2010-2007
Volvo	XC60	2011-2010
Volvo	XC90	2011-2005

17X

Dodge	Sprinter 2500	2009-2007
Dodge	Sprinter 3500	2009-2007
Mercedes-Benz	Sprinter	2012-2010
Mercedes-Benz	Sprinter 2500	2014-2010
Mercedes-Benz	Sprinter 3500	2014-2010

Rear - Composite

10D

Mercedes-Benz	B180	2012
Mercedes-Benz	B200	2011
Mini	Cooper	2014-2005
Mini	Cooper Countryman	2014-2011

11A

Chevrolet	HHR	2011-2006
Hyundai	Accent	2014-2012

Jeep	Grand Cherokee	2014
Kia	Rio	2014-2012
Kia	Sorento	2015-2011
Kia	Soul	2014-2010
Pontiac	Vibe	2010-2003
Scion	iQ	2014-2012
Toyota	Matrix	2008-2003
Toyota	Prius V	2014-2012

12A

Chevrolet	Spark	2014-2012
Chevrolet	Spark EV	2014
Dodge	Durango	2014-2011
Dodge	Journey	2014-2009
Fiat	500	2014-2011
Jeep	Grand Cherokee	2013-2011
Kia	Forte	2014-2011
Kia	Forte Koup	2015-2011
Lexus	GX460	2014-2010
Lexus	LX570	2014-2008
Mazda	3	2014
Mazda	5	2014-2006
Mazda	6	2007-2004
Mitsubishi	Endeavor	2011-2010
Mitsubishi	Mirage	2014
Scion	xA	2006-2004
Suzuki	Grand Vitara	2013-2006
Toyota	Highlander	2014-2001
Toyota	Land Cruiser	2014-2008
Toyota	Matrix	2014-2009
Toyota	RAV4	2014-2001
Toyota	Venza	2014-2009
Toyota	Yaris	2014-2007

12B

Acura	MDX	2013-2007
Acura	TSX	2014-2011
Honda	Element	2011-2003
Infiniti	QX56	2010-2004
Mitsubishi	Outlander	2014-2007
Nissan	Armada	2014-2005
Nissan	Cube	2014-2009
Nissan	Murano	2014-2009
Nissan	Pathfinder	2012-2005
Nissan	Quest	2014-2011
Nissan	Versa Note	2015-2014
Nissan	Xterra	2014-2005
Subaru	XV Crosstrek	2015-2013
Suzuki	Aerio	2007-2004

12E

BMW	i3	2015-2014
Buick	Enclave	2015-2008
Buick	Rainier	2007-2006
Cadillac	Escalade	2014-2007
Cadillac	Escalade ESV	2014-2007
Cadillac	Escalade EXT	2013-2007
Chevrolet	Suburban	2014
Chevrolet	Suburban 1500	2014-2007
Chevrolet	Suburban 2500	2013-2007
Chevrolet	Tahoe	2014-2007
Chevrolet	Trailblazer	2009-2007
Dodge	Nitro	2008-2007
Ford	C-Max	2014-2013
Ford	Escape	2012-2008
Ford	Flex	2015-2009
Ford	Focus	2014-2012
GMC	Envoy	2009-2007
GMC	Envoy XUV	2005-2004
GMC	Yukon	2014-2007
GMC	Yukon XL 1500	2014-2007
GMC	Yukon XL 2500	2013-2007
Isuzu	Ascender	2008-2007
Jeep	Wrangler	2014-2007
Lincoln	MKT	2014-2010
Mazda	Tribute	2011-2008
Mercedes-Benz	GLK250	2014-2013
Mercedes-Benz	GLK280	2009
Mercedes-Benz	GLK300	2014
Mercedes-Benz	GLK300	2012-2010
Mercedes-Benz	GLK350	2014-2009
Mercury	Mariner	2011-2008
Nissan	Juke	2014-2011
Nissan	Pathfinder	2014-2013
Nissan	Roque	2014-2008
Saab	9-7x	2009-2005

14A

Hyundai	Accent	2011-2007
Hyundai	Santa Fe	2012-2007
Jeep	Cherokee	2014
Kia	Borrego	2011-2009
Kia	Rio	2011-2006
Kia	Rio5	2011-2006
Kia	Rondo	2010-2007
Kia	Spectra	2009-2005
Kia	Spectra5	2009-2005
Lexus	RX330	2006-2004
Lexus	RX350	2009-2007

Lexus	RX400h	2008-2006
Mazda	3	2013-2010
Mazda	CX-5	2014-2013
Mazda	CX-7	2012-2007
Mazda	CX-9	2014-2007
Mitsubishi	Endeavor	2008-2004
Mitsubishi	Outlander	2006-2003
Scion	xB	2014-2008
Toyota	Sienna	2004

14B

Acura	MDX	2015-2014
Acura	RDX	2015-2007
Honda	CR-V	2011-2007
Honda	Fit	2014-2007
Honda	Pilot	2008-2003
Infiniti	EX35	2012-2008
Infiniti	EX37	2013
Infiniti	FX35	2012-2003
Infiniti	FX37	2013
Infiniti	FX45	2008-2003
Infiniti	FX50	2013-2009
Infiniti	QX50	2015-2014
Infiniti	QX70	2014
Isuzu	Axiom	2004-2002
Mazda	2	2014-2011
Mitsubishi	Lancer	2014-2009
Nissan	Murano	2008-2006
Saab	9-2X	2006-2005
Subaru	B9 Tribeca	2007-2006
Subaru	Forester	2015-2006
Subaru	Impreza	2007-2005
Subaru	Legacy	2009-2005
Subaru	Outback	2014-2005
Subaru	Tribeca	2014-2008

14C

Chrysler	Aspen	2009-2007
Dodge	Durango	2009-2004
Jeep	Commander	2010-2006
Jeep	Grand Cherokee	2010-2005

14E

BMW	X3	2010-2004
Ford	Edge	2014-2007
Ford	Transit Connect	2015-2014
Jaguar	X-Type	2008-2005
Lincoln	MKX	2014-2007
Mazda	3	2009-2004
Nissan	Quest	2009-2004

Nissan	Versa	2012-2007
Saab	41887	2005-2001
Volvo	C30	2013-2011
Volvo	XC60	2015-2012
Volvo	XC90	2014-2012
16A		
Lexus	RX350	2014-2010
Lexus	RX450h	2014-2010
Toyota	Prius	2014-2004
Toyota	Sienna	2014-2011
16B		
Honda	Insight	2011-2010
Honda	Odyssey	2014-2005
Subaru	Forester	2005-2004
Subaru	Impreza	2014-2004
Subaru	WRX	2014-2012
Subaru	WRX STI	2014-2013
16E		
Chrysler	Town & Country	2010-2008
Dodge	Grand Caravan	2010-2008
Volkswagen	Routan	2010-2009



ULTIMATE®

PRODUCT INFORMATION GUIDE INTERCHANGE GUIDE



IMPORTANT NOTICE: In preparation for this catalog, every effort has been made to obtain accurate and complete information at the time of printing. Valeo Service assumes no responsibility or liability for any errors or omissions contained in this catalog. All references to the original manufacturer trade names and part numbers are for identification purposes only.

INTERCHANGE GUIDE

AC DELCO	
AC DELCO All-Season Plus	
AC DELCO Part No.	Traditional Part No.
8-113	13
8-114	14
8-115	15
8-116	16
8-117	17
8-118	18
8-119	19
8-120	20
8-121	21
8-122	22
8-124	24
8-126	26
8-128	28
AC DELCO Beam Blade	
AC DELCO Part No.	Beam Hook Part No.
8-916	16HK
8-917	17HK
8-918	18HK
8-919	19HK
8-920	20HK
8-921	21HK
8-922	22HK
8-924	24HK
8-926	26HK
8-928	28HK
AC DELCO Performance	
AC DELCO Part No.	Traditional Part No.
8-2131	13
8-2141	14
8-2142	14
8-2151	15
8-2161	16
8-2162	16
8-2171	17
8-2173	17
8-2181	18
8-21810	18
8-2182	18
8-2183	18
8-2188	18
8-2191	19
8-2192	19
8-2193	19

AC Delco Performance (cont.)	
AC DELCO Part No.	Traditional Part No.
8-2197	19
8-2199	19
8-2201	20
8-2202	20
8-2203	19
8-2204	20
8-2208	19
8-2209	20
8-2211	21
8-2219	21
8-2221	22
8-2224	22
8-2229	22
8-2241	24
8-2244	24
8-2249	24
8-2261	26
8-2289	28
ANCO	
ANCO 31	
ANCO Part No.	Traditional Part No.
31-11	11
31-13	13
31-14	14
31-15	15
31-16	16
31-17	17
31-18	18
31-19	19
31-20	20
31-21	21
31-22	22
31-24	24
31-26	26
31-28	28
ANCO AeroVantage	
ANCO Part No.	Traditional Part No.
91-11	11
91-13	13
91-14	14
91-15	15
91-16	16
91-17	17
91-18	18

ANCO AeroVantage (cont.)	
ANCO Part No.	Traditional Part No.
91-19	19
91-20	20
91-21	21
91-22	22
91-24	24
91-26	26
91-28	28
ANCO Contour	
ANCO Part No.	Beam Hook Part No.
C-14-UB	14HK
C-15-UB	15HK
C-16-UB	16HK
C-17-UB	17HK
C-18-UB	18HK
C-19-UB	19HK
C-20-UB	20HK
C-21-UB	21HK
C-22-UB	22HK
C-24-UB	24HK
C-26-UB	26HK
C-28-UB	28HK
ANCO Part No.	Beam Original Part No.
C-15-OE	15OE
C-16-OE	16OE
C-17-OE	17OE
C-18-OE	18OE
C-19-OE	19OE
C-20-OE	20OE
C-21-OE	21OE
C-22-OE	22OE
C-23-OE	23OE
C-24-OE	24OE
C-26-OE	26OE
C-28-OE	28OE
ANCO Profile	
ANCO Part No.	Beam Hook Part No.
A-14-UB	14HK
A-15-UB	15HK
A-16-UB	16HK
A-17-UB	17HK
A-18-UB	18HK
A-19-UB	19HK
A-20-UB	20HK
A-21-UB	21HK

ANCO Profile (cont.)	
ANCO Part No.	Beam Hook Part No.
A-22-UB	22HK
A-24-UB	24HK
A-26-UB	26HK
A-28-UB	28HK
ANCO Part No.	Beam Original Part No.
A-15-0E	150E
A-17-0E	170E
A-18-0E	180E
A-19-0E	190E
A-20-0E	200E
A-21-0E	210E
A-22-0E	220E
A-24-0E	240E
A-26-0E	260E
A-28-0E	280E
ANCO Rear	
ANCO Part No.	Rear Part No.
AR-11A	11A
AR-12A	12A
AR-12B	12B
AR-12E	12E
AR-12F	12A
AR-14A	14A
AR-14B	14B
AR-14C	14C
AR-14D	14C
AR-16A	16A
AR-16E	16B
ANCO Transform	
ANCO Part No.	Hybrid Part No.
T-14-UB	14HB
T-16-UB	16HB
T-17-UB	17HB
T-18-UB	18HB
T-19-UB	19HB
T-20-UB	20HB
T-21-UB	21HB
T-22-UB	22HB
T-24-UB	24HB
T-26-UB	26HB
T-28-UB	28HB

ANCO Winter	
ANCO Part No.	Winter Part No.
30-16	W16
30-18	W18
30-20	W20
30-22	W22
30-24	W24
Bosch	
Bosch Clear Advantage	
Bosch Part No.	Beam Hook Part No.
15-CA	15HK
16-CA	16HK
17-CA	17HK
18-CA	18HK
19-CA	19HK
20-CA	20HK
21-CA	21HK
22-CA	22HK
24-CA	24HK
26-CA	26HK
28-CA	28HK
Bosch Part No.	Beam Original Part No.
210E-CA	210E
220E-CA	220E
240E-CA	240E
Bosch Direct Connect	
Bosch Part No.	Traditional Part No.
40511	11
40513	13
40515	15
40516	16
40517	17
40518	18
40519	19
40520	20
40521	21
40522	22
40524	24
40526	26
40528	28
Bosch Evolution	
Bosch Part No.	Beam Hook Part No.
4816	16HK
4817	17HK

Bosch Evolution (cont.)	
Bosch Part No.	Beam Hook Part No.
4818	18HK
4819	19HK
4820	20HK
4821	21HK
4822	22HK
4824	24HK
4826	26HK
4828	28HK
Bosch Part No.	Beam Original Part No.
4840	210E
4841	220E
4842	240E
Bosch Excel +	
Bosch Part No.	Traditional Part No.
41913	13
41915	15
41916	16
41917	17
41918	18
41919	19
41920	20
41921	21
41922	22
41924	24
41926	26
Bosch Icon	
Bosch Part No.	Beam Hook Part No.
416A	16HK
417A	17HK
417B	17HK
418A	18HK
418B	18HK
419A	19HK
419B	19HK
420A	20HK
420B	20HK
421A	21HK
421B	21HK
422A	22HK
422B	22HK
424A	24HK
426A	26HK
428A	28HK
428B	28HK

INTERCHANGE GUIDE

Bosch Icon (cont.)	
Bosch Part No.	Beam Original Part No.
460	190E
461	200E
462	210E
463	220E
464	240E
465	260E
466	280E
Bosch Insight	
Bosch Part No.	Hybrid Part No.
4915	14HB
4916	16HB
4917	17HB
4918	18HB
4919	19HB
4920	20HB
4921	21HB
4922	22HB
4924	24HB
4926	26HB
4928	28HB
Bosch MicroEdge	
Bosch Part No.	Traditional Part No.
40711	11
40713	13
40715	15
40716A	16
40717A	17
40718A	18
40719A	19
40720A	20
40721	21
40722A	22
40724	24
40726	26
40728	28
CARQUEST	
CARQUEST ExactFit	
CARQUEST Part No.	Traditional Part No.
13-51	13
14-51	14
14-52	14
15-51	15
16-51	16

CARQUEST ExactFit (cont.)	
CARQUEST Part No.	Traditional Part No.
16-52	16
17-51	17
17-51	17
17-53	17
18-51	18
18-52	18
18-53	17
18-58	17
18-510	18
19-51	19
19-52	19
19-53	19
19-57	19
19-59	19
20-51	20
20-52	20
20-53	20
20-54	20
20-58	20
20-59	20
21-51	21
21-59	21
22-51	22
22-54	22
22-59	22
24-51	24
24-54	24
24-59	24
28-59	28
CARQUEST Part No.	Rear Part No.
11-5A	11A
12-5A	12A
12-5B	12B
12-5E	12E
12-5F	12A
14-5A	14A
14-5B	14B
14-5C	14C
16-5A	16A
16-5B	16B
16-5E	16E
CARQUEST Innovision	
CARQUEST Part No.	Beam Hook Part No.
154-160	16HK
154-170	17HK

CARQUEST Innovision (cont.)	
CARQUEST Part No.	Beam Hook Part No.
154-180	18HK
154-190	19HK
154-200	20HK
154-210	21HK
154-220	22HK
154-240	24HK
154-260	26HK
154-280	28HK
ClearPlus	
ClearPlus Rear	
ClearPlus Part No.	Rear Part No.
18121	12A
18122	12B
18125	12E
18141	14A
18142	14B
18143	14C
18144	14E
18161	16A
18162	16B
18165	16E
ClearPlus Sentinal	
ClearPlus Part No.	Traditional Part No.
11131	13
11151	15
11161	16
11171	17
11181	18
11191	19
11201	20
11211	21
11221	22
11241	24
11261	26
11281	28
ClearPlus Part No.	Beam Hook Part No.
11151	15HK
11161	16HK
11171	17HK
11181	18HK
11191	19HK
11201	20HK
11211	21HK

INTERCHANGE GUIDE



ClearPlus Sentinel	
ClearPlus Part No.	Beam Hook Part No.
11221	22HK
11241	24HK
11261	26HK
11281	28HK
ClearPlus Winter	
ClearPlus Part No.	Winter Part No.
80161	W16
80181	W18
80201	W20
80221	W22
80241	W24
80261	W26
Michelin	
Michelin RainForce	
Michelin Part No.	Traditional Part No.
11	11
13	13
14	14
16	16
17	17
18	18
19	19
20	20
21	21
22	22
24	24
26	26
28	28
Michelin Stealth	
Michelin Part No.	Hybrid Part No.
5016	16HB
5017	17HB
5018	18HB
5019	19HB
5020	20HB
5021	21HB
5022	22HB
5024	24HB
5026	26HB
5028	28HB

Michelin Stealth Ultra	
Michelin Part No.	Hybrid Part No.
8516	16HB
8517	17HB
8518	18HB
8519	19HB
8520	20HB
8521	21HB
8522	22HB
8524	24HB
8526	26HB
8528	28HB
NAPA	
NAPA AccuFit	
NAPA Part No.	Traditional Part No.
60-013-1	13
60-014-1	14
60-014-2	14
60-015-1	15
60-016-1	16
60-016-2	16
60-017-1	17
60-017-3	17
60-018-1	18
60-018-2	18
60-018-3	17
60-018-8	17
60-018-10	18
60-019-1	19
60-019-2	19
60-019-3	19
60-019-7	19
60-019-9	19
60-020-1	20
60-020-2	20
60-020-3	19
60-020-4	20
60-020-8	20
60-020-9	20
60-021-1	21
60-021-9	21
60-022-1	22
60-022-4	22
60-022-9	22
60-024-1	24
60-024-4	24
60-024-9	24

NAPA AccuFit (cont.)	
NAPA Part No.	Traditional Part No.
60-026-1	26
60-028-9	28
Pylon	
Pylon Conventional	
Pylon Part No.	Traditional Part No.
1113	13
1114	14
1115	15
1116	16
1117	17
1118	18
1119	19
1122	22
1124	24
3111	11
3112	11
3113	13
3114	14
3115	15
3116	16
3117	17
3118	18
3119	19
3120	20
3121	21
3122	22
3124	24
3126	26
3128	28
Pylon Hybrid	
Pylon Part No.	Hybrid Part No.
5016	16HB
5017	17HB
5018	18HB
5019	19HB
5020	20HB
5021	21HB
5022	22HB
5024	24HB
5026	26HB
5028	28HB
8516	16HB
8517	17HB
8518	18HB

INTERCHANGE GUIDE

Pylon Hybrid (cont.)	
Pylon Part No.	Hybrid Part No.
8519	19HB
8520	20HB
8521	21HB
8522	22HB
8524	24HB
8526	26HB
8528	28HB
Pylon Winter	
Pylon Part No.	Winter Part No.
2516	W16
2518	W18
2520	W20
2522	W22
Rain-X	
Rain-X Fusion	
Rain-X Part No.	Hybrid Part No.
16	16HB
17	17HB
18	18HB
19	19HB
20	20HB
21	21HB
22	22HB
24	24HB
26	26HB
Rain-X Weatherbeater	
Rain-X Part No.	Traditional Part No.
12	11
13	13
14	14
15	15
16	16
17	17
18	18
19	19
20	20
21	21
22	22
24	24
26	26

Trico	
Trico Chill	
Trico Part No.	Winter Part No.
37-150	W15
37-160	W16
37-170	W17
37-180	W18
37-190	W19
37-205	W20
37-210	W21
37-225	W22
37-245	W24
37-260	W26
37-280	W28
Trico ExactFit	
Trico Part No.	Traditional Part No.
11-1	11
13-1	13
14-1	14
14-2	14
15-1	15
16-1	16
16-2	16
17-1	17
18-1	18
18-2	18
18-10	18
19-1	19
19-2	19
20-1	20
20-2	20
20-4	20
21-1	21
22-1	22
22-4	22
24-1	24
26-1	26
28-1	28
Trico Part No.	Beam Hook Part No.
19-1B	19HK
22-1B	22HK
24-1B	24HK
26-1B	26HK
Trico Part No.	Beam Original Part No.
15-15B	150E
17-12B	170E

Trico ExactFit (cont.)	
Trico Part No.	Beam Original Part No.
17-15B	170E
19-12B	190E
19-15B	190E
19-16B	190E
20-12B	200E
20-15B	200E
20-16B	200E
21-12B	210E
21-15B	210E
21-16B	210E
22-15B	220E
22-16B	220E
24-12B	240E
24-15B	240E
24-16B	240E
26-12B	260E
26-15B	260E
26-16B	260E
28-12B	280E
28-15B	280E
Trico Part No.	Hybrid Part No.
14-1HB	14HB
16-1HB	16HB
17-1HB	17HB
18-1HB	18HB
19-1HB	19HB
20-1HB	20HB
21-1HB	21HB
22-1HB	22HB
24-1HB	24HB
26-1HB	26HB
28-1HB	28HB
Trico Part No.	Rear Part No.
11-A	11A
11-G	11V
12-A	12A
12-B	12B
12-E	12E
12-I	12X
13-G	13V
14-A	14A
14-B	14B
14-C	14C
14-D	14E
16-A	16A
16-B	16B

Trico ExactFit (cont.)	
Trico Part No.	Rear Part No.
16-E	16E
Trico NeoForm	
Trico Part No.	Beam Hook Part No.
16-140	14HK
16-160	16HK
16-170	17HK
16-180	18HK
16-190	19HK
16-200	20HK
16-210	21HK
16-220	22HK
16-240	24HK
16-260	26HK
16-280	28HK
Trico NeoForm	
Trico Part No.	Beam Original Part No.
16-1515	150E
16-1715	170E
16-1912	190E
16-1915	190E
16-2012	200E
16-2013	200E
16-2015	200E
16-2112	210E
16-2213	210E
16-2115	210E
16-2213	220E
16-2412	240E
16-2413	240E
16-2415	240E
16-2515	240E
16-2612	260E
16-2613	260E
16-2812	280E
16-2813	280E
16-2815	280E
Trico Standard	
Trico Part No.	Traditional Part No.
30-110	11
30-130	13
30-150	15
30-160	16

INTERCHANGE GUIDE

Trico Standard (cont.)	
Trico Part No.	Traditional Part No.
30-170	17
30-180	18
30-190	19
30-200	20
30-210	21
30-221	22
30-240	24
30-260	26
30-280	28

Trico Teflon Shield	
Trico Part No.	Hybrid Part No.
20-160	16HB
20-170	17HB
20-180	18HB
20-190	19HB
20-200	20HB
20-210	21HB
20-220	22HB
20-240	24HB
20-260	26HB
20-280	28HB



ULTIMATE®

PRODUCT INFORMATION GUIDE INSTALLATION INSTRUCTIONS



IMPORTANT NOTICE: In preparation for this catalog, every effort has been made to obtain accurate and complete information at the time of printing. Valeo Service assumes no responsibility or liability for any errors or omissions contained in this catalog. All references to the original manufacturer trade names and part numbers are for identification purposes only.

INSTALLATION INSTRUCTIONS

ULTIMATE[®]

Conventional Hook

Installation
Montage
Instalación
U

9x3 mm & 9x4 mm

adapter - connecteur - adaptador **T2**

adapter - connecteur - adaptador **A**

Beam Hook

Installation
Montage
Instalación
U

9x3 mm & 9x4 mm

Side Pin

Installation
Montage
Instalación
F3

1/4" 6.4 mm 3/16" 4.8 mm

1 Remove premounted adapter.
Démontez le connecteur de base.
Remueva el adaptador premontado

Hybrid Hook

Installation
Montage
Instalación
U

9x3 mm & 9x4 mm

Pinch Tab

Installation
Montage
Instalación

Push Button (22 mm)

Installation
Montage
Instalación

Side Lock (22 mm)

Installation
Montage
Instalación

ULTIMATE

Push Button Narrow

Installation
Montage
Instalación

1

2 CLIC!

Top Lock Specific

Installation
Montage
Instalación

1

2

3 CLIC!

Roc Lock 3

Installation
Montage
Instalación

1

2

Winter Hook

Installation
Montage
Instalación

U

9x3 mm & 9x4 mm

1

Side Lock Narrow

Installation
Montage
Instalación

1

2

3

Top Lock Specific

Installation
Montage
Instalación

1

2

3 CLIC!

Slide Pinch

Installation
Montage
Instalación

1

2

2

Side Pin

Installation
Montage
Instalación

1

2

3

4

Snap Claw

Installation
Montage
Instalación

1

2

V-Notch

Installation
Montage
Instalación

1

2

3

45°

Roc Lock 2

Installation
Montage
Instalación

1

2

Top Lock Pinch

Installation
Montage
Instalación

1

2

4

CLIC!

Cross Pin

Installation
Montage
Instalación

1

2



Valeo is one of the world's leading automotive suppliers

Valeo is an automotive supplier, partner to all automakers worldwide. As a technology company, Valeo proposes innovative products and systems that contribute to the reduction of CO2 emissions and to the development of intuitive driving.

Valeo Service USA is dedicated to offering these innovative products with the highest level of service to US and Canadian automotive aftermarkets. Our success is built upon the quality of our products, the excellence of our customers, and the skills & integrity of our people.

COMFORT & DRIVING
ASSISTANCE SYSTEMS



POWERTRAIN
SYSTEMS



THERMAL
SYSTEMS



VISIBILITY
SYSTEMS





Valeo

The Wiper
Systems Expert

As a worldwide leader in original equipment wiper systems, Valeo delivers expertise to the automotive aftermarket with a comprehensive wiper solution. Our wide range of wiper blades and wiper motors offer proven quality, reliability and performance to meet the rigorous demands of the road, and most importantly, our customers.

When it comes to quality wiper blades, Valeo is the brand you can depend on.