

# Bugflector® / Bugflector II® Carflector™

BF30

## Quick and Easy Installation Instructions

### CONTENTS

- (1) Bugflector
- (2) phillips screws
- (4) Bump-ons
- (2) hood inserts
- (2) washers
- (2) plastic fasteners
- (1) instruction sheet

**IMPORTANT:** Read all instructions carefully before beginning installation. Installation utilizes the existing square and round holes in the hood which align with the holes in the Bugflector.

### STEP 1

Raise the hood and locate the (2) square holes on the underside of the hood. Clean this area with a cloth to remove any dust or debris which may affect the mounting of the Bugflector. Remove and discard (2) plastic fasteners located on the hood seals with a flat tool. See **FIGURE 1**

### STEP 2

Press the (2) hood inserts into the (2) square holes. If necessary, use clear tape to hold them firmly in place if necessary. See **FIGURE 2**

### STEP 3

Set the Bugflector in place, sliding the outer tabs under the hood seals. Align the predrilled holes in the Bugflector with the holes in the hood inserts. Using a Phillips screwdriver, install the (2) screws with (2) washers. **TO PREVENT STRIPPING HOOD INSERTS SCREW UNTIL SNUG; DO NOT OVERTIGHTEN.** See **FIGURE 2**

### STEP 4


Insert (2) plastic fasteners included with Bugflector through the holes in the seal and Bugflector and into the holes on the hood. See **FIGURE 3**

### STEP 5

To reduce vibration, adhere the Bump-ons at pre-cleaned locations **on the painted hood/fender surface** where the Bugflector may contact. If the hood will not shut properly, it may be necessary to adjust the hood bumper stops (refer to your owner's manual). See **FIGURE 4**

**NOTE:** Actual application may vary slightly from pictures.

remove fastener (2) square holes in underside of hood remove fastener

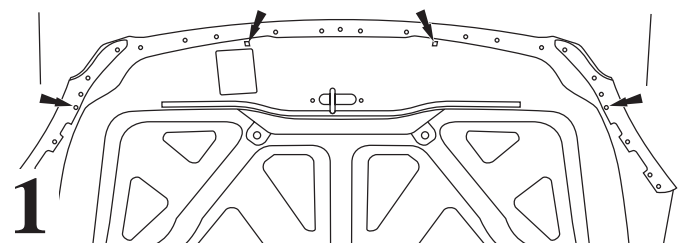

press insert into square hole (2X)

