

CHEVROLET



GMC

2015-2016 CHEVROLET COLORADO / GMC CANYON

5.5" DSC KIT FEATURES

- High clearance crossmembers & ductile iron steering knuckles
- Full width skid plate for additional strength and protection
- Available with strut spacer or FOX 2.5 coilovers
- T-case indexing kit included to allow use of stock driveshafts
- Independently Certified FMVSS No.126 ESC System Compliant



FOX 2.5 DSC COILOVERS

Dual Speed Compression (DSC) technology improves the FOX coilover performance with easy adjustability to match your terrain. Same benefits of FOX 2.5 coilovers now with DSC for 12-points of high speed compression adjustment and 10-points of low speed adjustment to dial in the ride.

#722FDSC - 5.5" Kit w/ FOX 2.5 DSC Coilovers



2015-2016 CHEVROLET COLORADO / GMC CANYON

LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES
5.5" Front / 4" Rear IFS System Rear Block Kit Kit #722H 96CK3087	1	021670	Front Box Kit 1 of 4	98224758 FOX 2.0 Rear Gas Shock (2 req'd) 	1
	1	021671	Front Box Kit 2 of 4		2
	1	021672	Front Box Kit 3 of 4		3
	1	021673	Front Box Kit 4 of 4		4
	1	021674	Strut Extension Box Kit		
	1	011406	Rear 4" Block Kit		
	2	85758	Rear NX2 Shock		
5.5" Front / 4" Rear IFS C/O System Rear Block Kit FOX Performance C/O System Kit #722F 13CK0453	1	021670	Front Box Kit 1 of 4		1
	1	021671	Front Box Kit 2 of 4		2
	1	021672	Front Box Kit 3 of 4		3
	1	021673	Front Box Kit 4 of 4		4
	1	88302136	FOX 2.5 Coilover Kit		5
	1	011406	Rear 4" Block Kit		
5.5" Front / 4" Rear IFS C/O System (w/ DSC) Rear Block Kit FOX Performance DSC C/O System Kit #722FDSC 13CK0683	1	021670	Front Box Kit 1 of 4	Notes 1. Inner fender trimming required. 2. Minor welding required. 3. Gas truck compliant only. Fitment not tested on diesel trucks currently. 4. Electronic assisted power steering system is sensitive to out of round, unbalanced, and more aggressive tread pattern tires. High speed steering wheel feedback can occur. 5. Actual ride height on C/O kits is closer to 6" of lift.	
	1	021671	Front Box Kit 2 of 4		
	1	021672	Front Box Kit 3 of 4		
	1	021673	Front Box Kit 4 of 4		
	1	88306136	FOX 2.5 DSC Coilover Kit		
	1	011406	Rear 4" Block Kit		
2	98224758	FOX 2.0 Rear Gas Shock			



Vehicle Specs: 5.5" C/O Lift Kit, 1.5" Body Lift, 35x12.50 General Grabber, 20x9 Eagle Alloy 012

CHEVROLET/GMC
DODGE
FORD
JEEP
SUZUKI
TOYOTA
PUSH-LOK
SHOCKS/STEERING STABILIZERS
ACCESSORIES
APPAREL & PROMOTIONAL
PRODUCT SPECS
VEHICLE SPECS

2002-2009 CHEVROLET TRAILBLAZER / GMC ENVOY 2WD/4WD



#168H - 2" Kit Shown w/ Optional FOX 2.0 Shocks


2" KIT FEATURES

- One piece upper strut mount
- One piece rear upper coil mount
- Completely bolt-on system



Vehicle Specs: 2" Lift Kit - 31" BFG M/T - 16" stock wheels

2002-2009 CHEVROLET TRAILBLAZER / GMC ENVOY 2WD/4WD

LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED UPGRADES	NOTES
2" Front / 2" Rear	1	011201	Box Kit	98224619 FOX 2.0 Rear Gas Shock (2 req'd)	1
Upper Strut Mount	2	85619	Rear NX2 Shock		2
Rear Coil Mount					3
Kit #168H					4
50CK734					

Notes

1. Strut compressor required for installation
2. Will not fit vehicles equipped with rear air-ride system
3. Will fit Ext and XL models
4. Front only kit available as part #121201

CHEVROLET S-10 TRUCK & BLAZER - 4WD/ GMC S-15 TRUCK & JIMMY - 4WD



Vehicle Specs: 5" Lift Kit / 2" Body Lift - 33" Hankook M/T - 15" AR Wheels

5" KIT FEATURES

- One piece front & rear crossmembers increase frame rigidity while reducing installation time
- Differential skid plate included to protect your differential and lock the front and rear crossmembers together
- No welding required
- Heavy-duty upper control arms included for rigidity and to increase shock clearance (#121010 available separately)
- Differential drop included to rotate the differential for proper drive-line angles
- Dropped center steering link supplied to maintain factory steering angles



1995-2005 CHEVROLET S-10 TRUCK & BLAZER - 4WD / GMC S-15 TRUCK & JIMMY - 4WD (EXCEPT ZR2/HIGHRIDER MODELS)

LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES
5" Front / 4.5" Rear	1	021502	Front Box Kit 1 of 2	55414 Single 5500 Steering Stabilizer	1
IFS System	1	021503	Front Box Kit 2 of 2	121508 Rear Sway Bar Links	2
Rear Spring Over Kit	1	121010	Upper Control Arm Kit	121507 Rear Sway Bar Links	3
Kit #165H	1	011506	Rear Spring Over Kit	PSL500 4x4 Posi-Lok™ (page 132)	4
84CK5502	2	85610	Front NX2 Shock		5
	2	85608	Rear NX2 Shock		6



1988-1994 CHEVROLET S-10 TRUCK & BLAZER - 4WD / GMC S-15 TRUCK & JIMMY - 4WD (EXCEPT ZR2/HIGHRIDER MODELS)

LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES
5" Front / 4.5" Rear	1	021502	Front Box Kit 1 of 2	55414 Single 5500 Steering Stabilizer	1
IFS System	1	021504	Front Box Kit 2 of 2	121508 Rear Sway Bar Links	2
Rear Spring Over Kit	1	121010	Upper Control Arm Kit	121507 Rear Sway Bar Links	3
Kit #166H	1	011506	Rear Spring Over Kit	PSL500 4x4 Posi-Lok™ (page 132)	4
66CK7012	2	85610	Front NX2 Shock		5
	2	85608	Rear NX2 Shock		



Notes

1. Requires exhaust modification.
2. Special tool required to unload/load the torsion bars. Not available through BDS.
3. Frame bracket modifications required.
4. Some Jimmy/Blazers have rear sway bars. For stem-to-eye style sway bar links order 121508. For the eye-to-eye style order 121507.
5. #55414 stabilizer kit only works in combination with the 5" BDS Suspension System.
6. Will fit ZR-5 4 Door model.

ACCESSORIES



PSL500



CHEVROLET/GMC
DODGE
FORD
JEEP
SUZUKI
TOYOTA
POSI-LOK
SHOCKS/STEERING STABILIZERS
ACCESSORIES
APPAREL & PROMOTIONAL
PRODUCT SPECS
VEHICLE SPECS

CHEVROLET S-10 TRUCK & BLAZER ZR2/ GMC S-15 TRUCK & JIMMY ZR2



5" KIT FEATURES

- "No Flex" drop drag link
- Differential drop kit for factory driveline angles
- Correct angle rear spring over axle conversion
- Brake line relocation brackets—no bleeding of brakes required
- Front anti-sway bar relocation brackets for factory handling characteristics
- One piece lower rear crossmember increases frame rigidity while reducing installation time
- Heavy duty upper control arms to increase shock clearance (#121010 available separately)



Vehicle Specs: 5" Lift Kit - 33" BFG A/T - 15" Steel Wheels

1996–2004 CHEVROLET BLAZER / GMC JIMMY with RPO ZR2 Wide Stance Package



LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES
5" Front / 4.5" Rear	1	021500	Front Box Kit 1 of 2	55414 Single 5500 Steering Stabilizer	1
IFS System	1	021501	Front Box Kit 2 of 2	PSL500 4x4 Posi-Lok™ (page 132)	2
Rear Spring Over Axle	1	121010	Control Arm Kit		3
Kit #163H	1	011508	Rear Box Kit		4
84CK3712	2	85610	Front NX2 Shock		5
	2	85608	Rear NX2 Shock		

1995–2004 CHEVROLET S-10 TRUCK / GMC S-15 TRUCK RPO ZR2 4WD



LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES
5" Front / 4.5" Rear	1	021500	Front Box Kit 1 of 2	55414 Single 5500 Steering Stabilizer	1
IFS System	1	021501	Front Box Kit 2 of 2	PSL500 4x4 Posi-Lok™ (page 132)	2
Rear Spring Over Axle	1	121010	Control Arm Kit		3
Kit #164H	1	011509	Rear Box Kit		4
57CK7912	2	85610	Front NX2 Shock		5
	2	85608	Rear NX2 Shock		

Notes

1. Requires exhaust modification.
2. Special tool (Kent Moore Tools Part #J-36202-A) required to unload/load the torsion bars. Not available through BDS.
3. Requires frame bracket modification.
4. Front drive shaft may be required.
5. #55414 stabilizer kit only works in combination with the 5" BDS Suspension System.

ACCESSORIES



PSL500



2014-2017 CHEVROLET/GMC 1500 PICKUP 4WD WITH ALUMINUM OR STAMPED STEEL CONTROL ARMS

4" & 6" KIT FEATURES

- Advanced High Clearance design to maximize ground clearance and increase performance
- New custom valved gas strut included
- Ductile cast iron and aluminum steering knuckle maintains optimal steering geometry
- Differential skid plate and front skid plate included for offroad protection
- Stock wheels with stock tires can be reinstalled




Vehicle Specs: 4" Coilover lift kit - 35" M/T ATZ - 20" BMF FITE



#710H - 6" Kit Shown w/ Optional FOX 2.0 Shocks

THE FOX 2.5 COILOVERS PROVIDE THE ULTIMATE UPGRADE TO THE ALREADY HIGH-PERFORMANCE BDS SYSTEM

- Smooth-bore, clear coated, zinc plated alloy body
- Black anodized 6061-T6 billet aluminum mounting components
- 7/8" hard chrome plated heat treated alloy steel shaft
- High flow piston design with specially formulated race oil
- External reservoir separates shock oil from high-pressure nitrogen
- Easy bolt-on installation, no need to adjust coil spring preload

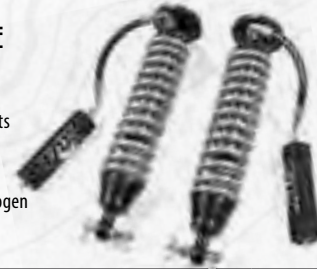

2014-2017 CHEVROLET/GMC 1500 4WD w/ ALUMINUM OR STAMPED STEEL CONTROL ARMS

LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES
2" Front / 0" Rear Upper Strut Mount Kit #714H 62CK531	1	021202	2" Leveling Kit	85719 Rear NX2 Shock (2 req'd)	1
				98224719 FOX 2.0 Rear Gas Shock (2 req'd)	6
4" Front / 4" Rear IFS System Rear Block Kit Kit #713H 56CK5091 FOX Performance C/O System Kit #713F 98CK6443 FOX Performance DSC C/O System Kit #713FDSC 98CK6673	1	021462	Front Box Kit 1 of 2	98224759 FOX 2.0 Rear Gas Shock (2 req'd)	1
	1	021663	Front Box Kit 1 of 2	121619 Fixed Traction Bar Kit	2
	1	021661	Knuckle Box Kit - Alum/Stamped Steel	121409 RECOIL Traction Bar Mounting Kit	3
	1	011405	Rear Block Kit	123409 RECOIL Traction Bar	4
	1	98144	Front Struts or		5
	1	88302135	FOX 2.5 Coilover Kit or		6
	1	88306135	FOX 2.5 DSC Coilover Kit		7
4" Front / 4" Rear Rear Leaf Spring Kit #716H 15CK1922 FOX Performance C/O System Kit #716F 47CK2383 FOX Performance DSC C/O System Kit #716FDSC 47CK2514	1	021462	Front Box Kit 1 of 2	RECOIL Improve your traction on the street, track, and trail with BDS RECOIL Traction Bars. This revolutionary floating design uses tunable dual-stage compression springs for improved traction without binding up like traditional traction bars. RECOIL Traction Bars use heavy-wall tubing with a forged flex end and easy bolt-on mounts. #123409-121409 52CK048 <i>For more information on RECOIL Traction Bars see page 157</i>	
	1	021663	Front Box Kit 1 of 2		
	1	021661	Knuckle Box Kit - Alum/Stamped Steel		
	1	011456	Rear Box Kit		
	2	001559	Rear Leaf Spring		
	1	98144	Front Struts or		
	1	88302135	FOX 2.5 Coilover Kit or		
6" Front / 4.5" Rear IFS System Rear Block Kit Kit #711H 79CK7191 FOX Performance C/O System Kit #711F 06CK4263 FOX Performance DSC C/O System Kit #711FDSC 12CK9773	1	021662	Front Box Kit 1 of 2	98224759 FOX 2.0 Rear Gas Shock (2 req'd)	1
	1	021663	Front Box Kit 1 of 2	111209 Add-A-Leaf	2
	1	021661	Knuckle Box Kit - Alum/Stamped Steel	121619 Fixed Traction Bar Kit	3
	1	011505	Rear Block Kit	121409 RECOIL Traction Bar Mounting Kit	4
	1	98164	Front Struts or	123409 RECOIL Traction Bar	5
	1	88302059	FOX 2.5 Coilover Kit or		6
	1	88306059	FOX 2.5 DSC Coilover Kit		7
6" Front / 5.5" Rear IFS System Rear Leaf Spring Kit #718H 15CK1922 FOX Performance C/O System Kit #718F 31CK8993 FOX Performance DSC C/O System Kit #718FDSC 47CK2514	1	021662	Front Box Kit 1 of 2	 #121619 - Fixed Traction Bar Kit	2
	1	021663	Front Box Kit 2 of 2		3
	1	021661	Knuckle Box Kit - Alum/Stamped Steel		4
	1	011557	Rear Box Kit		5
	2	001559	Rear Leaf Spring		6
	1	98164	Front Struts or		7
	1	88302059	FOX 2.5 Coilover Kit or		
6" Front / 5.5" Rear IFS System Rear Leaf Spring Kit #718H 15CK1922 FOX Performance C/O System Kit #718F 31CK8993 FOX Performance DSC C/O System Kit #718FDSC 47CK2514	1	88306059	FOX 2.5 DSC Coilover Kit		
	2	85759	Rear NX2 Shock or		
	2	98224759	FOX 2.0 Rear Gas Shock		
	2	98224759	FOX 2.0 Rear Gas Shock		



Improve your traction on the street, track, and trail with BDS RECOIL Traction Bars. This revolutionary floating design uses tunable dual-stage compression springs for improved traction without binding up like traditional traction bars. RECOIL Traction Bars use heavy-wall tubing with a forged flex end and easy bolt-on mounts.

#123409-121409 52CK048

For more information on RECOIL Traction Bars see page 157



#121619 - Fixed Traction Bar Kit

Notes

1. Strut compressor required for installation
2. Requires frame bracket modification
3. Requires differential modification to clear electric power steering
4. Vehicles came with steel or aluminum steering knuckles and control arms, must order appropriate kit
5. Add-A-Leaf may be required with rear block kit for more level stance.
6. Will not fit MagneRide magnetic ride control equipped models.
7. The Factory 17" and 18" wheels cannot be reinstalled with the lift.

2014-2017 CHEVROLET/GMC 1500 PICKUP 4WD WITH CAST STEEL CONTROL ARMS



Vehicle Specs: 6" Lift Kit - 35" M/T ATZ - 20" D/C Gunmetal 7



#710FDSXC - 6" Fox Performance System



FOX 2.5 DSC COILOVERS



Dual Speed Compression (DSC) technology improves the FOX coilover performance with easy adjustability to match your terrain. Same benefits of FOX 2.5 coilovers now with DSC for 12-points of high speed compression adjustment and 10-points of low speed adjustment to dial in the ride.



6" PERFORMANCE SYSTEM KIT FEATURES

- Advanced High Clearance design to maximize ground clearance
- FOX Racing 2.5 Remote Reservoir Coilovers and rear FOX 2.0 Shocks for unmatched offroad performance.
- Ductile cast iron and aluminum steering knuckle maintains optimal steering geometry
- 3-point differential mounting system to securely reposition front axle
- Differential skid plate and front skid plate included for offroad protection
- Stock wheels with stock tires can be reinstalled

2014-2017 CHEVROLET/GMC 1500 4WD w/ CAST STEEL CONTROL ARMS

LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES
2" Front / 0" Rear Upper Strut Mount Kit #714H 62CK331	1	021202	2" Leveling Kit	85719 Rear NX2 Shock (2 req'd)	1
				98224719 FOX 2.0 Rear Gas Shock (2 req'd)	6
4" Front / 4" Rear IFS System Rear Block Kit Kit #712H 56CK5091 FOX Performance C/O System Kit #712F 98CK6443 FOX Performance DSC C/O System Kit #712FDSXC 98CK6673	1	021462	Front Box Kit 1 of 2	98224759 FOX 2.0 Rear Gas Shock (2 req'd)	1
	1	021663	Front Box Kit 1 of 2	121619 Fixed Traction Bar Kit	2
	1	021660	Knuckle Box Kit - Cast Steel	121409 RECOIL Traction Bar Mounting Kit	3
	1	011405	Rear Block Kit	123409 RECOIL Traction Bar	4
	1	98144	Front Struts or		5
	1	88302135	FOX 2.5 Coilover Kit or		6
	1	88306135	FOX 2.5 DSC Coilover Kit		7
	2	85759	Rear NX2 Shock or		
	2	98224759	FOX 2.0 Rear Gas Shock		
	4" Front / 4" Rear Rear Leaf Spring Kit #715H 15CK1922 FOX Performance C/O System Kit #715F 47CK2383 FOX Performance DSC C/O System Kit #715FDSXC 40CK2963	1	021462	Front Box Kit 1 of 2	 #121619 - Fixed Traction Bar Kit
1		021663	Front Box Kit 1 of 2		
1		021660	Knuckle Box Kit - Cast Steel		
1		011456	Rear Box Kit		
2		001559	Rear Leaf Spring		
1		98144	Front Struts or		
1		88302135	FOX 2.5 Coilover Kit or		
1		88306135	FOX 2.5 DSC Coilover Kit		
2		85759	Rear NX2 Shock or		
2		98224759	FOX 2.0 Rear Gas Shock		
6" Front / 4.5" Rear IFS System Rear Block Kit Kit #710H 79CK7191 FOX Performance C/O System Kit #710F 06CK4263 FOX Performance DSC C/O System Kit #710FDSXC 12CK9773	1	021662	Front Box Kit 1 of 2	98224759 FOX 2.0 Rear Gas Shock (2 req'd)	1
	1	021663	Front Box Kit 1 of 2	111209 Add-A-Leaf	2
	1	021660	Knuckle Box Kit - Cast Steel	121619 Fixed Traction Bar Kit	3
	1	011505	Rear Block Kit	121409 RECOIL Traction Bar Mounting Kit	4
	1	98164	Front Struts or	123409 RECOIL Traction Bar	6
	1	88302059	FOX 2.5 Coilover Kit or		7
	1	88306059	FOX 2.5 DSC Coilover Kit		
	2	85759	Rear NX2 Shock or		
	2	98224759	FOX 2.0 Rear Gas Shock		
	6" Front / 5.5" Rear IFS System Rear Leaf Spring Kit #717H 15CK1922 FOX Performance C/O System Kit #717F 31CK8993 FOX Performance DSC C/O System Kit #717FDSXC 47CK2514	1	021662	Front Box Kit 1 of 2	 #121619 - Fixed Traction Bar Kit
1		021663	Front Box Kit 2 of 2		
1		021660	Knuckle Box Kit - Cast Steel		
1		011557	Rear Box Kit		
2		001559	Rear Leaf Spring		
1		98164	Front Struts or		
1		88302059	FOX 2.5 Coilover Kit or		
1		88306059	FOX 2.5 DSC Coilover Kit		
2		85759	Rear NX2 Shock or		
2		98224759	FOX 2.0 Rear Gas Shock		

Notes

1. Strut compressor required for installation
2. Requires frame bracket modification
3. Requires differential modification to clear electric power steering
4. Vehicles came with steel or aluminum steering knuckles and control arms, must order appropriate kit
5. Add-A-Leaf may be required with rear block kit for more level stance.
6. Will not fit MagneRide magnetic ride control equipped models.
7. The Factory 17" and 18" wheels cannot be reinstalled with the lift.



2014-2017 GMC DENALI 1500 MAGNERIDE



Vehicle Specs: 6" Lift Kit, 35x12.50 Radar M/T, 20x9 Mayhem Fierce

CHEVROLET/GMC

DODGE

FORD

JEEP

SUZUKI

TOYOTA

PUSH-LOK

SHOCKS/STEERING
STABILIZERS

ACCESSORIES

APPAREL &
PROMOTIONAL

PRODUCT SPECS

VEHICLE SPECS



6" KIT FEATURES

- High clearance design maximizes ground clearance
- Robust steering knuckles maintain ESC compliance
- Magneride (Magnetic Ride Control) System compatible
- Improved underbody protection with skid plates included
- Clearance for up to 35" tires



Improve your traction on the street, track, and trail with BDS RECOIL Traction Bars. This revolutionary floating design uses tunable dual-stage compression springs for improved traction without binding up like traditional traction bars. RECOIL Traction Bars use heavy-wall tubing with a forged flex end and easy bolt-on mounts.

#123409-121409.....52CK048

For more information on RECOIL Traction Bars see page 157

2014-2017 GMC DENALI 1500 MAGNERIDE w/ CAST STEEL CONTROL ARMS



LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES	
6" Front / 5" Rear	1	021660	Knuckle Box Kit - Cast Steel UCAs	121619	Fixed Traction Bar Kit	1
IFS System	1	021662	Front Box Kit 1 of 2	121409	RECOIL Traction Bar Mounting Kit	2
Rear Block Kit	1	021663	Front Box Kit 2 of 2	123409	RECOIL Traction Bar	3
Kit # 725H	1	011505	5" Rear Block Kit			4
67CK8471	1	121655	Magneride Box Kit			5
						6

2014-2017 GMC DENALI 1500 MAGNERIDE w/ ALUMINUM OR STAMPED CONTROL ARMS



LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES	
6" Front / 5" Rear	1	021661	Knuckle Box Kit - Alum/Stamped UCAs	121619	Fixed Traction Bar Kit	1
IFS System	1	021662	Front Box Kit 1 of 2	121409	RECOIL Traction Bar Mounting Kit	2
Rear Block Kit	1	021663	Front Box Kit 2 of 2	123409	RECOIL Traction Bar	3
Kit # 726H	1	011505	5" Rear Block Kit			4
67CK8471	1	121655	Magneride Box Kit			5
						6

Notes

1. Requires frame bracket modification
2. Requires differential modification to clear electric power steering
3. Vehicles came with steel or aluminum steering knuckles and control arms, must order appropriate kit
4. Add-A-Leaf may be required with rear block kit for more level stance.
5. The Factory 17" and 18" wheels cannot be reinstalled with the lift.
6. BDS leaf springs cannot be installed. Factory leaf spring must be used to retain proper Magneride sensor positioning



121619
Fixed Traction Bar Kit

2007-2013 CHEVY SILVERADO 1500 4WD TRUCK / GMC SIERRA 1500 4WD TRUCK & DENALI 1500 4WD TRUCK

4" & 6" KIT FEATURES

- Advanced High Clearance design to maximize ground clearance and increase performance
- New custom valved gas strut included
- Ductile cast iron steering knuckle maintains optimal steering geometry
- Differential skid plate and front skid plate included for offroad protection
- Stock wheels with stock tires can be reinstalled



Vehicle Specs: 6" C/O Lift Kit - 1.5" Body Lift - 37" Interco M-16 - 20" Eagle Alloy 178s



#176H - 6" Kit Shown w/ Optional FOX 2.0 Shocks



THE FOX 2.5 COILOVERS PROVIDE THE ULTIMATE UPGRADE TO THE ALREADY HIGH-PERFORMANCE BDS SYSTEM



- Smooth-bore, clear coated, zinc plated alloy body
- Black anodized 6061-T6 billet aluminum mounting components
- 7/8" hard chrome plated heat treated alloy steel shaft
- High flow piston design with specially formulated race oil
- External reservoir separates shock oil from high-pressure nitrogen
- Easy bolt-on installation, no need to adjust coil spring preload

2007-2013 CHEVROLET SILVERADO 1500 4WD TRUCK / GMC SIERRA 1500 4WD TRUCK & DENALI 1500 4WD TRUCK

LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES
2" Front / 0" Rear Upper Strut Mount Kit #167H 62CK531	1	021202	Front Strut Mounts	85719	1
				98224719	2
				121409	
				123409	
4" Front / 4" Rear IFS System Rear Block Kit Kit #184H 40CK6671 FOX Performance C/O System Kit #184F 90CK2733 FOX Performance DSC C/O System Kit #184FDSC 90CK2963	1	021640	Front Box Kit 1 of 2	98224758	1
	1	021644	Front Box Kit 2 of 2	121651	2
	1	121613	Front Skid Plate	121619	3
	1	011457	Rear Block Kit	121409	4
	1	011457	Rear Block Kit	121409	4
	1	98141	Front Struts or	123409	5
	1	88302135	FOX 2.5 Coilover Kit or		6
	1	88306135	FOX 2.5 DSC Coilover Kit		7
	2	85758	Rear NX2 Shock or		8
	2	98224758	FOX 2.0 Rear Gas Shock		9
4" Front / 4" Rear IFS System Rear Leaf Spring Kit #185H 09CK9712 FOX Performance C/O System Kit #185F 59CK5873 FOX Performance DSC C/O System Kit #185FDSC 59CK5014	1	021640	Front Box Kit 1 of 2		
	1	021644	Front Box Kit 2 of 2		
	1	121613	Front Skid Plate		
	1	011458	Rear Box Kit		
	2	001559	Rear Leaf Spring		
	1	98141	Front Struts or		
	1	88302135	FOX 2.5 Coilover Kit or		
	1	88306135	FOX 2.5 DSC Coilover Kit		
	2	85758	Rear NX2 Shock or		
	2	98224758	FOX 2.0 Rear Gas Shock		
6" Front / 4.5" Rear IFS System Rear Block Kit & Add-A-Leaf Kit #176H 84CK7771 FOX Performance C/O System Kit #176F 29CK8453 FOX Performance DSC C/O System Kit #176FDSC 35CK3073	1	021640	Front Box Kit 1 of 2	98224759	1
	1	021644	Front Box Kit 2 of 2	121651	2
	1	121613	Front Skid Plate	101002	4
	1	011559	Block & Add-A-Leaf Kit	121619	5
	1	98161 or	Front Struts or	121409	6
	1	88302059	FOX 2.5 Coilover Kit or	123409	7
	1	88306059	FOX 2.5 DSC Coilover Kit		8
	2	85759 or	Rear NX2 Shock or		10
	2	98224759	FOX 2.0 Rear Gas Shock		
	6" Front / 5.5" Rear IFS System Rear Leaf Spring Kit #177H 09CK9712 FOX Performance C/O System Kit #177F 43CK1593 FOX Performance DSC C/O System Kit #177FDSC 59CK5014	1	021640	Front Box Kit 1 of 2	
1		021644	Front Box Kit 2 of 2		2
1		121613	Front Skid Plate		3
2		001559	Rear Leaf Spring		4
1		011558	Rear Box Kit		5
1		98161 or	Front Struts or		6
1		88302059	FOX 2.5 Coilover Kit or		7
1		88306059	FOX 2.5 DSC Coilover Kit		8
2		85759 or	Rear NX2 Shock or		10
2		98224759	FOX 2.0 Rear Gas Shock		



#121619 - Fixed Traction Bar Kit

- Notes
1. Strut compressor required for installation
 2. This system will not fit 2007 classic models
 3. Installation of rear leaf springs requires removal of fuel tank
 4. Requires frame bracket modification
 5. 20"x9" wheels with 5" to 5-3/4" backspacing recommended to reduce trimming.
 6. Traction bars will not fit regular cab short box models.
 7. Add 121651 Auxiliary Differential support bracket for AWD models. Also may require front driveline modification.
 8. Will not fit two-mode hybrid models with electronic power steering.
 9. Stock 20" wheels can be installed with up to 33x12.50 tires.
 10. Stock 20" wheels can be installed with up to 35x12.50 tires.



2007-2014 CHEVY TAHOE 1500, SUBURBAN 1500, AVALANCHE 1500 4WD/GMC YUKON 1500, YUKON XL 1500 4WD




4" & 6" KIT FEATURES

- Advanced High Clearance design to maximize ground clearance and increase performance
- New custom valved gas strut included
- Ductile cast iron steering knuckle maintains optimal steering geometry
- Rack & Pinion system is retained in the stock position
- Differential skid plate and front skid plate are included for offroad protection
- Rear adjustable upper control arms included to properly adjust pinion angle
- Rear Pro-Ride coils included (6" kit only) for on road ride quality as well as offroad performance



#178FDSC - 6" DSC Coilover Kit Shown

2007-2014 CHEVROLET TAHOE, SUBURBAN, AVALANCHE 1500 4WD / GMC YUKON, YUKON XL 1500 4WD

LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES	
2" Front / 0" Rear Upper Strut Mount Kit #167H 62CK531	1	021202	Front Strut Mounts	85719	Rear NX2 Shock (2 req'd)	2
				98224719	FOX 2.0 Rear Gas Shock (2 req'd)	7
4" Front / 2" Rear IFS System Rear Coil Spacer Kit #188H 75CK0471 FOX Performance C/O System Kit #188F 26CK6433 FOX Performance DSC C/O System Kit #188FDSC 26CK6663	1	021640	Front Box Kit 1 of 2	98224719	FOX 2.0 Rear Gas Shock (2 req'd)	1
	1	021644	Front Box Kit 2 of 2	121651		Auxiliary Differential Brackets
	1	121613	Front Skid Plate			3
	1	021209	Rear Box Kit			4
	1	98141	Front Struts or			5
	1	88302135	FOX 2.5 Coilover Kit or			6
	1	88306135	FOX 2.5 DSC Coilover Kit			
	2	85719	Rear NX2 Shock or			
	2	98224719	FOX 2.0 Rear Gas Shock			
					 	
4" Front / 3" Rear IFS System Rear Coil Spacer Kit #900H 08CK5791 FOX Performance C/O System Kit #900F 48CK1853 FOX Performance DSC C/O System Kit #900FDSC 48CK1093	1	021640	Front Box Kit 1 of 2			
	1	021644	Front Box Kit 2 of 2			
	1	121613	Front Skid Plate			
	1	021309	Rear Box Kit			
	1	98141	Front Struts or			
	1	88302135	FOX 2.5 Coilover Kit or			
	1	88306135	FOX 2.5 DSC Coilover Kit			
	2	85719	Rear NX2 Shock or			
	2	98224719	FOX 2.0 Rear Gas Shock			
						
6" Front / 5" Rear IFS System Rear Coil Spring Kit #178H 54CK5932 FOX Performance C/O System Kit #178F 88CK6614 FOX Performance DSC C/O System Kit #178FDSC 94CK1234	1	021640	Front Box Kit 1 of 2	98224759	FOX 2.0 Rear Gas Shock (2 req'd)	1
	1	021644	Front Box Kit 2 of 2	121651		Auxiliary Differential Brackets
	1	121613	Front Skid Plate	101002	Front SS Brake Line	3
	1	021609	Rear Box Kit			4
	1	98161 or	Front Struts or			5
	1	88302059	FOX 2.5 Coilover Kit or			6
	1	88306059	FOX 2.5 DSC Coilover Kit			
	2	85759 or	Rear NX2 Shock or			
2	98224759	FOX 2.0 Rear Gas Shock				

Notes


1. Will not work with rear air-ride equipped vehicles.
2. Strut compressor required for installation.
3. StabiliTrak system may be more sensitive if using wheels/tires outside of specified size range.
4. Minor frame bracket modification and welding required.
5. 20" wheels with 5" to 5-3/4" backspacing recommended to reduce trimming.
6. Add 121651 Auxiliary Differential bracket for AWD models. Also may require front driveline modification.
7. 2" system also fits 2WD models.



Vehicle Specs: 6" Lift System - 35" Radar Renegade R7s - 20" GRID GD6

CHEVROLET/GMC
DODGE
FORD
JEEP
SUZUKI
TOYOTA
PUSH-LOK
SHOCKS/STEERING STABILIZERS
ACCESSORIES
APPAREL & PROMOTIONAL
PRODUCT SPECS
VEHICLE SPECS

2007-2013 SILVERADO 1500 2WD TRUCK / GMC SIERRA 1500 2WD TRUCK

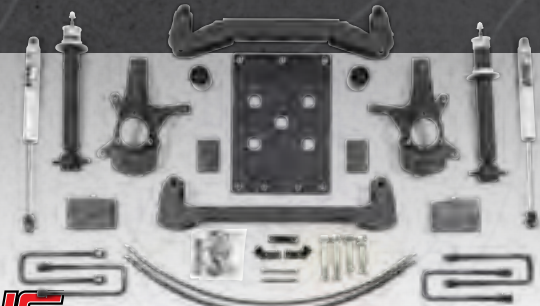

#174H - 6" Kit Shown w/ Optional FOX 2.0 Shocks

4" & 6" KIT FEATURES

- Advanced High Clearance design to maximize ground clearance and increase performance
- 91% increase in ground clearance at front crossmember on 6" system
- New custom valved offroad replacement struts included
- Ductile cast iron steering knuckle maintains optimal steering geometry
- Full belly pan included for offroad protection as well as optional front skid plate



Vehicle Specs: 6" Lift Kit - 35" D/C M/T - 20" Eagle Alloy178s

2007-2013 CHEVROLET SILVERADO 1500 2WD TRUCK / GMC SIERRA 1500 2WD TRUCK

LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES	
2" Front / 0" Rear Upper Strut Mount Kit #167H 62CK531	1	021202	Front Strut Mounts	98224719 FOX 2.0 Rear Gas Shock (2 req'd)	1	
				85719 Rear NX2 Shock (2 req'd)	2	
				121409 RECOIL Traction Bar Mounting Kit		
				123409 RECOIL Traction Bar		
4" Front / 4" Rear IFS System Rear Block Kit Kit #186H 53CK9051 FOX Performance C/O System Kit #186F 04CK5113 FOX Performance DSC C/O System Kit #186FDSC 04CK5343	1	021640	Front Box Kit 1 of 2	98224758 FOX 2.0 Rear Gas Shock (2 req'd)	1	
	1	021643	Front Box Kit 2 of 2	121613 Front Skid Plate	2	
	1	011457	Block Kit	121619 Fixed Traction Bar Kit	3	
	1	98141	Front Struts or	121409 RECOIL Traction Bar Mounting Kit	4	
	1	88302135	FOX 2.5 Coilover Kit or	123409 RECOIL Traction Bar	5	
	1	88306135	FOX 2.5 DSC Coilover Kit			
	2	85758	Rear NX2 Shock or			
	2	98224758	FOX 2.0 Rear Gas Shock			
	4" Front / 4" Rear IFS System Rear Leaf Spring Kit #187H 12CK3291 FOX Performance C/O System Kit #187F 62CK9253 FOX Performance DSC C/O System Kit #187FDSC 62CK9483	1	021640	Front Box Kit 1 of 2		
		1	021643	Front Box Kit 2 of 2		
1		011458	Rear Box Kit			
2		001559	Rear Leaf Spring			
1		98141	Front Struts or			
1		88302135	FOX 2.5 Coilover Kit or			
1		88306135	FOX 2.5 DSC Coilover Kit			
2		85758	Rear NX2 Shock or			
2		98224758	FOX 2.0 Rear Gas Shock			
6" Front / 4.5" Rear IFS System Rear Block Kit & Add-A-Leaf Kit #174H 97CK0251 FOX Performance C/O System Kit #174F 22CK2923 FOX Performance DSC C/O System Kit #174FDSC 38CK6443		1	021640	Front Box Kit 1 of 2	98224759 FOX 2.0 Rear Gas Shock (2 req'd)	1
	1	021643	Front Box Kit 2 of 2	121613 Front Skid Plate	2	
	1	011559	Block & Add-A-Leaf Kit	101002 Front SS Brake Line	3	
	1	98161 or	Front Struts or	121619 Fixed Traction Bar Kit	4	
	1	88302059	FOX 2.5 Coilover Kit or	121409 RECOIL Traction Bar Mounting Kit	5	
	1	88306059	FOX 2.5 DSC Coilover Kit			
	2	85759 or	Rear NX2 Shock or			
	2	98224759	FOX 2.0 Rear Gas Shock			
	6" Front / 5.5" Rear IFS System Rear Leaf Spring Kit #175H 12CK3291 FOX Performance C/O System Kit #175F 56CK4963 FOX Performance DSC C/O System Kit #175FDSC 62CK9483	1	021640	Front Box Kit 1 of 2		
		1	021643	Front Box Kit 2 of 2		
2		001559	Rear Leaf Spring			
1		011558	Rear Box Kit			
1		98161 or	Front Struts or			
1		88302059	FOX 2.5 Coilover Kit or			
1		88306059	FOX 2.5 DSC Coilover Kit			
2		85759 or	Rear NX2 Shock or			
2		98224759	FOX 2.0 Rear Gas Shock			



Shown in gray with optional #121613 skid plate



#121619 - Fixed Traction Bar Kit


- Notes
1. Strut compressor required for installation
 2. This system will not fit 2007 classic models
 3. 20" wheels with 5" to 5-3/4" backspacing recommended to reduce trimming.
 4. Will not fit two-mode hybrid models with electronic power steering.
 5. Will not work on extended/crew cab long box



1999-2006 CHEVROLET SILVERADO 1500 4WD TRUCK / GMC SIERRA & DENALI 1500 4WD TRUCK

4.5" & 6.5" KIT FEATURES

- Advanced high clearance design to maximize ground clearance and increase performance
- No torsion bar drop system to maximize ground clearance
- Front skid plate and differential skid plate included for off-road protection
- Ductile iron steering knuckles maintain optimal steering geometry

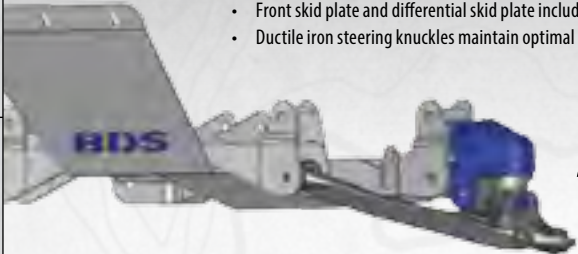





NO TORSION BAR DROP
NIBD
technology



HC
HIGH CLEARANCE

1999-2006 CHEVROLET SILVERADO 1500 4WD TRUCK / GMC SIERRA & DENALI 1500 4WD TRUCK

LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES	
 4.5" Front / 3" Rear IFS System Rear Block Kit Kit# 181H 09CK5871	1	021610	Front Knuckle Kit	98224602	FOX 2.0 Front Gas Shock (2 req'd)	1
	1	021626	Main Box Kit	98224758	FOX 2.0 Rear Gas Shock (2 req'd)	2
	1	021450	Torsion Bar System	55327	Single Steering Stabilizer Mounting Kit	3
	1	121614	Front Skid Plate	85402	Single NX2 Steering Stabilizer (1 Req'd)	4
	1	011457	Rear Block Kit	55354	Dual Steering Stabilizer Mounting Kit	5
	2	85602	Front NX2 Shock	55410	Dual 5500 Steering Stabilizer (2 req'd)	6
 4.5" Front / 3.5" Rear IFS System Rear Leaf Spring Kit# 182H 67CK9912	1	021610	Front Knuckle Kit	121619	Fixed Traction Bar Kit	
	1	021626	Main Box Kit	121406	RECOIL Traction Bar Mounting Kit	
	1	021450	Torsion Bar System	123409	RECOIL Traction Bar	
	1	121614	Front Skid Plate			
	2	001559	Rear Leaf Spring			
	1	011458	Rear Box Kit			
 6.5" Front / 4" Rear IFS System Rear Block Kit & Add-a-Leaf Kit# 179H 43CK7971	1	021610	Front Knuckle Kit	98224602	FOX 2.0 Front Gas Shock (2 req'd)	1
	1	021626	Main Box Kit	98224759	FOX 2.0 Rear Gas Shock (2 req'd)	2
	1	021617	Torsion Bar System	55327	Single Steering Stabilizer Mounting Kit	3
	1	121614	Front Skid Plate	85402	Single NX2 Steering Stabilizer (1 Req'd)	4
	1	011559	Block & Add-a-Leaf Kit	55354	Dual Steering Stabilizer Mounting Kit	5
	2	85602	Front NX2 Shock	55410	Dual 5500 Steering Stabilizer (2 req'd)	6
 6.5" Front / 5.5" Rear IFS System Rear Leaf Spring Kit# 180H 67CK9912	1	021610	Front Knuckle Kit	121619	Fixed Traction Bar Kit	
	1	021626	Main Box Kit	121406	RECOIL Traction Bar Mounting Kit	
	1	021617	Torsion Bar System	123409	RECOIL Traction Bar	
	1	121614	Front Skid Plate			
	2	001559	Leaf Spring			
	1	011558	Rear Box Kit			



Notes

1. Special tool (Kent Moore Tools Part# J-42393) required to unload/load torsion bars. Not available through BDS.
2. Requires frame bracket modification and differential mount modification as well as minor welding.
3. Will not fit heavy duty (HD) models.
4. If equipped with stock 17" wheels, then must replace with 17" or larger aftermarket wheels.
5. AWD models will require front driveline modification.
6. Traction bars will not fit standard cab short box trucks



RECOIL
TRACTION BARS

Improve your traction on the street, track, and trail with BDS RECOIL Traction Bars. This revolutionary floating design uses tunable dual-stage compression springs for improved traction without binding up like traditional traction bars. RECOIL Traction Bars use heavy-wall tubing with a forged flex end and easy bolt-on mounts.

#123409-121406..... 52CK048



Vehicle Specs: 6.5" Lift Kit - 35" D/C Mud Country - 20" Eagle Alloy 178

CHEVROLET/GMC
DODGE
FORD
JEEP
SUZUKI
TOYOTA
PUSH-LOK
SHOCKS/STEERING STABILIZERS
ACCESSORIES
APPAREL & PROMOTIONAL
PRODUCT SPECS
VEHICLE SPECS

2000-2006 CHEVROLET K1500 SUBURBAN, YUKON, TAHOE, AVALANCHE, ESCALADE - 4WD/AWD



4.5" & 6.5" KIT FEATURES

- Advanced high clearance design to maximize ground clearance and increase performance
- No torsion bar drop system to maximize ground clearance
- Front skid plate and differential skid plate included for off-road protection
- Ductile iron steering knuckles maintain optimal steering geometry




Vehicle Specs: 6.5" Lift Kit - 35" M/T ATZ - 20" Eagle Alloys

2000-2006 CHEVROLET K1500 SUBURBAN, YUKON, TAHOE, AVALANCHE, ESCALADE - 4WD / AWD							
LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES		NOTES	
4.5" Front / 3.5" Rear IFS System Rear Coil Spacer Kit# 191H 07CK2591	1	021610	Front Knuckle Kit	98224602	FOX 2.0 Front Gas Shock (2 req'd)	1	
	1	021626	Main Box Kit	98224719	FOX 2.0 Rear Gas Shock (2 req'd)	2	
	1	021450	Torsion Bar System	55327	Single Steering Stabilizer Mounting Kit	3	
	1	121614	Front Skid Plate	85402	Single NX2 Steering Stabilizer (1 Req'd)	4	
	1	021359	Rear Box Kit	55354	Dual Steering Stabilizer Mounting Kit	5	
	2	85602	Front NX2 Shock	55410	Dual 5500 Steering Stabilizer (2 req'd)	6	
	2	85719	Rear NX2 Shock	121400	Auto-Ride Systems	7	
6.5" Front / 6" Rear IFS System Rear Coil Spring Kit# 183H 40CK1891	1	021610	Front Knuckle Kit	98224602	FOX 2.0 Front Gas Shock (2 req'd)	1	
	1	021626	Main Box Kit	98224759	FOX 2.0 Rear Gas Shock (2 req'd)	2	
	1	021617	Torsion Bar System	55327	Single Steering Stabilizer Mounting Kit	3	
	1	121614	Front Skid Plate	85402	Single NX2 Steering Stabilizer (1 Req'd)	4	
	1	021608	Rear Box Kit	55354	Dual Steering Stabilizer Mounting Kit	5	
	2	85602	Front NX2 Shock	55410	Dual 5500 Steering Stabilizer (2 req'd)	6	
	2	85759	Rear NX2 Shock	121011	Auto-Ride Systems	8	

- Notes
1. Special tool (Kent Moore Tools Part# J-42393) required to unload/load torsion bars. Not available through BDS.
 2. Requires frame bracket modification and differential mount modification.
 3. All wheel drive models will require front drive line modification.
 4. If equipped with stock 17" wheels, then must replace with 17" or larger aftermarket wheels.
 5. Auto-Ride equipped vehicles require part #121400 or #121011 in place of front and rear shocks.
 6. System will not fit 2000 model Escalades.
 7. Stock 20" wheels can be installed with up to 33x12.50 tires.
 8. Stock 20" wheels can be installed with up to 35x12.50 tires.

1988-1998 CHEVROLET/GMC K1500, K2500 6-LUG TRUCK 4WD

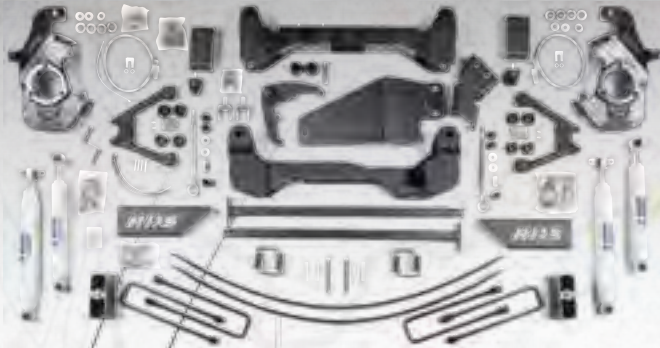

6" KIT FEATURES

- Upper A-Arms with greaseable bushings included to allow for zero track width change and reduced ball joint stress and maximize tire clearance
- Heavy duty High Clearance crossmembers are locked together with a differential skid plate and additionally supported with compression struts
- Unlike others on the market, this system offers a full 6" of lift without cranking the torsion bars
- The High Clearance crossmembers combined with the heavy duty upper control arms offer better performance and improved geometry for a system that excels both on and off road!
- Stainless front brake lines included



Vehicle Specs: 6" Lift Kit - 35" D/C FC-II - 16" Eagle Alloy 102s

1988-1998 CHEVROLET/GMC K1500, K2500 6-LUG 4WD TRUCK


LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES		
6" Front / 5" Rear IFS System Rear Block Kit & Add-A-Leaf Kit #193H 95CK4791	1	021602	Front Box Kit 1 of 3	98224620	FOX 2.0 Front Gas Shock (2 req'd)	1	
	1	021605	Front Box Kit 2 of 3	98224662	FOX 2.0 Rear Gas Shock (2 req'd)	2	
	1	021606	Front Box Kit 3 of 3	55328	Single Steering Stabilizer Mounting Kit	3	
	1	011459	Rear Box Kit	85401	Single NX2 Steering Stabilizer (1 Req'd)	4	
	2	85600	Front NX2 Shock	55362	Dual Steering Stabilizer Mounting Kit	5	
	2	85609	Rear NX2 Shock	55410	Dual 5500 Steering Stabilizer (2 req'd)	6	
	6" Front / 5" Rear IFS System Rear Leaf Spring Kit #194H 41CK4822	1	021602	Front Box Kit 1 of 3	121619	Fixed Traction Bar Kit (Note 8)	7
		1	021605	Front Box Kit 2 of 3	121406	RECOIL Traction Bar Mounting Kit	8
1		021606	Front Box Kit 3 of 3	123409	RECOIL Traction Bar		
2		001559	Rear Leaf Spring	PSL600	4x4 Posi-Lok™ (page 132)		
1		011519	Rear Box Kit	PSL1000	4x4 Posi-Lok™ (page 132)		
2		85600	Front NX2 Shock				
2		85609	Rear NX2 Shock				



Notes

1. Requires exhaust modification.
2. Special tool (Kent Moore Tools Part #J-36202-A) required to unload/load torsion bars. Not available through BDS.
3. Requires frame bracket modification and differential mount modification.
4. Not recommended for long box extended cab models due to crossmember interference.
5. All models equipped with auto-trac may require a new front driveshaft. The auto-trac New Process 246 transfer case can be identified by the silver dollar sized plaque on the rear of the transfer case that reads "NP246". The dash mounted display will display the Auto 4WD symbol. NP243 is not auto-trac.
6. Aftermarket wheels required. (see chart in back)
7. System will not work on some '88-'95 vehicles equipped with spindle mounted front ABS sensor.
8. Traction bars will not work on regular cab, short box models.

ACCESSORIES

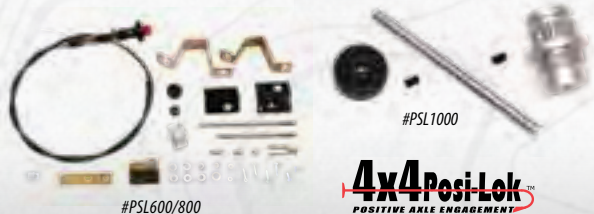


#PSL600/800


#PSL1000



CHEVROLET/GMC
DODGE
FORD
JEEP
SUZUKI
TOYOTA
POSI-LOK
SHOCKS/STEERING STABILIZERS
ACCESSORIES
APPAREL & PROMOTIONAL
PRODUCT SPECS
VEHICLE SPECS

1992-1998 CHEVROLET TAHOE & SUBURBAN, 6-LUG / GMC YUKON, 6-LUG

1992-1998 CHEVROLET TAHOE, 2 DOOR 6-LUG / GMC YUKON, 2 DOOR 6-LUG						
LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES	
 6" Front / 5" Rear IFS System Rear Block Kit & Add-A-Leaf Kit #193H 95CK4791	1	021602	Front Box Kit 1 of 3	98224620 FOX 2.0 Front Gas Shock (2 req'd)	1	
	1	021605	Front Box Kit 2 of 3	98224662 FOX 2.0 Rear Gas Shock (2 req'd)	2	
	1	021606	Front Box Kit 3 of 3	55328 Single Steering Stabilizer Mounting Kit	3	
	1	011459	Rear Box Kit	85401 Single NX2 Steering Stabilizer (1 Req'd)	4	
	2	85600	Front NX2 Shock	55362 Dual Steering Stabilizer Mounting Kit	5	
	2	85609	Rear NX2 Shock	55410 Dual 5500 Steering Stabilizer (2 req'd)	6	
				124002 Rear Sway Bar Links	7	
			PSL600 4x4 Posi-Lok™ (page 132)			
			PSL1000 4x4 Posi-Lok™ (page 132)			


1992-1998 CHEVROLET TAHOE 4-DOOR 4WD, 6-LUG & SUBURBAN 6-LUG 4WD / GMC YUKON 4-DOOR, 6-LUG 4WD						
LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES	
 6" Front / 5" Rear IFS System Rear Block Kit & Add-A-Leaf Kit #195H 74CK3212	1	021602	Front Box Kit 1 of 3	98224620 FOX 2.0 Front Gas Shock (2 req'd)	1	
	1	021605	Front Box Kit 2 of 3	98224662 FOX 2.0 Rear Gas Shock (2 req'd)	2	
	1	021606	Front Box Kit 3 of 3	55328 Single Steering Stabilizer Mounting Kit	3	
	1	011459	Rear Box Kit	85401 Single NX2 Steering Stabilizer (1 Req'd)	4	
	1	121002	Crossmember Kit	55362 Dual Steering Stabilizer Mounting Kit	5	
	2	85600	Front NX2 Shock	55410 Dual 5500 Steering Stabilizer (2 req'd)	6	
	2	85609	Rear NX2 Shock	124002 Rear Sway Bar Links	7	
				PSL600 4x4 Posi-Lok™ (page 132)		
				PSL1000 4x4 Posi-Lok™ (page 132)		

Notes

- Requires exhaust modification.
- Special tool (Kent Moore Tools Part #J-36202-A) required to unload/load torsion bars. Not available through BDS.
- Requires frame bracket modification and differential mount modification.
- All models equipped with auto-trac may require a new front driveshaft. The auto-trac New Process 246 transfer case can be identified by the silver dollar sized plaque on the rear of the transfer case that reads "NP246". The dash mounted display will display the Auto 4WD symbol. NP243 is not auto-trac.
- Aftermarket wheels required. (See tire and wheel chart in back of catalog)
- System will not work on some 88-95 vehicles equipped with spindle mounted front ABS sensor.
- Four door models require 121002 Torsion Bar Crossmember Kit.

6" KIT FEATURES

- One-piece high clearance front & rear crossmembers made from 1/4" thick steel
- Differential skid plate and compression struts included for off-road protection
- Heavy duty steering knuckle included to correct steering geometry and ease installation
- Increased caster for more control
- Stainless front brake lines included

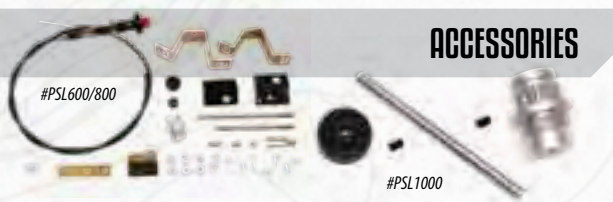

4x4 Posi-Lok™
POSITIVE AXLE ENGAGEMENT™



Vehicle Specs: 6" Lift Kit - 35" D/C/FC-II - 16" Eagle Alloy 102

2011-2016 CHEVROLET SILVERADO 2500/3500HD AND GMC SIERRA/DENALI 2500/3500HD




6.5" COILOVER CONVERSION SUSPENSION SYSTEM

BDS's new 6.5" Coilover Conversion High Clearance System for 2011-2016 GM 2500/3500HD trucks is engineered to improve your truck's performance over any terrain, these systems eliminate the rough riding factory torsion bars in favor of FOX factory series 2.5 DSC coilovers allowing clearance for 37" tires. These new coilover systems offer premium on road comfort with superior offroad dampening capability and improved suspension travel. As with all BDS products, these new kits are backed by Factory Protection Plus for BDS's No Fine Print Warranty and 5-year, 100,000-mile drivetrain warranty. Take your late model HD to the next level with BDS and FOX.

KIT FEATURES

- Eliminates rough riding torsion bars and converts to tunable FOX 2.5 coilovers
- High clearance crossmembers, skid plate, differential relocation, and steering knuckles
- Rubber bushings and ball joints preinstalled for quiet operation and long life.
- 30% increase to suspension travel
- TIG welded chromoly upper control arms
- Fully boxed, internally gusseted lower arms
- Allows fitment for up to 37" tires

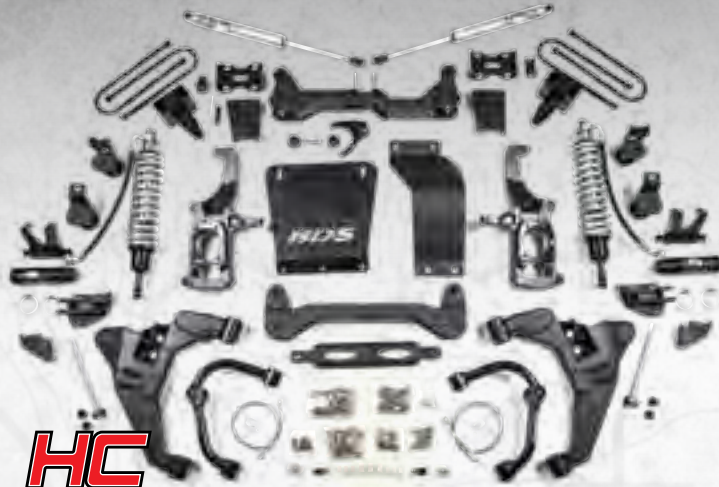

BDS Gusseted LCAs

FOX Chromoly UCAs

FOX 2.5 DSC COILOVERS


Dual Speed Compression (DSC) technology improves the FOX coilover performance with easy adjustability to match your terrain. Same benefits of FOX 2.5 coilovers now with DSC for 12-points of high speed compression adjustment and 10-points of low speed adjustment to dial in the ride.



Vehicle Specs: BDS 6.5" C/O System, 38x13.50 Nitto Trails, 20x10 Fuel Vapor

CHEVROLET/GMC
DODGE
FORD
JEEP
SUZUKI
TOYOTA
PUSH-LOK
SHOCKS/STEERING STABILIZERS
ACCESSORIES
APPAREL & PROMOTIONAL
PRODUCT SPECS
VEHICLE SPECS

2011-2016 CHEVROLET SILVERADO 2500/3500HD AND GMC SIERRA/DENALI 2500/3500HD

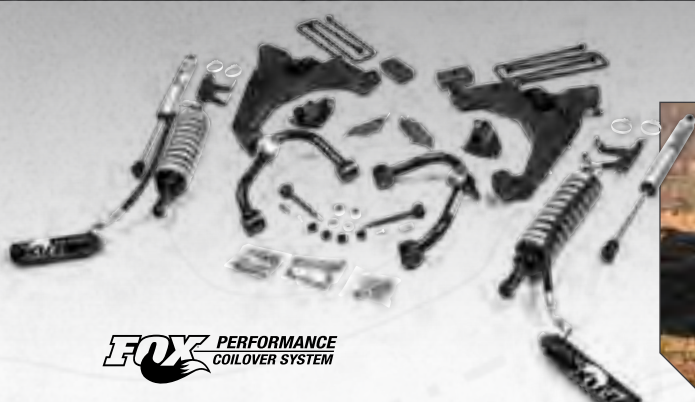





Vehicle Specs: 2.5" DSC Coilover Conversion - 35x12.50 Nitto Exo on 20x9 Fuel Hostage III


2.5" DSC COILOVER CONVERSION SUSPENSION SYSTEM

The first true bolt-on coil-over conversion system on the market for 2011-16 Chevy 2500HD owners. This system converts the stiff factory front torsion bar suspension to a smooth riding, tunable, high performance coilover suspension system. In addition, the added ride height clears room for larger tires and provides a more aggressive stance. The system increases suspension travel 30% over stock while still maintaining the stock track width.

- FOX Chromoly Upper Control Arms
- Fully Boxed Lower Control Arms
- Differential Drop/Sway Bar Links
- Coilover Mount System
- FOX 2.5 Factory Series Coilover w/ Remote DSC Reservoir

2011-2016 CHEVROLET/GMC 2500/3500HD 2WD & 4WD - GAS/DIESEL

LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES	
 2.5" Front / 2" Rear IFS C/O System (w/ DSC) Rear Block Kit FOX Performance DSC C/O System Kit #723FDSC w/ Top Overload Kit #724FDSC w/o Top Overload 12CK8554	1	021251	LCA Box Kit - DRV	88324028	FOX 2.5 Remote Reservoir Rear Shock (2 req'd) 10	
	1	021252	LCA Box Kit - PASS	55379	Single Steering Stabilizer Mounting Kit 11	
	1	021253	Front Box Kit	85430	Single NX2 Steering Stabilizer (1 Req'd) 12	
	1	80021250	FOX UCA Box Kit	85425	Single NX2 Steering Stabilizer - w/ factory mount (1 Req'd)	
	1	88406128	FOX 2.5 DSC Coilover Box Kit	95425	Single 9500 Steering Stabilizer - w/ factory mount (1 Req'd)	
	1	011217	2" Rear Box Kit w/ TopOvld or	121408	RECOIL Traction Bar Mounting Kit	
	1	011218	2" Rear Box Kit w/ TopOvld	123409	RECOIL Traction Bar	
	2	98224758	FOX 2.0 Rear Shocks	121251	Skid Plate Kit	
	 6.5" Front / 5" Rear IFS C/O System (w/ DSC) Rear Block Kit FOX Performance DSC C/O System Kit #727FDSC w/o Top Overload Kit #728FDSC w/Top Overload 28CK4806	1	021650	Knuckle- DRV	55379	Single Steering Stabilizer Mounting Kit 1
		1	021651	Knuckle - PASS	85430	Single NX2 Steering Stabilizer (1 Req'd) 2
1		021652	Front Box Kit 1of2	85425	Single NX2 Steering Stabilizer - w/ factory mount (1 Req'd) 4	
1		021655	Front Box Kit 2of2	95425	Single 9500 Steering Stabilizer - w/ factory mount (1 Req'd) 6	
1		121650	Front Skid Plate Box Kit	121408	RECOIL Traction Bar Mounting Kit 8	
1		121653	C/O Mounting Kit	123409	RECOIL Traction Bar 10	
1		021251	LCA Box Kit - DRV	121612	Carrier Bearing Drop Kit 12	
1		021252	LCA Box Kit - PASS		13	
1		80021250	FOX UCA Box Kit			
1		88406155	FOX 2.5 DSC Coilover Box Kit			
 6.5" Front / 3" Rear IFS C/O System (w/ DSC) Rear Block Kit FOX Performance DSC C/O System Kit #729FDSC w/o Top Overload Kit #730FDSC w/Top Overload 95CK4995	1	021650	Knuckle- DRV			
	1	021651	Knuckle - PASS			
	1	021652	Front Box Kit 1of2			
	1	021655	Front Box Kit 2of2			
	1	121650	Front Skid Plate Box Kit			
	1	121653	C/O Mounting Kit			
	1	021251	LCA Box Kit - DRV			
	1	021252	LCA Box Kit - PASS			
	1	80021250	FOX UCA Box Kit			
	1	88406155	FOX 2.5 DSC Coilover Box Kit			
 RECOIL TRACTION BARS Improve your traction on the street, track, and trail with BDS RECOIL Traction Bars. This revolutionary floating design uses tunable dual-stage compression springs for improved traction without binding up like traditional traction bars. RECOIL Traction Bars use heavy-wall tubing with a forged flex end and easy bolt-on mounts. #123409-121408 19CK978	1	021508	5" Rear Box Kit w/TopOvld or			
	1	021508	5" Rear Box Kit w/TopOvld			
	1	011317	3" Rear Box Kit w/ TopOvld			
	2	98224769	FOX 2.0 Rear Shocks			

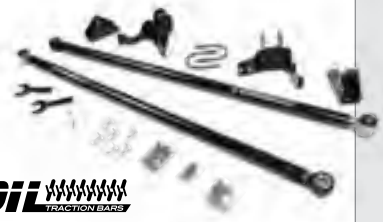

Improve your traction on the street, track, and trail with BDS RECOIL Traction Bars. This revolutionary floating design uses tunable dual-stage compression springs for improved traction without binding up like traditional traction bars. RECOIL Traction Bars use heavy-wall tubing with a forged flex end and easy bolt-on mounts.

#123409-121408 19CK978

- Notes
1. Torsion Bar Tool required to load/unload the torsion bars.
 2. Requires frame bracket and differential modification
 3. 3" rear block kit recommended for dually applications, 5" rear block kit will not fit dually applications.
 4. Stock 17" & 18" wheels cannot be reinstalled. Stock 20" can be used with up to a 35x12.50 tire.
 5. Factory dually wheels can not be reinstalled.
 6. Models with two piece rear driveshaft will require #121612.
 7. Factory 20" wheels with More than 6" total backspacing cannot be reinstalled with the lift.
 8. Stock 20" x 8.5" wheels with 6" backspacing or less will fit with a max tire size of 35x12.50.
 9. 2016 models cannot use 55425/95425 single steering stabilizers
 10. Requires minor welding
 11. Minor metal trimming may be required with 35x12.50R20 on 20x9 w/5-5.5" BS
 12. Coilover designed for diesel trucks, can be used on gas engine trucks by adjusted preload to get ride height within 2-3" of lift using spanner wrench #129600
 13. Will NOT fit dually applications.

ACCESSORIES



#121251 - '11-'16 HD Skid Plate Kit
Only available for 2.5" FOX DSC Coilover System

2011-2016 CHEVROLET SILVERADO 2500/3500HD AND GMC SIERRA/DENALI 2500/3500HD



Vehicle Specs: 6.5" lift kit - 35" Toyo M/T - 22" AF Wheels

6.5" KIT FEATURES

- No Torsion Bar Drop design for maximum ground clearance
- High clearance laser cut crossmember
- No track width change
- Front skid plate included
- 3" Rear block kit or 5" u-bolt flip rear kit
- Stainless steel brake lines
- Ductile iron steering knuckles



2011-2016 CHEVROLET/GMC 2500/3500HD 2WD & 4WD - GAS/DIESEL							
LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES		
HC NTBD 4.5" Front / 2" Rear IFS System Rear Block Kit Kit # 719H w/o Top Overload or Kit # 721H w/Top Overload 16CK6222	1	021650	Front Box Kit 1 of 4	98224613	FOX 2.0 Front Gas Shock (2 req'd)	1	
	1	021651	Front Box Kit 2 of 4	98224758	FOX 2.0 Rear Gas Shock - 4.5" Kits (2 req'd)	2	
	1	021652	Front Box Kit 3 of 4	98224769	FOX 2.0 Rear Gas Shock - 6.5" Kits (2 req'd)	3	
	1	021653	Front Box Kit 4 of 4	55379	Single Steering Stabilizer Mounting Kit	4	
	1	021454	Torsion Bar Relocation System	85430	Single NX2 Steering Stabilizer (1 Req'd)	5	
	1	121650	Front Skid Plate	85425	Single NX2 Steering Stabilizer - w/ factory mount (1 Req'd)	6	
	1	011218	Rear Box Kit w/o TopOvld or	95425	Single 9500 Steering Stabilizer - w/ factory mount (1 Req'd)	7	
	1	011217	Rear Box Kit w/ TopOvld	121408	RECOIL Traction Bar Mounting Kit		
	2	85613	Front NX2 Shock	123409	RECOIL Traction Bar		
	2	85758	Rear NX2 Shock	121612	Carrier Bearing Drop Kit		
HC NTBD 6.5" Front / 3" Rear IFS System Rear Block Kit Kit # 198H w/o Top Overload or Kit # 199H w/Top Overload 16CK6222	1	021650	Front Box Kit 1 of 4			1	
	1	021651	Front Box Kit 2 of 4			2	
	1	021652	Front Box Kit 3 of 4			3	
	1	021653	Front Box Kit 4 of 4			4	
	1	021654	Torsion Bar Relocation System			5	
	1	121650	Front Skid Plate			8	
	1	011318	Rear Box Kit w/o TopOvld or			9	
	1	011317	Rear Box Kit w/ TopOvld				
	2	85613	Front NX2 Shock				
2	85769	Rear NX2 Shock					
HC NTBD 6.5" Front / 5" Rear IFS System Rear Block Kit Kit # 196H w/o Top Overload or Kit # 197H w/Top Overload 48CK6132	1	021650	Front Box Kit 1 of 4				
	1	021651	Front Box Kit 2 of 4				
	1	021652	Front Box Kit 3 of 4				
	1	021653	Front Box Kit 4 of 4				
	1	021654	Torsion Bar Relocation System				
	1	121650	Front Skid Plate				
	1	021509	Rear Box Kit w/o TopOvld or				
	1	021508	Rear Box Kit w/ TopOvld				
	2	85613	Front NX2 Shock				
	2	85769	Rear NX2 Shock				



RECOIL TRACTION BARS

Improve your traction on the street, track, and trail with BDS RECOIL Traction Bars. This revolutionary floating design uses tunable dual-stage compression springs for improved traction without binding up like traditional traction bars. RECOIL Traction Bars use heavy-wall tubing with a forged flex end and easy bolt-on mounts.

#123409-121408 19CK918

Notes

1. Torsion Bar Tool required to load/unload the torsion bars.
2. Stock 17" & 18" wheels cannot be reinstalled.
3. Stock 20" x 8.5" wheels with 6" backspacing or less will fit with a max tire size of 35 x 12.50
4. Factory dually wheels cannot be reinstalled.
5. Models with two piece rear driveshaft may require #121612.
6. Top mounted rear overload spring equipped models require a different kit than non-overload equipped models. Be sure to select the correct option for your truck.
7. Depending on the specific wheel and tire combination trimming may be required for 35x12.50s
8. 3" rear block kit recommended for dually applications, 5" rear block kit will not fit dually applications.
9. If minor front driveline vibration occurs at highway speeds while in 4wd and the vehicle will be used in this situation on a regular basis, we recommend replacing the front driveshaft with a dual Cardan style driveshaft.

CHEVROLET/GMC
DODGE
FORD
JEEP
SUZUKI
TOYOTA
PUSH-LOK
SHOCKS/STEERING STABILIZERS
ACCESSORIES
APPAREL & PROMOTIONAL
PRODUCT SPECS
VEHICLE SPECS

2001-2010 CHEVROLET/GMC K2500 HD, K2500 NON-HD, K2500 4WD TRUCK

4.5" KIT FEATURES

- High clearance crossmember design
- Standard or narrow track knuckles available
- Optional front skid plate
- 3-Point differential mounting system
- Differential skid plate included

7" KIT FEATURES

- No Torsion Bar Drop (max clearance)
- High clearance crossmember design
- Standard or narrow track knuckles
- Full 7" lift without cranking torsion bars
- Improved steering/suspension geometry
- Front and differential skid plate included
- Rear leaf springs available
- 3-Point differential mounting system



#189H - 7" Kit Shown w/ Optional FOX 2.0 Shocks

2001-2010 CHEVROLET/GMC K2500/3500 HD 4WD TRUCK



LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES	
4.5" Front / 3" Rear IFS System Rear Block Kit Kit# 192H 15CK7571	1	021632	Standard Knuckle Kit or	98224605	FOX 2.0 Front Gas Shock - 4.5" Kit (2 req'd)	1
	1	021635	Narrow Track Knuckle Kit	98224606	FOX 2.0 Front Gas Shock - 7" Kits (2 req'd)	2
	1	021451	Front Box Kit 2 of 3	98224759	FOX 2.0 Rear Gas Shock - 4.5" Kit (2 req'd)	3
	1	021452	Front Box Kit 3 of 3	98224761	FOX 2.0 Rear Gas Shock - 7" Kits (2 req'd)	4
	1	011319	Rear Block Kit	85411	Single NX2 Steering Stabilizer	5
	2	85605	Front NX2 Shock	55363	Dual Steering Stabilizer Mounting Kit	6
	2	85759	Rear NX2 Shock	85423	Dual NX2 Steering Stabilizer (2 req'd)	7
				121407	RECOIL Traction Bar Mounting Kit	8
				123409	RECOIL Traction Bar	9
				121618	Fixed Traction Bar Kit	10
				121612	Carrier Bearing Drop Kit	11
7" Front / 5" Rear IFS System Rear Block Kit Kit# 189H 18CK6791	1	021632	Standard Knuckle Kit or	121624	Front Skid Plate - 4.5" Kit	1
	1	021635	Narrow Track Knuckle Kit			2
	1	021633	Front Box Kit 2 of 3			3
	1	021634	Front Box Kit 3 of 3			4
	1	011517	Rear Block Kit			5
	2	85606	Front NX2 Shock			6
	2	85761	Rear NX2 Shock			7
7" Front / 5" Rear IFS System Rear Leaf Spring Kit# 190H 61CK7262	1	021632	Standard Knuckle Kit or			8
	1	021635	Narrow Track Knuckle Kit			9
	1	021633	Front Box Kit 2 of 3			10
	1	021634	Front Box Kit 3 of 3			11
	2	001509	Rear Leaf Spring			
	4	4045	Rear U-Bolts			
	2	85606	Front NX2 Shock			
	2	85761	Rear NX2 Shock			



- Notes**
1. Torsion Bar tool required to load/unload the torsion bars.
 2. Some welding required.
 3. Requires frame bracket modification and differential mount modification.
 4. Traction bars will not fit standard cab/short box models and are designed to work on vehicles with 4" to 8" of lift.
 5. 20" wheels with 5" to 5-3/4" backspacing recommended to reduce trimming.
 6. Gas models require exhaust modification.
 7. Narrow track knuckle will increase turning radius.
 8. For tail high stance use #119157 add-a-leaf with the block kit or #069207 with leaf spring kit.
 9. Dually applications will require longer u-bolts.
 10. 55758 Rear shock for Dually 4.5" Lift
 11. Recoil Traction Bars will work on all dually applications except for regular cab models



RECOIL TRACTION BARS

Improve your traction on the street, track, and trail with BDS RECOIL Traction Bars. This revolutionary floating design uses tunable dual-stage compression springs for improved traction without binding up like traditional traction bars. RECOIL Traction Bars use heavy-wall tubing with a forged flex end and easy bolt-on mounts.




#123409-121407.....28CK538



Vehicle Specs: 7" Lift Kit - 35" D/C FC-II - 18" ATX Thug

2001-2006 GM K1500 HD, K2500 NON-HD, K2500 SUBURBAN, K2500 AVALANCHE 4WD

2001-2006 GM K1500 HD, K2500 NON-HD, K2500 SUBURBAN, K2500 AVALANCHE 4WD WITH STANDARD SHOCKS

LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES	
 4.5" Front / 3" Rear IFS System Rear Block Kit Kit# 192H 15CK7571	1	021632	Standard Knuckle Kit or	98224605	FOX 2.0 Front Gas Shock (2 req'd)	1
	1	021635	Narrow Track Knuckle Kit	98224759	FOX 2.0 Rear Gas Shock (2 req'd)	2
	1	021451	Front Box Kit 2 of 3	85411	Single NX2 Steering Stabilizer	3
	1	021452	Front Box Kit 3 of 3	55363	Dual Steering Stabilizer Mounting Kit	4
	1	011319	Rear Block Kit	85423	Dual NX2 Steering Stabilizer (2 req'd)	5
	2	85605	Front NX2 Shock	121618	Fixed Traction Bar Kit	6
	2	85759	Rear NX2 Shock	121612	Carrier Bearing Drop Kit	7
				121624	Front Skid Plate	8
  7" Front / 5" Rear IFS System Rear Block Kit Kit# 189H 18CK6791	1	021632	Standard Knuckle Kit or	98224606	FOX 2.0 Front Gas Shock (2 req'd)	1
	1	021635	Narrow Track Knuckle Kit	98224761	FOX 2.0 Rear Gas Shock (2 req'd)	2
	1	021633	Front Box Kit 2 of 3	85411	Single NX2 Steering Stabilizer	3
	1	021634	Front Box Kit 3 of 3	55363	Dual Steering Stabilizer Mounting Kit	4
	1	011517	Rear Block Kit	85423	Dual NX2 Steering Stabilizer (2 req'd)	5
	2	85606	Front NX2 Shock	121618	Fixed Traction Bar Kit	6
	2	85761	Rear NX2 Shock	121612	Carrier Bearing Drop Kit	7
						8

Notes

- Torsion Bar tool required to load/unload the torsion bars.
- Some welding required.
- Requires frame bracket modification and differential mount modification.
- Traction bars will not fit standard cab/short box models and are designed to work on vehicles with 4" to 8" of lift.
- 20" wheels with 5" to 5-3/4" backspring recommended to reduce trimming.
- Gas models require exhaust modification.
- Narrow track knuckle will slightly increase turning radius.
- For tail high stance use #119157 add-a-leaf with the block kit or #069207 with leaf spring kit.




#192H - 4.5" Kit Shown w/ Optional FOX 2.0 Shocks

2001-2010 C2500 HD 2WD



7" KIT FEATURES

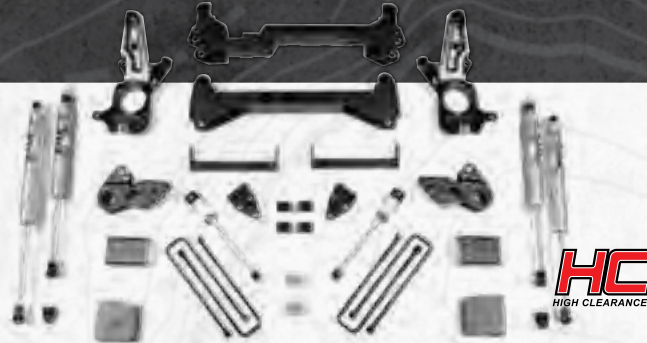- One-piece front & rear crossmembers increase frame rigidity while reducing installation time
- Heavy-duty steering knuckles included to correct steering geometry and ease installation
- No Torsion Bar Drop for added ground clearance
- Optional steering stabilizers available
- Increased ground clearance created by high arched crossmembers



#149H - 7" Kit Shown w/ Optional FOX 2.0 Shocks

2001-2010 CHEVROLET/GMC C2500 HD 2WD TRUCK

LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES	
  7" Front / 5" Rear IFS System Rear Block Kit Kit #149H w/611 Kit #150H w/612 18CK8451	1	021620	Front Box Kit 1 of 3	98224606	FOX 2.0 Front Gas Shock (2 req'd)	1
	1	021627	Front Box Kit 2 of 3	98224761	FOX 2.0 Rear Gas Shock (2 req'd)	2
	1	021628	Front Box Kit 3 of 3	85411	Single NX2 Steering Stabilizer (OE)	3
	1	121611	Carrier Bearing Drop or	55355	Dual Steering Stabilizer Mounting Kit	
	1	121612	Carrier Bearing Drop	55410	Dual 5500 Steering Stabilizer (2 req'd)	
	1	011507	Rear Block Kit	121624	Front Skid Plate	
	2	85606	Front NX2 Shock			
	2	85761	Rear NX2 Shock			

Notes

- Special tool required to unload/load the torsion bars.
- Will not fit non-HD applications.
- The 2WD HD was produced with two different styles of carrier bearing crossmembers. If the carrier bearing is mounted above the crossmember, use 121611. If the carrier bearing is mounted below the crossmember, use 121612.

#121624
Front Skid Plate






CHEVROLET/GMC
DODGE
FORD
JEEP
SUZUKI
TOYOTA
PUSH-LOK
SHOCKS/STEERING STABILIZERS
ACCESSORIES
APPAREL & PROMOTIONAL
PRODUCT SPECS
VEHICLE SPECS

1988-1991 CHEVROLET BLAZER & SUBURBAN 4WD / GMC JIMMY 4WD



Vehicle Specs: 6" System - 315/75 R16 MTZ tires - 16x7 American Racing wheels

1988-1991 CHEVROLET BLAZER & SUBURBAN 4WD / GMC JIMMY 4WD					
LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES
2.5" Front / 2" Rear	2	001201	Front Spring	98224620	FOX 2.0 Front Gas Shock (2 req'd) FOX 2.0 Rear Gas Shock (2 req'd) FOX 2.0 Front Gas Aux. Shock (2 req'd) Front NX2 Auxiliary Shock (2 req'd) Steering Stabilizers GM Frame Support Kit Front Spring Eye Bolts Rear Spring Eye Bolts
Front Leaf Spring	1	011003	Front Box Kit	98224629	
Rear Block Kit	1	011209	1/2 Ton Rear 2" Box Kit <i>or</i>	98224620	
1/2 Ton Kit #135H	1	011208	3/4 Ton Rear 2" Box Kit	85620	
3/4 Ton Kit #136H	2	85620	Front NX2 Shock	Page 146	
19CK536	2	85629	Rear NX2 Shock	121001	
				121005	
				121009	
4" Front / 4" Rear	2	001401	Front Spring	98224620	3
Front Leaf Spring	1	011003	Front Box Kit	98224639	
Rear Block Kit	1	011409	1/2 Ton Rear 4" Box Kit <i>or</i>	98224650	
1/2 Ton Kit #137H	1	011408	3/4 Ton Rear 4" Box Kit	85650	
3/4 Ton Kit #138H	1	081401	Steering Arm	Page 146	
02CK667	2	85620	Front NX2 Shock	081402	
	2	85639	Rear NX2 Shock	121000	
4" Front / 4" Rear	2	001401	Front Spring	121001	Short Add-a-leaf (use in place of 119157) Front Spring Eye Bolts Rear Spring Eye Bolts Front Anti-Sway Bar Drop Kit
Front Leaf Spring	1	011003	Front Box Kit	119158	
Rear Block Kit and Add-A-Leaf	1	119157	Long Rear Add-a-leaf	121005	
1/2 Ton Kit #139H	1	011209	1/2 Ton Rear 2" Box Kit <i>or</i>	121009	
3/4 Ton Kit #140H	1	011208	3/4 Ton Rear 2" Box Kit	121003	
83CK338	1	081401	Steering Arm		
	2	85620	Front NX2 Shock		
	2	85639	Rear NX2 Shock		
4" Front / 4" Rear	2	001401	Front Spring	 #081402 - Adjustable Drag Link   #121003 - Anti-Sway Bar Drop Kit	3 5 6
Front Leaf Spring	1	011003	Front Box Kit		
Rear Leaf Spring	2	001409	Rear Spring 52" Eye to Eye		
1/2 Ton vehicle only	1	011009	Rear Box Kit		
Kit #141H 66CK2911	1	081401	Steering Arm		
	2	85620	Front NX2 Shock		
	2	85639	Rear NX2 Shock		
4" Front / 4" Rear	2	001401	Front Spring		
Front Leaf Spring	1	011003	Front Box Kit		
Rear Leaf Spring	2	001408	Rear Spring 56" Eye to Eye		
3/4 Ton vehicle only	4	4032	5/8 x 3-5/8 x 10" Rd U-bolt		
Kit #142H 19CK4911	1	081401	Steering Arm		
	2	85620	Front NX2 Shock		
	2	85639	Rear NX2 Shock		

See Notes ►

Continued ►

1988-1991 CHEVROLET BLAZER & SUBURBAN 4WD / GMC JIMMY & SUBURBAN 4WD



#001401 - 4" Glide-Ride System With Rear Block Kit



#001801 - 8" 1/2 Ton Glide-Ride System with Rear Springs

- Glide-Ride leaf springs feature bolt-style leaf alignment clamps, anti-friction pads and tapered leaves
- Polyurethane bushings for smooth, quiet performance.
- Drop steering arm to correct steering angles

1988-1991 CHEVROLET BLAZER & SUBURBAN 4WD / GMC JIMMY 4WD (CONTINUED)

LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES	
6" Front / 6" Rear	2	001551	Front Spring	98224650	FOX 2.0 Front Gas Shock (2 req'd)	3
Front Leaf Spring	1	011003	Front Box Kit	98224639	FOX 2.0 Rear Gas Shock (2 req'd)	5
Rear Block Kit and Add-A-Leaf	1	119157	Long Rear Add-a-leaf	98224650	FOX 2.0 Front Gas Aux. Shock (2 req'd)	6
	1	011409	1/2 Ton Rear 4" Box Kit or	85650	Front NX2 Auxiliary Shock (2 req'd)	
1/2 Ton Kit #143H	1	011408	3/4 Ton Rear 4" Box Kit	Page 146	Steering Stabilizers	
3/4 Ton Kit #144H	1	081401	Steering Arm	081402	2" Adjustable Drag Link	
34CK269	1	121000	Transfer Case Drop Kit	121001	GM Frame Support Kit	
	2	85650	Front NX2 Shock	121632	Front Anti-Sway Bar Links	
	2	85639	Rear NX2 Shock	119158	Short Add-a leaf (use in place of 119157)	
6" Front / 6" Rear	2	001551	Front Spring	121005	Front Spring Eye Bolts	
Front Leaf Spring	1	011003	Front Box Kit	121009	Rear Spring Eye Bolts	
Rear Leaf Spring	2	001609	Rear Spring 52" Eye to Eye			
1/2 Ton vehicle only	1	011009	Rear Box Kit			
Kit #145H	1	081401	Steering Arm			
34CK6131	1	121000	Transfer Case Drop Kit			
	2	85650	Front NX2 Shock			
	2	85639	Rear NX2 Shock			
6" Front / 6" Rear	2	001551	Front Spring			
Front Leaf Spring	1	011003	Front Box Kit			
Rear Leaf Spring	2	001608	Rear Spring 56" Eye to Eye			
3/4 Ton vehicle only	4	4032	5/8 x 3-5/8 x 10" Rd U-bolt			
Kit #146H	1	081401	Steering Arm			
65CK8431	1	121000	Transfer Case Drop Kit			
	2	85650	Front NX2 Shock			
	2	85639	Rear NX2 Shock			
8" Front / 8" Rear	2	001801	Front Spring	98224650	FOX 2.0 Front Gas Shock (2 req'd)	1
Front Leaf Spring	1	011003	Front Box Kit	98224639	FOX 2.0 Rear Gas Shock (2 req'd)	2
Rear Leaf Spring	2	001809	Rear Spring 52" Eye to Eye	98224660	FOX 2.0 Front Gas Aux. Shock (2 req'd)	3
1/2 Ton vehicle only	1	011009	Rear Box Kit	85660	Front NX2 Auxiliary Shock (2 req'd)	4
Kit #147H	1	081401	Steering Arm	Page 146	Steering Stabilizers	5
35CK5141	1	082501	3" Steering Block	081402	2" Adjustable Drag Link	6
	1	121000	Transfer Case Drop Kit	121001	GM Frame Support Kit	
	1	121632	Front Anti-Sway Bar Links	121005	Front Spring Eye Bolts	
	2	85650	Front NX2 Shock	121009	Rear Spring Eye Bolts	
	2	85639	Rear NX2 Shock			
8" Front / 8" Rear	2	001801	Front Spring			
Front Leaf Spring	1	011003	Front Box Kit			
Rear Leaf Spring	2	001608	Rear Spring 56" Eye to Eye			
2" Block Kit	1	011208	Rear 2" Box Kit			
3/4 Ton vehicle only	1	081401	Steering Arm			
Kit #148H	1	082501	3" Steering Block			
95CK9841	1	121000	Transfer Case Drop Kit			
	1	121632	Front Anti-Sway Bar Links			
	2	85650	Front NX2 Shock			
	2	85639	Rear NX2 Shock			



#121632 - Anti-Sway Bar Links





#121001 - GM Frame Support

Notes

1. Both driveshafts may need to be lengthened.
2. Aftermarket extended brake lines required for installation.
3. Exhaust modification may be required to clear front driveshaft.
4. Emergency brake cable extension kit may be required.
5. #001408 and #001608 come with OE style rubber bushings installed.
6. For rear spring applications, you must measure the eye to eye dimension of the original springs before ordering lifted springs. Not all 3/4 ton rear springs are 56". Not all 1/2 ton rear springs are 52".

1977-1987 CHEVROLET 1500 & 2500 TRUCK, BLAZER & SUBURBAN 4WD / GMC JIMMY 4WD

1977-1987 CHEVY/GMC 1500 & 2500 TRUCK 4WD • 1977-1987 CHEVY BLAZER, SUBURBAN 4WD / GMC JIMMY 4WD

LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES
2.5" Front / 2" Rear Front Leaf Spring Rear Block Kit 1/2 Ton Kit #121H 3/4 Ton Kit #122H 75CK026	2 1 1 1 2 2	001201 011001 011209 011208 85620 85629	Front Spring Front Box Kit 1/2 Ton Rear 2" Box Kit or 3/4 Ton Rear 2" Box Kit Front NX2 Shock Rear NX2 Shock	98224620 FOX 2.0 Front Gas Shock (2 req'd) 98224629 FOX 2.0 Rear Gas Shock (2 req'd) 98224620 FOX 2.0 Front Gas Aux. Shock (2 req'd) 85620 Front NX2 Auxiliary Shock (2 req'd) Page 146 Steering Stabilizers 121001 GM Frame Support Kit 121004 Front Spring Eye Bolts 121009 Rear Spring Eye Bolts	
4" Front / 4" Rear Front Leaf Spring Rear Block Kit 1/2 Ton Kit #123H 3/4 Ton Kit #124H 68CK057	2 1 1 1 1 2 2	001401 011001 011409 011408 081401 85620 85639	Front Spring Front Box Kit 1/2 Ton Rear 4" Box Kit or 3/4 Ton Rear 4" Box Kit Steering Arm Front NX2 Shock Rear NX2 Shock	98224620 FOX 2.0 Front Gas Shock (2 req'd) 98224639 FOX 2.0 Rear Gas Shock (2 req'd) 98224650 FOX 2.0 Front Gas Aux. Shock (2 req'd) 85650 Front NX2 Auxiliary Shock (2 req'd) Page 146 Steering Stabilizers 081402 2" Adjustable Drag Link 121000 Transfer Case Drop Kit 121001 GM Frame Support Kit 119158 Short Add-a-leaf (use in place of 119157) 121004 Front Spring Eye Bolts 121009 Rear Spring Eye Bolts 121632 Front Anti-Sway Bar Link	3 5 7
4" Front / 4" Rear Front Leaf Spring Rear Block Kit and Add-A-Leaf 1/2 Ton Kit #125H 3/4 Ton Kit #126H 40CK818	2 1 1 1 1 2 2	001401 011001 119157 011209 011208 081401 85620 85639	Front Spring Front Box Kit Long Rear Add-a-leaf 1/2 Ton Rear 2" Box Kit or 3/4 Ton Rear 2" Box Kit Steering Arm Front NX2 Shock Rear NX2 Shock	119158 Short Add-a-leaf (use in place of 119157) 121004 Front Spring Eye Bolts 121009 Rear Spring Eye Bolts 121632 Front Anti-Sway Bar Link	
4" Front / 4" Rear Front Leaf Spring Rear Leaf Spring Rear Leaf Spring 1/2 Ton Vehicle Only Kit #127H 23CK7711	2 1 1 1 1 2 2	001401 011001 001409 011009 081401 85620 85639	Front Spring Front Box Kit Rear Spring 52" Eye to Eye Rear Box Kit Steering Arm Front NX2 Shock Rear NX2 Shock	  #081402 - Adjustable Drag Link	3 5 6 7
4" Front / 4" Rear Front Leaf Spring Rear Leaf Spring 3/4 Ton Vehicle Only Kit #128H 75CK9711	2 1 2 4 1 2 2	001401 011001 001408 4032 081401 85620 85639	Front Spring Front Box Kit Rear Spring 56" Eye to Eye 5/8 x 3-5/8 x 10" Rd U-bolts Steering Arm Front NX2 Shock Rear NX2 Shock	 #121003 - Anti-Sway Bar Drop Kit	
6" Front / 6" Rear Front Leaf Spring Rear Block Kit and Add-A-Leaf 1/2 Ton Kit #129H 3/4 Ton Kit #130H 90CK749	2 1 1 1 1 1 2 2 2	001551 011001 119157 011409 011408 081401 121000 85650 85639	Front Spring Front Box Kit Long Rear Add-a-leaf 1/2 Ton Rear 4" Box Kit or 3/4 Ton Rear 4" Box Kit Steering Arm Transfer Case Drop Kit Front NX2 Shock Rear NX2 Shock	98224650 FOX 2.0 Front Gas Shock (2 req'd) 98224639 FOX 2.0 Rear Gas Shock (2 req'd) 98224660 FOX 2.0 Front Gas Aux. Shock (2 req'd) 85650 Front NX2 Auxiliary Shock (2 req'd) Page 146 Steering Stabilizers 081402 2" Adjustable Drag Link 121001 GM Frame Support Kit 121632 Front Anti-Sway Bar Links 119158 Short Add-a-leaf (use in place of 119157) 121004 Front Spring Eye Bolts 121009 Rear Spring Eye Bolts	3 5 6 7
6" Front / 6" Rear Front Leaf Spring Rear Leaf Spring Rear Leaf Spring 1/2 Ton Vehicle Only Kit #131H 90CK1031	2 1 2 1 1 1 2 2	001551 011001 001609 011009 081401 121000 85650 85639	Front Spring Front Box Kit Rear Spring 52" Eye to Eye Rear Box Kit Steering Arm Transfer Case Drop Kit Front NX2 Shock Rear NX2 Shock		
6" Front / 6" Rear Front Leaf Spring Rear Leaf Spring Rear Leaf Spring 3/4 Ton Vehicle Only Kit #132H 22CK3331	2 1 2 4 1 1 2 2	001551 011001 001608 4032 081401 121000 85650 85639	Front Spring Front Box Kit Rear Spring 56" Eye to Eye 5/8 x 3-5/8 x 10" Rd U-bolts Steering Arm Transfer Case Drop Kit Front NX2 Shock Rear NX2 Shock		



Vehicle Specs: 8" Lift Kit - 35x14 Bogger - 16x12 M/T Classic II

See Notes ►

Continued ►

'77-'87 CHEVY/GMC 1500 & 2500 TRUCK 4WD • '77-'87 CHEVY BLAZER & SUBURBAN 4WD / GMC JIMMY 4WD (CONT'D)

LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES	
8" Front / 8" Rear	2	001801	Front Spring	98224650	FOX 2.0 Front Gas Shock (2 req'd)	1
Front Leaf Spring	1	011001	Front Box Kit	98224639	FOX 2.0 Rear Gas Shock (2 req'd)	2
Rear Leaf Spring	2	001809	Rear Spring 52" Eye to Eye	98224660	FOX 2.0 Front Gas Aux. Shock (2 req'd)	3
1/2 Ton Vehicle Only	1	011009	Rear Box Kit	85660	Front NX2 Auxiliary Shock (2 req'd)	4
Kit #133H 91CK0041	1	081401	Steering Arm	Page 146	Steering Stabilizers	5
	1	082501	3" Steering Block	121001	GM Frame Support Kit	6
	1	121000	Transfer Case Drop Kit	081402	2" Adjustable Drag Link	
	1	121632	Anti-Sway Bar Links	121004	Front Spring Eye Bolts	
	2	85650	Front NX2 Shock	121009	Rear Spring Eye Bolts	
	2	85639	Rear NX2 Shock			
8" Front / 8" Rear	2	001801	Front Spring			
Front Leaf Spring	1	011001	Front Box Kit			
Rear Leaf Spring	2	001608	Rear 6" Spring 56" Eye to Eye			
& 2" Block Kit	1	011208	Rear 2" Box Kit			
3/4 Ton Vehicle Only	1	081401	Steering Arm			
Kit #134H 52CK4741	1	082501	3" Steering Block			
	1	121000	Transfer Case Drop Kit			
	1	121632	Anti-Sway Bar Links			
	2	85650	Front NX2 Shock			
	2	85639	Rear NX2 Shock			

Notes

- Both driveshafts may need to be lengthened.
- Aftermarket extended brake lines required for installation.
- Exhaust modification may be required to clear front driveshaft.
- Emergency brake cable extension kit may be required.
- #001408 and #001608 come with OE style rubber bushings installed.
- For rear spring applications, you must measure the eye to eye dimension of the original springs before ordering lifted springs. Not all 3/4 ton rear springs are 56". Not all 1/2 ton rear springs are 52".
- 121632 Required to retain factory sway bar. No relocation included in kits.



Vehicle Specs: 8" Lift Kit - 37" Toyo M/T - 18x9 ARE Cannon

1973-1976 CHEVY/GMC 1500 & 2500 TRUCK / CHEVY BLAZER & SUBURBAN 4WD / GMC JIMMY 4WD

1973-1976 CHEVROLET/GMC 1500 & 2500 4WD TRUCK / CHEVY BLAZER & SUBURBAN 4WD / GMC JIMMY 4WD

LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES	
2.5" Front / 2" Rear	2	001201	Front Spring	98224620	FOX 2.0 Front Gas Shock (2 req'd)	
Front Leaf Spring	1	011002	Front Box Kit	98224629	FOX 2.0 Rear Gas Shock (2 req'd)	
Rear Block Kit	1	011209	1/2 Ton Rear 2" Box Kit or	Page 146	Steering Stabilizers	
1/2 Ton Kit #107H	1	011208	3/4 Ton Rear 2" Box Kit	121001	GM Frame Support Kit	
3/4 Ton Kit #108H	2	85620	Front NX2 Shock	121004	Front Spring Eye Bolts	
75CK026	2	85629	Rear NX2 Shock	121009	Rear Spring Eye Bolts	
4" Front / 4" Rear	2	001401	Front Spring	98224620	FOX 2.0 Front Gas Shock (2 req'd)	1
Front Leaf Spring	1	011002	Front Box Kit	98224639	FOX 2.0 Rear Gas Shock (2 req'd)	2
Rear Block Kit	1	011409	1/2 Ton Rear 4" Box Kit or	Page 146	Steering Stabilizers	
1/2 Ton Kit #109H	1	011408	3/4 Ton Rear 4" Box Kit	081402	2" Adjustable Drag Link	
3/4 Ton Kit #110H	1	081401	Steering Arm	121000	Transfer Case Drop Kit	
68CK057	2	85620	Front NX2 Shock	121001	GM Frame Support Kit	
	2	85639	Rear NX2 Shock	119158	Short Rear Add-a leaf (use in place of 119157)	
4" Front / 4" Rear	2	001401	Front Spring	121004	Front Spring Eye Bolts	
Front Leaf Spring	1	011002	Front Box Kit	121009	Rear Spring Eye Bolts	
Rear Block Kit and Add-A-Leaf	1	119157	Long Rear Add-a-leaf	121003	Front Anti-Sway Bar Drop Kit	
1/2 Ton Kit #111H	1	011209	1/2 Ton Rear 2" Box Kit or			
3/4 Ton Kit #112H	1	011208	3/4 Ton Rear 2" Box Kit			
40CK818	1	081401	Steering Arm			
	2	85620	Front NX2 Shock			
	2	85639	Rear NX2 Shock			

Notes

- #001408 and #001608 come with OE style rubber bushings installed.
- For rear spring applications, you must measure the eye to eye dimension of the original springs before ordering lifted springs. Not all 3/4 ton rear springs are 56". Not all 1/2 ton rear springs are 52".

Continued ▶


ACCESSORIES



#121003 - Anti-Sway Bar Drop Kit



#081402 - Adjustable Drag Link

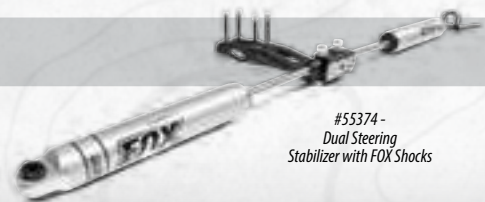

#55374 - Dual Steering Stabilizer with FOX Shocks

1973-1976 CHEVY/GMC 1500 & 2500 TRUCK / CHEVY/GMC BLAZER, JIMMY, & SUBURBAN 4WD

1973-1976 CHEVROLET/GMC 1500 & 2500 TRUCK 4WD / CHEVY BLAZER & SUBURBAN 4WD / GMC JIMMY 4WD (CONT'D)						
LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES	
4" Front / 4" Rear Front Leaf Spring Rear Leaf Spring 1/2 Ton Vehicle Only Kit #113H 23CK7711	2	001401	Front Spring	98224620 FOX 2.0 Front Gas Shock (2 req'd)	5	
	1	011002	Front Box Kit	98224639 FOX 2.0 Rear Gas Shock (2 req'd)	6	
	2	001409	Rear Spring 52" Eye to Eye	Page 146 Steering Stabilizers		
	1	011009	Rear Box Kit	081402 2" Adjustable Drag Link		
	1	081401	Steering Arm	121000 Transfer Case Drop Kit		
	2	85620	Front NX2 Shock	121001 GM Frame Support Kit		
	2	85639	Rear NX2 Shock	121004 Front Spring Eye Bolts		
4" Front / 4" Rear Front Leaf Spring Rear Leaf Spring 3/4 Ton Vehicle Only Kit #114H 75CK9711	2	001401	Front Spring	121009 Rear Spring Eye Bolts		
	1	011002	Front Box Kit	121003 Front Anti-Sway Bar Drop Kit		
	2	001408	Rear Spring 56" Eye to Eye			
	4	4032	5/8 x 3-5/8 x 10" Rd U-bolts			
	1	081401	Steering Arm			
	2	85620	Front NX2 Shock			
	2	85639	Rear NX2 Shock			
6" Front / 6" Rear Front Leaf Spring Rear Block Kit and Add-A-Leaf 1/2 Ton Kit #115H 3/4 Ton Kit #116H 90CK749	2	001551	Front Spring	98224650 FOX 2.0 Front Gas Shock (2 req'd)	3	
	1	011002	Front Box Kit	98224639 FOX 2.0 Rear Gas Shock (2 req'd)	5	
	1	119157	Long Rear Add-a-leaf	Page 146 Steering Stabilizers	6	
	1	011409	1/2 Ton Rear 4" Box Kit or	081402 2" Adjustable Drag Link		
	1	011408	3/4 Ton Rear 4" Box Kit	121001 GM Frame Support Kit		
	1	081401	Steering Arm	121632 Front Anti-Sway Bar Links		
	1	121000	Transfer Case Drop Kit	119158 Short Rear Add-a-leaf (use in place of 119157)		
6" Front / 6" Rear Front Leaf Spring Rear Leaf Spring 1/2 Ton Vehicle Only Kit #117H 90CK1031	2	001551	Front Spring	121004 Front Spring Eye Bolts		
	1	011002	Front Box Kit	121009 Rear Spring Eye Bolts		
	2	001609	Rear Springs 52" Eye to Eye			
	1	011009	Rear Box Kit			
	1	081401	Steering Arm			
	1	121000	Transfer Case Drop			
	2	85650	Front NX2 Shock			
6" Front / 6" Rear Front Leaf Spring Rear Leaf Spring 3/4 Ton Vehicle Only Kit #118H 22CK3331	2	001551	Front Spring			
	1	011002	Front Box Kit			
	2	001608	Rear Spring 56" Eye to Eye			
	4	4032	5/8 x 3-5/8 x 10" Rd U-bolts			
	1	081401	Steering Arm			
	1	121000	Transfer Case Drop Kit			
	2	85650	Front NX2 Shock			
8" Front / 8" Rear Front Leaf Spring Rear Leaf Spring 1/2 Ton Vehicle Only Kit #119H 91CK0041	2	001801	Front Spring	98224650 FOX 2.0 Front Gas Shock (2 req'd)	1	
	1	011002	Front Box Kit	98224639 FOX 2.0 Rear Gas Shock (2 req'd)	2	
	2	001809	Rear Spring 52" Eye to Eye	Page 146 Steering Stabilizers	3	
	1	011009	Rear Box Kit	081402 2" Adjustable Drag Link	4	
	1	081401	Steering Arm	121001 GM Frame Support Brackets	5	
	1	082501	3" Steering Block	121004 Front Spring Eye Bolts	6	
	1	121000	Transfer Case Drop Kit	121009 Rear Spring Eye Bolts		
8" Front / 8" Rear Front Leaf Spring Rear Leaf Spring & 2" Block Kit 3/4 Ton Vehicle Only Kit #120H 52CK4741	1	011208	Rear 2" Box Kit			
	1	081401	Steering Arm			
	1	082501	3" Steering Block			
	1	121000	Transfer Case Drop Kit			
	1	121632	Anti-Sway Bar Links			
	2	85650	Front NX2 Shock			
	2	85639	Rear NX2 Shock			



#121632 - Anti-Sway Bar Links



Vehicle Specs: 8" Lift Kit - 38" Beggars - 16" Steel Wheels

- Notes
- Both driveshafts may need to be lengthened.
 - Aftermarket extended brake lines required for installation.
 - Exhaust modification may be required to clear front driveshaft.
 - Emergency brake cable extension kit may be required.
 - #001408 and #001608 come with OE style rubber bushings installed.
 - For rear spring applications, you must measure the eye to eye dimension of the original springs before ordering lifted springs. Not all 3/4 ton rear springs are 56". Not all 1/2 ton rear springs are 52".

1969-1972 CHEVROLET BLAZER 4WD / GMC JIMMY 4WD

1969-1972 CHEVROLET BLAZER 4WD / GMC JIMMY 4WD

LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES	
4" Front / 4" Rear	2	001402	Front Spring	98224620	FOX 2.0 Front Gas Shock (2 req'd) FOX 2.0 Rear Gas Shock (2 req'd) Page 146 Steering Stabilizers 081402 2" Adjustable Drag Link 121000 Transfer Case Drop Kit 119158 Short Rear Add-a-leaf (use in place of 119157) 121004 Front Spring Eye Bolts 121009 Rear Spring Eye Bolts 121003 Anti-Sway Bar Drop Kit	1
Front Leaf Spring	1	011002	Front Box Kit	98224660		
Rear Block Kit	1	011407	Rear Box Kit			
Kit #104H 16CK457	1	081401	Steering Arm			
	2	85620	Front NX2 Shock			
	2	85660	Rear NX2 Shock			
4" Front / 4" Rear	2	001402	Front Spring			
Front Leaf Spring	1	011002	Front Box Kit			
Rear Block Kit and Add-A-Leaf	1	119157	Long Rear Add-a-leaf	121004		
	1	011307	1/2 ton Rear 3" Box Kit	121009		
Kit #105H 57CK928	1	081401	Steering Arm	121003		
	2	85620	Front NX2 Shock			
	2	85660	Rear NX2 Shock			
4" Front / 4" Rear	2	001402	Front Spring			
Front Leaf Spring	1	011002	Front Box Kit			
Rear Leaf Spring	2	001609	Rear Spring 52" Eye to Eye			
1/2 Ton Vehicle Only	1	011007	Rear Box Kit			
Kit #106H 50CK5811	1	081401	Steering Arm			
	2	85620	Front NX2 Shock			
	2	85660	Rear NX2 Shock			



Notes

- Vehicle must have 3-bolt steering knuckle.



1969-1972 CHEVROLET/GMC K10/K15 & K20/K25 TRUCK

1969-1972 CHEVROLET/GMC K10/K15 (1/2-TON) TRUCK 4WD & K20/K25 (3/4-TON) TRUCK 4WD

LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES	
4" Front / 4" Rear	2	001402	Front Spring	98224620	FOX 2.0 Front Gas Shock (2 req'd) FOX 2.0 Rear Gas Shock (2 req'd) Page 146 Steering Stabilizers 081402 2" Adjustable Drag Link 121000 Transfer Case Drop Kit 119158 Short Rear Add-a-leaf (use in place of 119157) 121004 Front Spring Eye Bolts 121009 Rear Spring Eye Bolts 121003 Anti-Sway Bar Drop Kit	1
Front Leaf Spring	1	011002	Front Box Kit	98224660		
Rear Block Kit	1	011407	Rear 4" Box Kit			
Kit #100H 16CK457	1	081401	Steering Arm			
	2	85620	Front NX2 Shock			
	2	85660	Rear NX2 Shock			
4" Front / 4" Rear	2	001402	Front Spring			
Front Leaf Spring	1	011002	Front Box Kit	121004		
Rear Block Kit and Add-A-Leaf	1	119157	Long Rear Add-a-leaf	121009		
	1	011307	1/2 Ton Rear 3" Box Kit	121003		
Kit #101H 57CK928	1	081401	Steering Arm			
	2	85620	Front NX2 Shock			
	2	85660	Rear NX2 Shock			
4" Front / 4" Rear	2	001402	Front Spring			
Front Leaf Spring	1	011002	Front Box Kit			
Rear Leaf Spring	2	001409	Rear Spring 52" Eye to Eye			
1/2 Ton Vehicle Only	1	011007	Rear Box Kit			
Kit #102H 47CK0811	1	081401	Steering Arm			
	2	85620	Front NX2 Shock			
	2	85660	Rear NX2 Shock			
4" Front / 4" Rear	2	001402	Front Spring			
Front Leaf Spring	1	011002	Front Box Kit			
Rear Leaf Spring	2	001408	Rear Spring 56" Eye to Eye			
3/4 Ton Vehicle Only	4	4036	9/16 x 2-1/2 x 8-3/4" Sq U-bolts			
Kit #103H 69CK7711	1	081401	Steering Arm			
	2	85620	Front NX2 Shock			
	2	85660	Rear NX2 Shock			



Notes

- #001408 and #001608 come with OE style rubber bushings installed.
- For rear spring applications, you must measure the eye to eye dimension of the original springs before ordering lifted springs. Not all 3/4 ton rear springs are 56". Not all 1/2 ton rear springs are 52".