



FORD



# FORD RANGER & BRONCO II 4WD

**\*WILL ALSO WORK ON 1994-97 MAZDA TRUCK**



#518H - 6" Kit Shown  
w/ Optional FOX 2.0 Shocks

## 4" & 6" KIT FEATURES

- Pro-Ride Coil Springs in 4" and 6" heights over stock
- Radius arm drop, axle pivot, bump stop relocation, and anti-sway bar drop brackets included
- Pitman arm (PS) included in box kit to correct steering linkage angles
- Blocks & Add-A-Leafs included in box kit to increase load carrying capacity

1983-1997 FORD RANGER 4WD W/ POWER STEERING • 1982-91 FORD BRONCO II 4WD W/ POWER STEERING						
LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES	
<b>4" Front / 3.5" Rear</b>	1	033402	Coil Spring Kit	55337	Single Steering Stabilizer Mounting Kit	1
Front Coil Spring & Bracket Kit	1	013400	Front & Rear Kit (Complete)	85402	Single NX2 Steering Stabilizer	2
Rear Block Kit & Add-A-Leaf	2	85800	Front NX2 Shock	55324	Dual Steering Stabilizer Mounting Kit	3
<b>Ranger Kit #516H</b>	2	85829	Rear NX2 Shock (Ranger) or	85402	Dual NX2 Steering Stabilizer	4
<b>Bronco Kit #517H</b>	2	85650	Rear NX2 Shock (Bronco II)	129101	Alignment Cam (2 req'd) or	5
01FK818				129102	Alignment Cam (2 req'd)	
<b>6" Front / 5.5" Rear</b>	1	033602	Coil Spring Kit	123401	Rear Anti-Sway Bar Drop Kit	
Front Coil Spring & Bracket Kit	1	013600	Front & Rear Kit (Complete)			
Rear Block Kit & Add-A-Leaf	2	85820	Front NX2 Shock			
<b>Kit #518H</b> 60FK868	2	85829	Rear NX2 Shock			

#123401 -  
Anti-Sway Bar Drop Kit



Vehicles equipped with STX 1.5" factory lift will not achieve stated height.

**Notes**

1. Front end alignment required. Alignment cams may be required. See page 155.
2. Extra cab models may not achieve stated lift.
3. Models equipped with 2 piece driveshaft require lowering of carrier bearing crossmember.
4. Bronco II 1985-90 models with CV joint type drive shaft must convert to exposed joint shaft.
5. Will not fit hybrid model, 2WD, or diesel models.



Vehicle Specs: 6" Lift Kit - 33" TrXus MT - 15" AR Baja



# 2010-2014 FORD F150 RAPTOR



**HC**  
HIGH CLEARANCE

#1508H - 4" kit



## 4" LIFT SYSTEM

We determined in testing that the 4" lift height allows for the best use of the full range of suspension travel allotted by the factory suspension components. These factory components include the high-end Fox Racing Shox at all 4 corners of the vehicle. These internal bypass coilovers (front) and shocks (rear) are what really make a Raptor the truck it is. By properly relocating these coilovers and shocks, we are able to maintain that amazing performance that makes the Raptor a true offroad machine. The front coilovers are relocated with a heavy-duty spacer at the frame mount while the rear shocks are relocated at the axle with bolt-on brackets. Other Raptor specific items included in the kit are front brake line relocation brackets that maintain adequate brake line slack for the massive amount of wheel travel available. In addition to the brake line brackets, Raptor specific front skid plate relocation is included to maintain the signature Raptor front aluminum skid plate and have it blend cleanly into the BDS front crossmember.

Out back, in addition to the rear shock relocation brackets, is a 4" block and u-bolt kit. The 4" block replaces the factory block to net a level stance and includes a bump stop wing for proper bump stop engagement offroad.



Vehicle Specs: 4" Lift Kit - 37" Mickey Thompson ATZ P3 - 20" Eagle Alloy 050

### 2014 FORD F150 RAPTOR

LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES
<b>4" Front / 4" Rear</b>	1	023625	Steering Knuckle Box Kit (DS)		1
IFS System	1	023626	Steering Knuckle Box Kit (PS)		2
Rear Block Kit	1	023622	Front Box Kit 1of2		3
<b>Kit #1508H</b> 19FK9271	1	023623	Front Box Kit 2of2		
	1	023406	4" Raptor Box Kit		

### 2010-2013 FORD F150 RAPTOR

LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES
<b>4" Front / 4" Rear</b>	1	023625	Steering Knuckle Box Kit (DS)		1
IFS System	1	023626	Steering Knuckle Box Kit (PS)		2
Rear Block Kit	1	023622	Front Box Kit 1of2		3
<b>Kit #1511H</b> 19FK9271	1	023623	Front Box Kit 2of2		
	1	023407	4" Raptor Box Kit		

**Notes:**

1. Requires frame bracket modification and welding
2. Stock wheels cannot be installed
3. 37x12.50 on 18x9 w/5" BS - check for proper tie rod end clearance





# 2015-2016 FORD F150 4WD

## 4" AND 6" DSC COILOVER SYSTEM

- FOX 2.5 Factory Series Coilover w/ DSC Adjusters
- One piece, high clearance, laser cut crossmembers
- Differential skidplate and offroad protection
- Improves on-road/off-road performance & handling
- FMVSS No.126 (ESC System) Compliant



### FOX DSC ADJUSTER (DUAL SPEED COMPRESSION)

Adds 12-levels of high speed and 10-levels of low speed adjustment to dial in ride quality.



#1507FDSC - 4" kit w/ FOX 2.5 DSC Coilovers



2015-2016 FORD F150 4WD							
LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES		NOTES	
<b>2.5" Front / 0" Rear</b> Upper Strut Mount Kit #572H 66FK641	1	013250	Front Leveling Kit	85651	Rear NX2 Shock (2 req'd) or	1	
				98224651	<b>FOX 2.0 Rear Gas Shock (2 req'd)</b>	2	
<b>4" Front / 3" Rear</b> IFS w/ Strut Spacer Rear Block Kit Kit #1507H 75FK2581 <b>FOX Performance C/O System</b> Kit #1507F 39FK4753 <b>FOX Performance DSC C/O System</b> Kit #1507FDSC 39FK4983	1	023634	Front Box Kit - Knuckle - DRV	98224828	<b>FOX 2.0 Rear Gas Shock (2 req'd)</b>	3	
	1	023635	Front Box Kit - Knuckle - PASS	122405		Carrier Bearing Drop Kit	4
	1	023642	Front Box Kit 1of2			5	
	1	023643	Front Box Kit 2of2			6	
	1	013429	4" Rear Block Kit				
	1	023404	4" Strut Spacer Box Kit or				
	1	88302134	<b>FOX 2.5 Coilovers or</b>				
	1	88306134	<b>FOX 2.5 DSC Coilovers</b>				
	2	85828	Rear NX2 Shock or				
	2	98224828	<b>FOX 2.0 Rear Gas Shock</b>				
<b>6" Front / 4" Rear</b> IFS w/ Strut Spacer Rear Block Kit Kit #1506H 52FK5681 <b>FOX Performance C/O System</b> Kit #1506F 56FK1863 <b>FOX Performance DSC C/O System</b> Kit #1506FDSC 39FK4983	1	023634	Front Box Kit - Knuckle - DRV	98224760	<b>FOX 2.0 Rear Gas Shocks (2 req'd)</b>		
	1	023635	Front Box Kit - Knuckle - PASS	013429		4" Rear Block	
	1	023642	Front Box Kit 1of2	122405	Carrier Bearing Drop Kit		
	1	023643	Front Box Kit 2of2				
	1	013529	5" Rear Block Kit				
	1	023605	6" Strut Spacer Box Kit or				
	1	88302114	<b>FOX Coilover Kit or</b>				
	1	88306114	<b>FOX 2.5 DSC Coilovers</b>				
	2	85760	Rear NX2 Shock or				
	2	98224760	<b>FOX 2.0 Rear Gas Shock</b>				

**Notes:**

1. Strut Compressor required for installation.
2. 1" Rear block kit is available in the accessories.
3. 18" wheels with 5-5.5" total backspacing should be test fir prior to mounting tire to ensure proper clearance to BDS steering knuckle.
4. 18" or larger diameter wheels required. Stock 17" & 18" wheels cannot be reinstalled. Stock 20" wheels can be used with up to a 305/60-20 tires.
5. For a level to tail low appearance use #023416 with Kit#1502H or use #013429 with Kit#1503H. Block kits replace factory 1-1/4" block.
6. Models with a 2-piece rear driveshaft may require carrier bearing drop shim kit #122405



Vehicle Specs: 6" DSC C/O Lift Kit - 35" Dick Cepek FC-II - 20" Eagle Alloy 050

CHEVROLET/GMC  
DODGE  
FORD  
JEEP  
SUZUKI  
TOYOTA  
POSI-LOCK  
SHOCKS/STABILIZERS  
ACCESSORIES  
APPRECIATION PROMOTIONAL  
PRODUCT SPECS  
VEHICLE SPECS



# 2014 FORD F150 4WD



Kit #572H

## 2.5" UPPER STRUT MOUNTS

- Top and Pre-load Spacer
- 1" Rear Block Kit Available
- Improves performance and handling
- Doesn't max out upper ball joint
- Retains OEM range of motion



#1503H - 6" Kit Shown w/ Optional FOX 2.0 Shocks

2014 FORD F150 4WD						
LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES		NOTES
<b>2.5" Front / 0" Rear</b> Upper Strut Mount Kit #572H 66FK641	1	013250	Front Leveling Kit	85651	Rear NX2 Shock (2 req'd) or	1
				98224651	<b>FOX 2.0 Rear Shock (2 req'd)</b>	2
<b>4" Front / 2-1/2" Rear</b> IFS w/ Strut Spacer Rear Block Kit Kit #1502H 09FK9961	1	023622	Front Box Kit 1 of 4	98224828	<b>FOX 2.0 Rear Gas Shock (2 req'd)</b>	3
	1	023623	Front Box Kit 2 of 4	023416	2" Rear Block	4
	1	023625	Front Box Kit 3 of 4	123018	E-brake Bracket	5
	1	023626	Front Box Kit 4 of 4			6
	1	023425	Front Strut Spacer/ Rear Block Box Kit			7
	2	85828	Rear NX2 Shock			
<b>6" Front / 4" Rear</b> IFS w/ Strut Spacer Rear Block Kit Kit #1503H 25FK0271 <b>FOX Performance C/O System</b> Kit #1503F 29FK6353 <b>FOX Performance DSC C/O System</b> Kit #1503FDSC 02FK0573	1	023625	Front Box Kit 1 of 4	013429	4" Rear Block	3
	1	023626	Front Box Kit 2 of 4	123018	E-brake Bracket	4
	1	023622	Front Box Kit 3 of 4	122405	Carrier Bearing Drop Kit	5
	1	023623	Front Box Kit 4 of 4	123609	Rear Drive Shaft Spacer	6
	1	013529	Rear Box Kit			7
	1	023605	Front Strut Spacer Kit or			8
	1	88302114	<b>FOX 2.5 Coilover Kit</b>			
	1	88306114	<b>FOX 2.5 DSC Coilovers</b>			
2	85760	Rear NX2 Shock or				
2	98224760	<b>FOX 2.0 Rear Gas Shock</b>				

### Notes

1. Strut Compressor required for installation.
2. 1" Rear block kit is available in the accessories.
3. Requires frame bracket modification and welding.
4. 18" wheels with 5-5.5" total backspacing should be test fit prior to mounting tire to ensure proper clearance to BDS steering knuckle.
5. 18" or larger diameter wheels required. Stock 17" & 18" wheels cannot be reinstalled. Stock 20" wheels can be used with up to a 305/60/20 tire.
6. E-brake bracket required for factory powersteps (123018).
7. For a level to tail low appearance use #023416 with Kit#1502H or use #013429 with Kit#1503H. Block kits replace factory 1-1/4" block.
8. Models with a 2-piece rear driveshaft may require carrier bearing drop shim kit #122405



Vehicle Specs: 6" Lift Kit - 35" Dick Cepek A/T - 18" WORX Beast




# 2014 FORD F150 2WD

## 4" & 6" KIT FEATURES

- One Piece High Clearance Crossmember
- Ductile Iron Steering Knuckles
- Upper strut mount spacers or Fox 2.5 coilovers
- Crossmember braces for subframe rigidity
- Offset pin block kit to recenter rear axle

## 2.5" UPPER STRUT MOUNTS

- Top and Pre-load Spacer
- 1" Rear Block Kit Available
- Improves performance and handling
- Doesn't max out upper ball joint
- Retains OEM range of motion

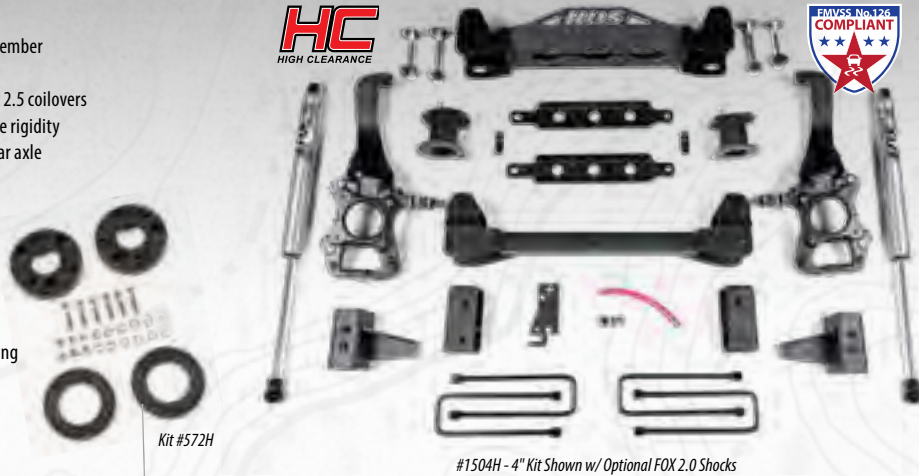

#1504H - 4" Kit Shown w/ Optional FOX 2.0 Shocks



Vehicle Specs: 6" Performance System - 35" Toyo M/Ts - 22x12 Fuel Mavericks



FOX PERFORMANCE COILOVER SYSTEM

2014 FORD F150 2WD							
LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES		NOTES	
<b>2.5" Front / 0" Rear</b> Upper Strut Mount Kit #572H 66FK641	1	013250	Front Leveling Kit	85651	Rear NX2 Shock (2 req'd) or FOX 2.0 Rear Shock (2 req'd)	1	
				98224651	1" Rear Block and U-Bolt		
<b>4" Front / 2-1/2" Rear</b> IFS w/ Strut Spacer Rear Block Kit Kit #1504H 20FK6951	1	023625	Front Box Kit 1 of 4	98224828	FOX 2.0 Rear Gas Shock (2 req'd)	2	
	1	023626	Front Box Kit 2 of 4	023416	2" Rear Block	3	
	1	023624	Front Box Kit 3 of 4	123018	E-brake Bracket	4	
	1	023425	Front Strut Spacer/ Rear Block Box Kit				
	2	85828	Rear NX2 Shock				
<b>6" Front / 4" Rear</b> IFS w/ Strut Spacer Rear Block Kit Kit #1505H 46FK6161 FOX Performance C/O System Kit #1505F 40FK3343	1	023625	Front Box Kit 1 of 4	98224760	FOX 2.0 Rear Gas Shock (2 req'd)	2	
	1	023626	Front Box Kit 2 of 4	013429	4" Rear Block	3	
	1	023624	Front Box Kit 3 of 4	123018	E-brake Bracket	4	
	1	013529	Rear Box Kit	122405	Carrier Bearing Drop Kit	5	
	1	023605 or 88302114	Front Strut Spacer Kit or FOX 2.5 Coilover Kit	123609	Rear Drive Shaft Spacer		
	1	88302114	FOX 2.5 Coilover Kit				
	2	85760 or 98224760	Rear NX2 Shock or FOX 2.0 Rear Gas Shock				



- Notes
1. Strut compressor required for installation.
  2. 18" or larger diameter wheels required. Stock 17" & 18" wheels cannot be reinstalled. Stock 20" wheels can be used with up to a 305/60-20 tires.
  3. E-brake bracket required for factory powersteps (123018)
  4. For a level to tail low appearance use #023416 with Kit#1504H or use #013429 with Kit#1505H. Block kits replace factory 1-1/4" block.
  5. Models with a 2-piece rear driveshaft may require carrier bearing drop shim kit #122405



# 2009-2013 FORD F150 4WD



Vehicle Specs: 2.5" Lift Kit - 33" Toyo AT2 - 20" XD



**HC**  
HIGH CLEARANCE



#573F - 6" kit w/ FOX 2.5 Coilovers

**FOX** PERFORMANCE  
COILOVER SYSTEM

2009-2013 FORD F150 4WD						
LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES		NOTES
<b>2.5" Front / 0" Rear</b> Upper Strut Mount Kit #572H 66FK641	1	013250	Front Leveling Kit	85651 98224651 013109	Rear NX2 Shock (2 req'd) or <b>FOX 2.0 Rear Shock (2 req'd)</b> 1" Rear Block and U-Bolt	1
<b>4" Front / 2-1/2" Rear</b> IFS w/ Strut Spacer Rear Block Kit Kit #598H 09FK9961	1	023625	Front Box Kit 1 of 4	98224828	<b>FOX 2.0 Rear Gas Shock (2 req'd)</b>	2
	1	023626	Front Box Kit 2 of 4	023415	2" Rear Block	3
	1	023622	Front Box Kit 3 of 4	123018	E-brake Bracket	4
	1	023623	Front Box Kit 4 of 4			5
	1	023405	Front Strut Spacer/ Rear Block Box Kit			7
	2	85828	Rear NX2 Shock			
	<b>6" Front / 4" Rear</b> IFS w/ Struts Rear Block Kit Kit #573H 70FK9091 <b>FOX Performance C/O System</b> Kit #573F 29FK6353	1	023625	Front Box Kit 1 of 4	98224760	<b>FOX 2.0 Rear Gas Shock (2 req'd)</b>
1	023626	Front Box Kit 2 of 4	013429	4" Rear Block	2	
1	023622	Front Box Kit 3 of 4	123018	E-brake Bracket	3	
1	023623	Front Box Kit 4 of 4	122405	Carrier Bearing Drop Kit	4	
1	013529	Rear Box Kit	123609	Rear Drive Shaft Spacer	5	
1	98163 or	Front Strut Kit or			6	
1	88302063	<b>FOX 2.5 Coilover Kit</b>			7	
2	85760 or	Rear NX2 Shock or				
2	98224760	<b>FOX 2.0 Rear Gas Shock</b>				

#### Notes

1. Strut compressor required for installation.
2. Requires frame bracket modification and welding.
3. 18" or larger diameter wheels required. Stock 17" & 18" wheels cannot be reinstalled. Stock 20" wheels can be used with up to a 305/60-20 tires.
4. E-brake bracket required for factory powersteps (123018)
5. For a level to tail low appearance use #023415 with Kit#598H or use #013429 with Kit#573H. Block kits replace factory 1-1/4" block.
6. Models with a 2-piece rear driveshaft may require carrier bearing drop shim kit #122405
7. Early 2009 models may require brake assembly modification



Vehicle Specs: 4" Lift Kit - 35" A/T Tires - 20" BMF Wheels



# 2009-2013 FORD F150 2WD



Kit #572H

#577H - 6" Kit Shown w/ Optional FOX 2.0 Shocks

## 6" KIT FEATURES

- Custom valved gas struts included
- One piece heavy duty crossmembers
- CNC machined steering knuckles
- Alignment cam bolts



## 2.5" UPPER STRUT MOUNTS

- Top and Pre-load Spacer
- 1" Rear Block Kit Available
- Improves performance and handling
- Doesn't max out upper ball joint
- Retains OEM range of motion



Vehicle Specs: 6" Lift Kit - 35" Toyo M/T - 20" BMF F.I.T.E.

### 2009-2013 FORD F150 2WD

LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES
<b>2.5" Front / 0" Rear</b> Upper Strut Mounts <b>Kit #572H 66FK641</b>	1	013250	Front Leveling Kit	85651 Rear NX2 Shock (2 req'd) or 98224651 FOX 2.0 Rear Gas Shock (2 req'd) 013109 1" Rear Block and U-Bolt	1
<b>4" Front / 2-1/2" Rear</b> IFS w/ Strut Spacer Rear Block Kit <b>Kit#599H 20FK6951</b>	1	023625	Front Box Kit 1 of 3	98224828 FOX 2.0 Rear Gas Shock (2 req'd)	2
	1	023626	Front Box Kit 2 of 3	123018 E-Brake Relocation Bracket	3
	1	023624	Front Box Kit 3 of 3	122405 Carrier Bearing Drop Kit	4
	1	023405	Front Strut Spacer/ Rear Block Kit		6
<b>6" Front / 4" Rear</b> IFS w/ Struts Rear Block Kit <b>Kit# 577H 91FK5081</b> <b>FOX Performance C/O System</b> <b>Kit# 577F 40FK3343</b>	2	85828	Rear NX2 Shock		
	1	023625	Front Box Kit 1 of 3	98224760 FOX 2.0 Rear Gas Shock (2 req'd)	2
	1	023626	Front Box Kit 2 of 3	013429 4" Rear Block	3
	1	023624	Front Box Kit 3 of 3	123018 E-Brake Relocation Bracket	4
	1	013529	Rear Box Kit	122405 Carrier Bearing Drop Kit	5
	1	98163 or 88302063	Front Strut Kit or FOX 2.5 Coilover Kit	123609 Rear Drive Shaft Spacer	6
2	85760 or 98224760	Rear NX2 Shock or FOX 2.0 Rear Gas Shock			

#### Notes

1. Strut compressor required for installation.
2. 18" or larger diameter wheels required. Stock 17" & 18" wheels cannot be reinstalled. Stock 20" wheels can be used with up to a 305/60-20 tires.
3. E-brake bracket required for factory powersteps (123018)
4. For a level to tail low appearance use #023415 with Kit#599H or use #013429 with Kit#577H. Block kits replace factory 1-1/4" block.
5. Models with a 2-piece rear driveshaft may require carrier bearing drop shim kit #122405
6. Early 2009 models may require brake assembly modification.






# 2004-2008 FORD F150 4WD



Vehicle Specs: 6" Lift Kit - 35" M/T ATZ - 18" Eagle Alloy 187



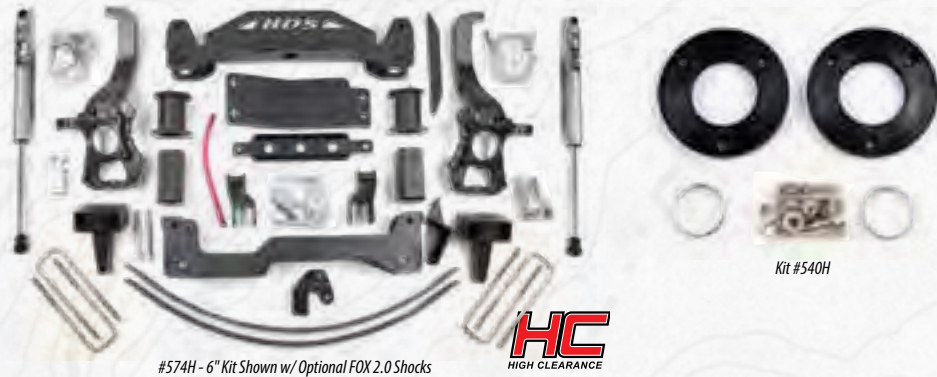

## 4" & 6" KIT FEATURES

- High Clearance Crossmembers
- Differential Skid Plate Included
- Stainless Steel Brake Lines
- CNC Machined Steering Knuckles
- Rear Leaf Spring Option
- Upper Strut Spacers



#574H - 6" Kit Shown w/ Optional FOX 2.0 Shocks



2004-2008 FORD F150 4WD w/ STRUT SPACER							
LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES		NOTES	
<b>2" Front / 0" Rear</b> Upper Strut Mount Kit #540H 54FK231	1	013200	Front Leveling Kit	55651	Rear NX2 Shock <b>or</b> FOX 2.0 Rear Gas Shocks (2 req'd)	5	7 8
				98224651			
 <b>4" Front / 2" Rear</b> IFS w/ Strut Spacer Rear Block Kit Kit #576H 50FK2502	1	023630	Front Box Kit 1 of 4	98224828	FOX 2.0 Rear Gas Shock (2 req'd)	1	
	1	023631	Front Box Kit 2 of 4	55312	Single Steering Stabilizer Mounting Kit	2	
	1	023432	Front Box Kit 3 of 4	85402	Single NX2 Steering Stabilizer (1 Req'd)	3	
	1	023633	Front Box Kit 4 of 4	55367	Dual Steering Stabilizer Mounting Kit	4	
	1	013209	Rear Block Kit	85402	Dual NX2 Steering Stabilizer (2 req'd)	7	
	2	85828	Rear NX2 Shock	123609	Rear Driveshaft Spacer		
 <b>6" Front / 5.5" Rear</b> IFS w/ Strut Spacer Rear Block Kit & Add-A-Leaf Kit #574H 49FK7412	1	023630	Box Kit 1 of 4	98224760	FOX 2.0 Rear Gas Shock (2 req'd)	1	
	1	023631	Box Kit 2 of 4	55312	Single Steering Stabilizer Mounting Kit	2	
	1	023632	Box Kit 3 of 4	85402	Single NX2 Steering Stabilizer (1 Req'd)	3	
	1	023633	Box Kit 4 of 4	55367	Dual Steering Stabilizer Mounting Kit	6	
	1	113219	Add-A-Leaf	85402	Dual NX2 Steering Stabilizer (2 req'd)	7	
	1	013507	Rear Block Kit	123609	Rear Driveshaft Spacer		
	2	85760	Rear NX2 Shock				
 <b>6" Front / 5.5" Rear</b> IFS w/ Strut Spacer Rear Leaf Spring Kit #575H 65FK6362	1	023630	Box Kit 1 of 4				
	1	023631	Box Kit 2 of 4				
	1	023632	Box Kit 3 of 4				
	1	023633	Box Kit 4 of 4				
	2	003509	Rear Leaf Spring				
	1	013508	Rear Box Kit				
2	85760	Rear NX2 Shock					

### Notes

1. Supercrew models with 5.5' bed do not require the add-a-leaf 113219.
2. All wheel drive models will require front driveshaft modification.
3. Stock 17's will not fit back on vehicle. Stock 18's & 20's do fit with stock tires.
4. Rear leaf springs 003509 may be used by removing the factory block.
5. This system also fits 2WD models.
6. Although unusual, a 123609 rear driveshaft spacer may be required.
7. Will not fit HD models (7 lug).
8. Strut compressor required for installation.

CHEVROLET/GMC  
DODGE  
FORD  
JEEP  
SUZUKI  
TOYOTA  
POSI-LOK  
SHOCKS/STEERING STABILIZERS  
ACCESSORIES  
APPAREL & PROMOTIONAL  
PRODUCT SPECS  
VEHICLE SPECS








# 2004-2008 FORD F150 4WD




#569H - 8" Kit Shown w/ Optional FOX 2.0 Shocks

## 6" & 8" KIT FEATURES

- CNC machined steering knuckles maintain factory steering angles
- One piece front and rear crossmember for increased rigidity
- Front differential skid plate and lateral compression struts included for off-road protection
- Front stainless steel Kevlar lined brake lines included
- No track width change

2004-2008 FORD F150 4WD WITH REPLACEMENT STRUT							
LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES		
 <b>6" Front / 5.5" Rear</b> IFS System w/strut Rear Block Kit & Add-A-Leaf <b>Kit #570H 68FK8662</b>	1	023610	Front Box Kit 1 of 4	98224760	 FOX 2.0 Rear Gas Shock (2 req'd) Single Steering Stabilizer Mounting Kit Single NX2 Steering Stabilizer (1 req'd) Dual Steering Stabilizer Mounting Kit Dual NX2 Steering Stabilizer (2 req'd) Rear Driveshaft Spacer - 8" kit	1	
	1	023611	Front Box Kit 2 of 4	55338		3	
	1	023612	Front Box Kit 3 of 4	85402		4	
	1	023615	Front Box Kit 4 of 4	55339		5	
	1	113219	Add-A-Leaf Kit	85402		6	
	1	013507	Rear Block Kit	123609		7	
	1	98162	Front Strut Kit				
	2	85760	Rear NX2 Shock				
	 <b>6" Front / 5.5" Rear</b> IFS System w/strut Rear Leaf Spring <b>Kit #571H 84FK7513</b>	1	023610	Front Box Kit 1 of 4			3
		1	023611	Front Box Kit 2 of 4			4
1		023612	Front Box Kit 3 of 4		5		
1		023615	Front Box Kit 4 of 4		6		
2		003509	Rear Leaf Spring		7		
1		013508	Rear Box Kit				
1		98162	Front Gas Strut Kit				
 <b>8" Front / 5.5" Rear</b> IFS System w/ Strut Rear Block Kit & Add-a-leaf <b>Kit #568H 71FK0772</b>	1	023610	Front Box Kit 1 of 4		3		
	1	023611	Front Box Kit 2 of 4		4		
	1	023612	Front Box Kit 3 of 4		5		
	1	023615	Front Box Kit 4 of 4		6		
	1	113219	Rear Add-a-Leaf		7		
	1	013507	Rear Block Kit				
	1	98180	Front Gas Strut Kit				
 <b>8" Front / 5.5" Rear</b> IFS System w/ Strut Rear Leaf Spring <b>Kit #569H 97FK8523</b>	1	023610	Front Box Kit 1 of 4		3		
	1	023611	Front Box Kit 2 of 4		4		
	1	023612	Front Box Kit 3 of 4		5		
	1	023615	Front Box Kit 4 of 4		6		
	2	003509	Rear Leaf Spring		7		
	1	013508	Rear Box Kit				
	1	98180	Front Gas Strut Kit				
	2	85760	Rear NX2 Shock				

**Notes**  
 1. Supercrew models with 5.5' bed do not require the add-a-leaf 113219.  
 2. This system also fits 2WD models.  
 3. All wheel drive models may require driveshaft modification.  
 4. Stock 17's will not fit back on vehicle. Stock 18's & 20's do fit with stock tires.  
 5. Although unusual, a rear driveshaft spacer 123609 may be required.  
 6. Will not fit HD models (7-lug).  
 7. Strut compressor required for installation.

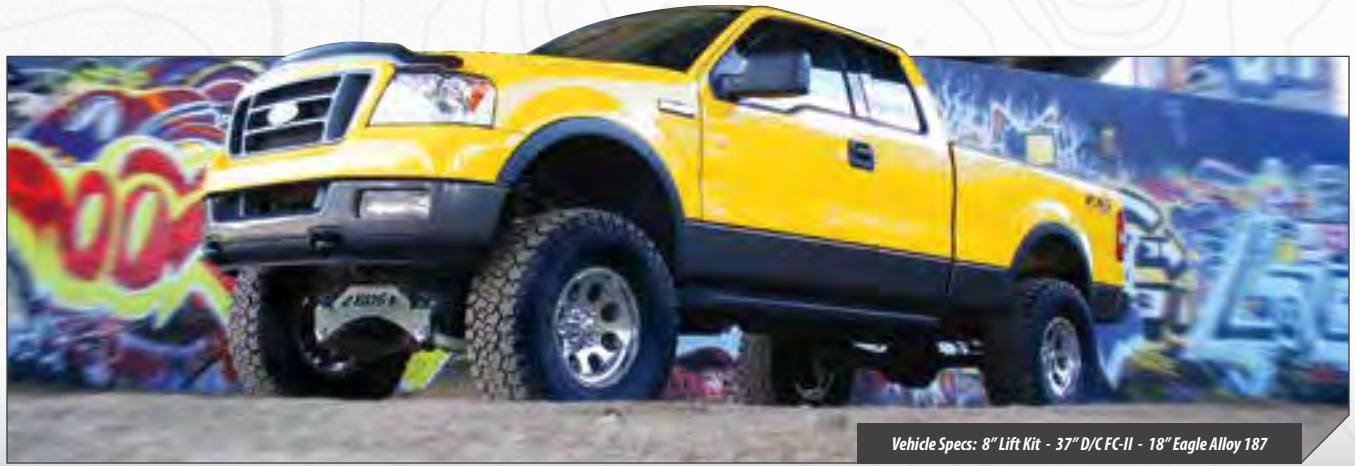

Vehicle Specs: 8" Lift Kit - 37" D/CFC-II - 18" Eagle Alloy 187



# 1997-2003 FORD F150 4WD

## 6" KIT FEATURES

- Complete bolt on system – no welding required
- No drive shaft replacement required
- CNC machined steering knuckles maintain factory steering geometry
- Torsion bar drop brackets with the BDS logo
- Longer front sway bar links included
- Heavy-duty, one-piece front and rear main crossmembers




#513H - 6" Kit Shown w/ Optional FOX 2.0 Shocks



Vehicle Specs: 6" Lift Kit - 35" BFG A/T - 16" Eagle Alloy 186

### 1997-2003 FORD F150 TRUCK 4WD

LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES
<b>6" Front / 5.5" Rear</b>	1	023600	Front Box Kit 1 of 4	98224804 <b>FOX</b> 2.0 Front Gas Shock (2 req'd)	1
IFS System	1	023601	Front Box Kit 2 of 4	98224860 <b>FOX</b> 2.0 Rear Gas Shock (2 req'd)	2
Rear Block Kit & Add-A-Leaf	1	023602	Front Box Kit 3 of 4	55412 Single 5500 Steering Stabilizer	
<b>Kit #513H 45FK1902</b>	1	023603	Front Box Kit 4 of 4	PSL750 4x4 Posi-Lok™ (page 132)	
	1	013559	Rear Box Kit		
	2	85804	Front NX2 Shock		
	2	85860	Rear NX2 Shock		

**Notes**

1. Special tool required to load and unload the torsion bars.
2. Stock 17" wheels can be reinstalled with stock tire.

## ACCESSORIES



#PSL750



CHEVROLET/GMC  
DODGE  
FORD  
JEEP  
SUZUKI  
TOYOTA  
POSI-LOK  
SHOCKS/STEERING STABILIZERS  
ACCESSORIES  
APPAREL & PROMOTIONAL  
PRODUCT SPECS  
VEHICLE SPECS



# 1980-1996 FORD F100, F150 TRUCK 4WD



#509H - 6" Standard Kit Shown w/ Optional FOX 2.0 Shocks



#510H - 6" Radius Arm Kit Shown w/ Optional FOX 2.0 Shocks



- Pro-Ride coils available in 2", 4", 6" heights over stock for regular and extended cab vehicles
- Extended radius arm kit, includes 36" long extended radius arms to enhance steering angles and insure proper formed tire clearance, plus fully gusseted tubular side plates allow 10" of front wheel travel
- Front box kit used with 4" or 6" coils makes it easy to upgrade from 4" to 6" and includes: pitman arm to correct steering angles, axle pivot brackets that are "dual drilled" for 4" or 6" lifts, and radius arm drop brackets to restore OE caster
- Optional 2", 4" and 6" Glide-Ride rear springs available

BDS Suspension are proud to offer a high quality product at the industries most competitive pricing!

1980-1996 FORD F100, F150 4WD WITH POWER STEERING						
LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES	
<b>1-2" Front / 0" Rear</b>	1	033201	Coil Spring Kit	85800 Front NX2 Auxiliary Shock (2 req'd)	1	
Front Coil Spring	2	129100	Alignment Cam	Page 146 Steering Stabilizers	2	
<b>Kit #359H 02FK634</b>	2	85810	Front NX2 Shock		4	
	2	85620	Rear NX2 Shock			
<b>1-2" Front / 2" Rear</b>	1	033201	Coil Spring Kit			
Front Coil Spring	2	129100	Alignment Cam			
Rear Leaf Spring	2	003208	Rear Leaf Spring			
<b>Kit #383H 87FK449</b>	4	4051	9/16 x 3-1/4 x 10" Rd U-Bolt			
	2	85810	Front NX2 Shock			
	2	85660	Rear NX2 Shock			
<b>4" Front / 2" Rear</b>	1	033401	Coil Spring Kit (Standard Cab)	85820 Front NX2 Auxiliary Shock (2 req'd)	1	
<b>Standard Kit</b>	1	013001	Front Box Kit - Standard	Page 146 Steering Stabilizers	5	
Rear Leaf Spring	2	003208	Rear Leaf Spring	123401 Anti-Sway Bar Drop Kit	6	
<b>STD Cab Kit #500H</b>	4	4051	9/16 x 3-1/4 x 10" Rd U-Bolt	129000 Bump Stop Extension Kit		
<b>EXT Cab Kit #384H</b>	2	85800	Front NX2 Shock	129100 Alignment Cam (2 req'd)		
<b>55FK1921</b>	2	85660	Rear NX2 Shock			
<b>4" Front / 2" Rear</b>	1	033401	Coil Spring Kit (Standard Cab)			
<b>Radius Arm Kit</b>	1	013003	Front Box Kit - Radius Arm Kit			
Rear Leaf Spring	2	003208	Rear Leaf Spring			
<b>STD Cab Kit #529H</b>	4	4051	9/16 x 3-1/4 x 10" Rd U-Bolt			
<b>EXT Cab Kit #385H</b>	2	85800	Front NX2 Shock			
<b>93FK8171</b>	2	85660	Rear NX2 Shock			
				 #129000 - Bump Stop Extension Kit		
<b>4" Front / 2" Rear</b>	1	033401	Coil Spring Kit (Standard Cab)	85820 Front NX2 Auxiliary Shock (2 req'd)	1	
<b>Standard Kit</b>	1	013001	Front Box Kit - Standard	Page 146 Steering Stabilizers	5	
Rear 2" Block Kit	1	063209	Rear 2" Block Kit	123401 Anti-Sway Bar Drop Kit	6	
<b>STD Cab Kit #501H</b>	2	85800	Front NX2 Shock	063309 Rear 3" Block Kit		
<b>EXT Cab Kit #386H</b>	2	85660	Rear NX2 Shock	129000 Bump Stop Extension Kit		
<b>75FK158</b>				129100 Alignment Cam (2 req'd)		
<b>4" Front / 2" Rear</b>	1	033401	Coil Spring Kit (Standard Cab)			
<b>Radius Arm Kit</b>	1	013003	Front Box Kit - Radius Arm Kit			
Rear 2" Block Kit	1	063209	Rear 2" Block Kit			
<b>STD Cab Kit #502H</b>	2	85800	Front NX2 Shock			
<b>EXT Cab Kit #387H</b>	2	85660	Rear NX2 Shock			
<b>24FK8721</b>						
<b>4" Front / 2" Rear</b>	1	033401	Coil Spring Kit (Standard Cab)	85820 Front NX2 Auxiliary Shock (2 req'd)	1	
<b>Standard Kit</b>	1	013001	Front Box Kit - Standard	Page 146 Steering Stabilizers	5	
Rear Add-A-Leaf	1	113209	Dual Add-A-Leafs	123401 Anti-Sway Bar Drop Kit	6	
<b>STD Cab Kit #503H</b>	4	4051	9/16 x 3-1/4 x 10" Rd U-Bolt	129000 Bump Stop Extension Kit		
<b>EXT Cab Kit #388H</b>	2	85800	Front NX2 Shock	129100 Alignment Cam (2 req'd)		
<b>14FK079</b>	2	85660	Rear NX2 Shock			
<b>4" Front / 2" Rear</b>	1	033401	Coil Spring Kit (Standard Cab)			
<b>Radius Arm Kit</b>	1	013003	Front Box Kit - Radius Arm Kit			
Rear Add-A-Leaf	1	113209	Dual Add-A-Leafs			
<b>STD Cab Kit #504H</b>	4	4051	9/16 x 3-1/4 x 10" Rd U-Bolt			
<b>EXT Cab Kit #389H</b>	2	85800	Front NX2 Shock			
<b>62FK7931</b>	2	85660	Rear NX2 Shock			
				 #123401 - Anti-Sway Bar Drop Kit		

See Notes ► Continued ►





# 1980-1996 FORD F100, F150 TRUCK 4WD

## 1980-1996 FORD F100, F150 4WD STANDARD CAB WITH POWER STEERING (CONTINUED)

LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES
<b>4" Front / 4" Rear Standard Kit</b> Rear Leaf Spring <b>STD Cab Kit #505H</b> <b>EXT Cab Kit #390H</b> 26FK4921	1	033401	Coil Spring Kit (Standard Cab)	85820 Front NX2 Auxiliary Shock (2 req'd) Page 146 Steering Stabilizers 123401 Anti-Sway Bar Drop Kit 129000 Bump Stop Extension Kit 129100 Alignment Cam (2 req'd)	1
	1	013001	Front Box Kit - Standard		4
	2	003408	Rear Leaf Spring		5
	4	4051	9/16 x 3-1/4 x 10" Rd U-Bolt		
	2	85800	Front NX2 Shock		
	2	85660	Rear NX2 Shock		
 <b>4" Front / 4" Rear Radius Arm Kit</b> Rear Leaf Spring <b>STD Cab Kit #506H</b> <b>EXT Cab Kit #391H</b> 64FK1271	1	033401	Coil Spring Kit (Standard Cab)	 #129000 - Bump Stop Extension Kit	
	1	013003	Front Box Kit - Radius Arm Kit		
	2	003408	Rear Leaf Spring		
	4	4051	9/16 x 3-1/4 x 10" Rd U-Bolt		
	2	85800	Front NX2 Shock		
	2	85660	Rear NX2 Shock		
<b>6" Front / 4" Rear Standard Kit</b> Rear 4" Block Kit <b>STD Cab Kit #507H</b> <b>EXT Cab Kit #392H</b> 11FK178	1	033601	Coil Spring Kit (Standard Cab)	85819 Front NX2 Auxiliary Shock (2 req'd) Page 146 Steering Stabilizers 123401 Anti-Sway Bar Drop Kit 063309 Rear 3" Block Kit 129000 Bump Stop Extension Kit 129100 Alignment Cam (2 req'd)	1
	1	013001	Front Box Kit - Standard		4
	1	063409	Rear 4" Block Kit		5
	2	85820	Front NX2 Shock		
	2	85660	Rear NX2 Shock		
	 <b>6" Front / 4" Rear Radius Arm Kit</b> Rear 4" Block Kit <b>STD Cab Kit #508H</b> <b>EXT Cab Kit #393H</b> 59FK7921	1	033601		Coil Spring Kit (Standard Cab)
1		013003	Front Box Kit - Radius Arm Kit		
1		063409	Rear 4" Block Kit		
2		85820	Front NX2 Shock		
2		85660	Rear NX2 Shock		
 <b>6" Front / 4" Rear Standard Kit</b> Rear 2" Block & Dual Add-A-Leaf Kit <b>STD Cab Kit #509H</b> <b>EXT Cab Kit #394H</b> 52FK1001		1	033601	Coil Spring Kit (Standard Cab)	 #129100 - Alignment Cam
	1	013001	Front Box Kit - Standard	4	
	1	063209	Rear 2" Block Kit	5	
	1	113209	Dual Add-A-Leaf Kit		
	2	85820	Front NX2 Shock		
	2	85660	Rear NX2 Shock		
 <b>6" Front / 4" Rear Radius Arm Kit</b> Rear 2" Block & Dual Add-A-Leaf Kit <b>STD Cab Kit #510H</b> <b>EXT Cab Kit #395H</b> 01FK8241	1	033601	Coil Spring Kit (Standard Cab)	 <b>EXTENDED RADIUS ARM UPGRADE KIT</b> • Includes extended radius arms and mounting brackets that can be added to existing 4" or 6" BDS Suspension systems #123006.....36FK347	
	1	013003	Front Box Kit - Radius Arm Kit		
	1	063209	Rear 2" Block Kit		
	1	113209	Dual Add-A-Leaf Kit		
	2	85820	Front NX2 Shock		
	2	85660	Rear NX2 Shock		
<b>6" Front / 6" Rear Standard Kit</b> Rear Leaf Spring <b>STD Cab Kit #511H</b> <b>EXT Cab Kit #396H</b> 60FK1331	1	033601	Coil Spring Kit (Standard Cab)	 <b>EXTENDED RADIUS ARM UPGRADE KIT</b> • Includes extended radius arms and mounting brackets that can be added to existing 4" or 6" BDS Suspension systems #123006.....36FK347	1
	1	013001	Front Box Kit - Standard		4
	2	003608	Rear Leaf Spring		5
	4	4051	9/16 x 3-1/4 x 10" Rd U-Bolt		
	2	85820	Front NX2 Shock		
	2	85660	Rear NX2 Shock		
 <b>6" Front / 6" Rear Radius Arm Kit</b> Rear Leaf Spring <b>STD Cab Kit #512H</b> <b>EXT Cab Kit #397H</b> 19FK7571	1	033601	Coil Spring Kit (Standard Cab)	 <b>EXTENDED RADIUS ARM UPGRADE KIT</b> • Includes extended radius arms and mounting brackets that can be added to existing 4" or 6" BDS Suspension systems #123006.....36FK347	
	1	013003	Front Box Kit - Radius Arm Kit		
	2	003608	Rear Leaf Spring		
	4	4051	9/16 x 3-1/4 x 10" Rd U-Bolt		
	2	85820	Front NX2 Shock		
	2	85660	Rear NX2 Shock		

**Notes**

1. Front end alignment required. Alignment cams may be required. See page 155.
2. SuperCab models may not achieve stated lift and may not be alignable.
3. If OE alignment bushing in the upper ball joint are more than 1 degree then 2" coils should not be used.
4. #123401 recommended if equipped with a front anti-sway bar. Ford produced 3 different styles of sway bar systems between 1980 and 1996. In extremely rare cases, modification may be required.
5. Extended lines required for all 4-6" lifts.



Vehicle Specs: 4" Lift Kit - 33" M/T MTZ - 15" M/T Classic II

CHEVROLET/GMC  
DODGE  
FORD  
JEEP  
SUZUKI  
TOYOTA  
PUSH-LOK  
SHOCKS/STEERING STABILIZERS  
ACCESSORIES  
APPAREL & PROMOTIONAL  
PRODUCT SPECS  
VEHICLE SPECS



# 1980-1996 FORD F100, F150 TRUCK 2WD



Vehicle Specs: 2" Lift Kit - 33" BFG A/T - 15" Centerlines



#399H - 6" Standard Kit Shown w/ Optional FOX 2.0 Shocks



## RADIUS ARM UPGRADE KIT

- Includes extended radius arms and mounting brackets that can be added to existing 4" or 6" BDS Suspension systems

#123006.....36FK347



1980-1996 FORD F100, F150 2WD TRUCK WITH POWER STEERING						
LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES	
<b>1-2" Front / 0" Rear</b>	1	033201	Coil Spring Kit	85800	Dual NX2 Front Shock (2 req'd)	1
Front Coil Spring	2	129102	Alignment Cam	Page 146	Steering Stabilizers	2
<b>Kit #380H 99FK434</b>	2	85810	Front NX2 Shock			4
	2	85620	Rear NX2 Shock			
<b>4" Front / 2" Rear</b>	1	033401	Coil Spring Kit (Standard Cab)	85820	Dual NX2 Front Shock (2 req'd)	1
Front Coil Spring & Bracket Kit	1	013001	Front Box Kit	Page 146	Steering Stabilizers	3
Rear Add-A-Leaf	1	119158	Short Rear Add-A-Leafs	123401	Anti-Sway Bar Drop Kit	5
<b>STD Cab Kit #398H</b>	4	4051	9/16 x 3-1/4 x 10" Rd U-Bolt	129000	Bump Stop Extension Kit	6
<b>EXT Cab Kit #381H</b>	2	85800	Front NX2 Shock	Page 155	Alignment Cam (2 req'd)	
<b>06FK978</b>	2	85650	Rear NX2 Shock	119157	Long Rear Add-a-leaf	
<b>6" Front / 4" Rear</b>	1	033601	Coil Spring Kit (Standard Cab)	85819	Dual NX2 Front Shock (2 req'd)	1
Front Coil Spring & Bracket Kit	1	013001	Front Box Kit	Page 146	Steering Stabilizers	3
Rear 2" Block Kit and Add-A-Leaf	1	063209	Rear 2" Block Kit	123401	Anti-Sway Bar Drop Kit	5
	1	119158	Short Rear Add-A-Leafs	129000	Bump Stop Extension Kit	6
<b>STD Cab Kit #399H</b>	2	85820	Front NX2 Shock	063309	Rear 3" Block Kit	
<b>EXT Cab Kit #382H</b>	2	85650	Rear NX2 Shock	Page 155	Alignment Cam (2 req'd)	
<b>44FK019</b>				119157	Long Rear Add-a-leaf	

**Notes**

- Front end alignment required. Alignment cams may be required. See Page 155.
- SuperCab models may not achieve stated lift and may not be alignable.
- U-bolts in 2WD rear kits will need to be shortened.
- If OE alignment bushings in the upper ball joint are more than 1 degree then 2" coils should not be used.
- #123401 recommended if equipped with a front anti-sway bar. Ford produced 3 different styles of sway bar systems between 1980 and 1996. In extremely rare cases, modification may be required.
- Extended front brake lines required



# 1973-1979 FORD F100, F150 TRUCK



6" Pro-Ride Suspension System With Rear Blocks & Add-A-Leafs

## 4" & 6" KIT FEATURES

- Pro-Ride coils are black powder coated for long life
- Radius arm drop brackets restore OE caster and are gusseted for superior strength
- Front box kit can be used with 4" or 6" system making it easy to upgrade from 4" to 6"
- Track relocation bracket allows full travel and correct axle position
- Optional 4" and 6" Glide-Ride rear springs available

### 1973-1979 FORD F100, F150 4WD

LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES	
<b>4" Front / 3" Rear</b>	1	033403	Coil Spring Kit	85819	Front NX2 Auxiliary Shock (1977-79)	1
Front Coil Spring & Bracket Kit	1	013002	Radius Arm Drop Kit	Page 146	Steering Stabilizers	2
Rear 3" Block Kit	1	063309	Rear 3" Block Kit	083402	78-79 Pitman Arm (PS)	3
'73-'76 Kit #370H	1	123001	Track Bar Relocation Kit	129000	Bump Stop Extension Kit	
'77-'79 Kit #371H	2	85875	Front NX2 Shock (1973-76) or	063209	Rear 2" Block Kit	
69FK366	2	85820	Front NX2 Shock (77-79)	063409	Rear 4" Block Kit	
	2	85850	Rear NX2 Shock (1973-79)	123403	Front Anti-Sway Bar Link	
<b>4" Front / 3.5" Rear</b>	1	033403	Coil Spring Kit			
Front Coil Spring & Bracket Kit	1	013002	Radius Arm Drop Kit			
Rear Add-A-Leaf & Rear 2" Block Kit	1	063209	Rear 2" Block Kit			
'73-'76 Kit #372H	1	113208	Add-A-Leaf Kit			
'77-'79 Kit #373H	1	123001	Track Bar Relocation Kit			
02FK837	2	85875	Front NX2 Shock (1973-76) or			
	2	85820	Front NX2 Shock (77-79)			
	2	85850	Rear NX2 Shock (1973-79)			
<b>4" Front / 4" Rear</b>	1	033403	Coil Spring Kit			
Front Coil Spring & Bracket Kit	1	013002	Radius Arm Drop Kit			
Rear Leaf Spring	1	123001	Track Bar Relocation Kit			
'73-'76 Kit #374H	2	003408	Rear Leaf Spring			
'77-'79 Kit #375H	4	4051	9/16 x 3-1/4 x 10" Rd U-Bolts			
04FK4901	2	85875	Front NX2 Shock (1973-76) or			
	2	85820	Front NX2 Shock (77-79)			
	2	85850	Rear NX2 Shock (1973-79)			
<b>6" Front / 5.5" Rear</b>	1	033603	Coil Spring Kit	85860	Front NX2 Auxiliary Shock (1977-79)	1
Front Coil Spring & Bracket Kit	1	013002	Radius Arm Drop Kit	Page 146	Steering Stabilizers	2
Rear 4" Block Kit & Add-A-Leaf	1	063409	Rear 4" Block Kit	083402	78-79 Pitman Arm (PS)	3
'73-'76 Kit #376H	1	113208	Add-A-Leaf Kit	123403	Front Anti-Sway Bar Link	
'77-'79 Kit #377H	1	123001	Track Bar Relocation Kit			
60FK197	2	85877	Front NX2 Shock (1973-76) or			
	2	85850	Front NX2 Shock (77-79)			
	2	85860	Rear NX2 Shock (1973-79)			
<b>6" Front / 5.5" Rear</b>	1	033603	Coil Spring Kit			
Front Coil Spring & Bracket Kit	1	013002	Radius Arm Drop Kit			
Rear Leaf Spring	2	003608	Rear Leaf Spring			
'73-'76 Kit #378H	4	4051	9/16 x 3-1/4 x 10" Rd U-Bolts			
'77-'79 Kit #379H	1	123001	Track Bar Relocation Kit			
71FK4611	2	85877	Front NX2 Shock (1973-76) or			
	2	85850	Front NX2 Shock (77-79)			
	2	85860	Rear NX2 Shock (1973-79)			



#129000 - Bump Stop Extension Kit

#### Notes

1. Alignment "C" bushings may be required.
2. #003408 and #003608 come with OE style bushings installed.
3. Add two front auxiliary shocks if the vehicle is equipped with factory dual mounts.



Vehicle Specs: 6" Lift Kit - 36" Interco IROKs - 15" AR Wheels



# 1980-1996 FORD BRONCO

1980-1996 FORD BRONCO 4WD WITH POWER STEERING						
LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES	
<b>1"-2" Front / 0" Rear</b> Front Coils <b>Kit #359H</b> 02FK634	1	033201	Coil Spring Kit	85800	Front NX2 Auxiliary Shock Steering Stabilizers	1
	2	129100	Alignment Cam	Page 146		2
	2	85810	Front NX2 Shock			5
	2	85620	Rear NX2 Shock			
<b>4" Front / 4" Rear</b> Front Coil Spring & Bracket Kit Rear 4" Block Kit <b>STD Kit #360H</b> STD 40FK178 <b>Radius Arm Kit #361H</b> Radius Arm 88FK7921	1	033401	Coil Spring Kit	85820	Front NX2 Auxiliary Shock Steering Stabilizers Anti-Sway Bar Drop Kit Bump Stop Extension Kit Alignment Cam (2 req'd) Rear Sway Bar Drop	1
	1	013001	Front Box Kit or	Page 146		3
	1	013003	Extended Radius Arm Kit			5
	1	063409	Rear 4" Block Kit	123401		
	2	85800	Front NX2 Shock	129000		
	2	85650	Rear NX2 Shock	129100		
<b>4" Front / 4" Rear</b> Front Coil Spring & Bracket Kit Rear Add-A-Leaf Rear 2" Block Kit <b>STD Kit #362H</b> STD 24FK839 <b>Radius Arm Kit #363H</b> Radius Arm 62FK5631	1	033401	Coil Spring Kit			1
	1	013001	Front Box Kit or			3
	1	013003	Extended Radius Arm Kit			5
	1	113208	Add-A-Leaf			
	1	063209	Rear 2" Block Kit			
	2	85800	Front NX2 Shock			
<b>4" Front / 4" Rear</b> Front Coil Spring & Bracket Kit Rear Leaf Spring <b>STD Kit #364H</b> STD 55FK1921 <b>Radius Arm Kit #365H</b> Radius Arm 93FK8171	1	033401	Coil Spring Kit			1
	1	013001	Front Box Kit or			3
	1	013003	Extended Radius Arm Kit			4
	2	003208	Rear Leaf Spring			5
	4	4051	9/16 x 3-1/4 x 10" Rd U-Bolts			
	2	85800	Front NX2 Shock			
<b>6" Front / 6" Rear</b> Front Coil Spring & Bracket Kit Rear 3" Block Kit & Dual Add-A-Leaf <b>STD Kit #366H</b> STD 68FK3101 <b>Radius Arm Kit #367H</b> Radius Arm 17FK0441	1	033601	Coil Spring Kit	85819	Front NX2 Auxiliary Shock Steering Stabilizers Anti-Sway Bar Drop Kit Bump Stop Extension Kit Alignment Cam (2 req'd) Rear Sway Bar Drop	1
	1	013001	Front Box Kit or	Page 146		3
	1	013003	Extended Radius Arm Kit			4
	1	063309	Rear 3" Block Kit	123401		5
	1	113209	Dual Add-A-Leafs	129000		6
	2	85820	Front NX2 Shock	129100		
<b>6" Front / 6" Rear</b> Front Coil Spring & Bracket Kit Rear Leaf Spring <b>STD Kit #368H</b> STD 96FK4921 <b>Radius Arm Kit #369H</b> Radius Arm 45FK1271	1	033601	Coil Spring Kit			1
	1	013001	Front Box Kit or			3
	1	013003	Extended Radius Arm Kit			4
	2	003408	Rear Leaf Spring			5
	4	4051	9/16 x 3-1/4 x 10" Rd U-Bolts			6
	2	85820	Front NX2 Shock			

- Notes
1. Front end alignment required. Alignment cams may be required. See Page 155.
  2. If OE alignment bushings in the upper ball joint are more than 1 degree, then 2" coils should not be used.
  3. #123401 recommended if equipped with a front anti-sway bar. Ford produced 3 different styles of sway bar systems between 1980 and 1996. In extremely rare cases, modification may be required.
  4. #003208, #003408 and #003608 come with OE style bushings installed.
  5. Add two front auxiliary shocks if the vehicle is equipped with factory dual mounts.
  6. Extended brake lines required.



#367H - 6" Pro-Ride Radius Arm Suspension System with Dual Add-A-Leafs & Blocks and Shown w/ Optional FOX 2.0 Shocks



Vehicle Specs: 4" Radius Arm Kit - 38" Nitto Mud Grapplers - 18" Fuel Hostages

Read more about Operation Fearless

- Pro-Ride coils available in 2", 4", 6" heights over stock
- Extended radius arm kit, includes 36" long extended radius arms to enhance steering angles and insure proper formed tire clearance, plus fully gusseted tubular side plates allow 10" of front wheel travel
- Front box kit used with 4" or 6" coils makes it easy to upgrade from 4" to 6" and includes: pitman arm to correct steering angles, axle pivot brackets that are "dual drilled" for 4" or 6" lifts, and radius arm drop brackets to restore OE caster
- Radius arm upgrade kit #123006 includes extended radius arms and mounting brackets that can be added to existing 4" or 6" BDS Suspension Systems (See Page 71)
- Optional 4" and 6" rear Glide-Ride springs available





# 1978-1979 FORD BRONCO



6" Pro-Ride Suspension System With Rear Blocks & Add-A-Leafs

## 4" & 6" KIT FEATURES

- Pro-Ride coils are black powder coated for long life
- Radius arm drop brackets restore OE caster and are gusseted for superior strength
- Front box kit can be used with 4" or 6" system making it easy to upgrade from 4" to 6"
- Track bar relocation bracket allows full travel and correct axle position
- Optional 4" and 6" Glide-Ride rear springs available

1978-1979 FORD BRONCO 4WD					
LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES
<b>4" Front / 4" Rear</b> Front Coil Spring & Bracket Kit Rear 4" Block Kit <b>w/ std shocks Kit #519H</b> <b>w/ stag shocks Kit #520H</b> 28FK076	1	033403	Coil Spring Kit	85850	Front NX2 Auxiliary Shock (W/ Factory Duals) Page 146 Steering Stabilizers 083402 78-79 Pitman Arm (PS) 129000 Bump Stop Extension Kit 063309 Rear 3" Block Kit 123403 Front Anti-Sway Bar Link
	1	013002	Radius Arm Drop Kit		
	1	063409	Rear 4" Block Kit		
	1	123001	Track Bar Relocation Kit		
	2	85820	Front NX2 Shock <i>or</i>		
	1	55850	Front Driver Side w/ Staggered Mounts		
	1	55820	Front Passenger Side w/ Staggered Mounts		
<b>4" Front / 3.5" Rear</b> Front Coil Spring & Bracket Kit Rear Add-A-Leafs & Rear 2" Block Kit <b>w/ std shocks Kit #521H</b> <b>w/ stag shocks Kit #522H</b> 02FK837	1	033403	Coil Spring Kit		1
	1	013002	Radius Arm Drop Kit		
	1	063209	Rear 2" Block Kit		
	1	113208	Add-A-Leaf Kit		
	1	123001	Track Bar Relocation Kit		
	2	85820	Front NX2 Shock <i>or</i>		
	1	55850	Front Driver Side w/ Staggered Mounts		
<b>4" Front / 4" Rear</b> Front Coil Spring & Bracket Kit Rear Leaf Spring <b>w/ std shocks Kit #523H</b> <b>w/ stag shocks Kit #524H</b> 33FK1901	1	033403	Coil Spring Kit		1 2
	1	013002	Radius Arm Drop Kit		
	1	123001	Track Bar Relocation Kit		
	2	003208	Rear Leaf Spring		
	4	4051	9/16 x 3-1/4 x 10" Rear U-Bolts		
	2	85820	Front NX2 Shock <i>or</i>		
	1	55850	Front Driver Side w/ Staggered Mounts		
<b>6" Front / 5.5" Rear</b> Front Coil Spring & Bracket Kit Rear 4" Block Kit & Rear Add-A-Leaf <b>w/ std shocks Kit #525H</b> <b>w/ stag shocks Kit #526H</b> 60FK197	1	033603	Coil Spring Kit	85860	1 Front NX2 Auxiliary Shock (W/ Factory Duals) Page 146 Steering Stabilizers 083402 78-79 Pitman Arm (PS) 129000 Bump Stop Extension Kit 123403 Front Anti-Sway Bar Link
	1	013002	Radius Arm Drop Kit		
	1	063409	Rear 4" Block Kit		
	1	113208	Add-A-Leaf Kit		
	1	123001	Track Bar Relocation Kit		
	2	85850	Front NX2 Shock <i>or</i>		
	1	55860	Front Driver Side w/ Staggered Mounts		
<b>6" Front / 6" Rear</b> Front Coil Spring & Bracket Kit Rear Leaf Spring <b>w/ std shocks Kit #527H</b> <b>w/ stag shocks Kit #528H</b> 97FK211	1	033603	Coil Spring Kit		1 2
	1	013002	Radius Arm Drop Kit		
	1	123001	Track Bar Relocation Kit		
	2	003408	Rear Leaf Spring		
	4	4051	9/16 x 3-1/4 x 10" Rd U-Bolts		
	2	85850	Front NX2 Shock <i>or</i>		
	1	55860	Front Driver Side w/ Staggered Mounts		
1	55850	Front Passenger Side w/ Staggered Mounts			
2	85650	Rear NX2 Shock			

**Notes**

1. Alignment "C" bushings may be required.
2. #003208, #003408 and #003608 are 3" wide and come with OE style bushings installed.

CHEVROLET/GMC  
DODGE  
FORD  
JEEP  
SUZUKI  
TOYOTA  
POSI-LOK  
SHOCKS/STEERING STABILIZERS  
ACCESSORIES  
APPAREL & PROMOTIONAL  
PRODUCT SPECS  
VEHICLE SPECS



# 2005-2017 FORD F250, F350 SUPER DUTY 4WD



Vehicle Specs: 8" 4-Link Lift Kit - 40" Interco M-16 - 22" BMF Wheel



## 4" & 6" STANDARD KIT FEATURES

- Pro-Ride coil springs are supplied that are capable of full coil bind as well as specifically designed springs for gas vs. diesel motors
- Heavy duty track bar relocation bracket is included to properly center the axle as well as match the steering angles created by the supplied drop pitman arm
- Radius arm drop brackets are included to restore the O.E. caster angles
- A hard line extension is supplied to properly lengthen the O.E. brake lines
- These systems are available with either rear block kits or new Glide-Ride rear leaf springs



## 2.5" RADIUS ARM KIT FEATURES



- Built around massive tubular replacement radius arms built to handle far more than the factory parts they are replacing
- 3-1/4" Diameter bushings are huge and have a long, maintenance-free service life.
- Dual-rate front coil springs that improve the ride and handling of these 3/4 ton trucks both on and off road.
- Heavy-duty turnbuckle style adjustable track bar is included to center the axle.
- Rear system utilizes a 4" block with an integrated bump stop wing to replace the factory 2" blocks, leveling out the back with the newly lifted front.

## 2" KIT FEATURES

- 6061 aluminum one piece lower coil mounts
- Lower mounts are bolted solid so there are no loose parts
- Box kit includes ball joint alignment cams to properly align the vehicle
- Includes front and rear NX2 shocks



## 4", 6", 8" 4-LINK SYSTEM FEATURES

- Pro-Ride coil springs are supplied that are capable of full coil bind as well as specifically designed springs for gas vs. diesel motors
- Frame mounting bracket replaces OE radius arm bracket to increase ground clearance vs. a standard drop kit
- Less than 1 degree of caster change through wheel travel giving you better on and offroad control
- Massive 2.5" O.D., greaseable, urethane control arm bushings
- 2" O.D. x 0.250" wall DOM tubing is used to make these extremely rugged control arms
- The heavy duty track bar relocation bracket is designed to match the steering angles of the supplied dropped pitman arm to maintain the factory steering geometry
- This system also includes bump stop extensions, brake line extensions, sway bar drops and a new steering stabilizer
- These systems are available with either rear block kits or new Glide-Ride rear leaf springs



AVAILABLE WITH  
FOX 2.5 COILOVERS





# 2017 FORD F250, F350 SUPER DUTY 4WD - DIESEL



#1520H - 4" Kit

## 4" RADIUS ARM KIT FEATURES

- Full Length Diesel/Gas Specific Coils for Smooth Ride
- Pitman Arm/Trackbar Bracket for Steering Correction
- Heavy Duty Radius Arms to Correct Frontend Caster
- BDS NX2 or FOX 2.0 Shocks Available with Kit
- Allows Fitment of 35" Tires



### 2017 FORD F250, F350 SUPER DUTY 4WD - DIESEL

LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES
<b>1" Front/0" Rear</b>	1	013101	Front Coil Mounts	98224710	<b>FOX 2.0</b> Front Gas Shock (2 req'd) <b>FOX 2.0</b> Rear Gas Shock (2 req'd)
Front Coil Mount	2	85710	Front NX2 Shock	98224717	
<b>Kit #1518H</b> 29FK952	2	85717	Rear NX2 Shock		
<b>2" Front/0" Rear</b>	1	013201	Front Coil Mounts		
Front Coil Mount	2	85710	Front NX2 Shock		
<b>Kit #1519H</b> 41FK713	2	85717	Rear NX2 Shock		
<b>4" Front / 5" Rear</b>	1	033411	4" Coil Spring Box Kit - Diesel	98224700	<b>FOX 2.0</b> Front Gas Shock (2 req'd) <b>FOX 2.0</b> Rear Gas Shock (2 req'd) Carrier Bearing Drop Kit
Front Coil Spring	1	013414	Front 4" Box Kit	98224718	
Rear Block Kit	1	85431	Stabilizer Kit	123402	
<b>Kit# 1520H</b> 63FK8251	1	123251	Radius Arm Box Kit		
	1	013517	Rear Block Kit		
	2	85700	Front NX2 Shock		
	2	85718	Rear NX2 Shock		

### ADDITIONAL KITS AVAILABLE SOON

#### Notes

1. Removal of the factory leaf spring block required. Net rear lift will vary depending on height of factory block, but will result in a level stance.
2. Front exhaust modification may be required to clear front drive shaft (Gas Only)
3. If equipped with a 2-piece rear driveshaft, a Carrier Bearing Drop Kit may be required (BDS123402)



Vehicle Specs: 4" Lift Kit - 35" BFG K02 - 20" Gear Alloy Wheels

CHEVROLET/GMC  
DODGE  
FORD  
JEEP  
SUZUKI  
TOYOTA  
POSI-LOK  
SHOCKS/STEERING STABILIZERS  
ACCESSORIES  
APPAREL & PROMOTIONAL  
PRODUCT SPECS  
VEHICLE SPECS



# 2017 FORD F250, F350 SUPER DUTY 4WD - GAS



#1518H - 2" kit

## 2" KIT FEATURES

- 6061 aluminum one piece lower coil mounts
- Lower mounts are bolted solid so there are no loose parts
- Box kit includes ball joint alignment cams to properly align the vehicle
- Includes front and rear NX2 shocks



Vehicle Specs: 2" leveling kit, 34" Goodyear A/T, 18" OE Wheels

2017 FORD F250, F350 SUPER DUTY 4WD - GAS						
LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES		NOTES
<b>1" Front/0" Rear</b>	1	013101	Front Coil Mounts	98224710	<b>FOX</b> 2.0 Front Gas Shock (2 req'd)	
Front Coil Mount	2	85710	Front NX2 Shock	98224717	<b>FOX</b> 2.0 Rear Gas Shock (2 req'd)	
<b>Kit #1518H</b>	2	85717	Rear NX2 Shock			
<b>2" Front/0" Rear</b>	1	013201	Front Coil Mounts			
Front Coil Mount	2	85710	Front NX2 Shock			
<b>Kit #1519H</b>	2	85717	Rear NX2 Shock			
<b>4" Front / 5" Rear</b>	1	033412	4" Coil Spring Box Kit - Gas	98224700	<b>FOX</b> 2.0 Front Gas Shock (2 req'd)	1
Front Coil Spring	1	013414	Front 4" Box Kit	98224718	<b>FOX</b> 2.0 Rear Gas Shock (2 req'd)	2
Rear Block Kit	1	85431	Stabilizer Kit	123402	Carrier Bearing Drop Kit	3
<b>Kit# 1521H</b>	1	123251	Radius Arm Box Kit			
	1	013517	Rear Block Kit			
	2	85700	Front NX2 Shock			
	2	85718	Rear NX2 Shock			



### ADDITIONAL KITS AVAILABLE SOON

- Notes
1. Removal of the factory leaf spring block required. Net rear lift will vary depending on height of factory block, but will result in a level stance.
  2. Front exhaust modification may be required to clear front drive shaft (Gas Only)
  3. If equipped with a 2-piece rear driveshaft, a Carrier Bearing Drop Kit may be required (BDS123402)



# 2011-2016 FORD F250, F350 SUPER DUTY 4WD - DIESEL

2011-2016 FORD F250, F350 SUPER DUTY 4WD - DIESEL				RECOMMENDED ACCESSORIES		NOTES
LIFT & METHOD	QTY	PART#	DESCRIPTION			
<b>1" Front/0" Rear</b> Front Coil Mount <b>Kit #325H - '11-'16</b> 29FK952 <b>Kit #1518H - 2017</b> 29FK952	1	013101	Front Coil Mounts	98224710	<b>FOX 2.0</b> Front Gas Shock (2 req'd)	
	2	85710	Front NX2 Shock	98224660	<b>FOX 2.0</b> Rear Gas Shock - '11-'16 (2 req'd)	
	2	85660	Rear NX2 Shock - '11-'16	98224717	<b>FOX 2.0</b> Rear Gas Shock - 2017 (2 req'd)	
	2	85717	Rear NX2 Shock - 2017	55368	Single Steering Stabilizer Mounting Kit - '11-'16	
<b>2" Front/0" Rear</b> Front Coil Mount <b>Kit #326H - '11-'16</b> 41FK713 <b>Kit #1519H - 2017</b> 29FK952	1	013201	Front Coil Mounts	85415	Single NX2 Steering Stabilizer - '11-'16 or	
	2	85710	Front NX2 Shock	95415	Single 9500 Steering Stabilizer - '11-'16	
	2	85660	Rear NX2 Shock - '11-'16	123408	RECOIL Traction Bar Mounting Kit (SRW Short Box Models) - '11-'16	
	2	85717	Rear NX2 Shock - 2017	123418	RECOIL Traction Bar Mounting Kit (SRW Long Box Models) - '11-'16	
<b>2.5" Front/1.5" Rear</b> <b>Radius Arm Kit</b> Front Coil Spring Rear Block Kit <b>Kit #1509H</b> 74FK0841 <b>FOX Performance C/O System</b> <b>Kit# 1509F</b> 67FK5843	1	123251	Radius Arm Box Kit	98224710	<b>FOX 2.0</b> Front Gas Shock (2 req'd)	1b 7 8
	1	013255	Front Box Kit	98224760	<b>FOX 2.0</b> Rear Gas Shock (2 req'd)	
	1	013408	Rear 4" Block Kit	013519	5" Rear Block Kit	
	1	033251	Front Coil Springs	55368	Single Steering Stabilizer Mounting Kit	
	2	55713	Front 5500 Shock } or	85415	Single NX2 Steering Stabilizer or	
	2	55760	Rear 5500 Shock } or	95415	Single 9500 Steering Stabilizer	
	1	123212	Coilover Mounting Kit	55358	Dual Steering Stabilizer Mounting Kit	
	1	88402148	<b>FOX 2.5</b> Coilover Kit	85405	Dual NX2 Steering Stabilizer (2 req'd) or	
<b>2.5" Front/2.5" Rear</b> Front Coil Spring Rear Block Kit <b>Kit #1510H</b> 31FK8401 <b>FOX Performance C/O System</b> <b>Kit# 1510F</b> 24FK3803	1	013254	Front Box Kit	95405	Dual 9500 Steering Stabilizer (2 req'd) or	
	1	013408	Rear 4" Block Kit	98224019	Dual <b>FOX 2.0</b> Steering Stabilizer (2 req'd)	
	1	033251	Front Coil Springs	123408	RECOIL Traction Bar Mounting Kit (SRW Short Box Models)	
	2	55713	Front 5500 Shocks } or	123418	RECOIL Traction Bar Mounting Kit (SRW Long Box Models)	
	2	55760	Rear 5500 Shocks } or	123409	RECOIL Traction Bar	
	1	123212	Coilover Mounting Kit			
	1	88402148	<b>FOX 2.5</b> Coilover Kit			
	2	98224710	<b>FOX 2.0</b> Front Gas Shock			
<b>4" Front /3" Rear</b> <b>Standard Kit</b> Front Coil Spring & Bracket Kit Rear Block Kit <b>Kit #588H</b> 25FK3711 <b>FOX Performance C/O System</b> <b>Kit# 588F</b> 72FK7023	1	013413	Front Box Kit	98224700	<b>FOX 2.0</b> Front Gas Shock (2 req'd)	1a 2 3 4 5
	1	013519	Rear Block Kit	98224760	<b>FOX 2.0</b> Rear Gas Shock (2 req'd)	
	1	033411	Front Coil Springs	123023	Dual Front Shock Mounting Kit	
	2	85700	Front NX2 Shock } or	85759	Dual NX2 Front Shocks (4 req'd) or	
	2	85760	Rear NX2 Shock } or	98224759	Dual <b>FOX 2.0</b> Front Gas Shock (4 req'd)	
	1	123212	Coilover Mounting Kit	55368	Single Steering Stabilizer Mounting Kit	
	1	88402149	<b>FOX 2.5</b> Coilover Kit	85415	Single NX2 Steering Stabilizer or	
	2	98224700	<b>FOX 2.0</b> Front Gas Shock	95415	Single 9500 Steering Stabilizer	
<b>4" Front / 3" Rear</b> <b>4-Link System</b> Front Coil Spring & Bracket Kit Rear Block Kit Rear Leaf Spring <b>Kit #590H</b> 33FK4202 <b>FOX Performance C/O System</b> <b>Kit# 590F</b> 70FK8504	1	013010	4-Link Box 1 of 2	55358	Dual Steering Stabilizer Mounting Kit	
	1	013013	4-Link Box 2 of 2	85405	Dual NX2 Steering Stabilizer (2 req'd) or	
	1	013519	Rear Block Kit	95405	Dual 9500 Steering Stabilizer (2 req'd) or	
	1	033411	Front Coil Springs	98224019	Dual <b>FOX 2.0</b> Steering Stabilizer (2 req'd)	
	2	85700	Front NX2 Shock } or	123009	Rear Sway Bar Links	
	2	85760	Rear NX2 Shock } or	123020	Bumper Spacer Kit	
	1	123212	Coilover Mounting Kit	113218	Single Add-A-Leaf - standard kits	
	1	88402149	<b>FOX 2.5</b> Coilover Kit	113209	Dual Add-A-Leaf - standard kits	
<b>4" Front /3" Rear</b> <b>Standard Kit</b> Front Coil Spring & Bracket Kit Rear Leaf Spring <b>Kit #592H</b> 16FK0891 <b>FOX Performance C/O System</b> <b>Kit# 592F</b> 63FK4104	1	013413	Front Box Kit	123202	Adjustable Track Bar	
	2	003629	Rear Leaf Spring	123402	Carrier Bearing Drop Kit	
	1	013409	Rear Box Kit	103802	Front HD Extended Brake Lines	
	1	033411	Front Coil Springs	103809	Rear HD Extended Brake Lines	
	2	85700	Front NX2 Shock } or	123408	RECOIL Traction Bar Mounting Kit (SRW Short Box Models)	
	2	85760	Rear NX2 Shock } or	123418	RECOIL Traction Bar Mounting Kit (SRW Long Box Models)	
	1	123212	Coilover Mounting Kit	123409	RECOIL Traction Bar	
	1	88402149	<b>FOX 2.5</b> Coilover Kit			
<b>4" Front / 3" Rear</b> <b>4-Link System</b> Front Coil Spring & Bracket Kit Rear Leaf Spring <b>Kit #593H</b> 14FK1382 <b>FOX Performance C/O System</b> <b>Kit# 593F</b> 61FK5684	1	013010	4-Link Box 1 of 2			
	1	013013	4-Link Box 2 of 2			
	2	003629	Rear Leaf Springs			
	1	013409	Rear Box Kit			
	1	033411	Front Coil Springs			
	2	85700	Front NX2 Shock } or			
	2	85760	Rear NX2 Shock } or			
	1	123212	Coilover Mounting Kit			
1	88402149	<b>FOX 2.5</b> Coilover Kit				


## RECOIL

Improve your traction on the street, track, and trail with BDS RECOIL Traction Bars. This revolutionary floating design uses tunable dual-stage compression springs for improved traction without binding up like traditional traction bars. RECOIL Traction Bars use heavy-wall tubing with a forged flex end and easy bolt-on mounts.

#123409-123408 - SRW Short Box Only ..... 59FK678

#123409-123418 - SRW Long Box Only ..... 59FK678

For more information on RECOIL Traction Bars see page 157

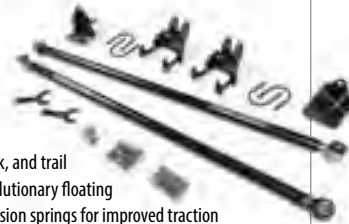

See Notes ► Continued ►

CHEVROLET/GMC  
DODGE  
FORD  
JEEP  
SUZUKI  
TOYOTA  
PUSH-LOK  
SHOCKS/STEERING STABILIZERS  
ACCESSORIES  
APPAREL & PROMOTIONAL  
PRODUCT SPECS  
VEHICLE SPECS





2011-2016 FORD F250, F350 SUPER DUTY 4WD - DIESEL

LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES
<b>6" Front / 5" Rear Standard Kit</b> Front Coil Spring & Bracket Kit Rear Leaf Spring <b>w/ 2" OE Block Kit #594H</b> <b>w/ 3-1/2" OE Block #595H</b> 41FK6712	1	033611	Front Coil Springs	<b>SHOCKS</b> 98224750 <b>FOX 2.0</b> Front Gas Shock - 6" kit (2 req'd) 98224751 <b>FOX 2.0</b> Front Gas Shock - 8" kit (2 req'd) 98224760 <b>FOX 2.0</b> Rear Gas Shock - 6" kit (2 req'd) 98224765 <b>FOX 2.0</b> Rear Gas Shock - 8" kit (2 req'd) 123023 Dual Front Shock Mounting Kit 85769 Dual NX2 Front Shocks - 6" kit (4 req'd) or 98224769 Dual <b>FOX 2.0</b> Front Gas Shock - 6" kit (4 req'd) 85761 Dual NX2 Front Shocks - 8" kit (4 req'd) or 98224761 Dual <b>FOX 2.0</b> Front Gas Shock - 8" kit (4 req'd)	2
	1	013610	Front Box Kit		3
	2	003629	Rear Leaf Spring		4
	1	013608	Rear Box Kit - 2" Factory Block or		5
	1	013609	Rear Box Kit - 3-1/2" Factory Block		
	2	85750	Front NX2 Shock		
<b>6" Front / 5" Rear 4-Link System</b> Front Coil Spring & Bracket Kit Rear Leaf Spring <b>w/ 2" OE Block Kit # 596H</b> <b>w/ 3-1/2" OE Block # 597H</b> 53FK9592	1	033611	Front Coils Springs	<b>STEERING STABILIZERS</b> 55368 Single Steering Stabilizer Mounting Kit 85415 Single NX2 Steering Stabilizer or 95415 Single 9500 Steering Stabilizer  55358 Dual Steering Stabilizer Mounting Kit 85405 Dual NX2 Steering Stabilizer (2 req'd) or 95405 Dual 9500 Steering Stabilizer (2 req'd) or 98224019 Dual <b>FOX 2.0</b> Steering Stabilizer (2 req'd)	
	1	013010	4-Link Box 1 of 2		
	1	013014	4-Link Box 2 of 2		
	2	003629	Rear Leaf Springs		
	1	013608	Rear Box Kit - 2" Factory Block or		
	1	013609	Rear Box Kit - 3-1/2" Factory Block		
<b>6" Front / 5" Rear (F250) C/O 4-Link System</b> Front Fox C/O & 4-Link Kit Rear Leaf Spring <b>w/ 2" OE Block</b> <b>FOX Performance C/O System Kit # 596F 07FK1925</b> <b>FOX Performance DSC C/O System Kit # 596FDSC 27FK1165</b>	1	123612	Coilover Mounting Kit	<b>T-CASE/DRIVELINE MODIFICATION</b> 123402 Carrier Bearing Drop Kit - 6" kits 123406 Carrier Bearing Drop Kit - 8" kit	
	1	88402127	<b>FOX 2.5</b> Coilover Kit or		
	1	88406127	<b>FOX 2.5 DSC</b> Coilover Kit		
	1	013010	4-Link Box Kit 1 of 2		
	1	013014	4-Link Box Kit 2 of 2		
	2	003629	Rear Leaf Spring		
<b>6" Front / 6" Rear (F350) C/O 4-Link System</b> Front Fox C/O & 4-Link Kit Rear Leaf Spring <b>w/ 3-1/2" OE Block</b> <b>FOX Performance C/O System #597F 07FK1925</b> <b>FOX Performance DSC C/O System Kit # 597FDSC 27FK1165</b>	1	123612	Coilover Mounting Kit	<b>ACCESSORIES</b> 123408 RECOIL Traction Bar Mounting Kit (SRW Short Box Models) 123418 RECOIL Traction Bar Mounting Kit (SRW Long Box Models) 123409 RECOIL Traction Bar 123009 Rear Sway Bar Links 123020 Front Bumper Spacer Kit 123202 Adjustable Track Bar 103802 Front HD Extended Brake Lines - 6" kits 103809 Rear HD Extended Brake Lines - 6" kits	
	1	88402127	<b>FOX 2.5</b> Coilover Kit or		
	1	88406127	<b>FOX 2.5 DSC</b> Coilover Kit		
	1	013010	4-Link Box Kit 1 of 2		
	1	013014	4-Link Box Kit 2 of 2		
	2	003609	Rear Leaf Spring		
<b>8" Front / 8" Rear 4-Link System</b> Front Coil Spring & 4-Link Rear Leaf Spring <b>Kit #1500H 93FK5803</b> <b>FOX Performance C/O System #1500F 04FK5335</b> <b>FOX Performance DSC C/O System Kit # 1500FDSC 04FK5565</b>	1	033811	Front Coil Springs (Diesel) or	 #123406 - Carrier Bearing Drop Kit for 8" kit	2
	1	123612	Coilover Mounting Kit with		3
	1	88402143	<b>FOX 2.5</b> Coilover Kit or		4
	1	88406143	<b>FOX 2.5 DSC</b> Coilover Kit		5
	1	013810	4-Link Kit Box 1 of 2		6
	1	013813	4-Link Kit Box 2 of 2		



Notes

- 1a. Removal of factory block required. Net rear lift height will vary depending on height of factory block, but will result in a level stance.
- 1b. For a more tail-high stance, substitute #013519 5" rear block kit
2. Front exhaust modification may be required to clear front drive shaft (gas only).
3. If equipped with 2-piece driveshaft, a Carrier Bearing Drop Kit may be required.
4. Although extremely rare, front driveline vibration may occur.
5. If equipped with rear sway bar, #123009 required.
6. Front bumper spacer kit #123020 may be required to run 38"x15.50" tires.
7. For F250 Diesel models w/o top mounted overload rear springs
8. Front portion of the kit can be installed on an F350 model, which uses a taller 3-7/8" rear block from the factory, in order to level the front with the rear

6" COILOVER CONVERSION 4- LINK SYSTEM FEATURES

- Tuned Fox 2.5 Factory Series Remote Coilovers for race proven performance
- Integrated aux front shock mount to allow fitment of Fox 2.0 - Fox 3.0 shocks
- 1/4"-thick, laser cut frame mounted coilover and 4-link brackets
- 4-link provides less than 1 degree of caster change through wheel travel giving you better on and offroad control.
- 2" O.D. x 0.250" wall DOM 4-link control arms with 2.5" OD greasable urethane bushings.
- The heavy duty track bar relocation bracket is designed to match the steering angles of the supplied dropped pitman arm to maintain the factory steering geometry.
- GlideRide rear leaf springs for smooth ride and increased load capacity.



FOX PERFORMANCE COILOVER SYSTEM

- 2.5" C/O Upgrade Kit ..... #1516F
- 4" C/O Upgrade Kit ..... #1517F
- 6" C/O Upgrade Kit ..... #1514F
- 6" DSC C/O Upgrade Kit ..... #1514FDSC
- 8" C/O Upgrade Kit ..... #1515F
- 8" DSC C/O Upgrade Kit ..... #1515FDSC
- 2.5 & 4" C/O Mounting Kit ... #123212
- 2.5" Coilovers..... #88402148
- 4" Coilovers..... #88402149
- 6 & 8" C/O Mounting Kit..... #123612
- 6" Coilovers..... #88402127
- 6" DSC Coilovers..... #88406127
- 8" Coilovers..... #88402143
- 8" DSC Coilovers..... #88406143

ACCESSORIES



#55358 - Dual Steering Stabilizer Mount (shown with optional FOX 2.0 Steering Stabilizers)



#123402 - Carrier Bearing Drop Kit

CHEVROLET/GMC  
DODGE  
FORD  
JEEP  
SUZUKI  
TOYOTA  
PUSH-LOCK  
SHOCKS/STEERING STABILIZERS  
ACCESSORIES  
APPROVAL & PROMOTIONAL  
PRODUCT SPECS  
VEHICLE SPECS



# 2011-2016 FORD F250, F350 SUPER DUTY 4WD - GAS

## 2011-2016 FORD F250, F350 SUPER DUTY 4WD - GAS

LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES
<b>1" Front/0" Rear</b> Front Coil Mount <b>Kit #325H - '11-'16</b> 29FK952 <b>Kit #1518H - 2017</b> 29FK952	1	013101	Front Coil Mounts	98224710	
	2	85710	Front NX2 Shock	98224660	
	2	85660	Rear NX2 Shock - '11-'16	98224717	
	2	85717	Rear NX2 Shock - 2017	55368	
<b>2" Front/0" Rear</b> Front Coil Mount <b>Kit #326H - '11-'16</b> 41FK713 <b>Kit #1519H - 2017</b> 29FK952	1	013201	Front Coil Mounts	85415	
	2	85710	Front NX2 Shock	95415	
	2	85660	Rear NX2 Shock - '11-'16	123408	
	2	85717	Rear NX2 Shock - 2017	123418	
<b>4" Front /3" Rear</b> <b>Standard Kit</b> Front Coil Spring & Bracket Kit Rear Block Kit <b>Kit #578H</b> 56FK6711	1	033412	Front Coil Springs	98224700	1
	1	013413	Front Box Kit	98224760	
	1	013519	Rear Block Kit	123023	
	2	85700	Front NX2 Shock	85759	
	2	85760	Rear NX2 Shock	98224759	
	2	85760	Rear NX2 Shock	55368	
 <b>4" Front / 3" Rear</b> <b>4-Link System</b> Front Coil Spring & Bracket Kit Rear Block Kit <b>Kit # 580H</b> 54FK7202	1	033412	Front Coils Springs	85415	2
	1	013010	4-Link Box 1 of 2	95415	
	1	013013	4-Link Box 2 of 2	55358	
	1	013519	Rear Block Kit	85405	
	2	85700	Front NX2 Shock	95405	
	2	85760	Rear NX2 Shock	98224019	
<b>4" Front /3" Rear</b> <b>Standard Kit</b> Front Coil Spring & Bracket Kit Rear Leaf Spring <b>Kit #582H</b> 37FK3891	1	033412	Front Coil Springs	123402	3
	1	013413	Front Box Kit	113218	
	2	003629	Rear Leaf Spring	113209	
	1	013409	Rear Box Kit	123408	
	2	85700	Front NX2 Shock	123418	
	2	85760	Rear NX2 Shock	123409	
 <b>4" Front / 3" Rear</b> <b>4-Link System</b> Front Coil Spring & Bracket Kit Rear Leaf Spring <b>Kit #583H</b> 45FK4382	1	033412	Front Coils Springs	123020	4
	1	013010	4-Link Box 1 of 2	123202	
	1	013013	4-Link Box 2 of 2	123009	
	2	003629	Rear Leaf Springs	103802	
	1	013409	Rear Box Kit	103809	
	2	85700	Front NX2 Shock		
<b>6" Front /5" Rear</b> <b>Standard Kit</b> Front Coil Spring & Bracket Kit Rear Leaf Spring <b>w/ 2" OE Block Kit #584H</b> <b>w/ 3-1/2" OE Block #585H</b> 62FK9712	1	033612	Front Coil Springs	98224750	5
	1	013610	Front Box Kit	98224751	
	2	003629	Rear Leaf Spring	98224760	
	1	013608	Rear Box Kit - 2" Factory Block or Rear Box Kit - 3-1/2" Factory Block	98224765	
	2	85750	Front NX2 Shock	123023	
	2	85760	Rear NX2 Shock	85769	
 <b>6" Front / 5" Rear</b> <b>4-Link System</b> Front Coil Spring & Bracket Kit Rear Leaf Spring <b>w/ 2" OE Block Kit #586H</b> <b>w/ 3-1/2" OE Block #587H</b> 84FK2692	1	033612	Front Coils Springs	98224769	5
	1	013010	4-Link Box 1 of 2	85761	
	1	013014	4-Link Box 2 of 2	98224761	
	2	003629	Rear Leaf Springs	55368	
	1	013608	Rear Box Kit - 2" Factory Block or Rear Box Kit - 3-1/2" Factory Block	85415	
	2	85750	Front NX2 Shock	95415	
 <b>8" Front / 8" Rear</b> <b>4-Link System</b> Front Coil Spring & 4-Link Rear Leaf Spring <b>Kit #1501H</b> 93FK5803	1	033812	Front Coil Springs (Gas)	55358	1
	1	013810	4-Link Kit Box 1 of 2	85405	
	1	013813	4-Link Kit Box 2 of 2	95405	
	2	003829	Rear Leaf Spring	98224019	
	2	85751	Front NX2 Shock	123402	
	2	85765	Rear NX2 Shock	123406	
				123408	2
				123418	
				123409	
				123009	
				123020	
				123202	
				103802	
				103809	
				3	
				4	
				5	
				6	

Notes

1. Removal of factory block required. Net rear lift height will vary depending on height of factory block, but will result in a level stance.
2. Front exhaust modification may be required to clear front drive shaft.
3. If equipped with 2-piece driveshaft, a Carrier Bearing Drop Kit is required.
4. Although extremely rare, front driveline vibration may occur.
5. If equipped with rear sway bar use 123009.
6. Front bumper spacer kit #123020 may be required to run 38"x15.50" tires.

◀ Continued

CHEVROLET/GMC  
DODGE  
FORD  
JEEP  
SUZUKI  
TOYOTA  
PUSH-LOK  
SHOCKS/STEERING STABILIZERS  
ACCESSORIES  
APPAREL & PROMOTIONAL  
PRODUCT SPECS  
VEHICLE SPECS



# 2008-2010 FORD F250, F350 SUPER DUTY 4WD - DIESEL

## 2008-2010 FORD F250, F350 SUPER DUTY DIESEL ONLY 4WD

LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES
<b>1" Front / 0" Rear</b> Front Coil Mount <b>Kit #325H 29FK952</b>	1	013101	Front Coil Mounts	98224710 <b>FOX 2.0 Front Gas Shock (2 req'd)</b>	
	2	85710	Front NX2 Shock	98224660 <b>FOX 2.0 Rear Gas Shock (2 req'd)</b>	
	2	85660	Rear NX2 Shock	55368 Single Steering Stabilizer Mounting Kit 85415 Single NX2 Steering Stabilizer or 95415 Single 9500 Steering Stabilizer	
<b>2" Front / 0" Rear</b> Front Coil Mount <b>Kit #326H 41FK713</b>	1	013201	Front Coil Mounts	123408 RECOIL Traction Bar Mounting Kit (SRW Short Box Models)	
	2	85710	Front NX2 Shock	123418 RECOIL Traction Bar Mounting Kit (SRW Long Box Models)	
	2	85660	Rear NX2 Shock	123409 RECOIL Traction Bar 123202 Adjustable Track Bar	
<b>4" Front / 3" Rear</b> <b>Standard Kit</b> Front Coil Spring & Bracket Kit Rear Block Kit <b>w/o top ovid Kit #546H</b> <b>w/ top ovid Kit #547H</b> 93FK9321	1	033411	Front Coil Springs (Diesel)	98224700 <b>FOX 2.0 Front Gas Shock (2 req'd)</b>	1 4
	1	013412	Front Box Kit	98224760 <b>FOX 2.0 Rear Gas Shock (2 req'd)</b>	
	1	013519	Rear Block Kit w/o top overload or	123023 Dual Front Shock Mounting Kit	
	1	013518	Rear Block Kit w/ top overload	85759 Dual NX2 Front Shocks (4 req'd) or	
	1	85415	Single NX2 Steering Stabilizer	98224759 <b>Dual FOX 2.0 Front Gas Shock (4 req'd)</b>	
	2	85700	Front NX2 Shock	85415 Single NX2 Steering Stabilizer or	
<b>4" Front / 3" Rear</b> <b>4-Link System</b> Front Coil Spring & Bracket Kit Rear Block Kit <b>w/o top ovid Kit #548H</b> <b>w/ top ovid Kit #549H</b> 02FK0902	1	033411	Front Coil Springs (Diesel)	95415 Single 9500 Steering Stabilizer	
	1	013010	4-Link Kit Box 1 of 2	55358 Dual Steering Stabilizer Mounting Kit	
	1	013012	4-Link Kit Box 2 of 2	85405 Dual NX2 Steering Stabilizer (2 req'd) or	
	1	013519	Rear Block Kit w/o top overload or	95405 <b>Dual 9500 Steering Stabilizer (2 req'd) or</b>	
	1	013518	Rear Block Kit w/ top overload	98224019 <b>Dual FOX 2.0 Steering Stabilizer (2 req'd)</b>	
	1	85415	Single NX2 Steering Stabilizer	123009 Rear Anti-Sway Bar Link Kit	
<b>4" Front / 4" Rear</b> <b>Standard Kit</b> Front Coil Spring & Bracket Kit Rear Leaf Spring <b>Kit #554H 77FK1202</b>	2	85700	Front NX2 Shock	123020 Bumper Spacer Kit	
	2	85760	Rear NX2 Shock	123202 Adjustable Track Bar	
	1	033411	Front Coil Springs (Diesel)	123408 RECOIL Traction Bar Mounting Kit (SRW Short Box Models)	
	1	013412	Front Box Kit	123418 RECOIL Traction Bar Mounting Kit (SRW Long Box Models)	
	2	003629	Rear Leaf Spring	123409 RECOIL Traction Bar	
	4	4032	5/8 x 3-5/8 x 10" Round U-bolt	123402 Carrier Bearing Drop Kit	
<b>4" Front / 4" Rear</b> <b>4-Link System</b> Front Coil Spring & 4-Link Rear Leaf Springs <b>Kit #555H 85FK2782</b>	1	85415	Single NX2 Steering Stabilizer		
	2	85700	Front NX2 Shock		
	2	85760	Rear NX2 Shock		
	1	033411	Front Coil Springs (Diesel)		
	1	013010	4-Link Kit Box 1 of 2		
	1	013012	4-Link Kit Box 2 of 3		



See Notes ►

Continued ►



Improve your traction on the street, track, and trail with BDS RECOIL Traction Bars. This revolutionary floating design uses tunable dual-stage compression springs for improved traction without binding up like traditional traction bars. RECOIL Traction Bars use heavy-wall tubing with a forged flex end and easy bolt-on mounts.

#123409-123408 - SRW Short Box Only ..... 59FK678  
#123409-123418 - SRW Long Box Only ..... 59FK678

For more information on RECOIL Traction Bars see page 157



## 4-LINK UPGRADE KIT

- Upgrade your standard kit to a 4-link system for superior handling and on/off road performance

2-6" Lift Kits #123011/123012 ..... 89FK4301  
8" Lift Kits #123011/013810 ..... 21FK478



CHEVROLET/GMC  
DODGE  
FORD  
JEEP  
SUZUKI  
TOYOTA  
POSI-LOCK  
SHOCKS/STEERING STABILIZERS  
ACCESSORIES  
APPAREL & PROMOTIONAL  
PRODUCT SPECS  
VEHICLE SPECS



# 2008-2010 FORD F250, F350 SUPER DUTY 4WD - DIESEL



## 4-LINK UPGRADE KIT

- Upgrade your standard kit to a 4-link system for superior handling and on/off road performance

**2-6" Lift Kits** #123011/123012 .....89FK4301  
**8" Lift Kits** #123011/013810 .....21FK478

### 2008-2010 FORD F250, F350 SUPER DUTY DIESEL ONLY 4WD

LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES
<b>6" Front / 3" Rear Standard Kit</b> Rear Block Kit <b>w/o top ovlid Kit #558H</b> <b>w/ top ovlid Kit #559H</b> 29FK4341	1	033611	Front Coil Springs (Diesel)	<b>SHOCKS</b> 98224750 <b>FOX 2.0</b> Front Gas Shock - 6" kit (2 req'd) 98224751 <b>FOX 2.0</b> Front Gas Shock - 8" kit (2 req'd) 98224760 <b>FOX 2.0</b> Rear Gas Shock - 6" kit (2 req'd) 98224765 <b>FOX 2.0</b> Rear Gas Shock - 8" kit (2 req'd) 123023 Dual Front Shock Mounting Kit 85769 Dual NX2 Front Shocks - 6" kit (4 req'd) or 98224769 Dual <b>FOX 2.0</b> Front Gas Shock - 6" kit (4 req'd) 85761 Dual NX2 Front Shocks - 8" kit (4 req'd) or 98224761 Dual <b>FOX 2.0</b> Front Gas Shock - 8" kit (4 req'd)	1
	1	013612	Front Box Kit		2
	1	013519	Rear Block Kit w/o top overload or		4
	1	013518	Rear Block Kit w/ top overload		5
	1	85415	Single NX2 Steering Stabilizer		
<b>6" Front / 3" Rear 4-Link System</b> Front Coil Spring & 4-Link Rear Block Kit <b>w/o top ovlid Kit #560H</b> <b>w/ top ovlid Kit #561H</b> 31FK8122	1	033611	Front Coil Springs (Diesel)	<b>STEERING STABILIZERS</b> 85415 Single NX2 Steering Stabilizer or 95415 Single 9500 Steering Stabilizer 55358 Dual Steering Stabilizer Mounting Kit 85405 Dual NX2 Steering Stabilizer (2 req'd) or 95405 Dual 9500 Steering Stabilizer (2 req'd) or 98224019 Dual <b>FOX 2.0</b> Steering Stabilizer (2 req'd)	
	1	013010	4-Link Kit Box 1 of 2		
	1	013613	4-Link Kit Box 2 of 2		
	1	013519	Rear Block Kit w/o top overload or		
	1	013518	Rear Block Kit w/ top overload		
<b>6" Front / 6" Rear Standard Kit</b> Front Coil Spring & Bracket Kit Rear Leaf Spring <b>Kit #552H</b> 03FK7122	1	033611	Front Coil Springs (Diesel)	<b>T-CASE/DRIVELINE MODIFICATION</b> 123402 Carrier Bearing Drop Kit - 6" kit 123406 Carrier Bearing Drop Kit - 8" kit	
	1	013612	Front Box Kit		4
	2	003629	Rear Leaf Spring		5
	4	4033	5/8 x 3-5/8 x 12" Round U-bolt		
	1	85415	Single NX2 Steering Stabilizer		
<b>6" Front / 6" Rear 4-Link System</b> Front Coil Spring & 4-Link Rear Leaf Spring <b>Kit #553H</b> 15FK0003	1	033611	Front Coil Springs (Diesel)	<b>ACCESSORIES</b> 123408 RECOIL Traction Bar Mounting Kit (SRW Short Box Models) 123418 RECOIL Traction Bar Mounting Kit (SRW Long Box Models) 123409 RECOIL Traction Bar 123009 Rear Sway Bar Links 123020 Front Bumper Spacer Kit 123202 Adjustable Track Bar	
	1	013010	4-Link Kit Box 1 of 2		
	1	013613	4-Link Kit Box 2 of 2		
	2	003629	Rear Leaf Spring		
	4	4033	5/8 x 3-5/8 x 12" Round U-bolt		
<b>8" Front / 8" Rear 4-Link System</b> Front Coil Spring & 4-Link Rear Leaf Spring <b>Kit #567H</b> 46FK2503	1	033811	Front Coil Springs (Diesel)		3
	1	013810	4-Link Kit Box 1 of 2		4
	1	013812	4-Link Kit Box 2 of 2		
	2	003829	Rear Leaf Spring		
	1	85415	Single NX2 Steering Stabilizer		

#### Notes

- Removal of factory block required.
- This listing will give a tail low stance of approximately 3".
- Bumper spacer kit #123020 required to run 38" tires.
- Although extremely rare, front driveline vibration may occur.
- If equipped with 2-piece driveshaft, a Carrier Bearing Drop Kit is required.

#123023 - Front Dual Shock Hoop

## RADIUS ARM UPGRADE KIT

- These new radius arms are a great addition for F250/F350s running the 2" leveling kit. They should not be used in conjunction 4" radius arm drop bracket kits, but are a great addition to improve the performance over the factory arms when used with the 6" radius arm drop bracket kits.
- The arms are built from heavy wall DOM tubing with gusseted ends and large greaseable bushings
- Designed for 2-4" of lift, formed inward for maximum tire clearance.



Upgrade Kit #123251

CHEVROLET/GMC  
DODGE  
FORD  
JEEP  
SUZUKI  
TOYOTA  
PUSH-LOK  
SHOCKS/STEERING STABILIZERS  
ACCESSORIES  
APPAREL & PROMOTIONAL  
PRODUCT SPECS  
VEHICLE SPECS



# 2008-2010 FORD F250 F350 SUPER DUTY 4WD - GAS



Vehicle Specs: 4" Lift Kit - 35" Kumho A/T - 20" Eagle Alloy 064

2008-2010 FORD F250, F350 SUPER DUTY GAS ONLY 4WD					
LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES
<b>1" Front / 0" Rear</b>	1	013101	Front Coil Mounts	98224710 <b>FOX 2.0</b> Front Gas Shock (2 req'd)	
Front Coil Mount	2	85710	Front NX2 Shock	98224660 <b>FOX 2.0</b> Rear Gas Shock (2 req'd)	
<b>Kit #325H 29FK952</b>	2	85660	Rear NX2 Shock	55368 Single Steering Stabilizer Mounting Kit 85415 Single NX2 Steering Stabilizer <b>or</b> 95415 Single 9500 Steering Stabilizer	
<b>2" Front / 0" Rear</b>	1	013201	Front Coil Mounts	123408 RECOIL Traction Bar Mounting Kit (SRW Short Box Models)	
Front Coil Mount	2	85710	Front NX2 Shock	123418 RECOIL Traction Bar Mounting Kit (SRW Long Box Models)	
<b>Kit #326H 41FK713</b>	2	85660	Rear NX2 Shock	123409 RECOIL Traction Bar	
				123202 Adjustable Track Bar	
<b>4" Front / 3" Rear Standard Kit</b>	1	033412	Front Coil Springs (Gas)	98224700 <b>FOX 2.0</b> Front Gas Shock (2 req'd)	1 3
Front Coil Spring & Bracket Kit	1	013412	Front Box Kit	98224760 <b>FOX 2.0</b> Rear Gas Shock (2 req'd)	
Rear Block Kit	1	013519	Rear Block Kit w/o top overload <b>or</b>	123023 Dual Front Shock Mounting Kit	
<b>w/o top ovid Kit #542H</b>	1	013518	<b>Rear Block Kit w/ top overload</b>	85759 Dual NX2 Front Shocks (4 req'd) <b>or</b>	
<b>w/ top ovid Kit #543H</b>	2	85700	Single NX2 Steering Stabilizer	98224759 <b>Dual FOX 2.0 Front Gas Shock (4 req'd)</b>	
<b>25FK2421</b>	2	85760	Front NX2 Shock	85415 Single NX2 Steering Stabilizer <b>or</b> 95415 Single 9500 Steering Stabilizer	
<b>4" Front / 3" Rear 4-Link System</b>	1	033412	Front Coil Springs (Gas)	55358 Dual Steering Stabilizer Mounting Kit	
Front Coil Spring & Bracket Kit	1	013010	4-Link Kit Box 1 of 2	85405 Dual NX2 Steering Stabilizer (2 req'd) <b>or</b>	
Rear Block Kit	1	013012	4-Link Kit Box 2 of 2	95405 Dual 9500 Steering Stabilizer (2 req'd) <b>or</b>	
<b>w/o top ovid Kit #544H</b>	1	013519	Rear Block Kit w/o top overload <b>or</b>	98224019 <b>Dual FOX 2.0 Steering Stabilizer (2 req'd)</b>	
<b>w/ top ovid Kit #545H</b>	1	013518	<b>Rear Block Kit w/ top overload</b>	123408 RECOIL Traction Bar Mounting Kit (SRW Short Box Models)	
<b>23FK3902</b>	2	85700	Single NX2 Steering Stabilizer	123418 RECOIL Traction Bar Mounting Kit (SRW Long Box Models)	
<b>4" Front / 4" Rear Standard Kit</b>	1	033412	Front Coil Springs (Gas)	123409 RECOIL Traction Bar	
Front Coil Spring & Bracket Kit	2	003629	Front Leaf Spring	123009 Rear Sway Bar Links	
Rear Leaf Spring	4	4032	5/8 x 3-5/8 x 10" Round U-bolt	123020 Bumper Spacer Kit	
<b>Kit #556H 09FK4202</b>	1	85415	Single NX2 Steering Stabilizer	123202 Adjustable Track Bar	
	2	85700	Front NX2 Shock	123402 Carrier Bearing Drop Kit	
	2	85760	Rear NX2 Shock		
<b>4" Front / 4" Rear 4-Link System</b>	1	033412	Front Coil Springs (Gas)		
Front Coil Spring & 4-Link	1	013010	4-Link Kit Box 1 of 2		
Rear Leaf Spring	1	013012	4-Link Kit Box 2 of 3		
<b>Kit #557H 07FK5782</b>	2	003629	Rear Leaf Spring		
	4	4032	5/8 x 3-5/8 x 10" Round U-bolt		
	1	85415	Single NX2 Steering Stabilizer		
	2	85700	Front NX2 Shock		
	2	85760	Rear NX2 Shock		



### 4-LINK UPGRADE KIT

Upgrade your standard kit to a 4-link system for superior handling and on/off road performance

- 2-6" Lift Kits #123011/123012** .....89FK4301
- 8" Lift Kits #123011/013810** .....21FK478



See Notes ►

Continued ►



Improve your traction on the street, track, and trail with BDS RECOIL TrACTION Bars. This revolutionary floating design uses tunable dual-stage compression springs for improved traction without binding up like traditional traction bars. RECOIL TrACTION Bars use heavy-wall tubing with a forged flex end and easy bolt-on mounts.


**#123409-123408 - SRW Short Box Only** ..... 59FK678 **#123409-123418 - SRW Long Box Only** .....59FK678

For more information on RECOIL TrACTION Bars see page 157



# 2008-2010 FORD F250, F350 SUPER DUTY 4WD - GAS

## 2008-2010 FORD F250, F350 SUPER DUTY 4WD - GAS

LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES
<b>6" Front / 3" Rear Standard Kit</b> Rear Block Kit w/o top ovl Kit #562H w/ top ovl Kit #563H 40FK8341	1	033612	Front Coil Springs (Gas)	<b>SHOCKS</b> 98224750 FOX 2.0 Front Gas Shock - 6" kit (2 req'd) 98224751 FOX 2.0 Front Gas Shock - 8" kit (2 req'd) 98224760 FOX 2.0 Rear Gas Shock - 6" kit (2 req'd) 98224765 FOX 2.0 Rear Gas Shock - 8" kit (2 req'd) 123023 Dual Front Shock Mounting Kit 85769 Dual NX2 Front Shocks - 6" kit (4 req'd) or 98224769 Dual FOX 2.0 Front Gas Shock - 6" kit (4 req'd) 85761 Dual NX2 Front Shocks - 8" kit (4 req'd) or 98224761 Dual FOX 2.0 Front Gas Shock - 8" kit (4 req'd)	1
	1	013612	Front Box Kit		2
	1	013519	Rear Block Kit w/o top overload or		3
	1	013518	Rear Block Kit w/ top overload		5
	1	85415	Single NX2 Steering Stabilizer		6
	2	85750	Front NX2 Shock		
<b>6" Front / 3" Rear 4-Link System</b> Front Coil Spring & 4-Link Rear Block Kit w/o top ovl Kit #564H w/ top ovl Kit #565H 62FK1222	1	033612	Front Coil Springs (Gas)	<b>STEERING STABILIZERS</b> 85415 Single NX2 Steering Stabilizer 95415 Single 9500 Steering Stabilizer 55358 Dual Steering Stabilizer Mounting Kit 85405 Dual NX2 Steering Stabilizer (2 req'd) or 95405 Dual 9500 Steering Stabilizer (2 req'd) or 98224019 Dual FOX 2.0 Steering Stabilizer (2 req'd)	
	1	013010	4-Link Kit Box 1 of 2		
	1	013613	4-Link Kit Box 2 of 2		
	1	013519	Rear Block Kit w/o top overload or		
	1	013518	Rear Block Kit w/ top overload		
	1	85415	Single NX2 Steering Stabilizer		
<b>6" Front / 6" Rear Standard Kit</b> Front Coil Spring & Bracket Kit Rear Leaf Spring Kit #550H 24FK0222	1	033612	Front Coil Springs (Gas)	<b>T-CASE/DRIVELINE MODIFICATION</b> 123402 Carrier Bearing Drop Kit - 6" kit 123406 Carrier Bearing Drop Kit - 8" kit	
	1	013612	Front Box Kit		3
	2	003629	Rear Leaf Spring		5
	4	4033	5/8 x 3-5/8 x 12" Round U-bolt		6
	1	85415	Single NX2 Steering Stabilizer		
	2	85750	Front NX2 Shock		
<b>6" Front / 6" Rear 4-Link System</b> Front Coil Spring & 4-Link Rear Leaf Spring Kit #551H 46FK3003	1	033612	Front Coil Springs (Gas)	<b>ACCESSORIES</b> 123408 RECOIL Traction Bar Mounting Kit (SRW Short Box Models) 123418 RECOIL Traction Bar Mounting Kit (SRW Long Box Models) 123409 RECOIL Traction Bar 123009 Rear Sway Bar Links 123020 Bumper Spacer Kit - 8" kit 123202 Adjustable Track Bar	
	1	013010	4-Link Kit Box 1 of 2		
	1	013613	4-Link Kit Box 2 of 2		
	2	003629	Rear Leaf Spring		
	4	4033	5/8 x 3-5/8 x 12" Round U-bolt		
	1	85415	Single NX2 Steering Stabilizer		
<b>8" Front / 8" Rear 4-Link System</b> Front Coil Spring & 4-Link Rear Leaf Spring Kit #566H 46FK2503	1	033812	Front Coil Springs (Gas)	 #113209 Dual Add-A-Leaf	
	1	013810	4-Link Kit Box 1 of 2		3
	1	013812	4-Link Kit Box 2 of 2		4
	2	003829	Rear Leaf Spring		5
	1	85415	Single NX2 Steering Stabilizer		6
	2	85751	Front NX2 Shock		
2	85765	Rear NX2 Shock			

### Notes

1. Removal of factory block required.
2. This listing will give a tail low stance of approximately 3".
3. Front exhaust modification may be required to clear front driveshaft.
4. Bumper spacer kit #123020 required to run 38" tires.
5. Although extremely rare, front driveline vibration may occur.
6. If equipped with 2-piece driveshaft, a Carrier Bearing Drop Kit may be required.



2.5" C/O Upgrade Kit .....	#1516F	2.5 & 4" C/O Mounting Kit ...	#123212
4" C/O Upgrade Kit .....	#1517F	2.5" Coilovers.....	#88402148
6" C/O Upgrade Kit .....	#1514F	4" Coilovers.....	#88402149
6" DSC C/O Upgrade Kit....	#1514F DSC	6 & 8" C/O Mounting Kit.....	#123612
8" C/O Upgrade Kit .....	#1515F	6" Coilovers.....	#88402127
8" DSC C/O Upgrade Kit....	#1515F DSC	6" DSC Coilovers.....	#88406127
		8" Coilovers.....	#88402143
		8" DSC Coilovers.....	#88406143



Vehicle Specs: 8" Lift Kit - 38" Nitto M/T - 20" XD Rockstar


CHEVROLET/GMC  
DODGE  
FORD  
JEEP  
SUZUKI  
TOYOTA  
PUSH-LOK  
SHOCKS/STEERING STABILIZERS  
ACCESSORIES  
APPAREL & PROMOTIONAL  
PRODUCT SPECS  
VEHICLE SPECS



# 2005-2007 FORD F250, F350 SUPER DUTY 4WD - DIESEL



Vehicle Specs: 8" 4-Link Kit - 38" Toyo Open Country M/Ts - XD Strikes

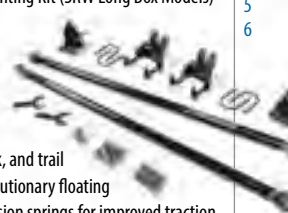2005-2007 FORD F250, F350 SUPER DUTY DIESEL ONLY 4WD							
LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES		
<b>1" Front / 0" Rear</b> Front Coil Mount <b>Kit #325H 29FK952</b>	1	013101	Front Coil Mounts	98224710			
	2	85710	Front NX2 Shock	98224660			
	2	85660	Rear NX2 Shock	55368			
<b>2" Front / 0" Rear</b> Front Coil Mount <b>Kit #326H 41FK713</b>	1	013201	Front Coil Mounts	85415			
	2	85710	Front NX2 Shock	95415			
	2	85660	Rear NX2 Shock	123408			
				123418			
				123409			
<b>4" Front / 3" Rear</b> <b>Standard Kit</b> Front Coil Spring & Bracket Kit Rear Block Kit <b>w/o top ovlid Kit #343H</b> <b>w/ top ovlid Kit #344H</b> 81FK4021	1	033411	Front Coil Springs (Diesel)	98224700	1 5 6		
	1	013411	Front Box Kit	98224760			
	1	013329	Rear Block Kit w/o top overload or	123013			
	1	013328	Rear Block Kit w/ top overload	85759			
	1	85415	Single NX2 Steering Stabilizer	98224759			
	2	85700	Front NX2 Shock	123008			
	2	85760	Rear NX2 Shock	85760			
	<b>4" Front / 3" Rear</b> <b>4-Link System</b> Front Coil Spring & Bracket Kit Rear Block Kit <b>w/o top ovlid Kit #345H</b> <b>w/ top ovlid Kit #346H</b> 89FK4502	1	033411	Front Coil Springs (Diesel)		98224760	2 5 6
		1	013010	4-Link Kit Box 1 of 2		85415	
		1	013011	4-Link Kit Box 2 of 2		95415	
1		013329	Rear Block Kit w/o top overload or	55358			
1		013328	Rear Block Kit w/ top overload	85405			
1		85415	Single NX2 Steering Stabilizer	95405			
2		85700	Front NX2 Shock	98224019			
2		85760	Rear NX2 Shock	123408			
<b>4" Front / 4" Rear</b> <b>Standard Kit</b> Front Coil Spring & Bracket Kit Rear Leaf Spring <b>Kit #347H 08FK0071</b>		1	033411	Front Coil Springs (Diesel)	123418	2 5 6	
		1	013411	Front Box Kit	123409		
	2	003609	Rear Leaf Spring	123202			
	4	4032	5/8 x 3-5/8 x 10" Round U-Bolt	123402			
	1	85415	Single NX2 Steering Stabilizer				
	2	85700	Front NX2 Shock				
	2	85760	Rear NX2 Shock				
	<b>4" Front / 4" Rear</b> <b>4-Link System</b> Front Coil Spring & Bracket Kit Rear Leaf Spring <b>Kit #348H 06FK1552</b>	1	033411	Front Coil Springs (Diesel)			<p><b>RECOIL TRACTION BARS</b></p> <p>Improve your traction on the street, track, and trail with BDS RECOIL Traction Bars. This revolutionary floating design uses tunable dual-stage compression springs for improved traction without binding up like traditional traction bars. RECOIL Traction Bars use heavy-wall tubing with a forged flex end and easy bolt-on mounts.</p> <p><b>#123409-123408 - SRW Short Box Only</b> ..... 59FK678</p> <p><b>#123409-123418 - SRW Long Box Only</b> ..... 59FK678</p> <p>For more information on RECOIL Traction Bars see page 157</p> 
		1	013010	4-Link Kit Box 1 of 2			
		1	013011	4-Link Kit Box 2 of 2			
2		003609	Rear Leaf Spring				
4		4032	5/8 x 3-5/8 x 10" Round U-Bolt				
1		85415	Single NX2 Steering Stabilizer				
2		85700	Front NX2 Shock				
2		85760	Rear NX2 Shock				

See Notes ▶

Continued ▶



# 2005-2007 FORD F250, F350 SUPER DUTY 4WD - DIESEL

## 2005-2007 FORD F250, F350 SUPER DUTY DIESEL ONLY 4WD (CONTINUED)

LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES		
<b>6" Front / 4.5" Rear Standard Kit</b> Front Coil Spring & Bracket Kit Rear Block Kit & Add-A-Leaf <b>w/o top ovlid Kit #353H</b> <b>w/ top ovlid Kit #354H</b> 24FK6541	1	033611	Front Coil Springs (Diesel)	<b>SHOCKS</b> 98224750 <b>FOX 2.0</b> Front Gas Shock - 6" kit (2 req'd) 98224751 <b>FOX 2.0</b> Front Gas Shock - 8" kit (2 req'd) 98224760 <b>FOX 2.0</b> Rear Gas Shock - 6" kit (2 req'd) 98224765 <b>FOX 2.0</b> Rear Gas Shock - 8" kit (2 req'd) 123013 Dual Front Shock Mounting Kit 85769 Dual NX2 Front Shock - 6" kit (4 req'd) or 98224769 <b>Dual FOX 2.0</b> Front Gas Shock - 6" kit (4 req'd) 85761 Dual NX2 Front Shock - 8" kit (4 req'd) or 98224761 <b>Dual FOX 2.0</b> Front Gas Shock - 8" kit (4 req'd) 123008 Dual Rear Shock Mounting Kit 85760 Dual NX2 Rear Shocks - 6" kit (4 req'd) or 98224760 <b>Dual FOX 2.0</b> Rear Gas Shock - 6" kit (4 req'd) 85765 Dual NX2 Rear Shocks - 8" kit (4 req'd) or 98224761 <b>Dual FOX 2.0</b> Rear Gas Shock - 8" kit (4 req'd) <b>STEERING STABILIZERS</b> 85415 Single NX2 Steering Stabilizer or 95415 Single 9500 Steering Stabilizer 55358 Dual Steering Stabilizer Mounting Kit 85405 Dual NX2 Steering Stabilizer (2 req'd) or 95405 Dual 9500 Steering Stabilizer (2 req'd) or 98224019 <b>Dual FOX 2.0</b> Steering Stabilizer (2 req'd) <b>T-CASE/DRIVELINE MODIFICATION</b> 123402 Carrier Bearing Drop Kit - 6" kit 123406 Carrier Bearing Drop Kit - 8" kit or 123402 Carrier Bearing Drop Kit - 8" kit (Shims) <b>ACCESSORIES</b> 123408 RECOIL Traction Bar Mounting Kit (SRW Short Box Models) 123418 RECOIL Traction Bar Mounting Kit (SRW Long Box Models) 123409 RECOIL Traction Bar 123202 Adjustable Track Bar 103001 Front HD Extended Brake Lines - 6" kits 103009 Rear HD Extended Brake Lines - 6" kits <b>4-LINK UPGRADE KIT</b> • Upgrade your standard kit to a 4-link system for superior handling and on/off road performance 2-6" Lift Kits #123011/123012 .....89FK4301 8" Lift Kits #123011/013810 .....21FK478	1		
	1	013611	Front Box Kit		4		
	1	013329	Rear Block Kit w/o top overload or		5		
	1	013328	Rear Block Kit w/ top overload		6		
	1	113218	Add-A-Leaf				
	1	85415	Single NX2 Steering Stabilizer				
	2	85750	Front NX2 Shock				
	2	85760	Rear NX2 Shock				
	<b>6" Front / 4.5" Rear 4-Link System</b> Front Coil Spring & Bracket Kit Rear Block Kit & Add-A-Leaf <b>w/o top ovlid Kit #355H</b> <b>w/ top ovlid Kit #356H</b> 79FK0612	1	033611		Front Coil Springs (Diesel)		
		1	013010		4-Link Kit Box 1 of 2		
1		013011	4-Link Kit Box 2 of 2				
1		013329	Rear Block Kit w/o top overload or				
1		013328	Rear Block Kit w/ top overload				
1		113218	Add-A-Leaf				
1		85415	Single NX2 Steering Stabilizer				
2		85750	Front NX2 Shock				
2		85760	Rear NX2 Shock				
<b>6" Front / 6" Rear Standard Kit</b> Front Coil Spring & Bracket Kit Rear Leaf Spring <b>Kit #357H</b> 58FK4681		1	033611	Front Coil Springs (Diesel)		5	
	1	013611	Front Box Kit		6		
	2	003609	Rear Leaf Spring				
	4	4033	5/8 x 3-5/8 x 12" Round U-Bolt				
	1	85415	Single NX2 Steering Stabilizer				
	2	85750	Front NX2 Shock				
	2	85760	Rear NX2 Shock				
	<b>6" Front / 6" Rear 4-Link System</b> Front Coil Spring & Bracket Kit Rear Leaf Spring <b>Kit #358H</b> 04FK9652	1	033611	Front Coil Springs (Diesel)			
		1	013010	4-Link Kit Box 1 of 2			
		1	013011	4-Link Kit Box 2 of 2			
2		003609	Rear Leaf Spring				
4		4033	5/8 x 3-5/8 x 12" Round U-Bolt				
1		85415	Single NX2 Steering Stabilizer				
2		85750	Front NX2 Shock				
2		85760	Rear NX2 Shock				
<b>8" Front / 8" Rear 4-Link System</b> Front Coil Spring & Bracket Kit Rear Leaf Spring <b>Kit #350H</b> 79FK4962		1	033811	Front Coil Springs (Diesel)		5	
		1	013810	4-Link Kit Box 1 of 2		6	
	1	013811	4-Link Kit Box 2 of 2				
	2	003809	Rear Leaf Spring				
	1	85415	Single NX2 Steering Stabilizer				
	2	85751	Front NX2 Shock				
	2	85765	Rear NX2 Shock				

### Notes

1. If equipped with top mounted overload or optional 3-7/8" rear block, use rear box kit #013318.
2. Removal of O.E. block in the rear is required.
3. Do not install the 4" rear block kit if subject vehicle is equipped with factory 3-7/8" stock block. Use rear spring option only.
4. For tail high stance, use 013419, 013418 in place of 3" block kit. Note: This can only be done on vehicles with a stock 2" block.
5. Front dual shock hoop requires different cylinders than what comes in the base kit.
6. If equipped with 2 piece driveshaft, a Carrier Bearing Drop Kit may be required.



#343H - 4" Standard Kit Shown w/ Optional FOX 2.0 Shocks

### 4-LINK UPGRADE KIT

- Upgrade your standard kit to a 4-link system for superior handling and on/off road performance

2-6" Lift Kits #123011/123012 .....89FK4301  
 8" Lift Kits #123011/013810 .....21FK478



Upgrade Kit #123251

### RADIUS ARM UPGRADE KIT

- These new radius arms are a great addition for F250/F350s running the 2" leveling kit. They should not be used in conjunction 4" radius arm drop bracket kits, but are a great addition to improve the performance over the factory arms when used with the 6" radius arm drop bracket kits.
- The arms are built from heavy wall DOM tubing with gusseted ends and large greaseable bushings
- Designed for 2-4" of lift, formed inward for maximum tire clearance.



CHEVROLET/GMC  
 DODGE  
 FORD  
 JEEP  
 SUZUKI  
 TOYOTA  
 PISH-LOK  
 SHOCKS/STEERING STABILIZERS  
 ACCESSORIES  
 APPAREL & PROMOTIONAL  
 PRODUCT SPECS  
 VEHICLE SPECS



# 2005-2007 FORD F250, F350 SUPER DUTY 4WD - GAS



## 4-LINK SYSTEM FEATURES

- Heavy-duty, greaseable 4-link system offers less than 1° of caster change through full wheel travel
- Replacement frame brackets mount to existing frame holes—no drilling or welding required
- Utilizes oversized, greaseable, urethane control arm bushings
- Sway bar and bump stop drops included
- Pitman arm included for steering correction
- Heavy-duty track bar relocation bracket to properly center the axle
- Steering stabilizer bracket cylinder sold separately



## STANDARD KIT FEATURES

- Heavy-duty track bar relocation bracket to properly center the axle
- Radius arm drop brackets designed to restore O.E. caster
- Pitman arm included to correct steering angles
- Sway bar and bump stop drops included for proper function
- Rear blocks or Glide-Ride rear leaf springs available, add-a-leaf available on 6" kit only
- Steering stabilizer bracket (cylinders sold separately)

## 8" 4-LINK SYSTEM FEATURES

- The 8" system includes similar components to the 4" & 6" 4-Link system with longer control arms and Kevlar lined stainless steel brake lines.

2005-2007 FORD F250, F350 SUPER DUTY 4WD - GAS					
LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES
<b>1" Front / 0" Rear</b> Front Coil Mount <b>Kit #325H 29FK952</b>	1	013101	Front Coil Mounts	98224710	<b>FOX 2.0 Front Gas Shock (2 req'd)</b> <b>FOX 2.0 Rear Gas Shock (2 req'd)</b> 55368 Single Steering Stabilizer Mounting Kit 85415 Single NX2 Steering Stabilizer <i>or</i> 95415 Single 9500 Steering Stabilizer 123408 RECOIL Traction Bar Mounting Kit (SRW Short Box Models) 123418 RECOIL Traction Bar Mounting Kit (SRW Long Box Models) 123409 RECOIL Traction Bar 123202 Adjustable Track Bar
	2	85710	Front NX2 Shock	98224660	
	2	85660	Rear NX2 Shock		
<b>2" Front / 0" Rear</b> Front Coil Mount <b>Kit #326H 41FK713</b>	1	013201	Front Coil Mounts		1 5 6
	2	85710	Front NX2 Shock		
	2	85660	Rear NX2 Shock		
<b>4" Front / 3" Rear</b> <b>Standard Kit</b> Front Coil Spring & Bracket Kit Rear Block Kit <b>w/o top ovlid Kit #327H</b> <b>w/ top ovlid Kit #328H</b> 03FK7021	1	033412	Front Coil Springs (Gas)	98224700	2 5 6
	1	013411	Front Box Kit	98224760	
	1	013329	Rear Block Kit w/o top overload <i>or</i>	123013	
	1	013328	Rear Block Kit w/ top overload	85759	
	1	85415	Single NX2 Steering Stabilizer	98224759	
	2	85700	Front NX2 Shock	123008	
<b>4" Front / 3" Rear</b> <b>4-Link System</b> Front Coil Spring & Bracket Kit Rear Block Kit <b>w/o top ovlid Kit #329H</b> <b>w/ top ovlid Kit #330H</b> 01FK8502	2	85760	Rear NX2 Shock	85760	2 5 6
	1	033412	Front Coil Springs (Gas)	98224760	
	1	013010	4-Link Kit Box 1 of 2	85415	
	1	013011	4-Link Kit Box 2 of 2	95415	
	1	013329	Rear Block Kit w/o top overload <i>or</i>	55358	
	1	013328	Rear Block Kit w/ top overload	85405	
<b>4" Front / 4" Rear</b> <b>Standard Kit</b> Front Coil Spring & Bracket Kit Rear Leaf Spring <b>Kit #331H 29FK3071</b>	1	85415	Single NX2 Steering Stabilizer	95405	2 5 6
	2	85700	Front NX2 Shock	98224019	
	2	85760	Rear NX2 Shock	123202	
	1	033412	Front Coil Springs (Gas)	123408	
	1	013411	Front Box Kit	123418	
	2	003609	Rear Leaf Spring	123409	
<b>4" Front / 4" Rear</b> <b>4-Link System</b> Front Coil Spring & Bracket Kit Rear Leaf Spring <b>Kit #332H 37FK4552</b>	4	4032	5/8 x 3-5/8 x 10" Round U-Bolt	123402	2 5 6
	1	85415	Single NX2 Steering Stabilizer		
	2	85700	Front NX2 Shock		
	2	85760	Rear NX2 Shock		
	1	033412	Front Coil Springs (Gas)		
	1	013010	4-Link Kit Box 1 of 2		
<b>4" Front / 4" Rear</b> <b>4-Link System</b> Front Coil Spring & Bracket Kit Rear Leaf Spring <b>Kit #332H 37FK4552</b>	1	013011	4-Link Kit Box 2 of 2		2 5 6
	2	003609	Rear Leaf Spring		
	4	4032	5/8 x 3-5/8 x 10" Round U-Bolt		
	1	85415	Single NX2 Steering Stabilizer		
	2	85700	Front NX2 Shock		
	2	85760	Rear NX2 Shock		



Improve your traction on the street, track, and trail with BDS RECOIL Traction Bars. This revolutionary floating design uses tunable dual-stage compression springs for improved traction without binding up like traditional traction bars. RECOIL Traction Bars use heavy-wall tubing with a forged flex end and easy bolt-on mounts.

**#123409-123408 - SRW Short Box Only** ..... 59FK678

**#123409-123418 - SRW Long Box Only** ..... 59FK678

For more information on RECOIL Traction Bars see page 157

See Notes ► Continued ►

CHEVROLET/GMC  
DODGE  
FORD  
JEEP  
SUZUKI  
TOYOTA  
PUSH-LOCK  
SHOCKS/STEERING STABILIZERS  
ACCESSORIES  
APPROX. & PROMOTIONAL  
PRODUCT SPECS  
VEHICLE SPECS



# 2005-2007 FORD F250, F350 SUPER DUTY 4WD - GAS

## 4-LINK SYSTEM FEATURES

- Frame mounting bracket replaces OE bracket to increase ground clearance vs. a standard drop kit
- Less than 1 degree caster change through wheel travel giving you better on and offroad control
- Massive 2.5" O.D., greaseable, urethane control arm bushings
- 2" O.D. x 0.250" wall DOM tubing is used to make these extremely rugged control arms



Shown in gray, available in black only.

### 2005-2007 FORD F250, F350 SUPER DUTY GAS ONLY 4WD (CONTINUED)

LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES
<b>6" Front / 4.5" Rear Standard Kit</b> Front Coil Spring & Bracket Kit Rear Block Kit & Add-A-Leaf <b>w/o top ovid Kit #337H</b> <b>w/ top ovid Kit #338H</b> 55FK9541	1	033612	Front Coil Springs (Gas)	<b>SHOCKS</b> 98224750 <b>FOX 2.0</b> Front Gas Shock - 6" kit (2 req'd) 98224751 <b>FOX 2.0</b> Front Gas Shock - 8" kit (2 req'd) 98224760 <b>FOX 2.0</b> Rear Gas Shock - 6" kit (2 req'd) 98224765 <b>FOX 2.0</b> Rear Gas Shock - 8" kit (2 req'd) 123013 Dual Front Shock Mounting Kit 85769 Dual NX2 Front Shock - 6" kit (4 req'd) <b>or</b> 98224769 Dual <b>FOX 2.0</b> Front Gas Shock - 6" kit (4 req'd) 85761 Dual NX2 Front Shock - 8" kit (4 req'd) <b>or</b> 98224761 Dual <b>FOX 2.0</b> Front Gas Shock - 8" kit (4 req'd) 123008 Dual Rear Shock Mounting Kit - 6" kit 85760 Dual NX2 Rear Shock - 6" kit (4 req'd) <b>or</b> 98224760 Dual <b>FOX 2.0</b> Rear Gas Shock - 6" kit (4 req'd) 123008 Dual Rear Shock Mounting Kit - 8" kit 85765 Dual NX2 Rear Shock - 8" kit (4 req'd) <b>or</b> 98224761 Dual <b>FOX 2.0</b> Rear Gas Shock - 8" kit (4 req'd)	1
	1	013611	Front Box Kit		4
	1	013329	Rear Block Kit w/o top overload <b>or</b>		5
	1	013328	Rear Block Kit w/ top overload		6
	1	113218	Add-A-Leaf		
	1	85415	Single NX2 Steering Stabilizer		
<b>6" Front / 4.5" Rear 4-Link System</b> Front Coil Spring & Bracket Kit Rear Block Kit & Add-A-Leaf <b>w/o top ovid Kit #339H</b> <b>w/ top ovid Kit #340H</b> 90FK4612	1	033612	Front Coil Springs (Gas)	<b>STEERING STABILIZERS</b> 85415 Single NX2 Steering Stabilizer 95415 Single 9500 Steering Stabilizer 55358 Dual Steering Stabilizer Mounting Kit - 6" kit 85405 Dual NX2 Steering Stabilizer (2 req'd) <b>or</b> 95405 Dual 9500 Steering Stabilizer (2 req'd) - 6" kit <b>or</b> 98224019 Dual <b>FOX 2.0</b> Steering Stabilizer (2 req'd) 55358 Dual Steering Stabilizer Mounting Kit - 8" kit 85405 Dual NX2 Steering Stabilizer (2 req'd) - 8" kit <b>or</b> 95415 Dual 9500 Steering Stabilizer (2 req'd) - 8" kit <b>or</b> 98224019 Dual <b>FOX 2.0</b> Steering Stabilizer (2 req'd)	5
	1	013010	4-Link Kit Box - 1 of 2		6
	1	013011	4-Link Kit Box - 2 of 2		
	1	013329	Rear Block Kit - w/o top overload <b>or</b>		
	1	013328	Rear Block Kit w/ top overload		
	1	113218	Add-A-Leaf		
<b>6" Front / 6" Rear Standard Kit</b> Front Coil Spring & Bracket Kit Rear Leaf Spring <b>Kit #341H</b> 79FK7681	1	033612	Front Coil Springs (Gas)	<b>T-CASE/DRIVELINE MODIFICATION</b> 123402 Carrier Bearing Drop Kit - 6" kit 123406 Carrier Bearing Drop Kit - 8" kit <b>or</b> 123402 Carrier Bearing Drop Kit - 8" kit (Shims)	5
	1	013611	Front Box Kit		6
	2	003609	Rear Leaf Spring		
	4	4033	5/8 x 3-5/8 x 12" Round U-Bolt		
	1	85415	Single NX2 Steering Stabilizer		
	2	85750	Front NX2 Shock		
<b>6" Front / 6" Rear 4-Link System</b> Front Coil Spring & Bracket Kit Rear Leaf Spring <b>Kit #342H</b> 25FK2752	1	033612	Front Coil Springs (Gas)	<b>ACCESSORIES</b> 103001 Front SS Brake Line (pr) - 6" kit 103009 Rear SS Brake Line - 6" kit 123202 Adjustable Track Bar 123408 RECOIL Traction Bar Mounting Kit (SRW Short Box Models) 123418 RECOIL Traction Bar Mounting Kit (SRW Long Box Models) 123409 RECOIL Traction Bar	5
	1	013010	4-Link Kit Box - 1 of 2		6
	1	013011	4-Link Kit Box - 2 of 2		
	2	003609	Rear Leaf Spring		
	4	4033	5/8 x 3-5/8 x 12" Round U-Bolt		
	1	85415	Single NX2 Steering Stabilizer		
<b>8" Front / 8" Rear 4-Link System</b> Front Coil Spring & Bracket Kit Rear Leaf Spring <b>Kit #531H</b> 79FK4962	1	033812	Front Coil Springs (Gas)		
	1	013810	4-Link Kit Box - 1 of 2		
	1	013811	4-Link Kit Box - 2 of 2		
	2	003809	Rear Leaf Spring		
	4	4033	5/8 x 3-5/8 x 12" Round U-Bolt		
	1	85415	Single NX2 Steering Stabilizer		
2	85751	Front NX2 Shock			
2	85765	Rear NX2 Shock			

#### Notes

1. If equipped with top mounted overload or optional 3-7/8" rear block, use rear box kit #013318.
2. Removal of O.E. block in the rear is required.
3. Do not install the 4" rear block kit if subject vehicle is equipped with factory 3-7/8" stock block. Use rear spring option only.
4. For tail high stance, use 013419, 013418 in place of 3" block kit. Note: This should only be done on vehicles with a stock 2" block.
5. Front dual shock hoop requires different cylinders than what comes in the base kit.
6. If equipped with 2 piece driveshaft, a Carrier Bearing Drop Kit is required.

## RADIUS ARM UPGRADE KIT



Upgrade Kit #123251

- These new radius arms are a great addition for F250/F350s running the 2" leveling kit. They should not be used in conjunction 4" radius arm drop bracket kits, but are a great addition to improve the performance over the factory arms when used with the 6" radius arm drop bracket kits.
- The arms are built from heavy wall DOM tubing with gusseted ends and large greaseable bushings
- Designed for 2-4" of lift, formed inward for maximum tire clearance.




CHEVROLET/GMC  
DODGE  
FORD  
JEEP  
SUZUKI  
TOYOTA  
PUSH-LOK  
SHOCKS/STEERING STABILIZERS  
ACCESSORIES  
APPAREL & PROMOTIONAL  
PRODUCT SPECS  
VEHICLE SPECS



# 1999-2004 FORD F250, F350 SUPER DUTY

3/1/1999–2004 FORD F250, F350 SUPER DUTY 4WD WITH CURVED FRONT U-BOLTS						
LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES		NOTES
<b>2.5" Front / 0" Rear</b> Front Leaf Spring <b>Kit #320H</b> 06FK169	2	003202	Front Leaf Spring	98224650	<b>FOX</b> 2.0 Front Gas Shock (2 req'd)	2
	1	013253	Front Box Kit	98224660	<b>FOX</b> 2.0 Rear Gas Shock (2 req'd)	4
	2	85650	Front NX2 Shock	85405	Single NX2 Steering Stabilizer	6
	2	85660	Rear NX2 Shock	123408 123418 123409	RECOIL Traction Bar Mounting Kit (SRW Short Box Models) RECOIL Traction Bar Mounting Kit (SRW Long Box Models) RECOIL Traction Bar	
<b>4" Front / 3" Rear</b> Front Leaf Spring 3" Rear Block <b>w/o top ovd Kit #321H</b> <b>w/ top ovd Kit #322H</b> 93FK5521	2	003402	Front Leaf Spring	98224650	<b>FOX</b> 2.0 Front Gas Shock (2 req'd)	1
	1	013405	Front Box Kit	98224760	<b>FOX</b> 2.0 Rear Gas Shock (2 req'd)	4
	1	013329	Rear Kit w/ 3-5/8" Axle Tube w/o Top Mounted Over Load or	553001	Dual Front Shock Mounting Kit	5
	1	013328	Rear Kit w/ 3-5/8" Axle Tube with Top Mounted Over Load	85650 98224650	Dual NX2 Front Shock (4 req'd) or Dual <b>FOX</b> 2.0 Front Gas Shock (4 req'd)	6
	2	85650	Front NX2 Shock	123007	Dual Rear Shock Mounting Kit	
	2	85760	Rear NX2 Shock	85760	Dual NX2 Rear Shock (4 req'd) or	
				98224760	Dual <b>FOX</b> 2.0 Rear Gas Shock (4 req'd)	
<b>6" Front / 4.5" Rear</b> Front Leaf Spring Rear Block Kit & Add-A-Leaf <b>w/o top ovd Kit #1300H</b> <b>w/ top ovd Kit #1301H</b> 48FK5941	2	003602	Front Leaf Spring	98224660	<b>FOX</b> 2.0 Front Gas Shock (2 req'd)	1
	1	013006	Front Box Kit	98224760	<b>FOX</b> 2.0 Rear Gas Shock (2 req'd)	2
	1	013329	Rear Kit w/ 3-5/8" Axle Tube w/o Top Mounted Over Load or	553001	Dual Front Shock Mounting Kit	3
	1	013328	Rear Kit w/ 3-5/8" Axle Tube with Top Mounted Over Load	85660 98224660	Dual NX2 Front Shock (4 req'd) or Dual <b>FOX</b> 2.0 Front Gas Shock (4 req'd)	4
	1	113218	Rear Add-A-Leaf	123007	Dual Rear Shock Mounting Kit	5
	2	85660	Front NX2 Shock	85760	Dual NX2 Rear Shock (4 req'd) or	6
	2	85760	Rear NX2 Shock	98224760	Dual <b>FOX</b> 2.0 Rear Gas Shock (4 req'd)	
<b>6" Front / 6" Rear</b> Front Leaf Spring Rear Leaf Spring <b>Kit #323H</b> 43FK8981	2	003602	Front Leaf Spring	Page 146	Steering Stabilizers	1
	2	003609	Rear Leaf Spring	123408	RECOIL Traction Bar Mounting Kit (SRW Short Box Models)	2
	1	013006	Front Box Kit	123418	RECOIL Traction Bar Mounting Kit (SRW Long Box Models)	3
	1	013009	Rear Box Kit	123409	RECOIL Traction Bar	4
	2	85660	Front NX2 Shock	123402	Carrier Bearing Drop Kit	5
	2	85760	Rear NX2 Shock	123005	Rear Anti-Sway Bar Link Kit	6
	<b>8" Front / 8" Rear</b> Front Leaf Spring Rear Leaf Spring <b>Kit #324H</b> 16FK7391	2	003802	Front Leaf Spring	98224660	<b>FOX</b> 2.0 Front Gas Shock (2 req'd)
2		003809	Rear Leaf Spring	98224765	<b>FOX</b> 2.0 Rear Gas Shock (2 req'd)	2
1		013006	Front Box Kit	Page 146	Steering Stabilizers	3
1		013009	Rear Box Kit	553001	Dual Front Shock Mounting Kit	4
2		85660	Front NX2 Shock	85660	Dual NX2 Front Shock (4 req'd) or	5
2		85765	Rear NX2 Shock	98224660	Dual <b>FOX</b> 2.0 Front Gas Shock (4 req'd)	6
				123007	Dual Rear Shock Mounting Kit	
				85760	Dual NX2 Rear Shock (4 req'd) or	
			98224765	Dual <b>FOX</b> 2.0 Rear Gas Shock (4 req'd)		
			123408	RECOIL Traction Bar Mounting Kit (SRW Short Box Models)		
			123418	RECOIL Traction Bar Mounting Kit (SRW Long Box Models)		
			123409	RECOIL Traction Bar		
			123406	Carrier Bearing Drop Kit		
			123005	Rear Anti-Sway Bar Link Kit		


See Notes ►

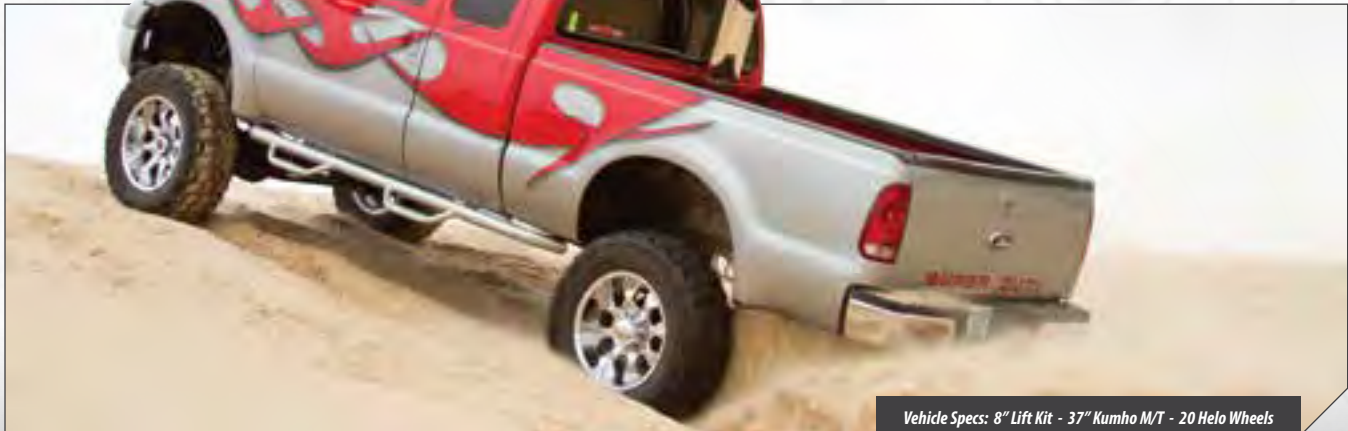

Vehicle Specs: 8" Lift Kit - 37" Kumho M/T - 20 Halo Wheels



# 1999-2004 FORD F250, F350 SUPER DUTY

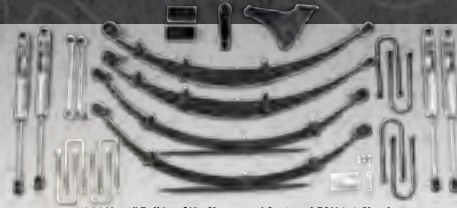

#323H - 6" Full Leaf Kit Shown w/ Optional FOX 2.0 Shocks

## REAR DUAL SHOCK BRACKET KIT

#123007 .....67FK413

Note: Will not fit dually equipped vehicles or Excursion



3/1/1999-2004 FORD F250, F350 SUPER DUTY 4WD WITH SQUARE FRONT U-BOLTS						
LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES		NOTES
<b>2.5" Front / 0" Rear</b> Front Leaf Spring Kit #313H 06FK169	2	003202	Front Leaf Spring	98224650	<b>FOX 2.0</b> Front Gas Shock (2 req'd)	2
	1	013252	Front Box Kit	98224660	<b>FOX 2.0</b> Rear Gas Shock (2 req'd)	4
	2	85650	Front NX2 Shock	553001	Dual Front Shock Mounting Kit	6
	2	85660	Rear NX2 Shock	85650	Dual NX2 Front Shock (4 req'd) or	
				98224650	Dual <b>FOX 2.0</b> Front Gas Shock (4 req'd)	
			123007	Dual Rear Shock Mounting Kit		
			85660	Dual NX2 Rear Shock (4 req'd) or		
			98224660	Dual <b>FOX 2.0</b> Rear Gas Shock (4 req'd)		
			Page 146	Steering Stabilizers		
			123408	RECOIL Traction Bar Mounting Kit (SRW Short Box Models)		
			123418	RECOIL Traction Bar Mounting Kit (SRW Long Box Models)		
			123409	RECOIL Traction Bar		
<b>4" Front / 3" Rear</b> Front Leaf Spring Rear 3" Block Kit w/o top ovid Kit #314H w/ top ovid Kit #315H 93FK5521	2	003402	Front Leaf Spring	98224650	<b>FOX 2.0</b> Front Gas Shock (2 req'd)	1
	1	013404	Front Box Kit	98224760	<b>FOX 2.0</b> Rear Gas Shock (2 req'd)	4
	1	013329	Rear Kit w/ 3-5/8" Axle Tube w/o Top Mounted Over Load or	553001	Dual Front Shock Mounting Kit	5
	1	013328	Rear Kit w/ 3-5/8" Axle Tube with Top Mounted Over Load	85650	Dual NX2 Front Shock (4 req'd) or	
				98224650	Dual <b>FOX 2.0</b> Front Gas Shock (4 req'd)	6
				123007	Dual Rear Shock Mounting Kit	
				85760	Dual NX2 Rear Shock (4 req'd) or	
			85760	Dual <b>FOX 2.0</b> Rear Gas Shock (4 req'd)		
			98224760	Dual <b>FOX 2.0</b> Rear Gas Shock (4 req'd)		
			Page 146	Steering Stabilizers		
			123408	RECOIL Traction Bar Mounting Kit (SRW Short Box Models)		
			123418	RECOIL Traction Bar Mounting Kit (SRW Long Box Models)		
			123409	RECOIL Traction Bar		
			123402	Carrier Bearing Drop Kit		
<b>6" Front / 4.5" Rear</b> Front Leaf Spring Rear Block Kit & Add-A-Leaf w/o top ovid Kit #1302H w/ top ovid Kit #1303H 48FK5941	2	003602	Front Leaf Spring	98224660	<b>FOX 2.0</b> Front Gas Shock (2 req'd)	1
	1	013005	Front Box Kit	98224760	<b>FOX 2.0</b> Rear Gas Shock (2 req'd)	2
	1	013329	Rear Kit w/ 3-5/8" Axle Tube w/o Top Mounted Over Load or	553001	Dual Front Shock Mounting Kit	3
	1	013328	Rear Kit w/ 3-5/8" Axle Tube with Top Mounted Over Load	85660	Dual NX2 Front Shock (4 req'd) or	4
				98224660	Dual <b>FOX 2.0</b> Front Gas Shock (4 req'd)	5
				123007	Dual Rear Shock Mounting Kit	6
				85760	Dual NX2 Rear Shock (4 req'd) or	
			85760	Dual <b>FOX 2.0</b> Rear Gas Shock (4 req'd)		
			98224760	Dual <b>FOX 2.0</b> Rear Gas Shock (4 req'd)		
			Page 146	Steering Stabilizers		
			123408	RECOIL Traction Bar Mounting Kit (SRW Short Box Models)		
			123418	RECOIL Traction Bar Mounting Kit (SRW Long Box Models)		
			123409	RECOIL Traction Bar		
			123402	Carrier Bearing Drop Kit		
			123005	Rear Anti-Sway Bar Link Kit		
<b>6" Front / 6" Rear</b> Front Leaf Spring Rear Leaf Spring Kit #316H 43FK8981	2	003602	Front Leaf Spring	98224660	<b>FOX 2.0</b> Front Gas Shock (2 req'd)	1
	2	003609	Rear Leaf Spring	98224765	<b>FOX 2.0</b> Rear Gas Shock (2 req'd)	2
	1	013005	Front Box Kit	553001	Dual Front Shock Mounting Kit	3
	1	013009	Rear Box Kit	85660	Dual NX2 Front Shock (4 req'd) or	4
	2	85660	Front NX2 Shock	98224660	Dual <b>FOX 2.0</b> Front Gas Shock (4 req'd)	5
	2	85760	Rear NX2 Shock	123007	Dual Rear Shock Mounting Kit	6
				85765	Dual NX2 Rear Shock (4 req'd) or	
			98224765	Dual <b>FOX 2.0</b> Rear Gas Shock (4 req'd)		
			Page 146	Steering Stabilizers		
			123408	RECOIL Traction Bar Mounting Kit (SRW Short Box Models)		
			123418	RECOIL Traction Bar Mounting Kit (SRW Long Box Models)		
			123409	RECOIL Traction Bar		
			123406	Carrier Bearing Drop Kit		
			123005	Rear Anti-Sway Bar Link Kit		
<b>8" Front / 8" Rear</b> Front Leaf Spring Rear Leaf Spring Kit #317H 16FK7391	2	003802	Front Leaf Spring	98224660	<b>FOX 2.0</b> Front Gas Shock (2 req'd)	1
	2	003809	Rear Leaf Spring	98224765	<b>FOX 2.0</b> Rear Gas Shock (2 req'd)	2
	1	013005	Front Box Kit	553001	Dual Front Shock Mounting Kit	3
	1	013009	Rear Box Kit	85660	Dual NX2 Front Shock (4 req'd) or	4
	2	85660	Front NX2 Shock	98224660	Dual <b>FOX 2.0</b> Front Gas Shock (4 req'd)	5
	2	85765	Rear NX2 Shock	123007	Dual Rear Shock Mounting Kit	6
				85765	Dual NX2 Rear Shock (4 req'd) or	
			98224765	Dual <b>FOX 2.0</b> Rear Gas Shock (4 req'd)		
			Page 146	Steering Stabilizers		
			123408	RECOIL Traction Bar Mounting Kit (SRW Short Box Models)		
			123418	RECOIL Traction Bar Mounting Kit (SRW Long Box Models)		
			123409	RECOIL Traction Bar		
			123406	Carrier Bearing Drop Kit		
			123005	Rear Anti-Sway Bar Link Kit		

Notes

1. If equipped with a two-piece rear driveshaft order BDS #123402 or #123406.
2. The stock Super Duty came with a rear 2", 3", or 4" rear block. You may need to change the block and/or u-bolts in order to level the truck.
3. The front driveshaft will need to be lengthened and/or clearance ground depending on how the vehicle is equipped.
4. #003202, #003402, #003602, #003609, #003802, and #003809 come with OE rubber bushings installed.
5. Rear kits are for single wheel F350 with Dana 70 only. Dual wheel F350 with Dana 80 requires 3-7/8" wide u-bolts.
6. Confirm build date, front u-bolt type and rear leaf pack overload position before ordering.

CHEVROLET/GMC  
DODGE  
FORD  
JEEP  
SUZUKI  
TOYOTA  
POSI-LOK  
SHOCKS/STEERING STABILIZERS  
ACCESSORIES  
APPAREL & PROMOTIONAL  
PRODUCT SPECS  
VEHICLE SPECS



# UP TO 2/28/99 FORD F250, F350 SUPER DUTY

## UP TO 2/28/1999 FORD F250, F350 SUPER DUTY 4WD

LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES
<b>4" Front / 2.5" Rear</b> Front Leaf Spring Rear Block Kit <b>w/o top ovid Kit #309H</b> <b>w/ top ovid Kit #310H</b> 93FK5521	2	003402	Front Leaf Spring	98224650 FOX 2.0 Front Gas Shock (2 req'd)	1
	1	013402	Front Box Kit	98224760 FOX 2.0 Rear Gas Shock (2 req'd)	4
	1	013329	Rear Kit w/ 3-5/8" Axle Tube w/o Top Mounted Over Load or	553001 Dual Front Shock Mounting Kit	5
	1	013328	Rear Kit w/ 3-5/8" Axle Tube with Top Mounted Over Load	85650 Dual NX2 Front Shock (4 req'd) or	6
	2	85650	Front NX2 Shock	98224650 Dual FOX 2.0 Front Gas Shock (4 req'd)	
	2	85760	Rear NX2 Shock	123007 Dual Rear Shock Mounting Kit	
				85760 Dual NX2 Rear Shock (4 req'd) or	
				98224760 Dual FOX 2.0 Rear Gas Shock (4 req'd)	
				Page 146 Steering Stabilizers	
				123408 RECOIL Traction Bar Mounting Kit (SRW Short Box Models)	
			123418 RECOIL Traction Bar Mounting Kit (SRW Long Box Models)		
			123409 RECOIL Traction Bar		
			123402 Carrier Bearing Drop Kit		
<b>6" Front / 6" Rear</b> Front Leaf Spring Rear Leaf Spring <b>Kit #311H 01FK4881</b>	2	003602	Front Leaf Spring	98224660 FOX 2.0 Front Gas Shock (2 req'd)	1
	2	003609	Rear Leaf Spring	98224760 FOX 2.0 Rear Gas Shock (2 req'd)	2
	1	013004	Front Box Kit	553001 Dual Front Shock Mounting Kit	3
	1	013009	Rear Box Kit	85660 Dual NX2 Front Shock (4 req'd) or	4
	2	85660	Front NX2 Shock	98224660 Dual FOX 2.0 Front Gas Shock (4 req'd)	5
	2	85760	Rear NX2 Shock	123007 Dual Rear Shock Mounting Kit	6
				85760 Dual NX2 Rear Shock (4 req'd) or	
				98224760 Dual FOX 2.0 Rear Gas Shock (4 req'd)	
				Page 146 Steering Stabilizers	
				123408 RECOIL Traction Bar Mounting Kit (SRW Short Box Models)	
			123418 RECOIL Traction Bar Mounting Kit (SRW Long Box Models)		
			123409 RECOIL Traction Bar		
			123402 Carrier Bearing Drop Kit		
			123005 Rear Anti-Sway Bar Link Kit		
<b>8" Front / 8" Rear</b> Front Leaf Spring Rear Leaf Spring <b>Kit #312H 83FK3291</b>	2	003802	Front Leaf Spring	98224660 FOX 2.0 Front Gas Shock (2 req'd)	1
	2	003809	Rear Leaf Spring	98224765 FOX 2.0 Rear Gas Shock (2 req'd)	2
	1	013004	Front Box Kit	553001 Dual Front Shock Mounting Kit	3
	1	013009	Rear Box Kit	85660 Dual NX2 Front Shock (4 req'd) or	4
	2	85660	Front NX2 Shock	98224660 Dual FOX 2.0 Front Gas Shock (4 req'd)	5
	2	85765	Rear NX2 Shock	123007 Dual Rear Shock Mounting Kit	6
				85765 Dual NX2 Rear Shock (4 req'd) or	
				98224765 Dual FOX 2.0 Rear Gas Shock (4 req'd)	
				Page 146 Steering Stabilizers	
				123408 RECOIL Traction Bar Mounting Kit (SRW Short Box Models)	
			123418 RECOIL Traction Bar Mounting Kit (SRW Long Box Models)		
			123409 RECOIL Traction Bar		
			123406 Carrier Bearing Drop Kit		
			123005 Rear Anti-Sway Bar Link Kit		

- Notes
1. If equipped with a two-piece rear driveshaft order BDS #123402 or #123406.
  2. The stock Super Duty came with a rear 2", 3", or 4" rear block. You may need to change the block and/or u-bolts in order to level the truck.
  3. The front driveshaft will need to be lengthened and/or clearance ground depending on how the vehicle is equipped.
  4. #003402, #003602, #003609, #003802, and #003809 come with OE rubber bushings installed.
  5. Rear kits are for single wheel F350 with Dana 70 only. Dual wheel F350 with Dana 80 requires 3-7/8" wide u-bolts.
  6. Confirm build date, front u-bolt type and rear leaf pack overload position before ordering.

## 1980-1996 FORD F250 TTB FRONT AXLE 4WD

LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES
<b>4" Front / 3" Rear</b> Front Leaf Spring Rear 3" Block Kit <b>'87-'96 Kit #306H</b> <b>'80-'86 Kit #307H</b> 60FK3031	2	003401	Front Leaf Spring	Page 146 Steering Stabilizers	1
	1	013401	Front Box Kit	123401 Anti-Sway Bar Drop Kit	2
	1	013309	Rear Box Kit	98224650 FOX Front Gas Shock (2 req'd)	3
	2	55650	87-96 Front Shock or	98224660 FOX Rear Gas Shock (2 req'd)	
	2	55820	80-86 Front Shock		
	2	55660	Rear 5500 Shock		

## 1980-1996 FORD F350 WITH MONOBEAM FRONT AXLE 4WD

LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES	NOTES
<b>4" Front / 3" Rear</b> Front Leaf Spring Rear 3" Block Kit <b>Kit #308H 28FK9501</b>	2	003401	Front Leaf Spring	Page 146 Steering Stabilizers	1
	1	013403	Front Box Kit	123401 Anti-Sway Bar Drop Kit	2
	1	013308	Rear Box Kit	98224650 FOX Front Gas Shock (2 req'd)	
	1	083401	Pitman Arm (PS)	98224660 FOX Rear Gas Shock (2 req'd)	
	2	55650	Front 5500 Shock		
	2	55660	Rear 5500 Shock		

- Notes
1. #003401 comes with OE rubber bushings installed.
  2. Not recommended for diesel applications.
  3. Pitman arm included in the #013401 Front Box Kit.



# 2000-2005 FORD EXCURSION



Vehicle Specs: 8" Lift Kit - 37" Nitto M/T - 20" RBP 91R

2000-2005 FORD EXCURSION 4WD						
LIFT & METHOD	QTY	PART#	DESCRIPTION	RECOMMENDED ACCESSORIES		NOTES
<b>4" Front / 3" Rear</b> Front Leaf Spring Rear Block Kit <b>Kit #300H</b> 96FK3011	2	003202	Front Leaf Spring	98224650	<b>FOX</b> 2.0 Front Gas Shock (2 req'd)	1
	1	013253	Front Box Kit	98224662	<b>FOX</b> 2.0 Rear Gas Shock (2 req'd)	2
	1	013329	Rear 5" Block Kit	553001	Dual Front Shock Mounting Kit	6
	2	85650	Front NX2 Shock	85650	Dual NX2 Front Shock (4 req'd) or	7
	2	85662	Rear NX2 Shock	98224650	Dual <b>FOX</b> 2.0 Front Gas Shock (4 req'd)	8
<b>4" Front / 4" Rear</b> Front Leaf Spring Rear Leaf Spring <b>Kit #301H</b> 83FK4951	2	003202	Front Leaf Spring	Page 146	Steering Stabilizers	
	1	013253	Front Box Kit	123004	Rear Sway Bar Links 13.5" long	
	2	003609	Rear Leaf Spring			
	1	013009	Rear Box Kit			
	2	85650	Front NX2 Shock			
	2	85662	Rear NX2 Shock			
<b>6" Front / 5" Rear</b> Front Leaf Spring Rear 5" Block Kit & Add-A-Leaf <b>Kit #302H</b> 68FK6821	2	003402	Front Leaf Spring	98224650	<b>FOX</b> 2.0 Front Gas Shock (2 req'd)	1
	1	013405	Front Box Kit	98224762	<b>FOX</b> 2.0 Rear Gas Shock (2 req'd)	2
	1	069509	Rear 5" Block Kit	553001	Dual Front Shock Mounting Kit	6
	1	113206	Rear Add-A-Leafs	85650	Dual NX2 Front Shock (4 req'd) or	7
	4	4034	5/8 x 3-5/8 x 15" U-Bolt	98224650	Dual <b>FOX</b> 2.0 Front Gas Shock (4 req'd)	
	2	85650	Front NX2 Shock	Page 146	Steering Stabilizers	
	2	85762	Rear NX2 Shock	123005	Rear Sway Bar Links	
<b>6" Front / 6" Rear</b> Front Leaf Spring Rear Leaf Spring <b>Kit #303H</b> 80FK6471	2	003402	Front Leaf Spring			2
	2	003609	Rear Leaf Spring			5
	1	013405	Front Box Kit			6
	1	013009	Rear Box Kit			7
	2	85650	Front NX2 Shock			
	2	85762	Rear NX2 Shock			
<b>8" Front / 8" Rear</b> Front Leaf Spring Rear Leaf Spring <b>Kit #304H</b> 43FK8981	2	003602	Front Leaf Spring	98224660	<b>FOX</b> 2.0 Front Gas Shock	2
	2	003809	Rear Leaf Spring	98224762	<b>FOX</b> 2.0 Rear Gas Shock - (8" kit)	3
	1	013006	Front Box Kit	98224766	<b>FOX</b> 2.0 Rear Gas Shock - (10" kit)	5
	1	013009	Rear Box Kit	553001	Dual Front Shock Mounting Kit	6
	2	85660	Front NX2 Shock	85660	Dual NX2 Front Shock (4 req'd) or	7
	2	85762	Rear NX2 Shock	98224660	Dual <b>FOX</b> 2.0 Front Gas Shock (4 req'd)	
<b>10" Front / 10" Rear</b> Front Leaf Spring Rear Leaf Spring <b>Kit #305H</b> 34FK2891	2	003802	Front Leaf Spring	Page 146	Steering Stabilizers	1
	2	003809	Rear Leaf Spring	123005	Rear Sway Bar Links	2
	1	013006	Front Box Kit			3
	1	013007	Rear Box Kit			4
	2	85660	Front NX2 Shock			5
	2	85766	Rear NX2 Shock			6

**Notes**

1. Remove factory block.
2. Models with rear CV driveshaft may experience drive line vibration.
3. Front and rear driveshaft modification will be required.
4. #013007 includes a 4" block to replace the stock 2" block.
5. Due to OE variances, you may need to change the rear block to level the truck.
6. #003202, #003402, #003602, #003609, #003802 & #003809 come with rubber bushings installed.
7. A truck leaf spring will give 2" of additional lift when installed on an Excursion.
8. Gas models may require add-a-leaf kit (113206) to better level the vehicle.