



INSTALLATION INSTRUCTIONS

2013-2015 KIA SORENTO

A-BAR PART# DCKI-302-32

Qty	Hardware	Qty	Hardware
2	Mounting Brackets	4	Bolts
2	T-Bolts	6	Lock Washers
6	Nuts	10	Flat Washers



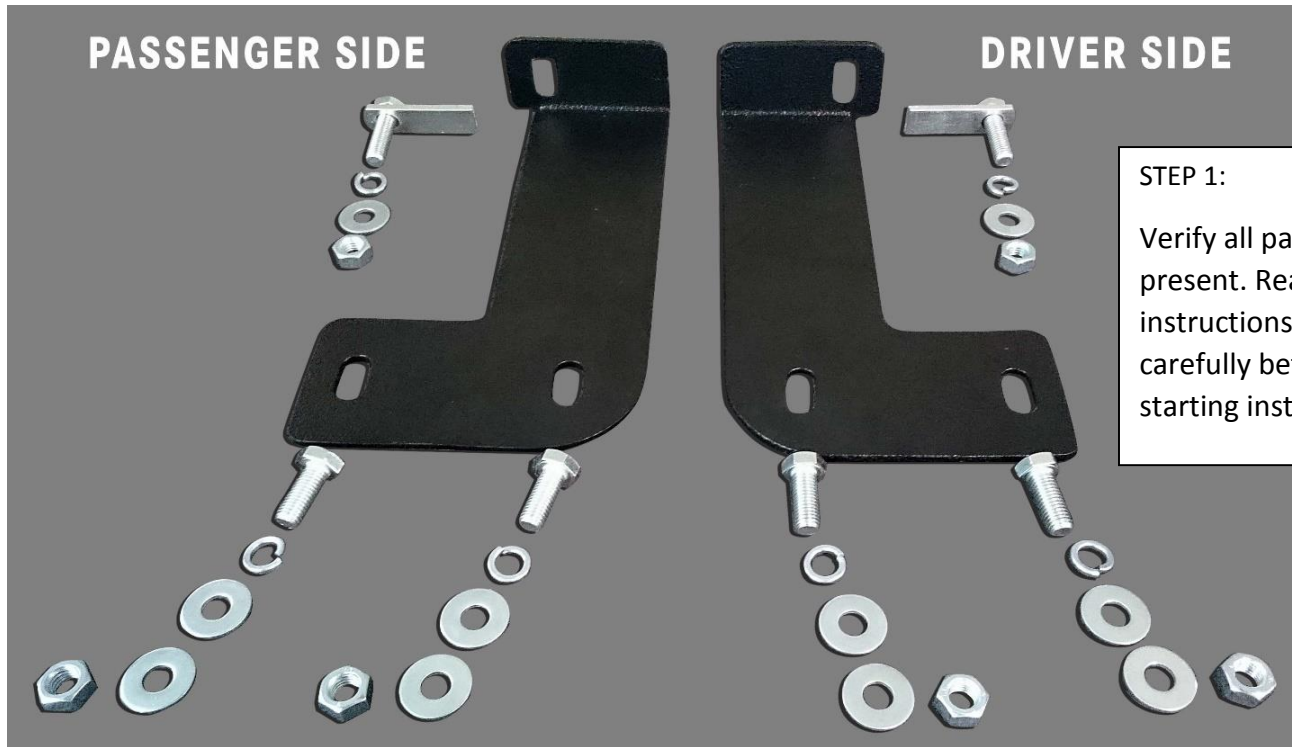




Fig 2 Driver Side Installation

STEP 3:
On the Driver Side,
cut the part circled
in red to install the
Driver Side
Mounting Bracket.
(Fig2)

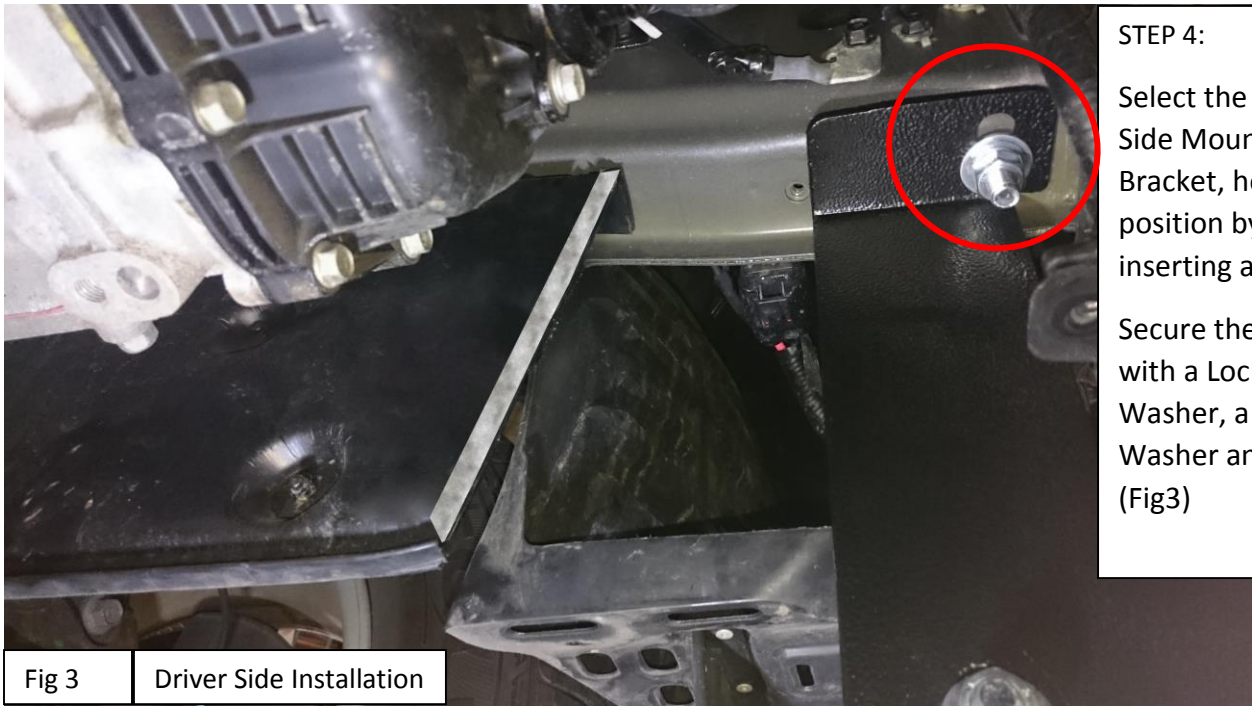


Fig 3 Driver Side Installation

STEP 4:
Select the Driver
Side Mounting
Bracket, hold it in
position by
inserting a T-Bolt.
Secure the bracket
with a Lock
Washer, a Flat
Washer and a Nut.
(Fig3)

STEP 5:
Repeat STEP4 to
install the
Passenger Side
Mounting Bracket.



Fig 4

STEP 6:

Attach the A-Bar to the mounting brackets using two Bolts, two Lock Washers, four Flat Washers and two Nuts on each side.

Level and adjust the A-Bar and tighten all hardware. (Fig4-5)



Fig 5



STEP 7:
Trim the plastic
skid shield for
bracket clearance
as shown on Fig6.



Fig 6



Complete Installation