




INSTALLATION INSTRUCTIONS

2014-2016 SUBARU FORESTER

2.5" [A-BAR](#) PART# DCSU-661-32

Qty	Hardware	Qty	Hardware
2	Front Mounting Brackets	12	T-Bolts
2	Middle Mounting Brackets	12	Hex Bolts
2	Rear Mounting Brackets	12	Flat Washers
		12	Lock Washers



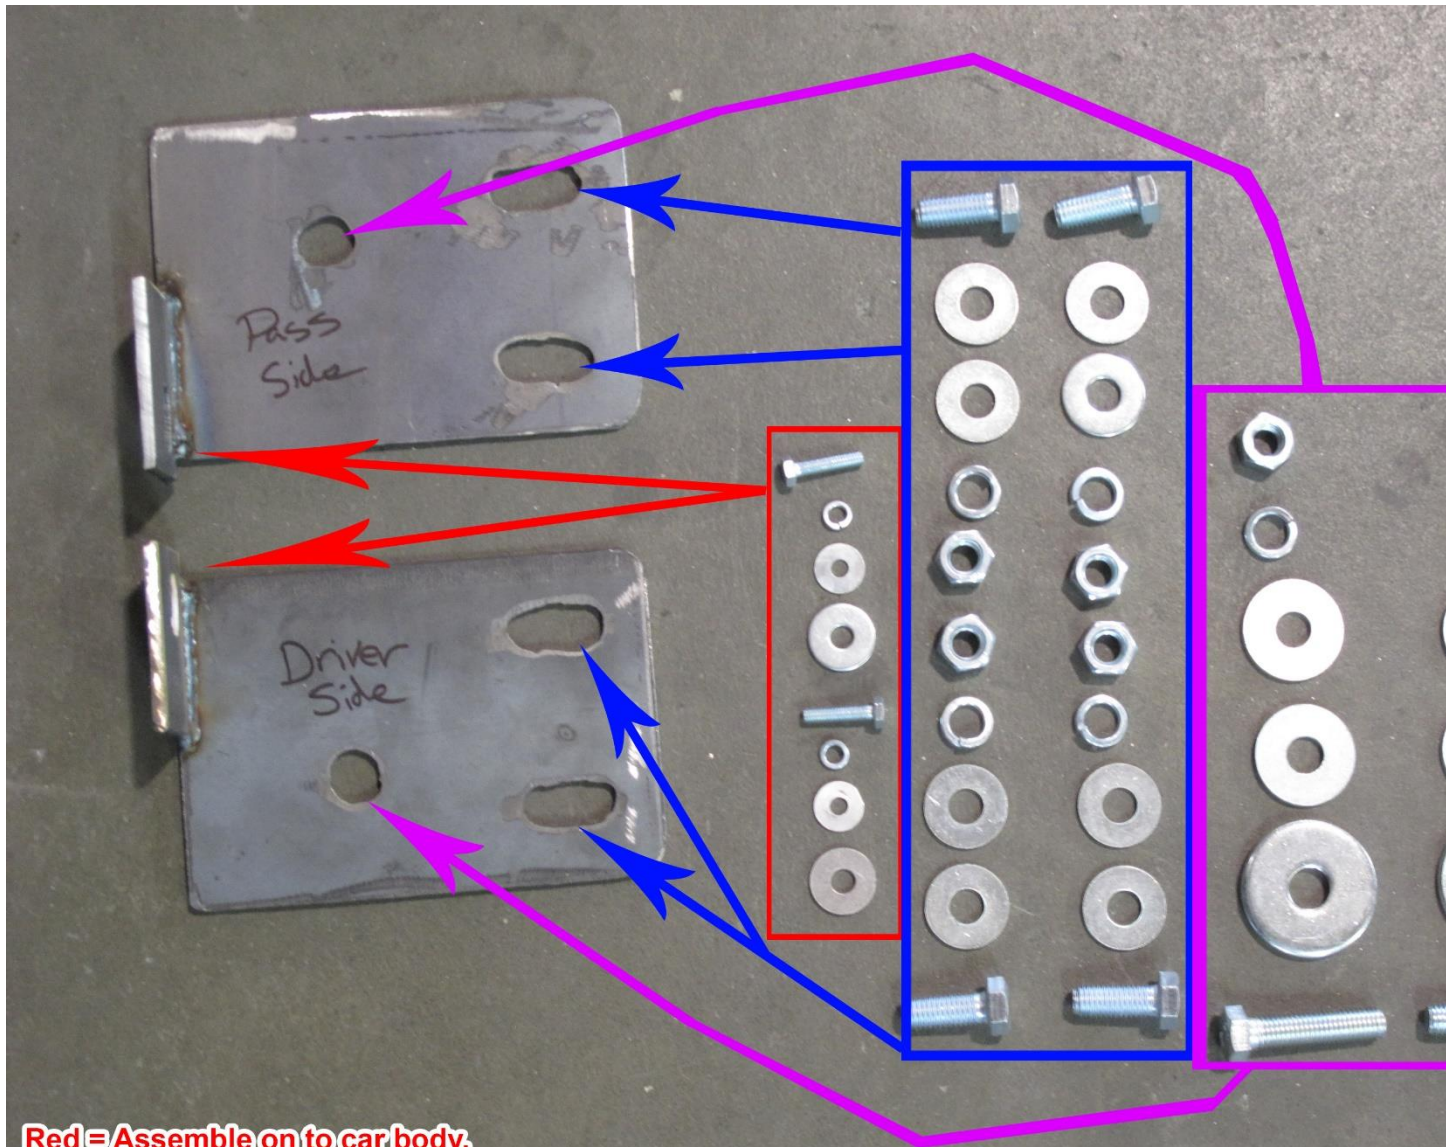

Red = Assemble on to car body.

Blue = Assemble on to bar and driver/passenger side bracket.

Fig 0 Assemble on to tow hook and driver/passenger side brackets.



Bolt on to the car body

Bolt on to the tow hook

Bolt on to the bar and bracket.

Fig 1