

Installation Instructions

T-Connector





Subaru Forester



Subaru Outback



Subaru XV
Crosstrek

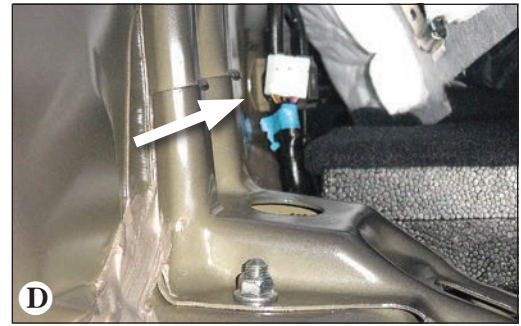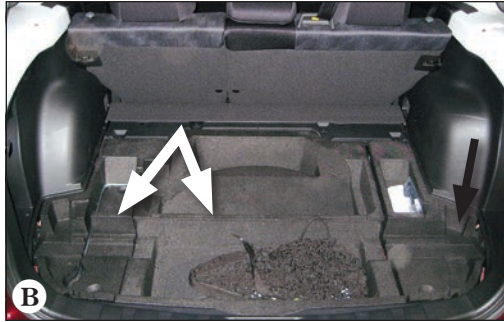

TOOLS REQUIRED:

Trim Panel Remover, Test-probe

1. Open the vehicle's rear tailgate, remove cargo nets and cargo floor hatch to access the spare tire area **A**.
2. **A. 2009-2013 Forester**
Remove drivers side and center foam cargo trays to locate tow plug housing under drivers side foam tray **B**.
B. Outback
Locate the vehicles tow plug housing behind the drivers side trim panel **C**. It will be taped to the wire harness with blue tape **D**.
C. 2014-Current Forester / XV Crosstrek
Locate the vehicles tow plug housing behind the drivers side trim panel **D**. It will be taped to the wire harness with tape **D**.
3. Insert the T-Connector harness into the vehicle's Tow-Plug harness and lock into place **E**. Ensure that the connectors are fully inserted with locking tabs in place.

⚠ WARNING

All connections must be complete for the T-Connector to function properly. Test and verify installation with a test light or trailer once installed. For initial test, reset vehicle electrical system by temporarily removing the key from the ignition.

4. On the Driver's side, mount the T-Connector black box using the double-sided tape provided. Secure the remainder of the T-Connector harness with the cable ties provided, to prevent damage or rattling and being careful to avoid any areas that would cut or pinch the wire.

NOTE

Store 4-Flat connector in spare tire compartment when not in use.



⚠ WARNING

Overloading circuit can cause fires. DO NOT exceed lower of vehicle manufacturer rating or:

- Max. stop/turn light: 1 per side (2.1 amps)
- Max. tail lights: (5.6 amps)

Read vehicle's owners manual & instruction sheet for additional information.