

INSTALLATION INSTRUCTIONS

53223 (1- 40) PULL-PRO MODULAR / 23214(1MB - 40 MPS) WINCH BUMPER

DODGE RAM 1500 (02-08) - 2500,3500 (02-09) ST & STL

EXCLUDE: MEGACAB, MOTOR DIESEL & HEMI V8 5.7L, LARAMIE & SPORT

Parts List:	(1) 53223 Hardware kit includes:		
QTY	6	(2) 1/2 x 1 1/2" carriage head bolt	15 (2) 1/4" lock nut
1 (1) Pull pro	7	(4) 1/2 x 1 1/2" hex head bolt	
2 (1) Center channel/tube	8	(6) 1/2" flat washer	Modular Pull Pro includes extra:
3 (1) Main mounting bracket set	9	(6) 1/2" lock nut	(1) Brushguard set
4 (1) Auxiliary mounting bracket set	10	(2) 3/8 x 1 1/2" hex head bolt	(2) Flat rubber gaskets
5 (1) License plate assembly	11	(2) 3/8" flat washer	(4) 3/8 x 1 1/4" button allen head bolts
	12	(2) 3/8" lock nut	(4) 3/8" flat washer
	13	(2) 1/4 x 1" hex head bolt	(4) 3/8" lock nut
	14	(2) 1/4" flat washer	

Required tools:			
9/16" Socket & Wrench	13mm Socket & Wrench	1/2" Socket & Wrench	Extension to ratchet
3/4" Socket & Wrench	18 mm Socket & Wrench	10mm socket & wrench	Ratchet 7/32" Allen wrench

Instructions:	Aprox. Installation time: 50 min.
----------------------	--

1. Before beginning the installation, please read all directions carefully and verify that all necessary hardware is accounted for. If any parts are missing, stop the installation and contact your distributor immediately.
- NOTE:** The center channel/tube is installed in the lower position, if you install a winch higher than 11" you can raise the central channel to the next holes position.
2. Locate and remove the air dam by loosening the 5 bolts used to attach it and then pushing down the plastic clips. See Pictures 1. **NOTE:** Once the air dam is removed, it may be left off. If so desired, it can be notched to fit around the lower mounting brackets and then re-installed.
3. Locate and remove the OEM nuts located on the inside of the frame and install the brackets using the same OEM nuts that were removed. See Picture 2 & 3. Leave loose.
4. Open the hood and locate the OEM bolts in the lower radiator support as shown in Picture 3. Loosen the bolts just enough to slide the auxiliary brackets into place and tighten slightly. Do not fully tighten the bolts at this time. See Pictures 4, 5 and 6.
5. Bolt the Pull Pro to the brackets using: (1) 1/2" x 1 1/2" carriage head bolts, (1) 1/2" x 1 1/2" hex head bolt, 1/2" flat washer and 1/2" lock nut by each side. Leave loose.
6. Install the auxiliary brackets using: (1) 1/2" x 1 1/2" hex. head bolts, (1) 1/2" flat washer, (1) 1/2" lock nut by each side. Leave loose.
7. Install the brush guards to the center grille using the 3/8 x 1 1/4" button allen bolts, flat washers and lock nuts. Place a gasket between the brush guard and the main plate.
8. Make any final alignments and/or adjustments and make sure that the vehicle's hood does not interfere with any part of the Pull Pro. Once all adjustments are made, tighten all bolts securely
9. IF DESIRED, re-install the air dam using the hardware previously removed in step 2. Remember that the air dam must be notched to clear the main Pull Pro brackets.
10. If you want to relocate the license plate, tighten the license plate bracket to the winch plate using (2) 3/8" hex head bolt, flat washers and nuts. Attach license plate to the license plate bracket using (2) 1/4" hex head bolts, flat washers and nuts.
11. Periodically check and re-tighten bolts as necessary over the term of use.

Cleaning and care instructions:	Design:	Quality:
--	---------	----------

Keep your product clean. Do not use abrasive cleaners or polish. We recommend only non-abrasive automotive wax such as pure carnauba to avoid scratches or rust.


INSTALLATION INSTRUCTIONS

53223 (1- 40) PULL-PRO MODULAR / 23214(1MB - 40 MPS) WINCH BUMPER


DODGE RAM 1500 (02-08) - 2500,3500 (02-09) ST & STL

EXCLUDE: MEGACAB, MOTOR DIESEL & HEMI V8 5.7L, LARAMIE & SPORT


Picture 1

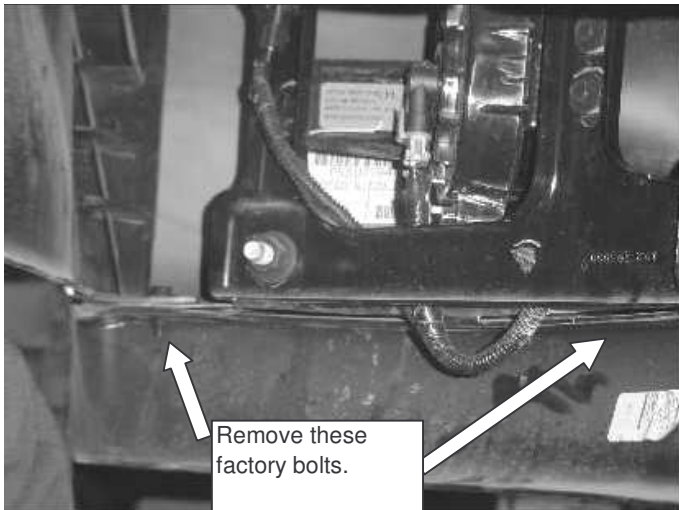


Picture 2

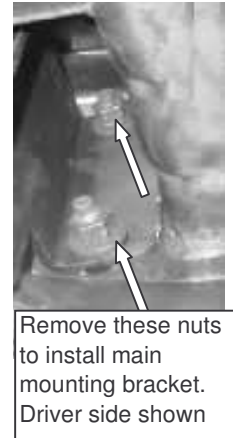

Picture 3

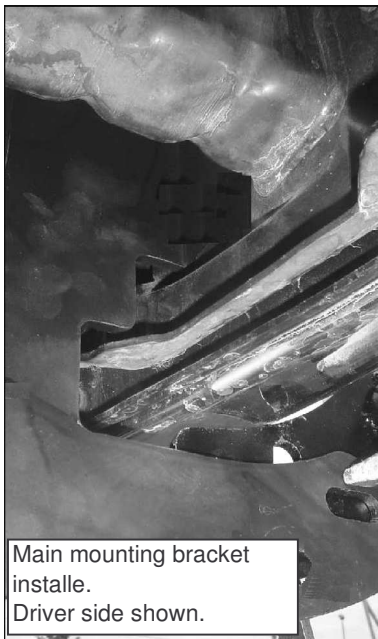

Picture 4

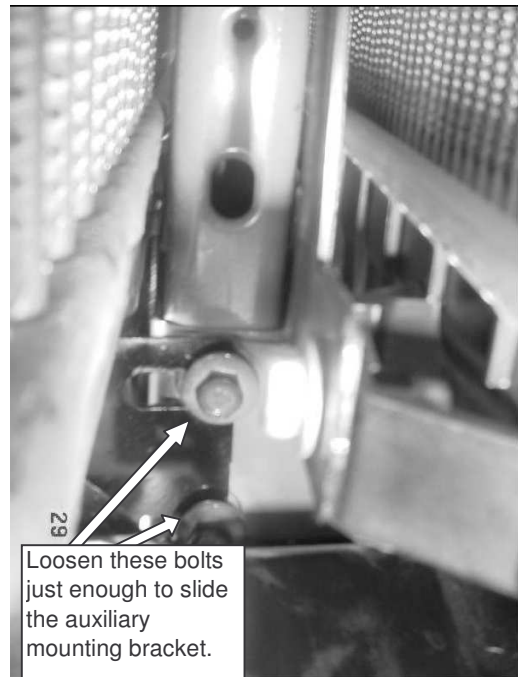

Cleaning and care instructions:

Keep your product clean. Do not use abrasive cleaners or polish. We recommend only non-abrasive automotive wax such as pure carnauba to avoid scratches or rust.

Design:

Quality:

INSTALLATION INSTRUCTIONS

53223 (1- 40) PULL-PRO MODULAR / 23214(1MB - 40 MPS) WINCH BUMPER


DODGE RAM 1500 (02-08) - 2500,3500 (02-09) ST & STL

EXCLUDE: MEGACAB, MOTOR DIESEL & HEMI V8 5.7L, LARAMIE & SPORT


Picture 5



Picture 6

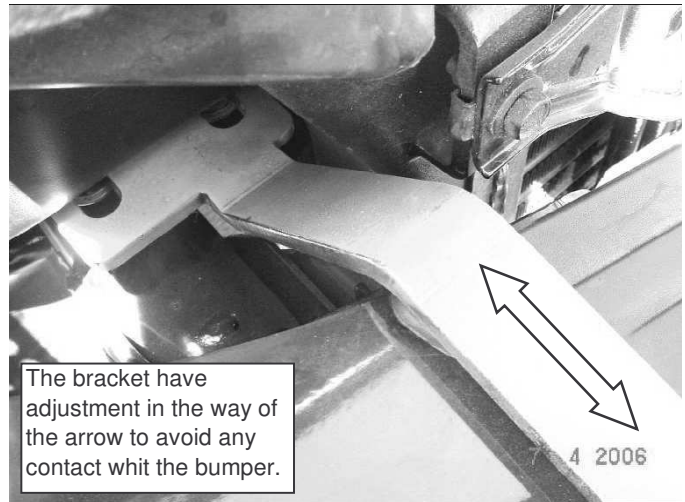

Picture 7

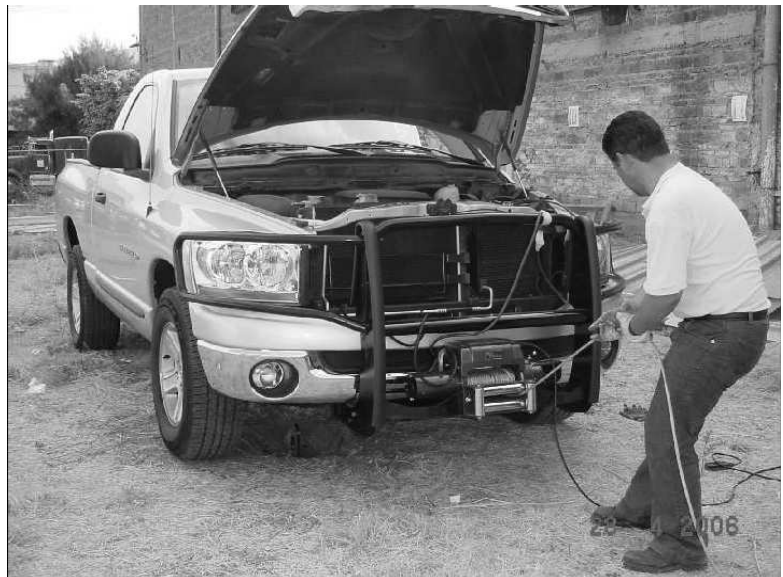

Cleaning and care instructions:

Keep your product clean. Do not use abrasive cleaners or polish. We recommend only non-abrasive automotive wax such as pure carnauba to avoid scratches or rust.

Design:

Quality: