



# X-ACT CONTOUR

## FLOOR LINERS


### CARE AND USE INSTRUCTIONS - 53831

---

Thank you for selecting a X-act Contour Floor Liner from Winfield Consumer Products. Your new front floor liners are custom molded to fit your Toyota Tacoma Access Cab. The liners are made to take the place of your factory floor mats. ***For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners. However, do not remove the factory-installed carpeting.***

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

### INSTALLATION INSTRUCTIONS FOR YOUR TOYOTA TACOMA ACCESS CAB 2<sup>ND</sup> SEAT FLOOR LINER

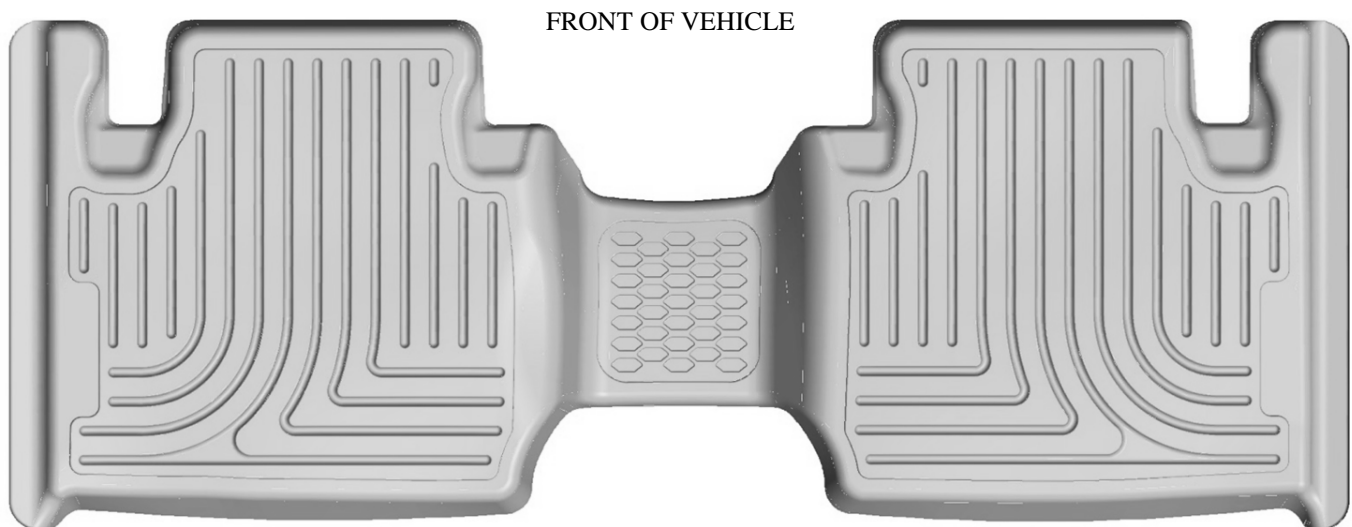

**TO EASE INSTALLATION OF YOUR TACOMA FACTORY FLOOR LINER, FIRST MOVE THE FRONT ROW SEATS COMPLETELY FORWARD TO ALLOW EASIER ACCESS TO THE REAR FLOOR PANS. ONCE YOU HAVE INSTALLED THE LINER, REPOSITION THE FRONT SEATS AS DESIRED.**