




2007 - 2013 Chevrolet Silverado/GMC Sierra 1500
2007-2014 Chevrolet Silverado/GMC Sierra | 2500 HD Crew Cab/3500 HD
(floor mat is designed to fit crew cabs only)

TRIM LINE INSTRUCTIONS: Floor Mat trim patterns vary per vehicle make and model.

STEP 1

Remove Floor Mat from box and allow it to lay out in a warm area. This allows the liner to regain it's custom shape after being rolled up for shipping.

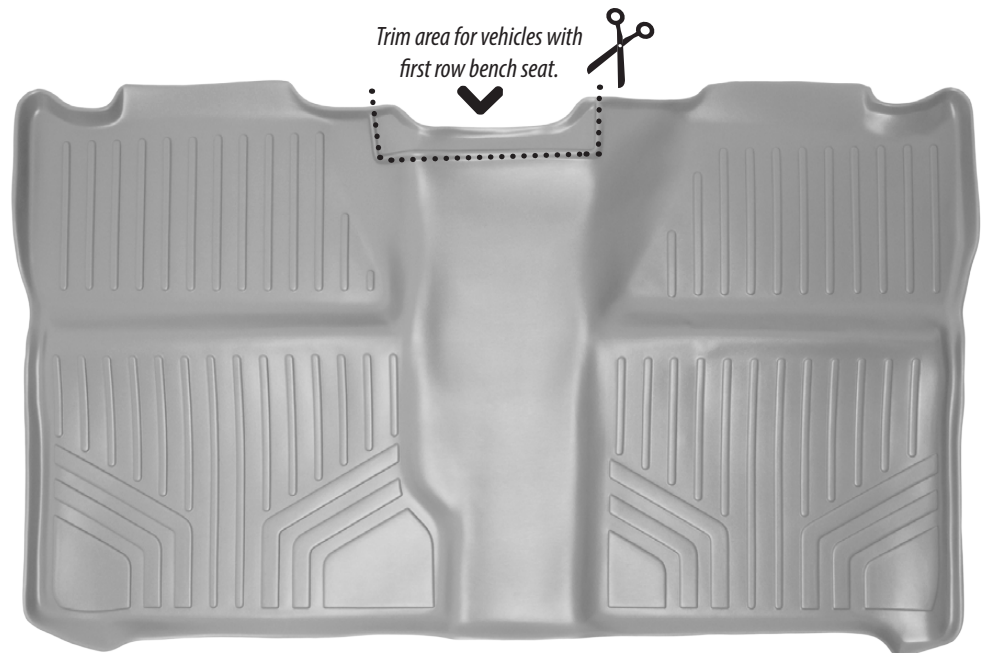

STEP 2

Untrimmed area can slide under vehicles with a center console or can be trimmed by using sharp scissors or a carpenter's knife to cut along crevice in mat to remove area at top for a custom fit.

