


by: MBK Just

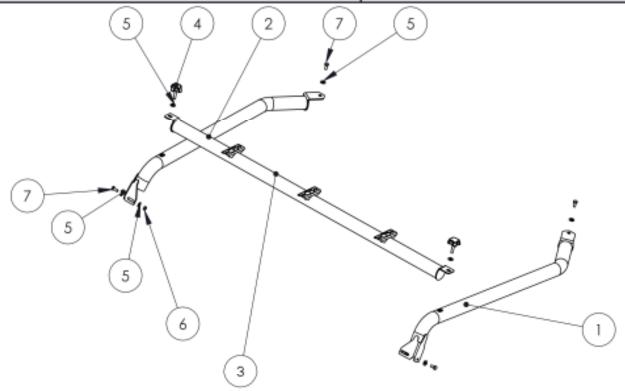

- DRIVER SIDE BAR
- PASSENGER SIDE BAR
- CROSSBAR
- KNOB [2 PCS]
- 5. 5/16" WASHER [8 PCS]
- 5/16" NUT [2 PCS]
- 5/16" BOLT [4 PC\$]

THIS KIT MUST BE INSTALLED WITH THE FOLLOWING OCF PRODUCTS 130717 OR 131894 ROOF RACK KIT AND182746 OR 182760 WINDSHIELD LIGHT BAR KIT

PLEASE READ BEFORE STARTING INSTALLATION

While MBRP Inc. has made every effort to ensure that all components of this kit are of superior quality and properly packaged, it is the installer's responsibility to ensure the following before starting:

- that ALL components shown above are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the kit you have purchased is appropriate for your year and model of vehicle.
- that the kit will not interfere with any modifications previously installed or planned.
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this kit on your vehicle please contact your dealer before commencing installation.

182769 PAGE 1 OF 2



Figure 1



Figure 2



Figure 3



Figure 4



- 1. Remove the top bolt from the driver side light bracket on the windshield upright. Install the **Driver Side Bar** behind the windshield upright and loosely secure with the previously removed bolt.
 - Refer to Figure 1.
- 2. Install a **5/16 Bolt** and **Washer** through the rear bracket of the **Driver Side Bar** and thread it into the Roof Rack. **Refer to Figure 2.**
- Install a 5/16" Bolt and Washer through the hole in the side of the windshield upright and secure it with a Washer, and a 5/16" Nut. Tighten all hardware.
 Refer to Figure 3.
- 4. Repeat steps 1 through 3 to install the **Passenger Side Bar**.
- 5. Install the Crossbar and secure it with the supplied Knobs and Washers.

Refer to Figure 4.



Congratulations! You're finished! We are sure that you will enjoy this **Off Camber Fabrications** product by **MBRP Inc.**

PAGE 2 OF 2