


BEDLOCKER®

ELECTRIC RETRACTABLE TRUCK BED COVER

BL-1120 MANUAL SWITCH INSTRUCTIONS

For ease of installation it is recommended that this component be installed at the same time as the Bedlocker cover.

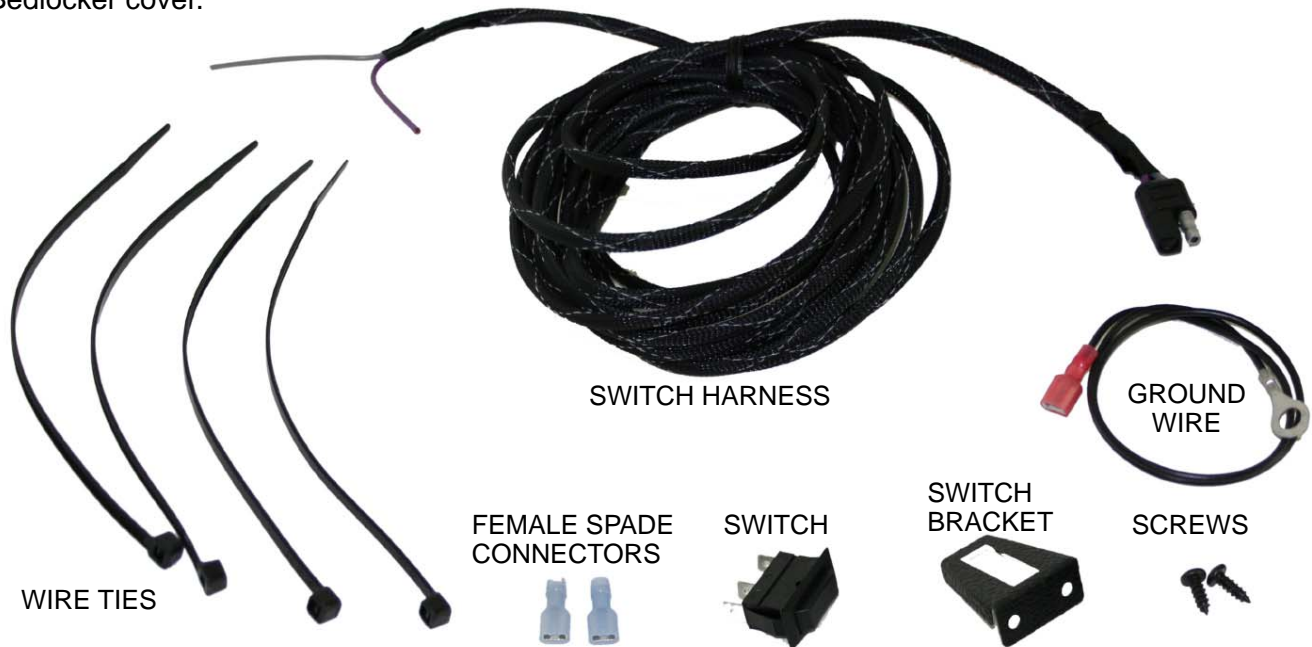

STEP 1: ROUTE THE WIRE HARNESS

Route the end of the wire harness without the plug through the stake pocket to the underside of the box. (If installing with the tonneau cover you can tape the two wire harnesses together to make it easier to route them through the stake pocket.) Leave 1.5 to 2 feet of harness in the truck bed. (If your cover is already installed you can plug into the 2 wire connector extending from the electronics box and remove as much slack as you desire.) String harness along frame and into the engine compartment. Use the wire ties provided to fasten securely and remove any slack. Route the end of the wire harness through the firewall into the cab of the truck.

STEP 2: MOUNT THE SWITCH BRACKET

Strip the wire ends and attach 1 each female spade connector to each wire end. Choose a suitable location to mount the switch bracket. Drill two 1/8" holes and use the 2 screws provided to fasten the bracket tightly into place. Place the switch into the bracket opening.

STEP 3: ATTACH THE WIRES

Attach the black ground wire to the center post of the switch and the other end to a suitable ground location. (Use an existing screw if possible.) Place the 2 each connectors from the wire harness onto the upper and lower switch posts. (The direction of operation of your cover can be altered by swapping the position of the upper and lower wires on the switch posts.)

Bundle any slack wiring and securely attach under the dash so that it can't hang down or interfere with operation of the vehicle. Your unit should operate at this time.

