



Installation Instructions

Tailgate Stop


87-06 Jeep Wrangler
Part#7342

IMPORTANT NOTICE:

This Tailgate Stop installation requires drilling. Carefully read the instructions before attempting to install this product. Rampage is in no way responsible for any damage to the vehicle or personal injury that may occur during the installation or use of this product.

INCLUDED COMPONENTS

- 1 – Tailgate Stop
- 4 – Nut Inserts
- 4 – Allen Bolts

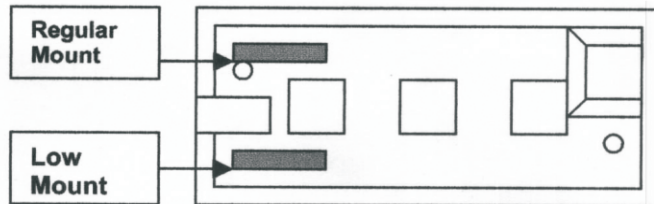

Before drilling any holes, place the Tailgate Stop in the location shown above and make sure it does not come into conflict with other items on your vehicle. If your vehicle is equipped with an insta-trunk, the Tailgate Stop can be relocated to the bottom corner of the tailgate (see illustration above for low mount).

INSTALLATION INSTRUCTIONS

- 1) Mark the four mounting holes using the Slider Base-plate as a template (Figure 1).
- 2) Drill $\frac{1}{2}$ " holes in the previously marked locations (Figure 2). CAUTION: Do not drill through your tailgate!

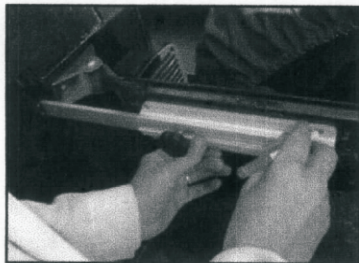


Figure 1



Figure 2

- 3) Insert a bolt through each hole of the slider assembly and loosely install the Nut Inserts on each bolt (Figure 3). Install the slider assembly by pushing the Nut Inserts into the holes and then tighten the bolts evenly.
- 4) For best results, always try to use the Tailgate Stop with the tailgate in the 90 degree open position. This position will allow the locking knob to be tightened into the recess in the bottom of the slider track.

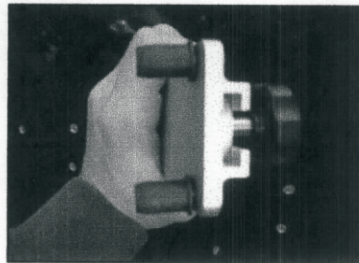


Figure 3