



INSTALLATION INSTRUCTION


RANCHO FRONT BUMPER KIT RS6226B

READ ALL INSTRUCTIONS THOROUGHLY FROM START TO FINISH BEFORE BEGINNING INSTALLATION

Parts List

<u>Part No.</u>	<u>Description</u>	<u>Qty.</u>
176605B	Front Bumper	1
860659	Hardware Kit	1
	1/4" Self Tapping Screws	2
176606	Mounting Spacer	2
88626	Installation Instruction	1


- 1) Disconnect electrical connectors at fog lights and remove fog lights if applicable..
- 2) The plastic sway bar cover needs to be removed to allow installation of new bumper. Remove the 4 OE screws holding this component on. Set the cover and OE screws aside for reinstallation later. See Illustration 1.

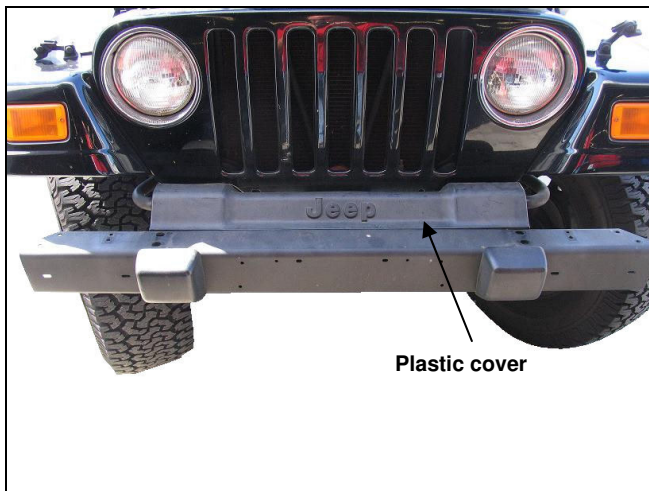

Illus. 1

- 3) Remove 6 OE mounting bolts to take off the original bumper. Keep the OE mounting hardware for reuse.
- 4) Attach new bumper to frame with the OE hardware. Use the 4 shorter OE mounting bolts and 1/2 SAE washers (qty 4) to attach the bumper to the top portion of the frame. Only loosely tighten these bolts at this time.

- 5) Use the 2 longest OE mounting bolts and 1/2 SAE washers (qty 2) to attach the bumper to the bottom side. Mounting spacer 176606 needs to be placed between the bottom of the frame and the inside of the bumper. See Illustration 2.

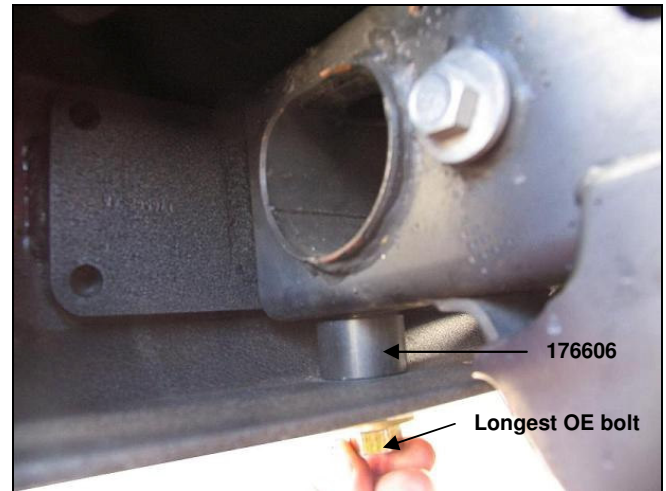

Illus. 2

- 6) Tighten all 6 bolts to 65 ft. lbs.
- 7) Reattach fog lamps and reconnect electrical connectors.

Note: Some states require a front license plate for highway use. Use the 2 self-tapping screws from RS860659 to mount the license plate to the 2 predrilled holes on the bumper.



Illus. 3