
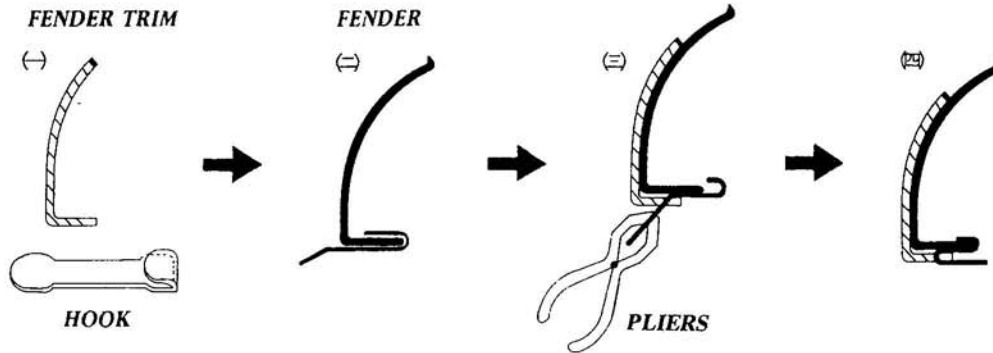


FENDER TRIM INSTALLATION INSTRUCTIONS

**Locking Tab installation instructions:
(screws also available)**

- 1) Get Locking Tab hooks that come with kit.
- 2) Test fit fender trim to check positioning & fit.
- 3) When ready to install, place the hooks with the curved side locked into position on the inside edge of the car fender. Then let the straight part of the hook pass through the slot in the fender trim and bend it back to fix the fender trim into position. Use a set of pliers to fit the trims tightly to the fender.
- 4) Repeat installation procedure for all four hooks.

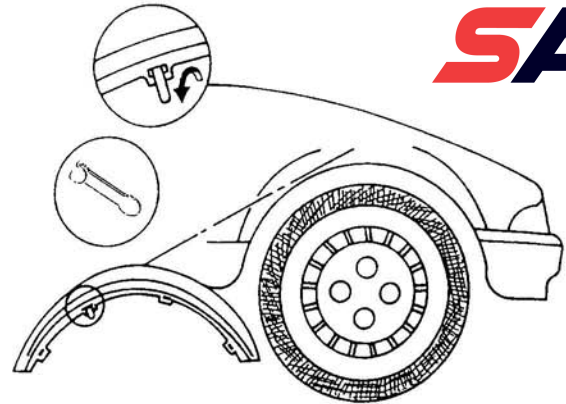

Discover other chrome trim and accessories on our website.